ORDER NO. PCZ0505058C2

Service Manual

Wide LCD TV

TX-32LXD500
TX-26LXD500
TX-32LX500F
TX-32LX500P
TX-26LX500F
TX-26LX500P
LH41 Chassis

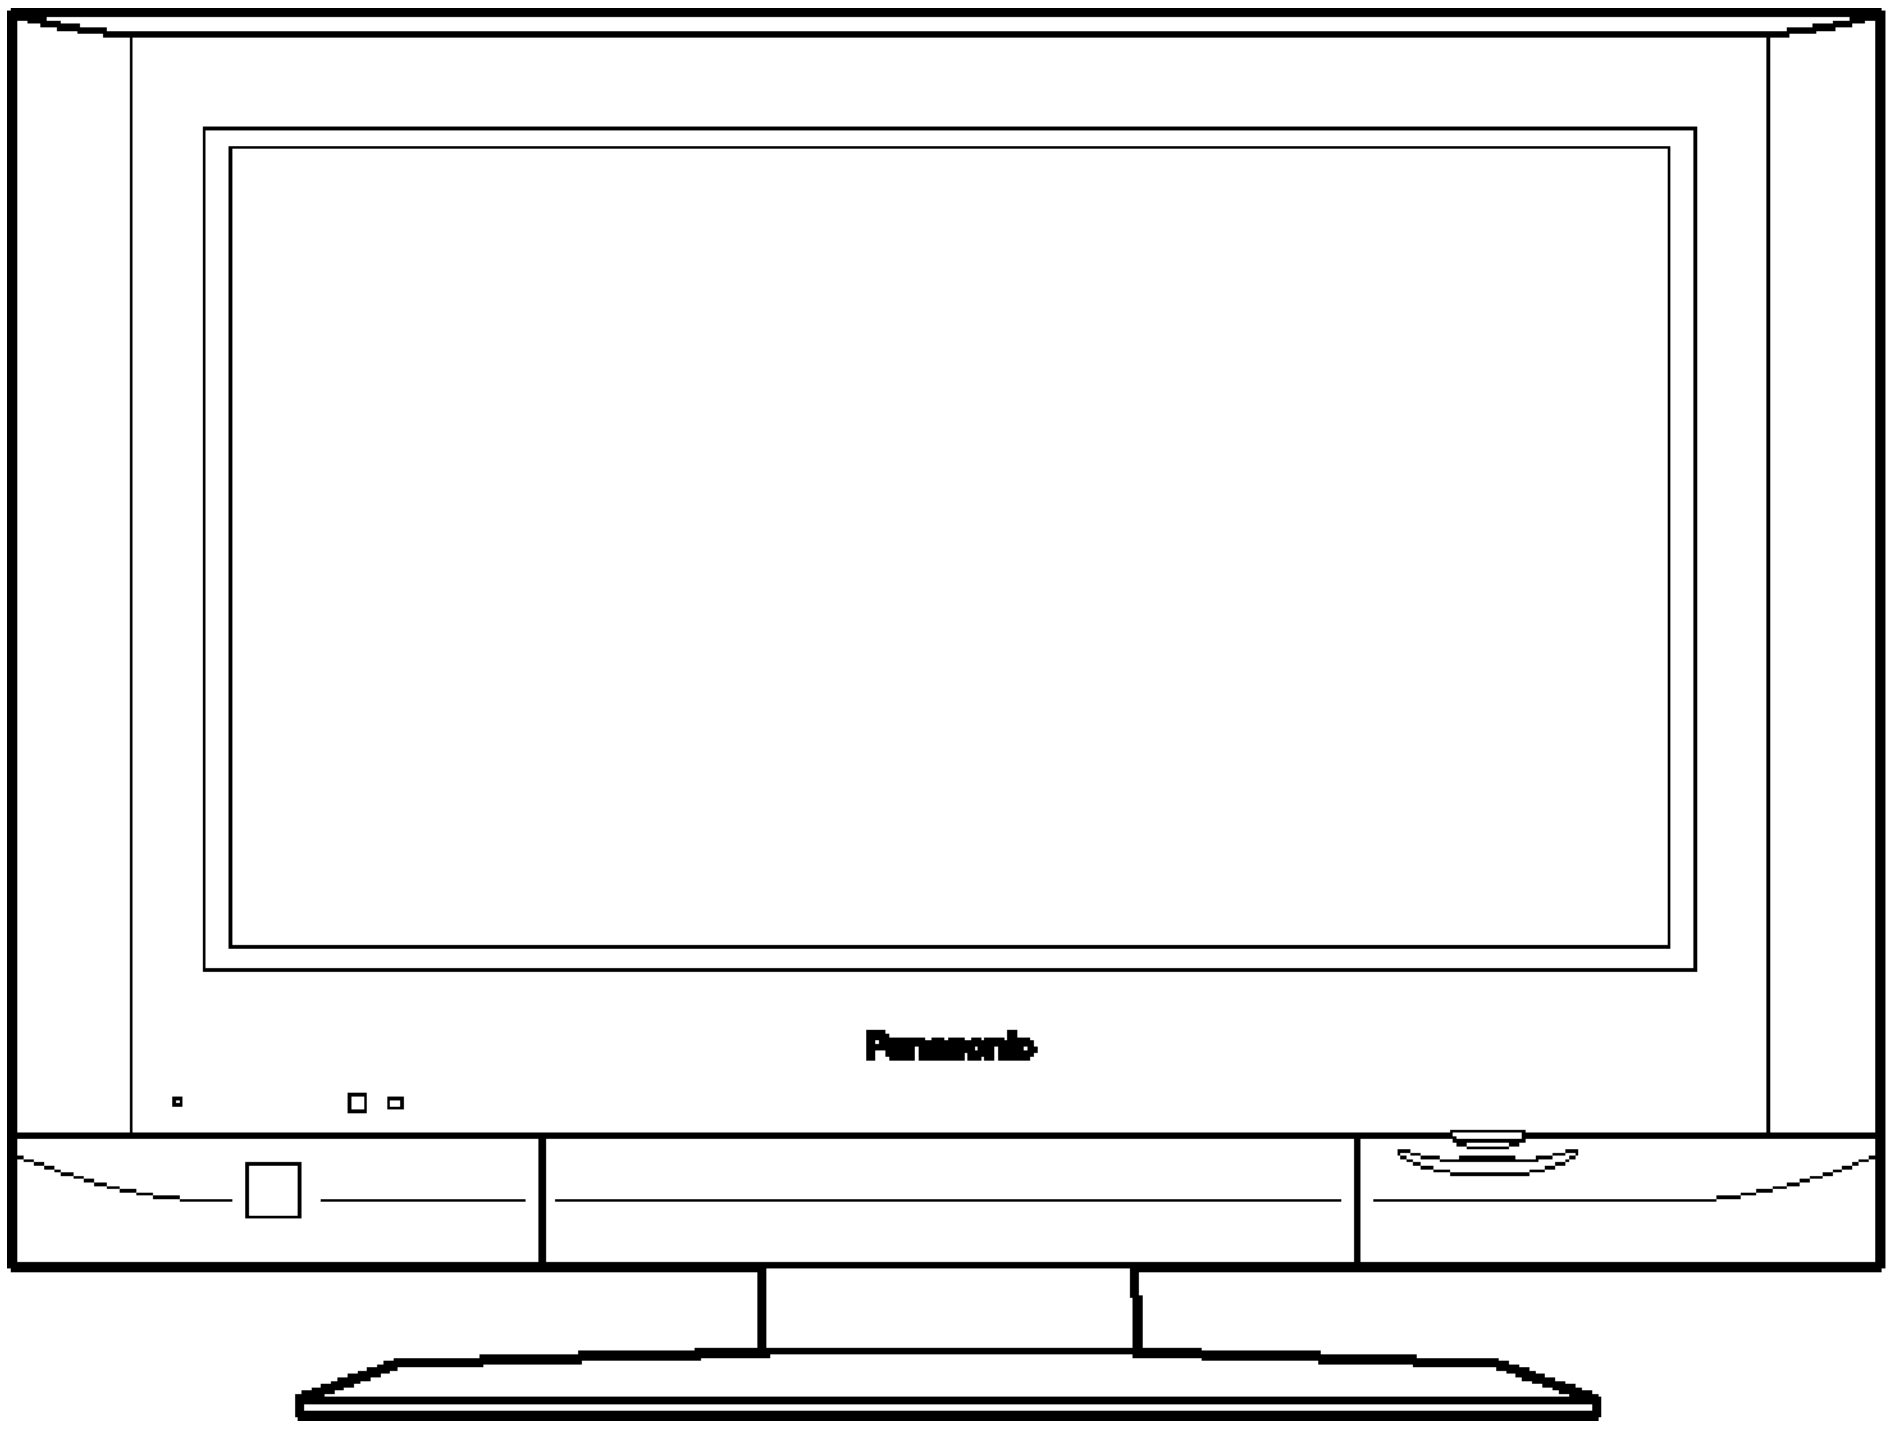

SPECIFICATIONS

Specifications

Power Source	AC 220 - 240 V, 50 / 60 Hz	
Power Consumption	Average use : 138 W (0.8 A) (TX-26LXD500)	
	Average use : 172 W (1.0 A) (TX-32LXD500)	
	Standby condition :	
	0.4 W (Without DVB Timer programmes)	
	18 W (With DVB Timer programmes)	
	Average use : 131 W (TX-26LX500F/P)	
	Average use : 165 W (TX-32LX500F/P)	
	Standby condition : 0.4 W	
LCD	Wide XGA (1,366 × 768 pixels)	
	16 : 9 aspect ratio LCD panel	
Visible screen Size	66.1 cmV, 564.8 mm (W) × 317.6 mm (H) (TX-26LXD500, TX-26LX500F /P)	
	80.0 cmV, 697.3 mm (W) × 392.0 mm (H) (TX-32LXD500,TX-32LX500F/ P)	
Sound		
Speaker	Woofer Ø80 mm × 2 pcs, Tweeter 16 mm × 73 mm ×4 pcs	
Audio Output	20 W (5 W + 5 W, 5 W + 5 W)	
Headphones	M3 (3.5 mm) Jack × 1	
Scanning format	480i(60Hz), 480p(60Hz), 576i(50Hz), 576p(50Hz), 720p(50Hz), 720p(60Hz), 1080i(50Hz), 1080i(60Hz)	
PC signals	XGA display	
	VGA, SVGA, XGA	
	SXGA...... (compressed)	
	Horizontal scanning frequency 31 - 69 kHz	
	Vertical scanning frequency 59 - 86 Hz	
Receiving Systems /	PAL I (TX-26LXD500/ 32LXD500)	UHF E21-68.
Band name	DVB (TX-26LXD500/ 32LXD500)	Digital terrestrial services via UHF aerial input.
	PAL B, G, H, SECAM B, G SECAM L / L' (TX-26LX500F/P, TX-32LX500F/P)	
	VHF E2 - E12	VHF H1 - H2 (ITALY)
	VHF A - H (ITALY)	UHF E21 - E69
	CATV (S01 - S05)	CATV S1 - S10 (M1 - M10)
	CATV S11 - S20 (U1 - U10)	CATV S21 - S41 (Hyperband)

	PAL D, K, SECAM D, K (TX-26LX500F/P, TX-32LX500F/P)	
	VHF R1 - R2	VHF R3 - R5
	VHF R6 - R12	UHF E21 - E69
	PAL 525/60	Playback of NTSC tape from some PAL Video recorders (VCR)
	M.NTSC	Playback from M. NTSC Video recorders (VCR)
	NTSC (AV input only)	Playback from NTSC Video recorders (VCR)
Aerial - Rear	UHF (TX-26/32LXD500) UHF/VHF (TX-26/32LX500F/P)	
Operating Conditions	Temperature : 5 °C - 35 °C	
	Humidity : 5 % - 90 % RH (non-condensing)	
Connection Terminals		
AV1 (Scart connecter)	21 Pin terminal (Audio/Video in, Audio/Video out, RGB in)	
AV2 (Scart connecter)	21 Pin terminal (Audio/Video in, Audio/Video out, S-Video in, Q-Link)	
AV3		
VIDEO	RCA PIN Type × 1	
S-VIDEO	Mini DIN 4-pin	
AUDIO L - R	RCA PIN Type × 2	
AV4 (Scart connecter)	21 Pin terminal (Audio/Video in, Audio/Video out, RGB in, S-Video in, Q-Link)	
COMPONENT	Y, PB, PR	
HDMI	TYPE A Connecter	
PC	HIGH-DENSITY D_SUB 15PIN	
AUDIO L - R	RCA PIN Type × 2	
Card slot	SD CARD slot × 1, PC CARD slot × 1	
Output		
AUDIO L - R	RCA PIN Type × 2	
Dimensions (W × H × D)		
Including TV Stand	724 mm × 549 mm × 300 mm (TX-26LXD500, TX-26LX500F/P)	
	857 mm × 624 mm × 300 mm (TX-32LXD500, TX-32LX500F/P)	
TV Set Only	724 mm × 487 mm × 141 mm (TX-26LXD500, TX-26LX500F/P)	
	857 mm × 563 mm × 141 mm (TX-32LXD500, TX-32LX500F/P)	
Mass (Weight)	21 kg Net (TX-26LXD500, TX-26LX500F/P)	
	24.5 kg Net (TX-32LXD500, TX-32LX500F/P)	

Note:

Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.

1

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic®

1. Safety Precautions

1.1. General Guidelines

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

1.2. Touch-Current Check

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a measuring network for touch currents between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use Leakage Current Tester (Simpson 228 or equivalent) to measure the potential across the measuring network.
4. Check each exposed metallic part, and measure the voltage at each point.

5. Reserve the AC plug in the AC outlet and repeat each of the above measure.

6. The potential at any point (TOUGH CURRENT) expressed as voltage U_1 and U_2, does not exceed the following values:
For a. c.: $U_1 = 35$ V (peak) and $U_2 = 0.35$ V (peak);
For d. c.: $U_1 = 1.0$ V,

Note:
The limit value of $U_2 = 0.35$ V (peak) for a. c. and $U_1 = 1.0$ V for d. c. correspond to the values 0.7 mA (peak) a. c. and 2.0 mA d. c.
The limit value $U_1 = 35$ V (peak) for a. c. correspond to the value 70 mA (peak) a. c. for frequencies greater than 100 kHz.

7. In case a measurement is out of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

Figure 1

Measuring network for TOUCH CURRENTS

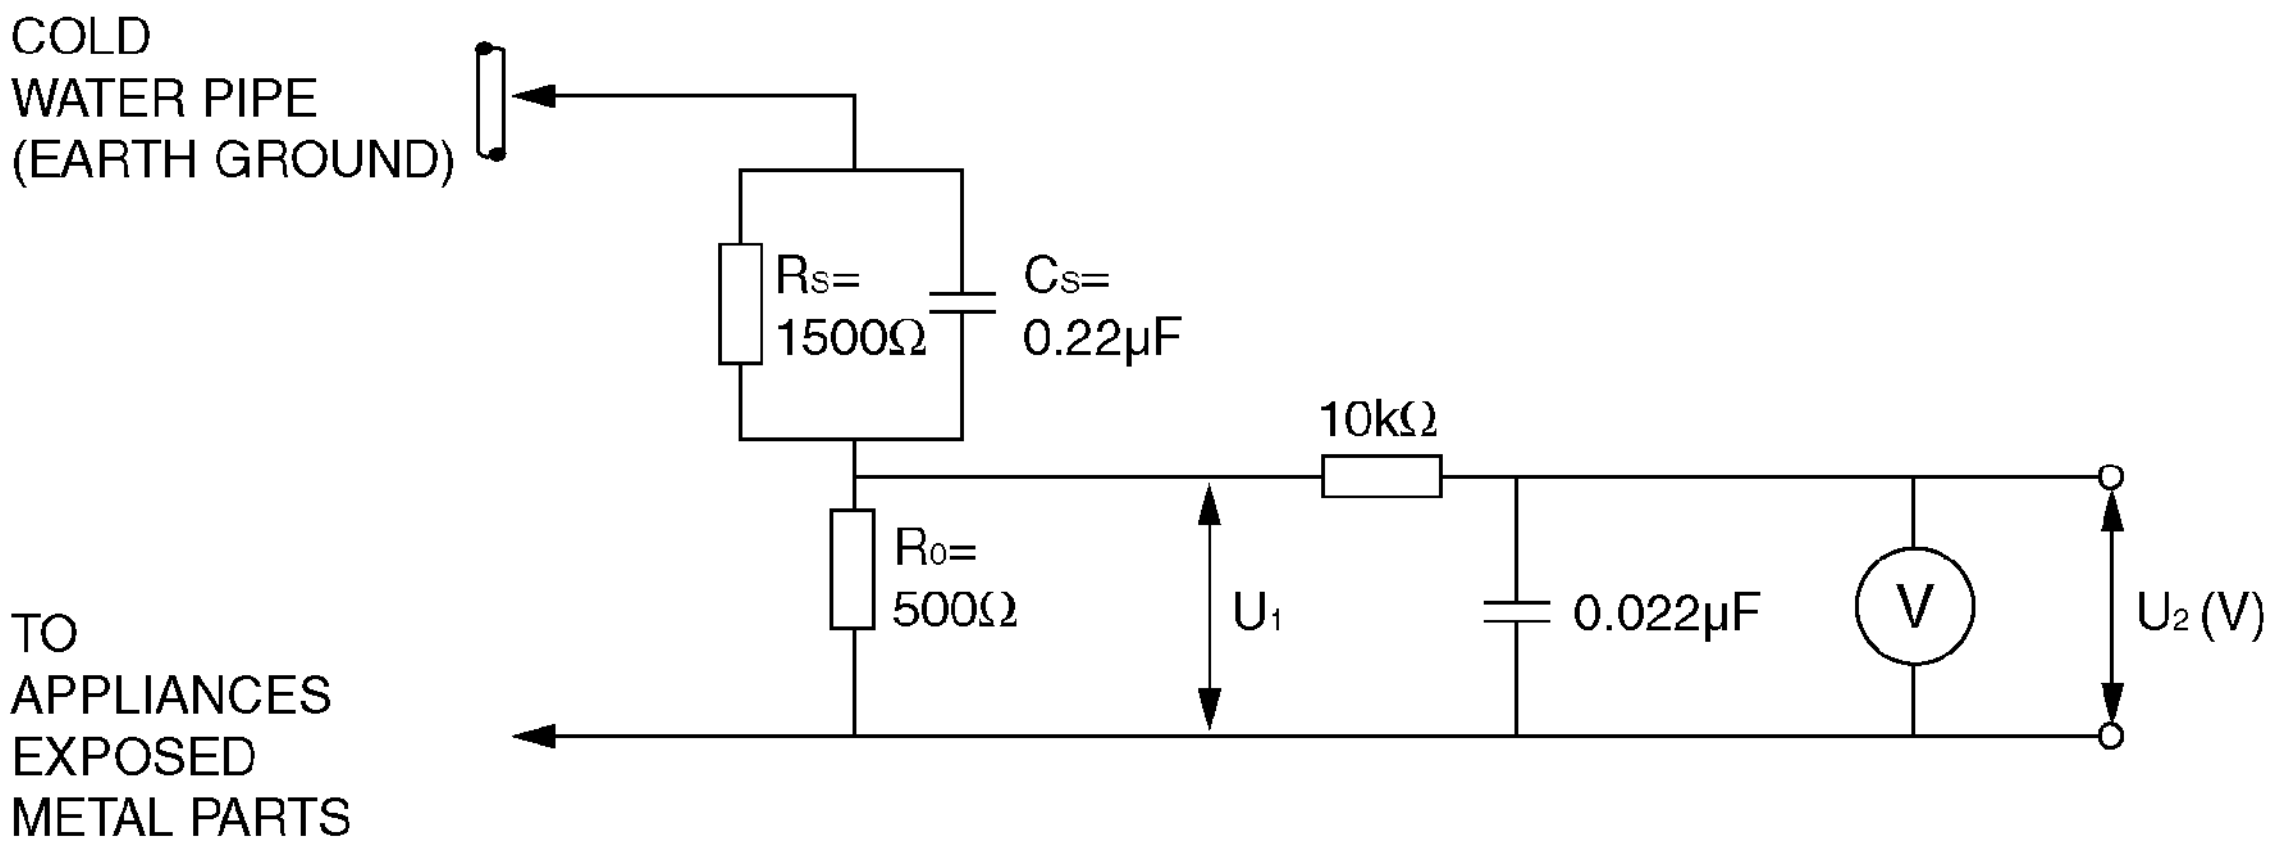

Resistance values in ohms (Ω)

V: Voltmeter or oscilloscope
(r.m.s. or peak reading)

Input resistance: ≥ 1 MΩ
Input capacitance: ≤ 200 pF
Frequency range: 15 Hz to 1 MHz and d.c. respectively

NOTE - Appropriate measures should be taken to obtain the correct value in case of non-sinusoidal waveforms.

2. Prevention of Electro Static Discharge (ESD) to

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. **Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.**
2. **After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as alminum foil, to prevent electrostatic charge buildup or exposure of the assembly.**
3. **Use only a grounded-tip soldering iron to solder or unsolder ES devices.**
4. **Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.**
5. **Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.**
6. **Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, alminum foil or comparable conductive material).**
7. **Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.**

   Caution

   Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. **Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise hamless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).**

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are imporant for safety.
These parts are marked by ⚠ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.

3. Applicable signals

Applicable input signal for Component (Y, PB, PR), HDMI and PC (D-sub 15P) (* Mark)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	Component	HDMI	PC
525 (480) / 60i	15.73	59.94	*	*	
525 (480) / 60p	31.47	59.94	*	*	
625 (576) / 50i	15.63	50.00	*	*	
625 (576) / 50p	31.25	50.00	*	*	
750 (720) / 60p	45.00	60.00	*	*	
750 (720) / 50p	37.50	50.00	*	*	
1,125 (1,080) / 60i	33.75	60.00	*	*	
1,125 (1,080) / 50i	28.13	50.00	*	*	
640 × 400 @70 Hz	31.46	70.07			*
640 × 480 @60 Hz	31.47	59.94			*
640 × 480 @75 Hz	37.50	75.00			*
800 × 600 @60 Hz	37.88	60.32			*
800 × 600 @75 Hz	46.88	75.00			*
800 × 600 @85 Hz	53.67	85.06			*
1,024 × 768 @60 Hz	48.36	60.00			*
1,024 × 768 @70 Hz	56.48	70.07			*
1,024 × 768 @75 Hz	60.02	75.03			*
1,024 × 768 @85 Hz	68.68	85.00			*
1,280 × 1,024 @60 Hz	63.98	60.02			*
Macintosh13” (640 × 480)	35.00	66.67			*
Macintosh16” (832 × 624)	49.72	74.54			*
Macintosh21” (1,152 × 870)	68.68	75.06			*

Note:

- **Signals other than above may not be displayed properly.**
- **Applicable input signal for PC is basically compatible to VESA standard timing.**
- **PC signal is magnified or compressed for display, so that it may not be possible to show fine detail with sufficient clarity.**

4. Self Check Function

4.1. Self Check

1. **Self-Check is used to automatically check the bus lines and hexadecimal code of the TV set.**
2. **To get into the Self -Check mode press the Down (−/∨) button on the customer controls at the front of the set, at the same time pressing the Status/Information (i) button on the remote control, and the screen will show :**
3. **Turn off the TV to reset JPEG Viewer circuit after SELF-CHECK.**

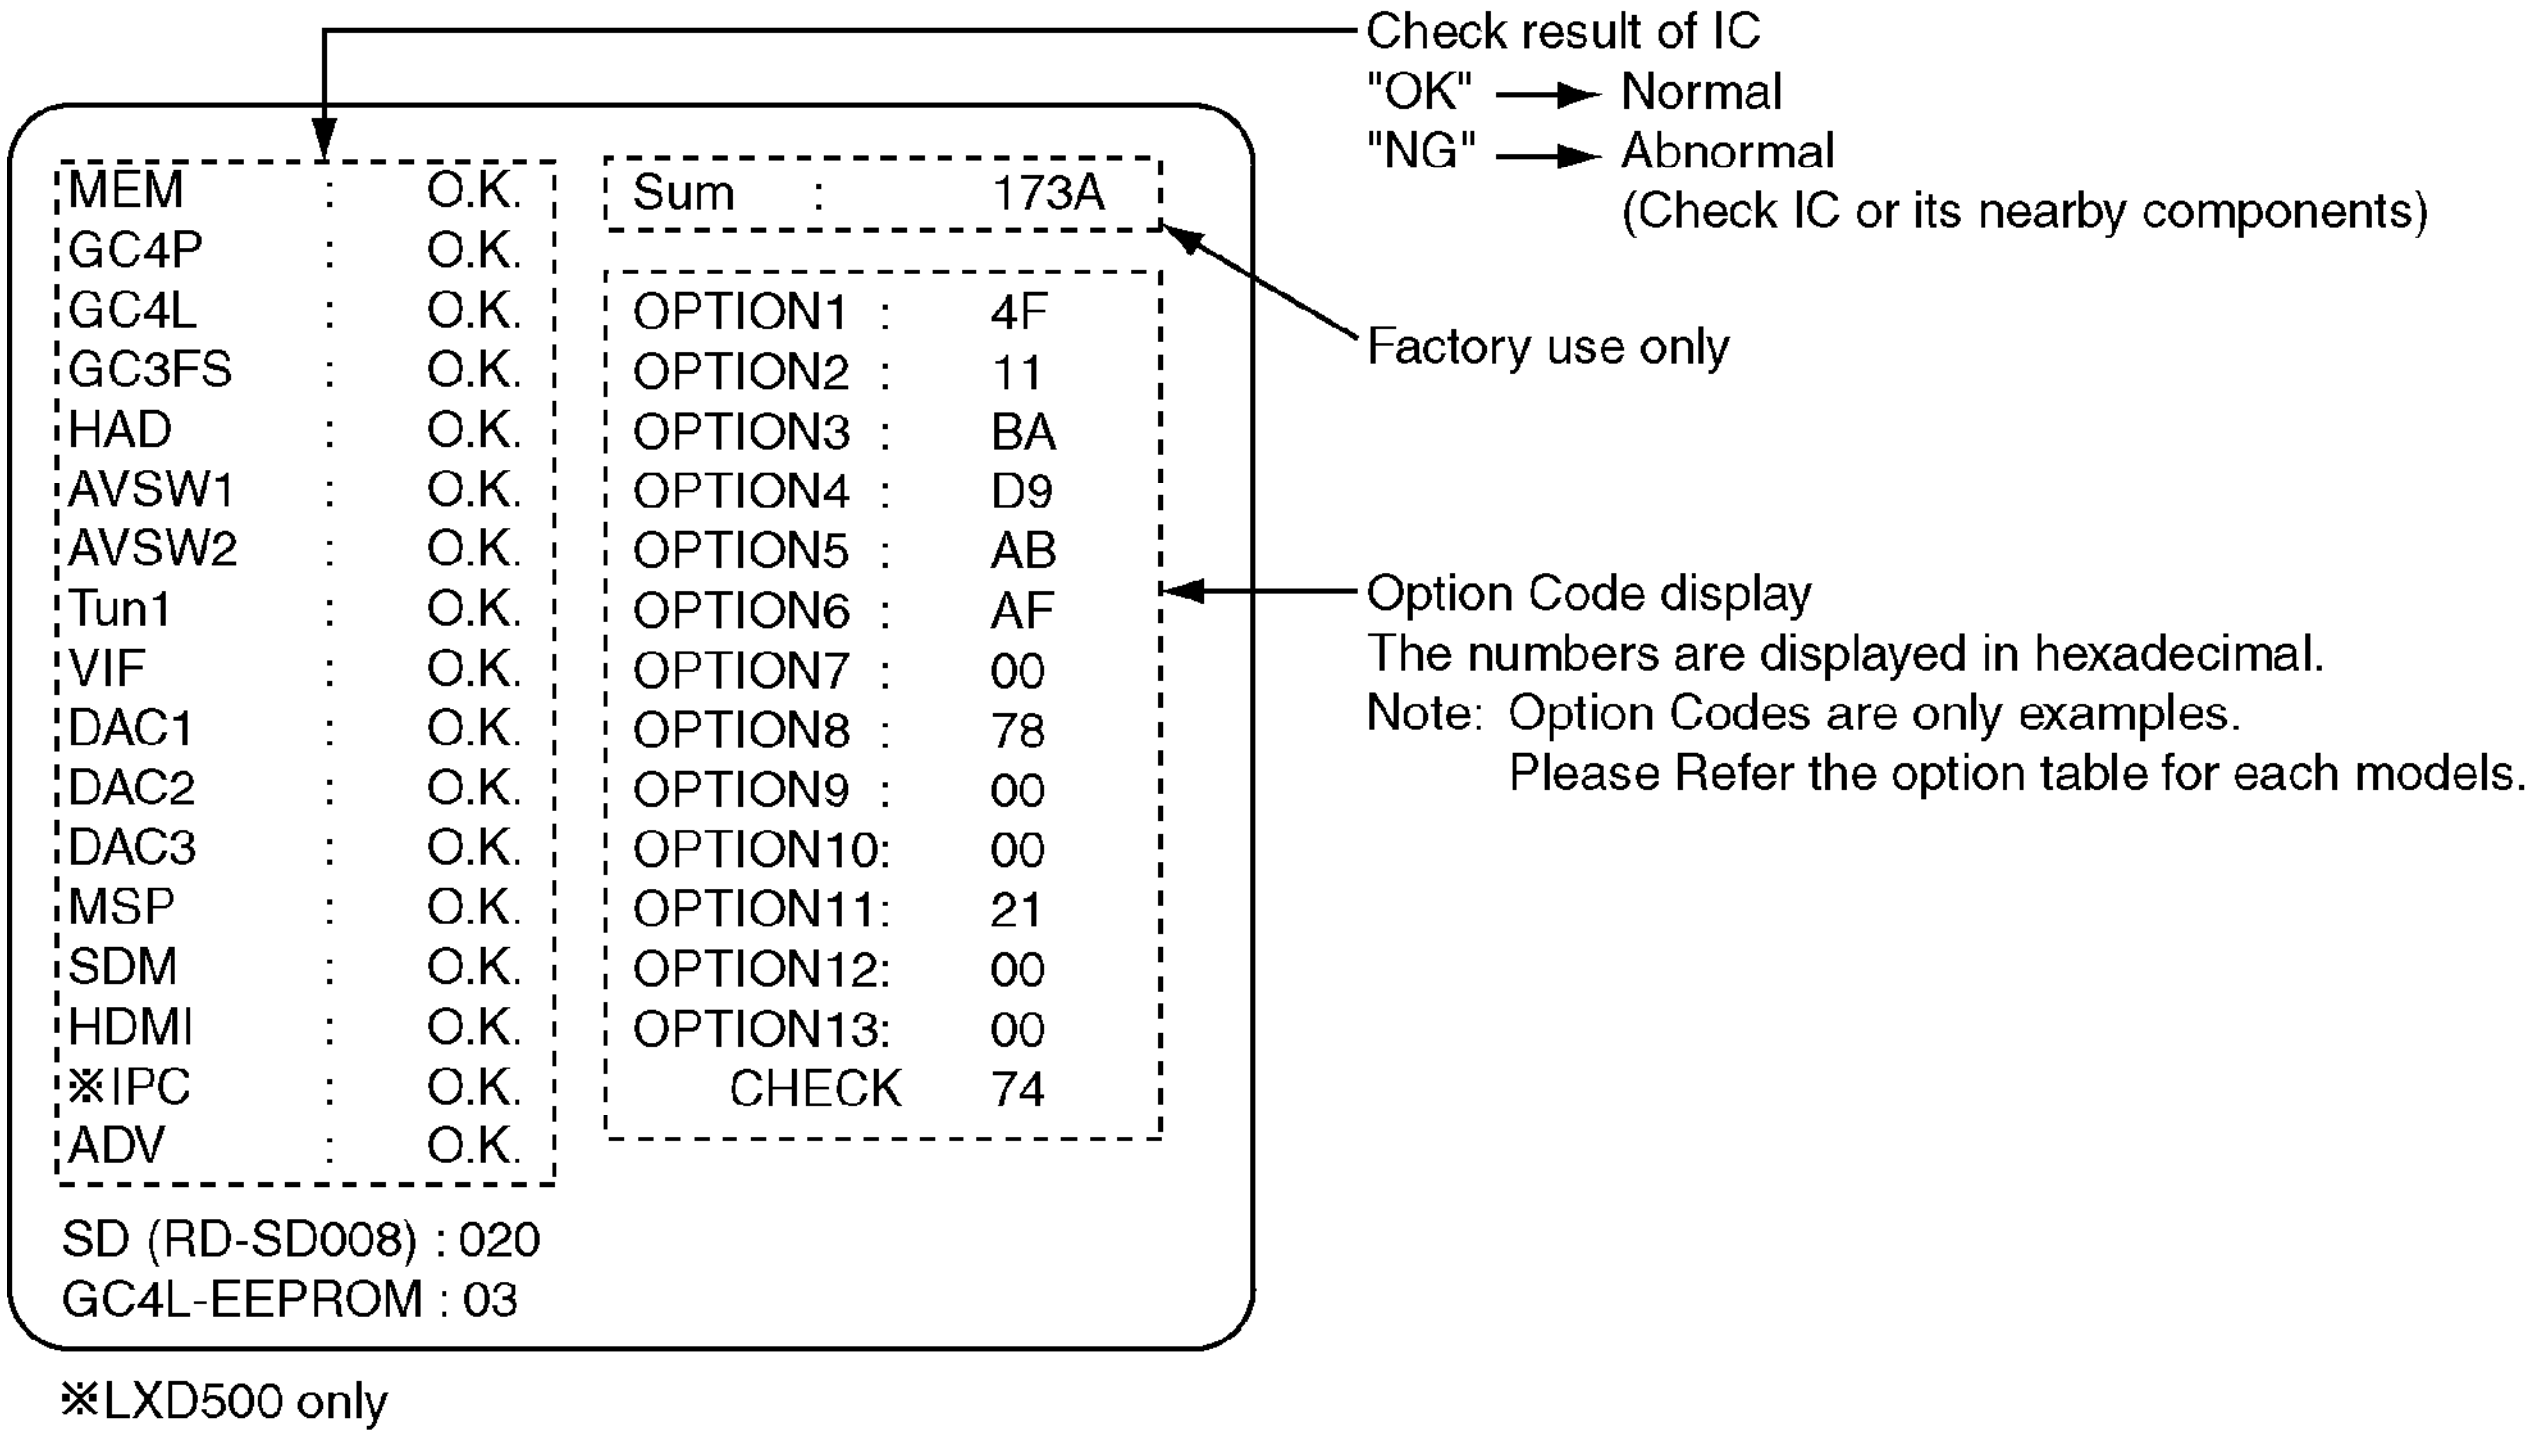

```
MEM      :   O.K.    Sum      :      173A
GC4P     :   O.K.
GC4L     :   O.K.    OPTION1  :   4F
GC3FS    :   O.K.    OPTION2  :   11
HAD      :   O.K.    OPTION3  :   BA
AVSW1    :   O.K.    OPTION4  :   D9
AVSW2    :   O.K.    OPTION5  :   AB
Tun1     :   O.K.    OPTION6  :   AF
VIF      :   O.K.    OPTION7  :   00
DAC1     :   O.K.    OPTION8  :   78
DAC2     :   O.K.    OPTION9  :   00
DAC3     :   O.K.    OPTION10:    00
MSP      :   O.K.    OPTION11:    21
SDM      :   O.K.    OPTION12:    00
HDMI     :   O.K.    OPTION13:    00
※IPC     :   O.K.        CHECK    74
ADV      :   O.K.

SD (RD-SD008) : 020
GC4L-EEPROM : 03
```

Check result of IC
"OK" → Normal
"NG" → Abnormal
(Check IC or its nearby components)

Factory use only

Option Code display
The numbers are displayed in hexadecimal.
Note: Option Codes are only examples.
Please Refer the option table for each models.

※LXD500 only

If the CCU ports have been checked and found to be incorrect or not located then "-‑" will appear in place of "O.K.".

Display	Ref. No.	Description	P.C.B.
MEM	IC1107	Memory	DG-Board
GC4P	IC4054	Global Core Processor	DG-Board
GC4L	IC4057	Global Core	DG-Board
GC3FS	IC4013	Global Core for Sub	DG-Board
HAD	IC4012	OSD RGB A/D Converter	DG-Board
AVSW1	IC3005	AV Switch VIDEO	H-Board
AVSW2	IC2105	AV Switch AUDIO	H-Board
Tun1	TU3201	Tuner	H-Board
DAC1	IC1106	DAC control 1	DG-Board
DAC2	IC1116	DAC control 2	DG-Board
DAC3	IC3006	DAC control 3	H-Board
MSP	IC2106	Stereo Decoder	H-Board
SDM	SD-Module	MPEG4/PHOTO view, SD recording	SD-Module
HDMI	IC5003	HDMI I/F Receiver	DV-Board
IPC	IC8013	HDSL PEAKS Lite	XV-Board
ADV	IC4005	A/D Converter	DG-Board

4.2. Power LED Blinking timing chart

1. Subject

Information of LED Flashing timing chart.

2. Contents

When an abonormality has occurred the unit, the protection circuit operates and reset to the stand by mode. At this time, the defective block can be identified by the number of blinking of the Power LED on the front panel of the unit.

Blinking times	Blinking timing	Contents	Check point
1	 Once 4 sec Light No Light	Inverter SOS	POWER UNIT LCD PANEL
3		SOS1 (BT30V/PC5V) SOS2 (MSP8V/MSP5V/ SUB9V/SUB5V)	AP-BOARD H-BOARD
5		Main 9V	AP-BOARD
8		Sub 5V	AP-BOARD

5. Chassis Board Layout

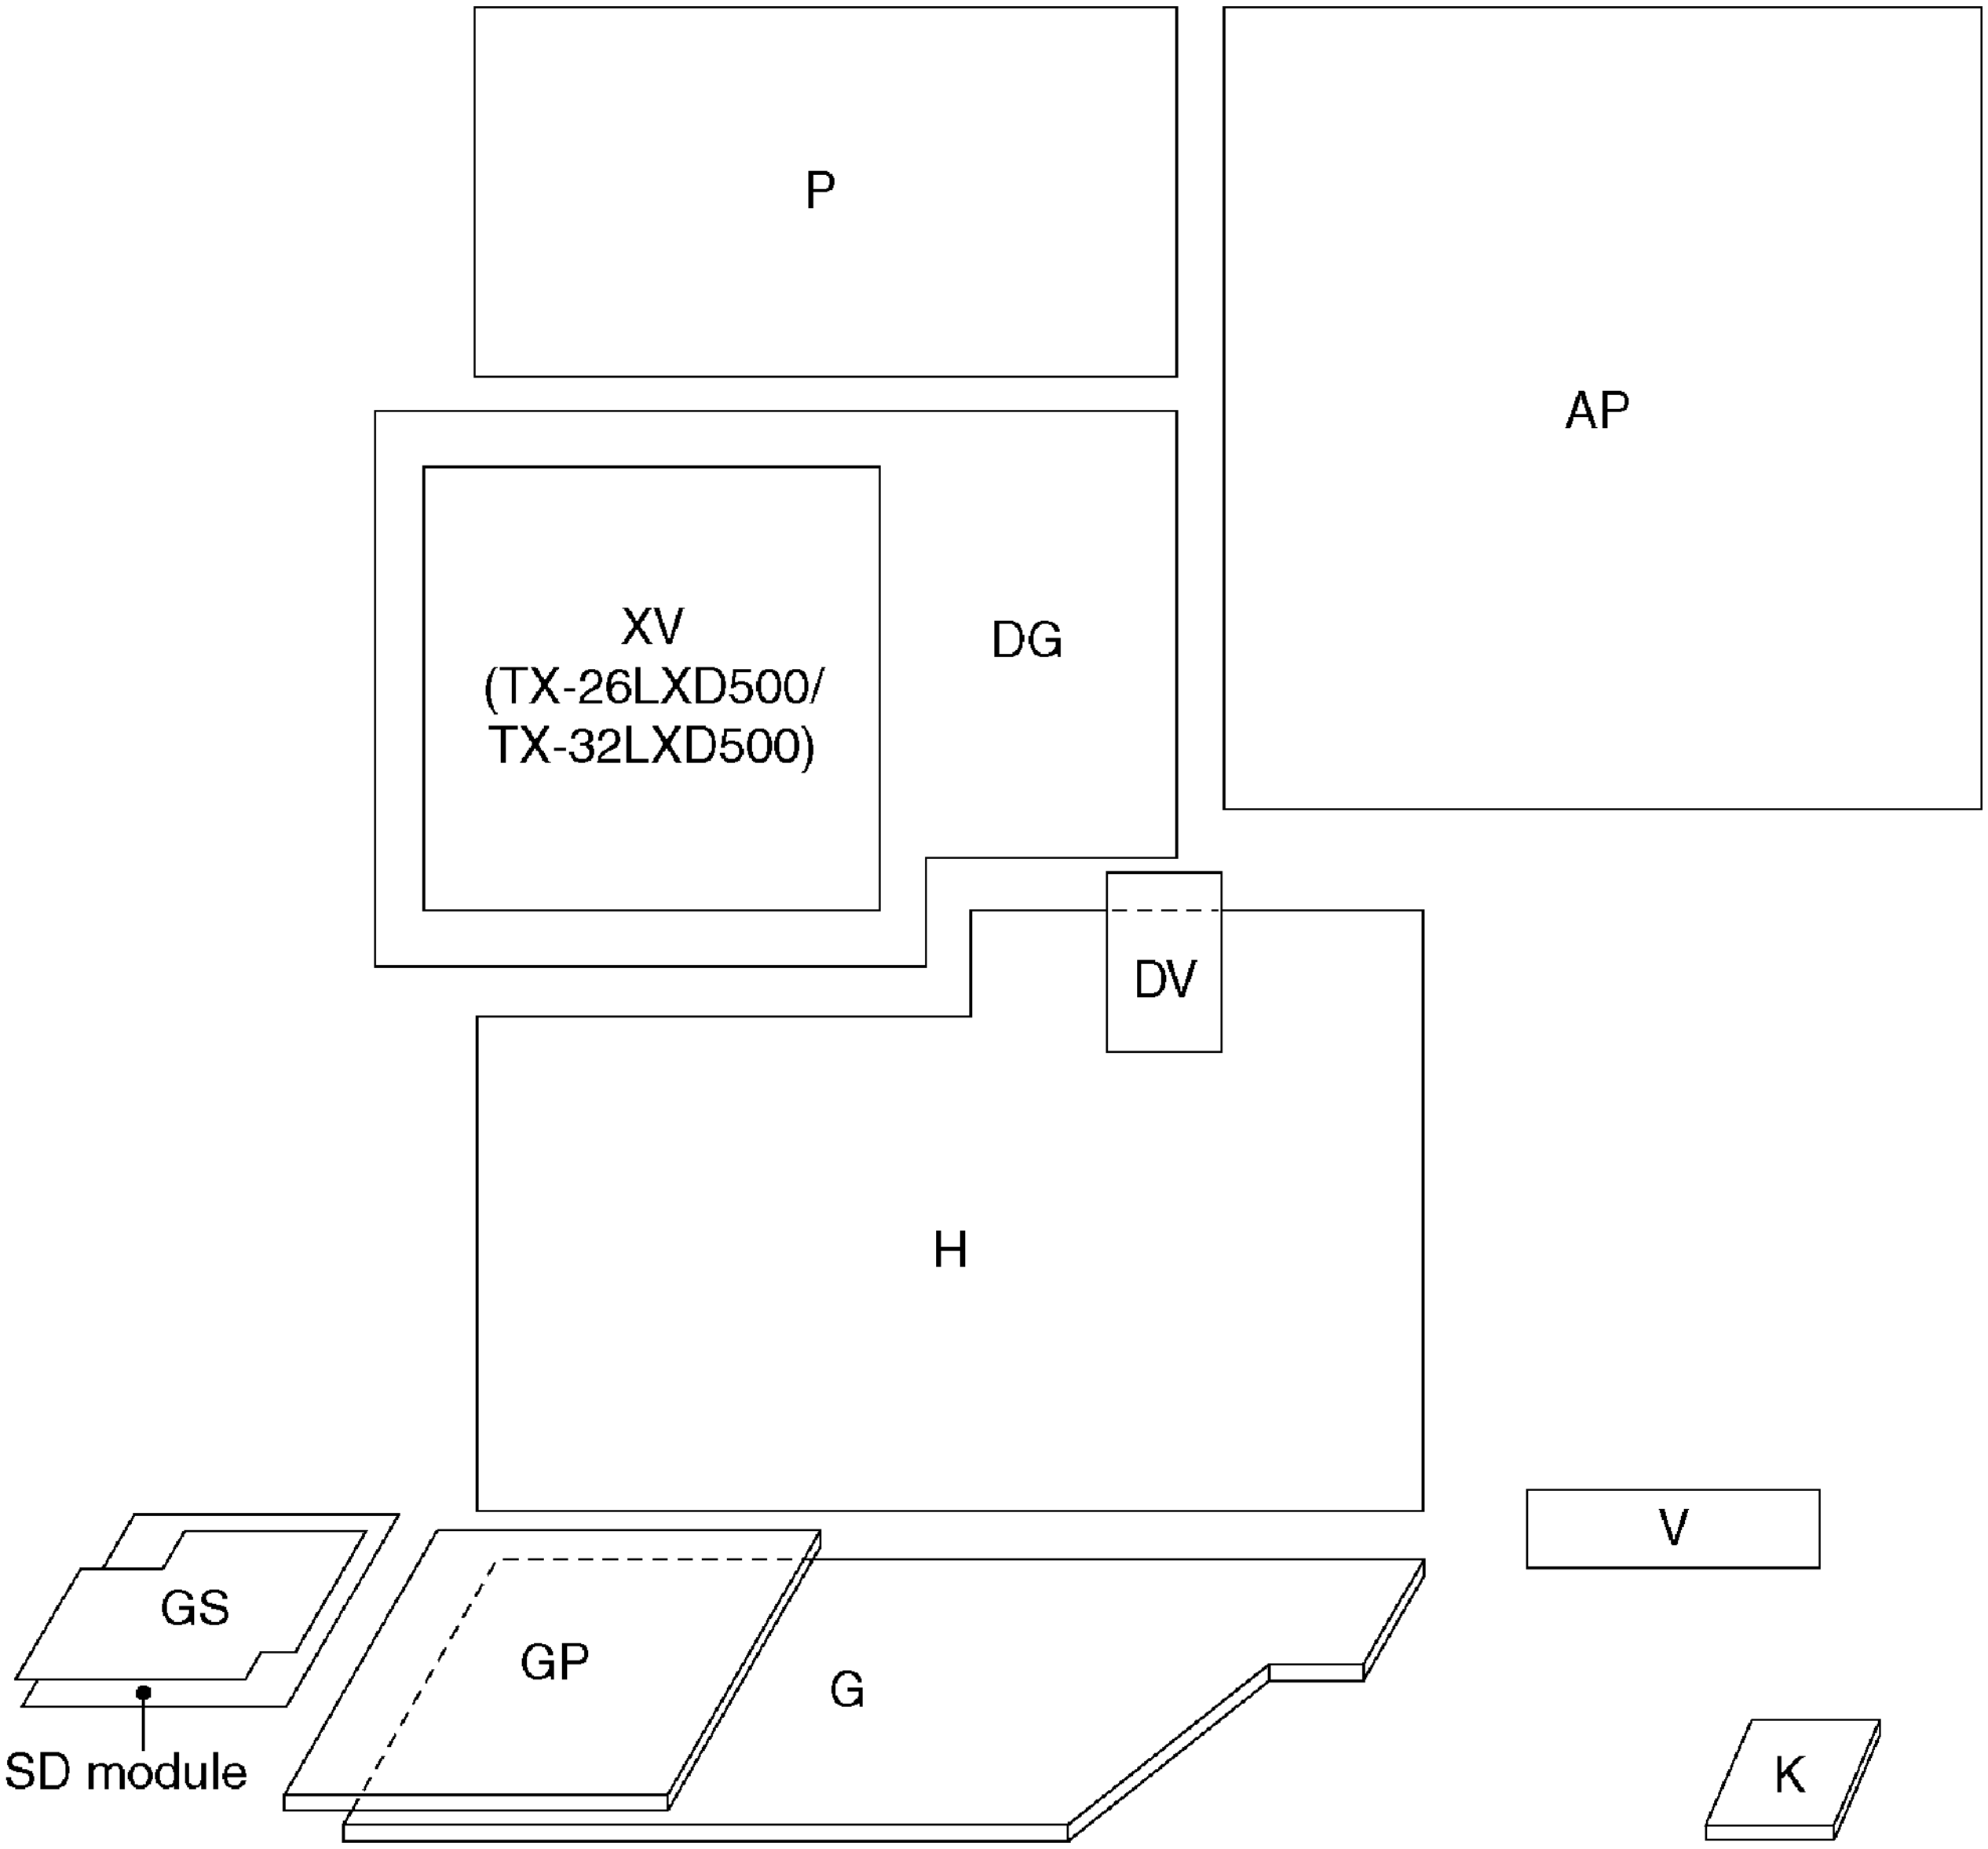
P
AP
XV
(TX-26LXD500/
TX-32LXD500)
DG
DV
H
V
GS
GP
G
SD module
K

Board Name	Function
AP-Board	Regulator
DG-Board	Global Core, A/D Converter, MCU
H-Board	AV connector, TV Tuner, AV Switch
K-Board	Power Switch
G-Board	Front AV & HP connector, Key Switch
P-Board	DC Power Supply
V-Board	Remote Receiver, LED
XV-Board	DVB Tuner (TX-26LXD500/TX-32LXD500)
DV-Board	HDMI interface
GP-Board	PC Card slot, PC Card interface
GS-Board	SD Card slot, SD Card Interface
SD Module	MPEG/JPEG interface

6. Before servicing

6.1. Kind and location of the flexible cable and bridge cable

Ref No.	Connecter type	Pins	Location	Opposite Ref No.
G1	-	10pin	G-Board	V1
G4	-	30pin	G-Board	H4
G5	-	20pin	G-Board	H5
G10	-	4pin	G-Board	speaker box L
G11	-	5pin	G-Board	speaker box R
GP6	-	3pin	GP-Board	H6
GP10	Flexible type	50pin	GP-Board	SD Module
GS3	Flexible type	40pin	GS-Board	SD Module
GS8	-	7pin	GS-Board	H8
GS9	-	15pin	GS-Board	H9
AP1	Bridge Type	23pin	AP-Board	H1
AP2	-	7pin	AP-Board	P2 (CN101)
AP3	Bridge Type	11pin	AP-Board	P3 (CN201)
AP4	Bridge Type	22pin	AP-Board	DG4
AP5	Bridge Type	22pin	AP-Board	DG5
AP6	-	3pin	AP-Board	K6
AP10	-	2pin	AP-Board	AC cord
DG2	Flexible type	40pin	DG-Board	H2

Ref No.	Connecter type	Pins	Location	Opposite Ref No.
DG3	Flexible type	40pin	DG-Board	H3
DG4	Bridge type	23pin	DG-Board	AP4
DG5	Bridge type	23pin	DG-Board	AP5
DG6	-	8pin	DG-Board	CN3 (Inverter)
DG7	-	32pin	DG-Board	LCD Panel
DG8	-	7pin	DG-Board	LCD Panel
DG10	-	60pin	DG-Board	DV15
DV15	-	60pin	DV-Board	DG10
H1	Bridge type	23pin	H-Board	AP1
H2	Flexible type	40pin	H-Board	DG2
H3	Flexible type	40pin	H-Board	DG3
H4	-	30pin	H-Board	G4
H5	-	20pin	H-Board	G5
H6	-	3pin	H-Board	GP6
H8	-	7pin	H-Board	GS8
H9	-	15pin	H-Board	GS9
K6	-	3pin	K-Board	AP6
P1 (CN203)	-	8pin	P-Board	CN5 (Inverter)
P2 (CN101)	-	7pin	P-Board	AP2
P3 (CN201)	Bridge Type	11pin	P-Board	AP3
P4 (CN202)	-	8pin	P-Board	CN4 (Inverter)
V1	-	10pin	V-Board	G1

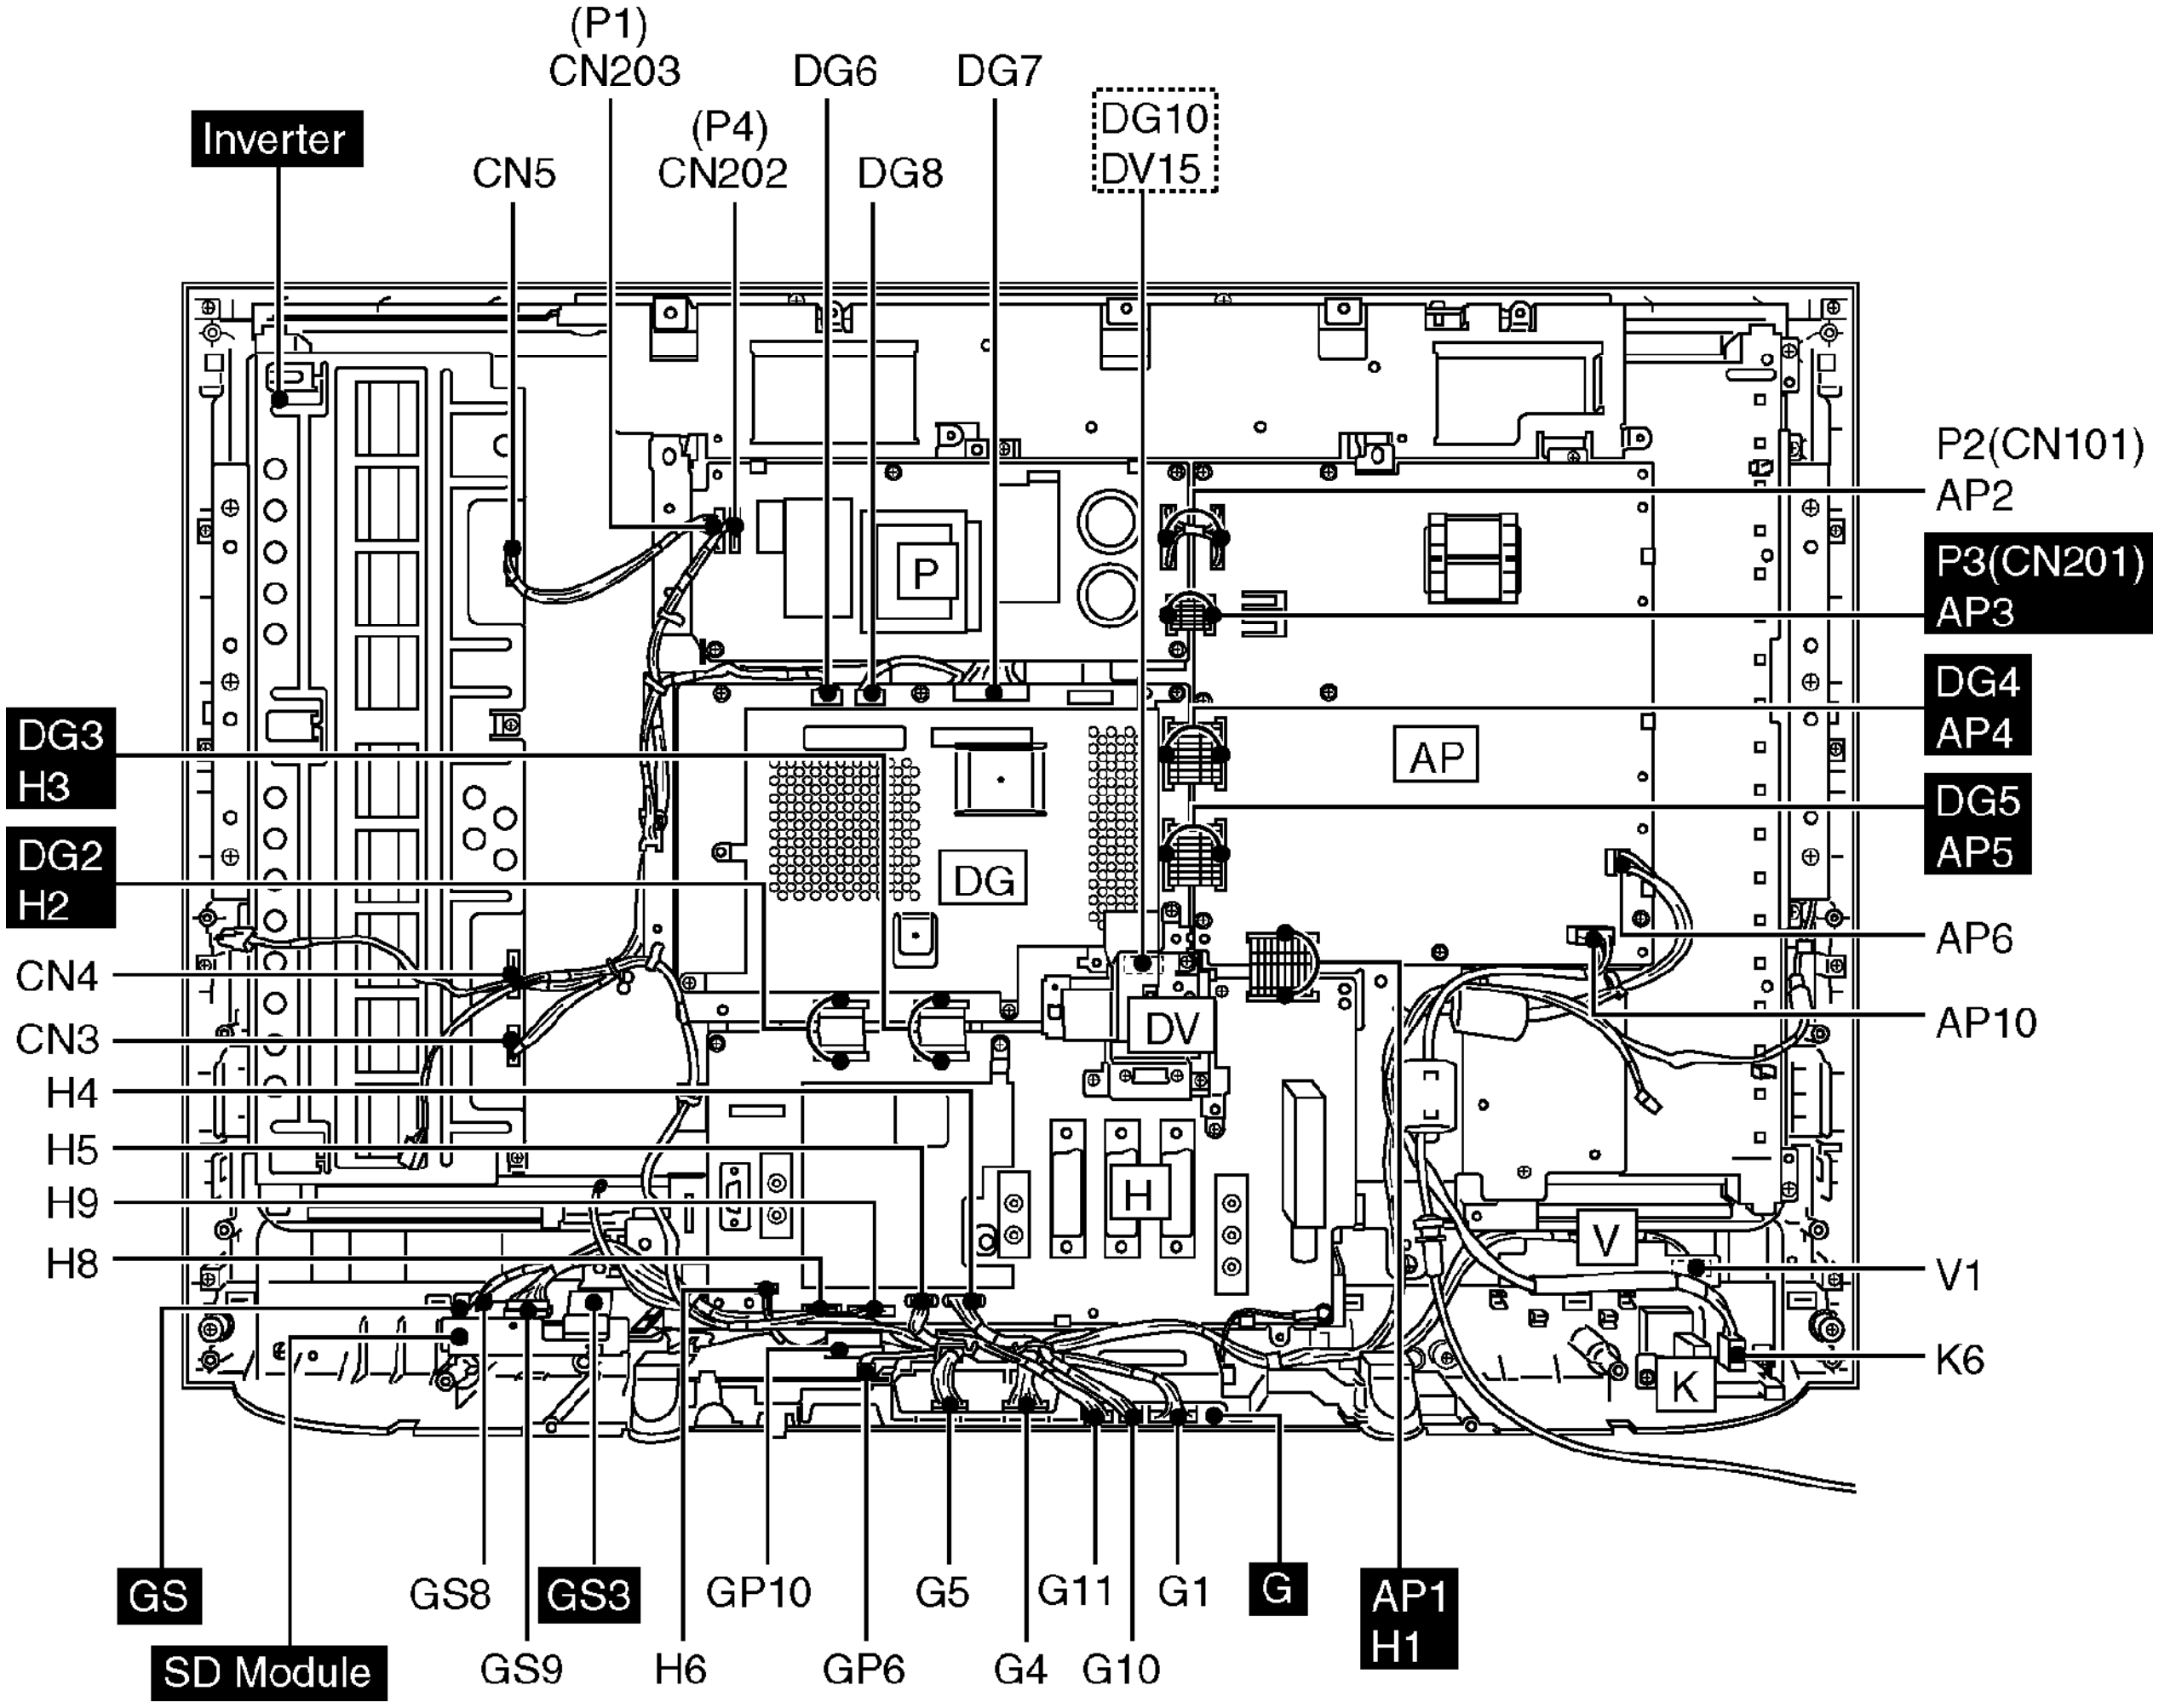
(P1)
CN203
DG6
DG7
Inverter
(P4)
CN202
CN5
DG8
DG10
DV15
P2(CN101)
AP2
P3(CN201)
AP3
DG4
AP4
DG5
AP5
AP6
AP10
V1
K6
P
AP
DG
DV
H
V
K
DG3
H3
DG2
H2
CN4
CN3
H4
H5
H9
H8
GS
SD Module
GS8
GS9
GS3
H6
GP10
GP6
G5
G4
G11
G10
G1
G
AP1
H1

6.2. How to remove the connector

Bridge cable connector

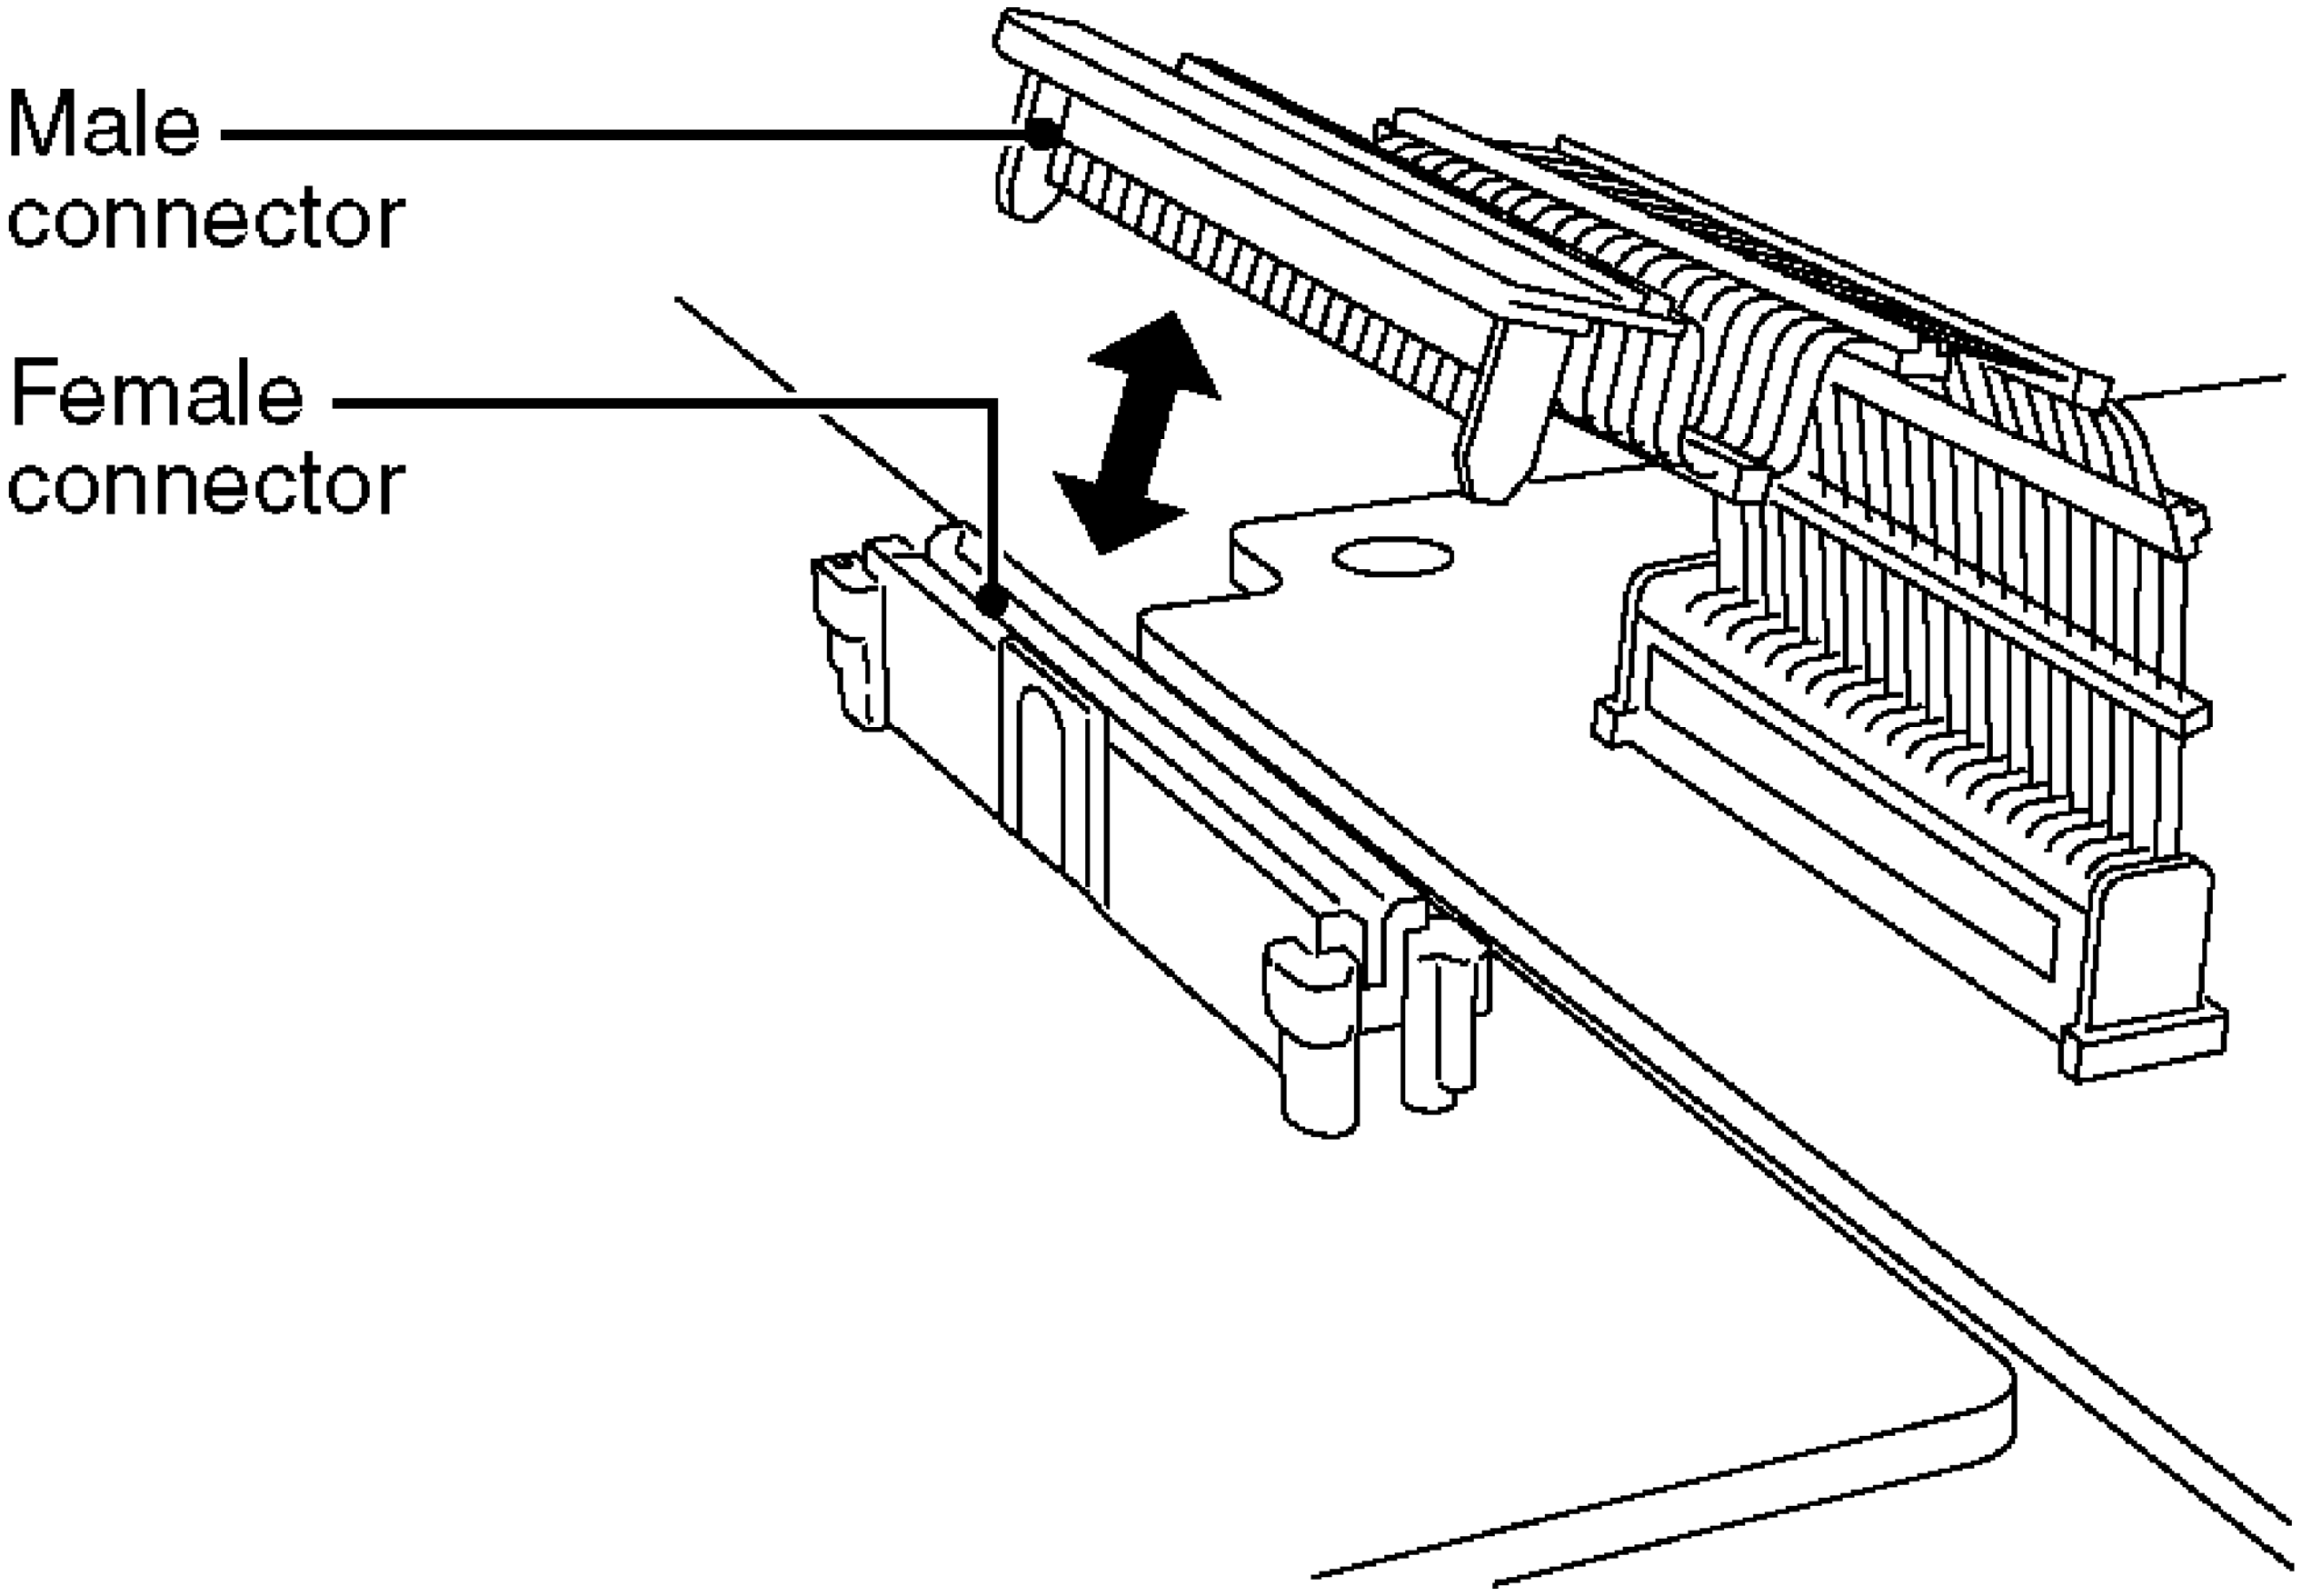
Male connector
Female connector

Flexible cable connector

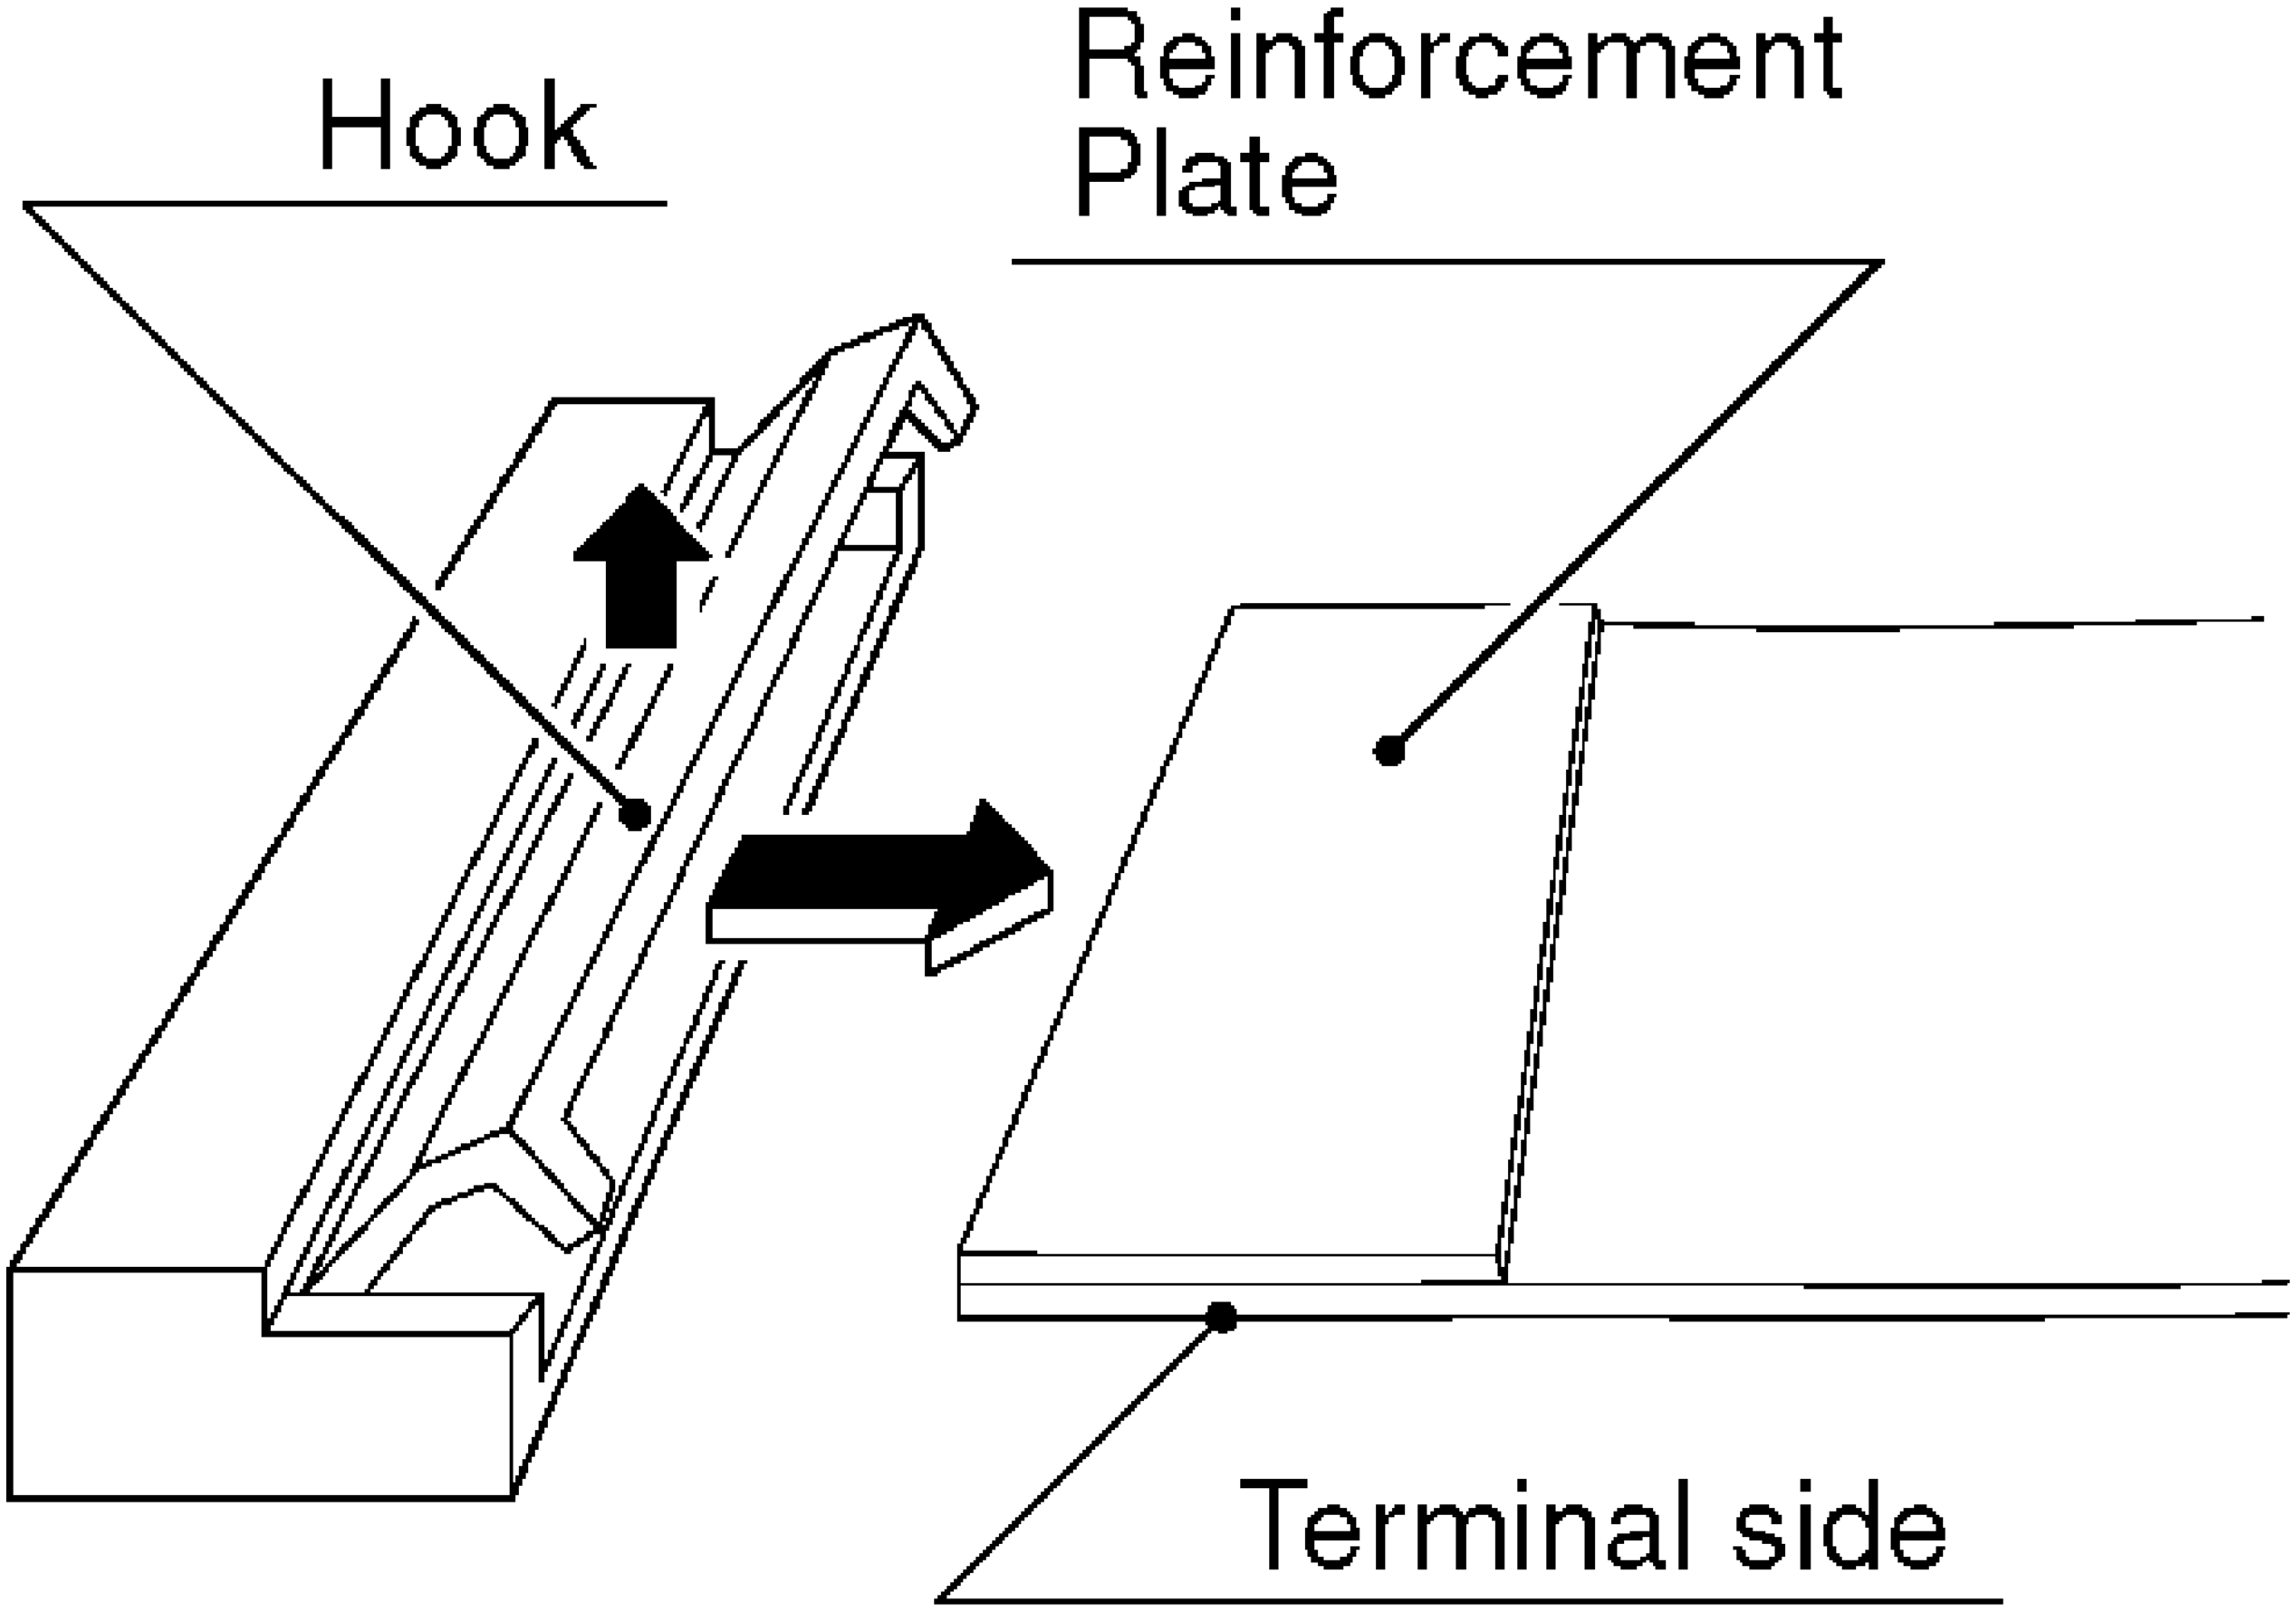
Hook
Reinforcement Plate
Terminal side

6.3. Wire dressing 1

1. Make the wire dressing as illustrated below.

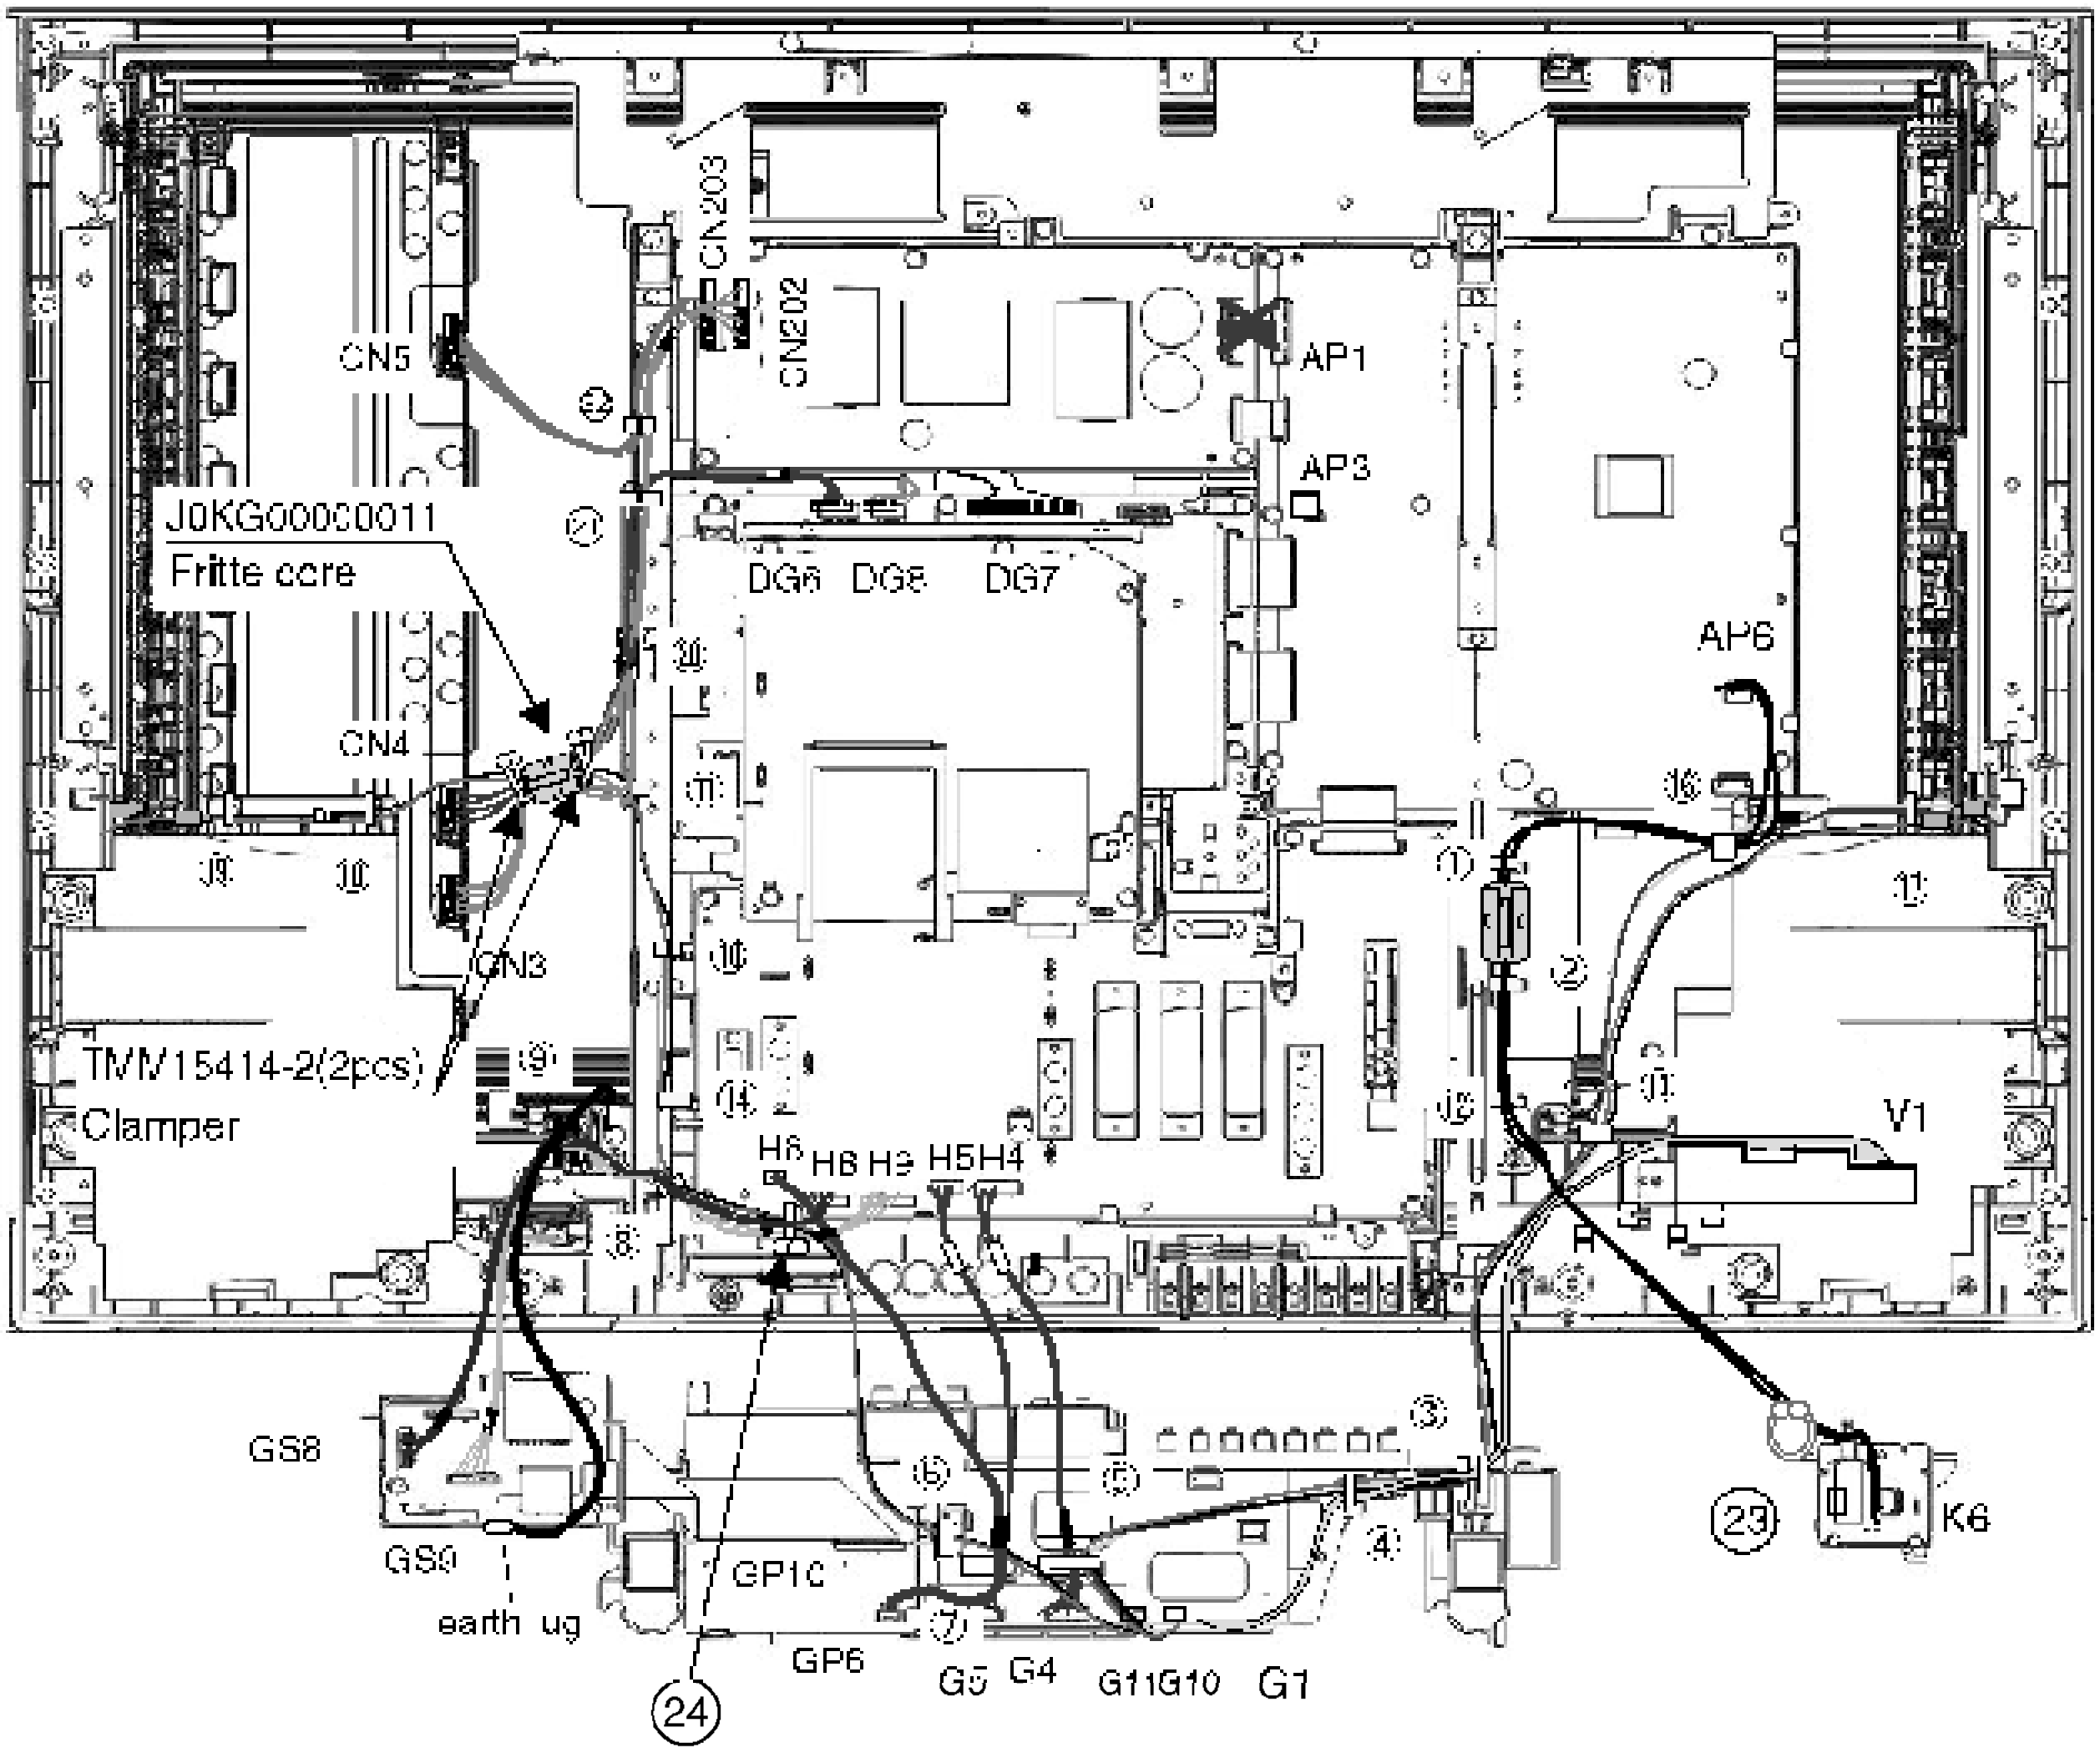
CN203
CN202
CN5
AP1
AP3
J0KG00000011
Fritte core
DG6 DG8 DG7
AP6
CN4
CN3
TMM15414-2(2pcs)
Clamper
V1
H6 H8 H9 H5 H4
GS8
GS0
earth lug
GP10
GP6
G5 G4 G11 G10 G1
K6
㉓
㉔

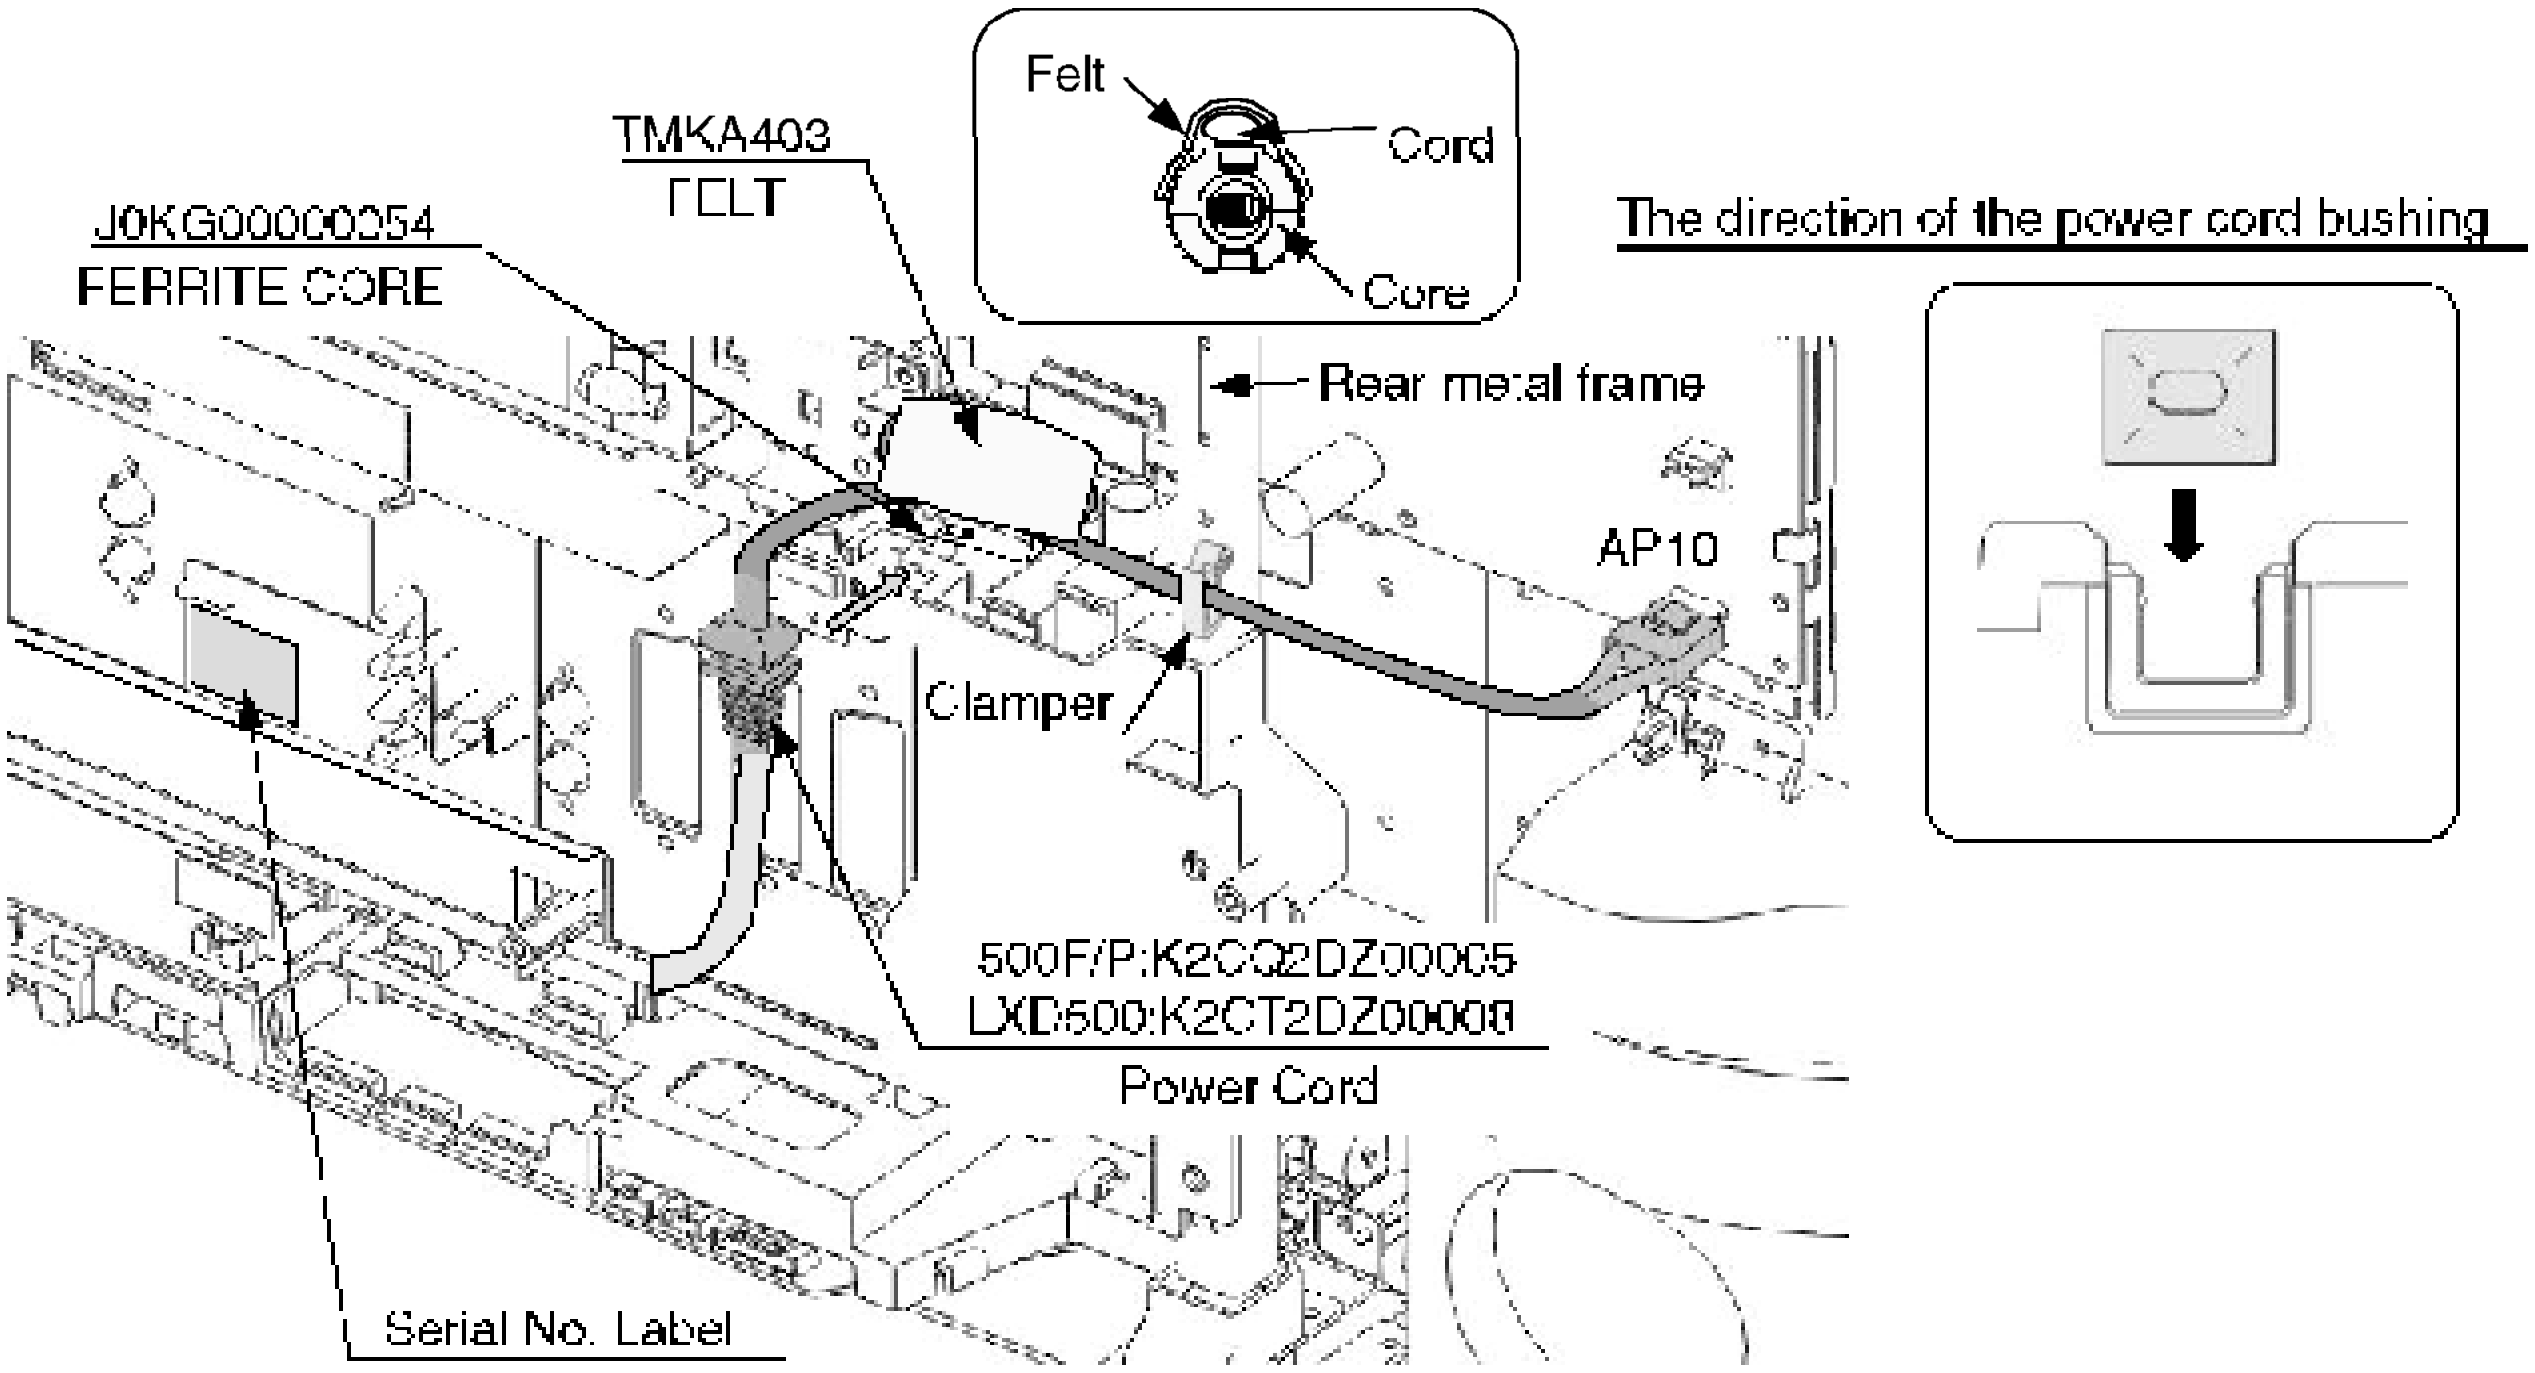
Felt
Cord
Core
TMKA403
FELT
J0KG00000054
FERRITE CORE
The direction of the power cord bushing
Rear metal frame
AP10
Clamper
500F/P:K2CQ2DZ00005
LXD500:K2CT2DZ00008
Power Cord
Serial No. Label

6.4. Wire dressing 2

<Clamping>

Clamper Wire	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	㉑	㉒	㉓	㉔
G1~V1			●	●	●																			
AP6~K6	●	●										●				●							●	
CN5~CN203																						●		
CN4~CN202																				●	●	●		
CN3~DG6											●										●			
G11~SP/W(R)						●		●		●	●			●				●	●					●
G10~SP/W(L)			●	●	●								●			●	●							
GS9~H9								●	●															●
GS8~H8								●	●															●
G4~H4					●																			
G5~H5							●																	
GP6~H6							●																	

W-SP

CANDY-SP

F/P only

Notes :

1. Connect every connector surely.

2. Manage wires not to touch any sharp edge of the metal parts.

3. Manage wires not to have too much tension.

7. Servicing method

7.1. Removing the stand ass'y

1. Lay down the main unit so that the rear cover faces upward.

2. Remove the cable cover.

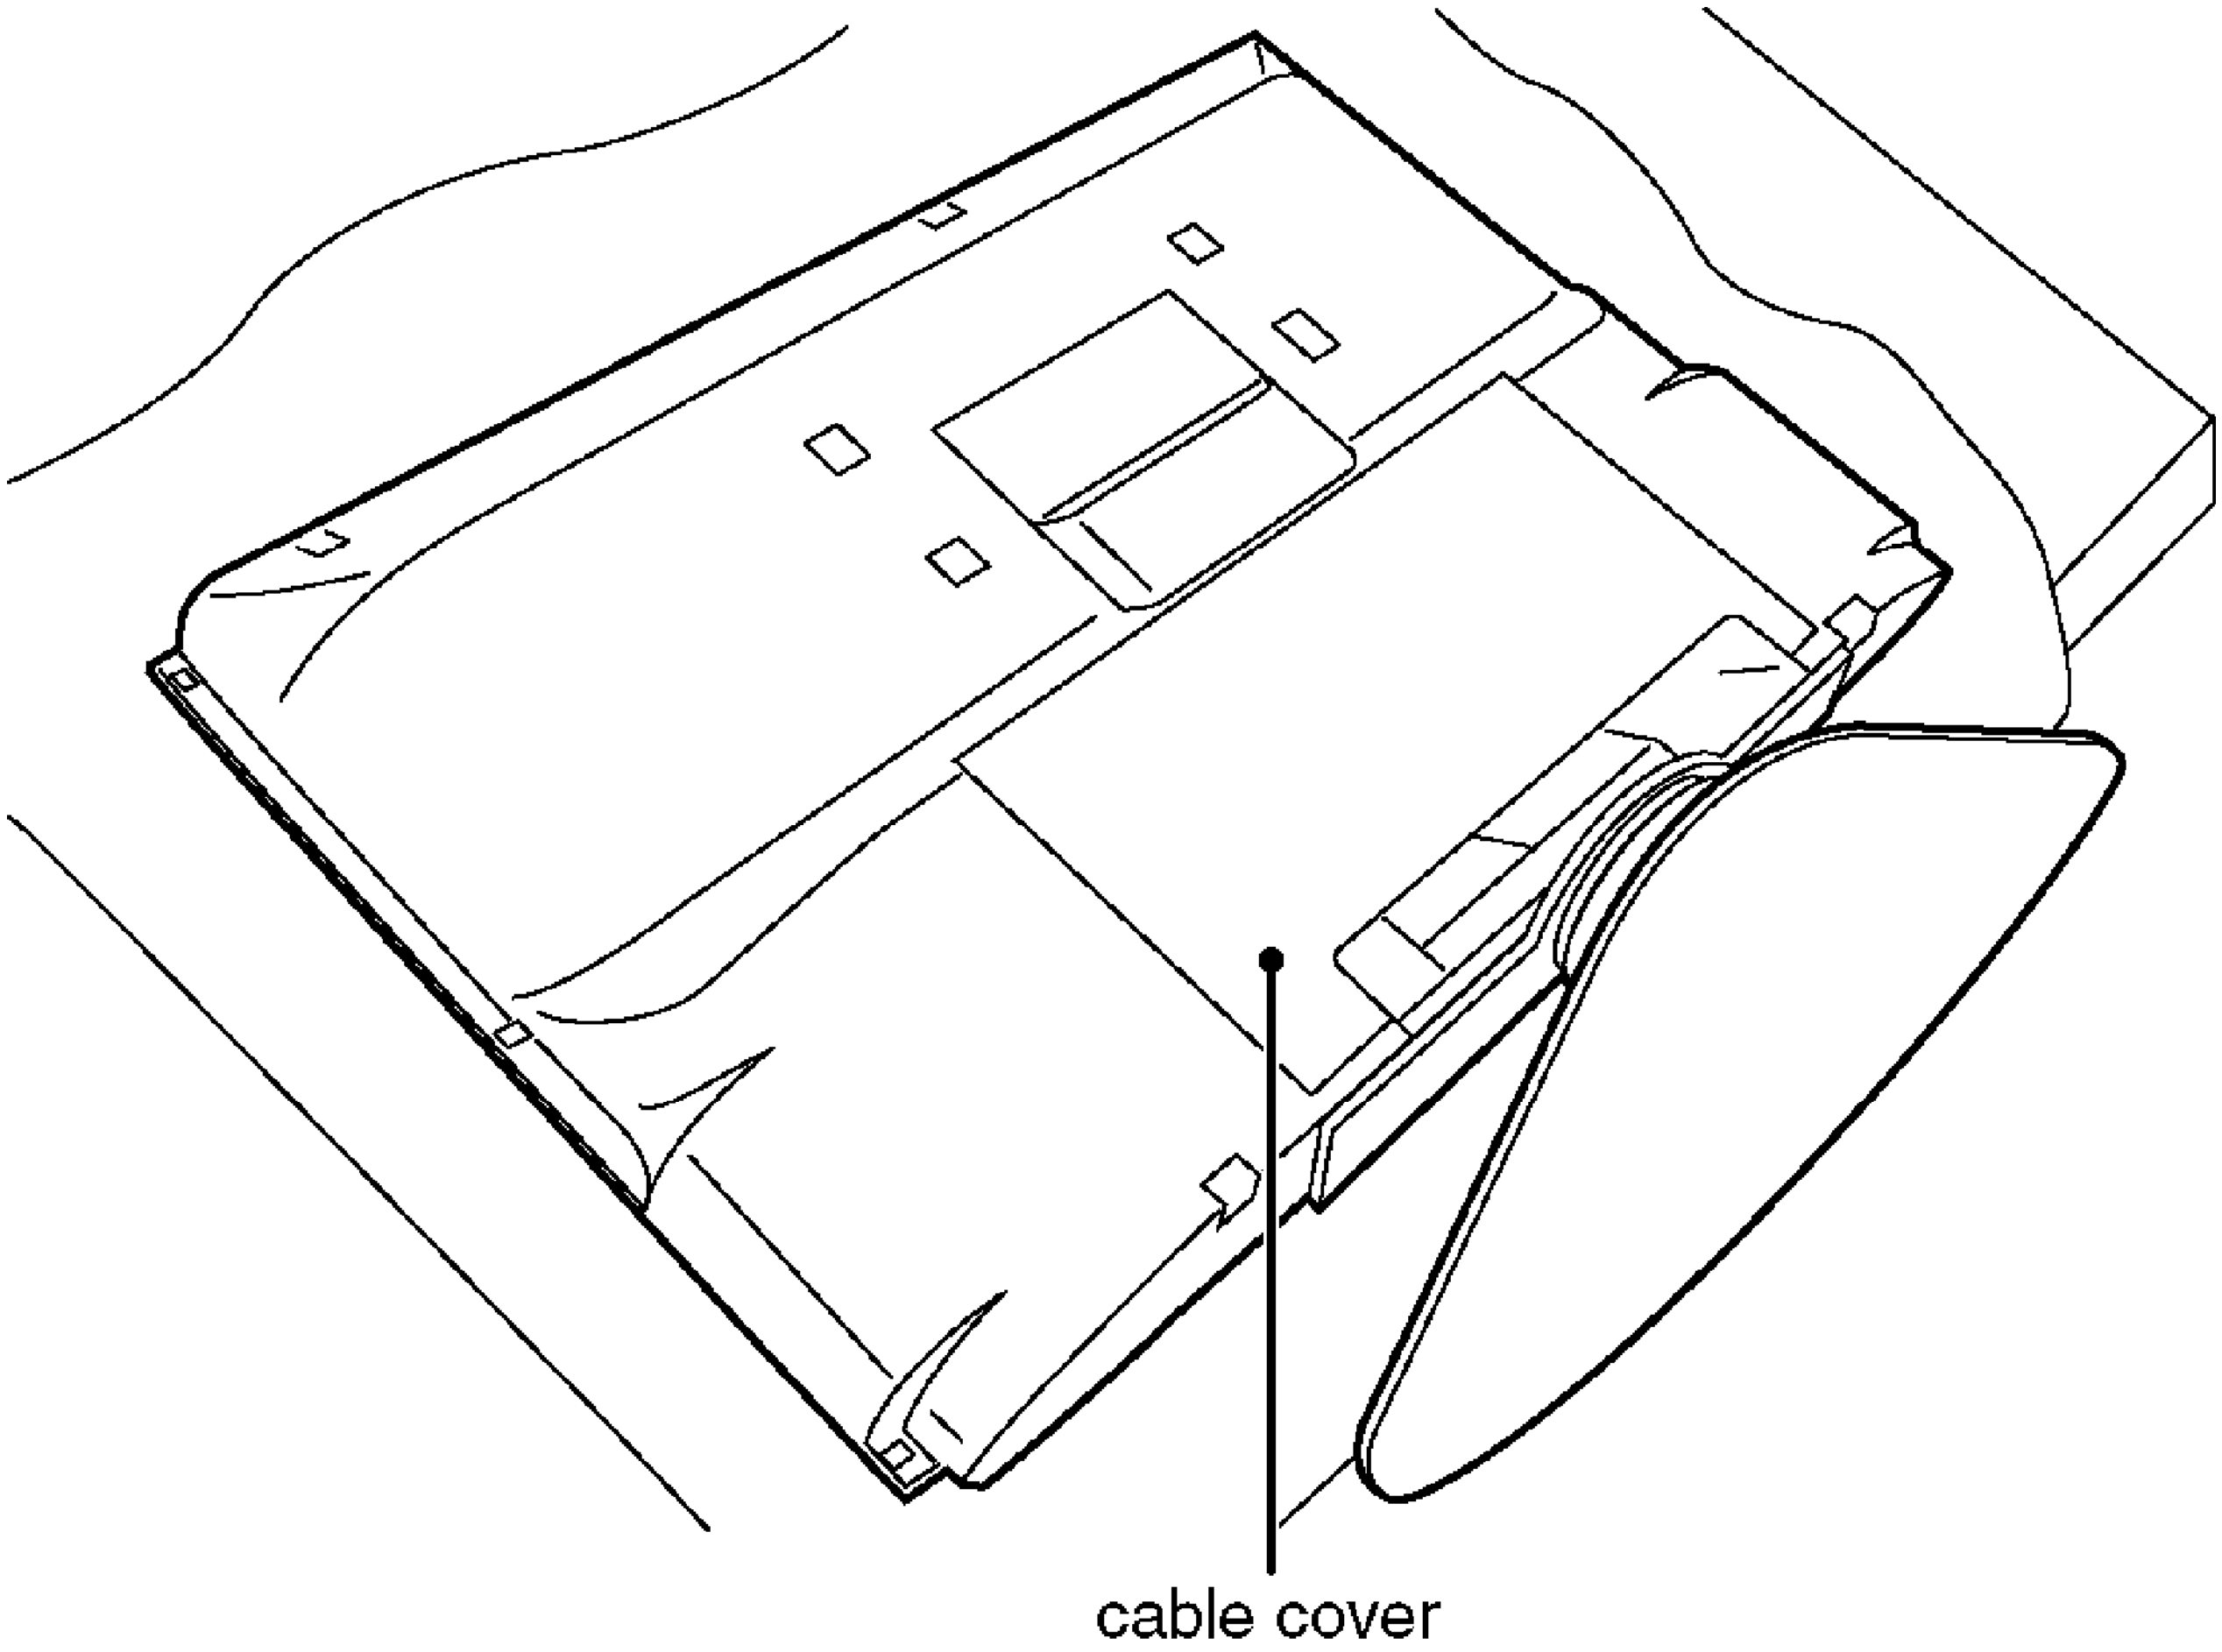
cable cover

3. Remove the fixing screws (4pcs).

4. Remove the stand ass'y.

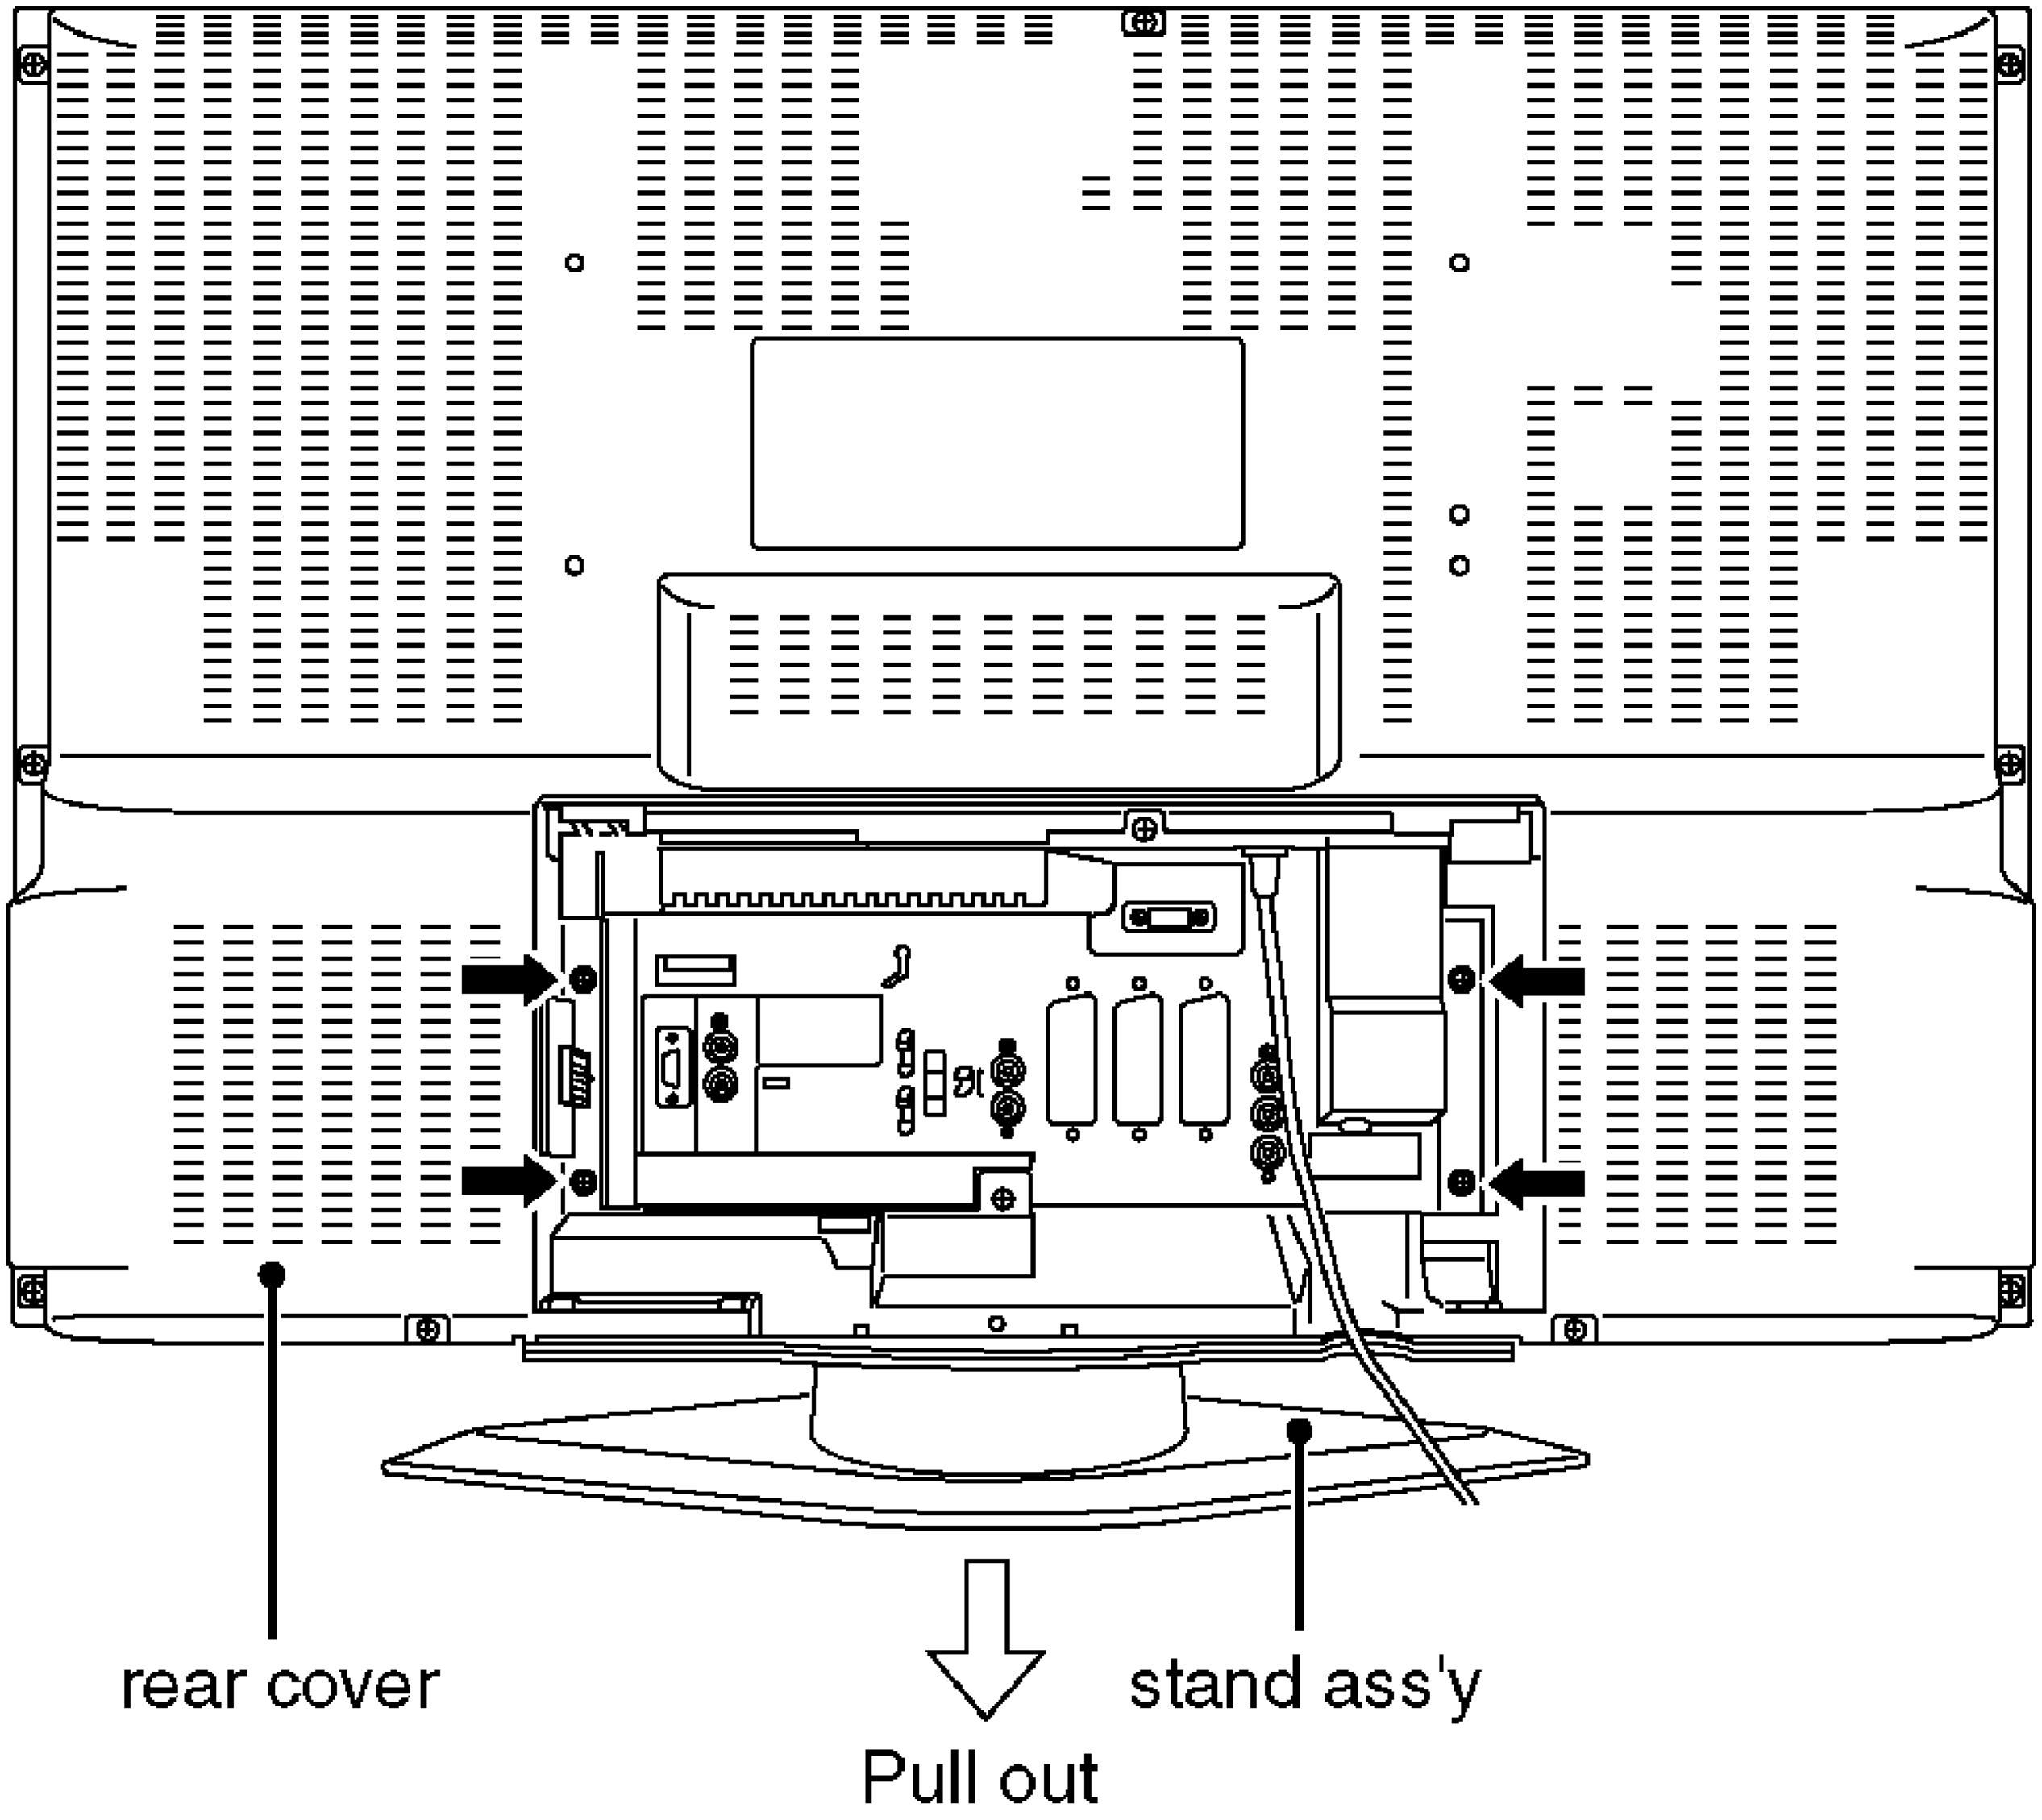
rear cover
Pull out
stand ass'y

7.2. Removing the rear cover

1. Remove the stand ass’y. (See 7.1.)

2. Remove the fixing screws (13pcs).

3. Remove the rear cover.

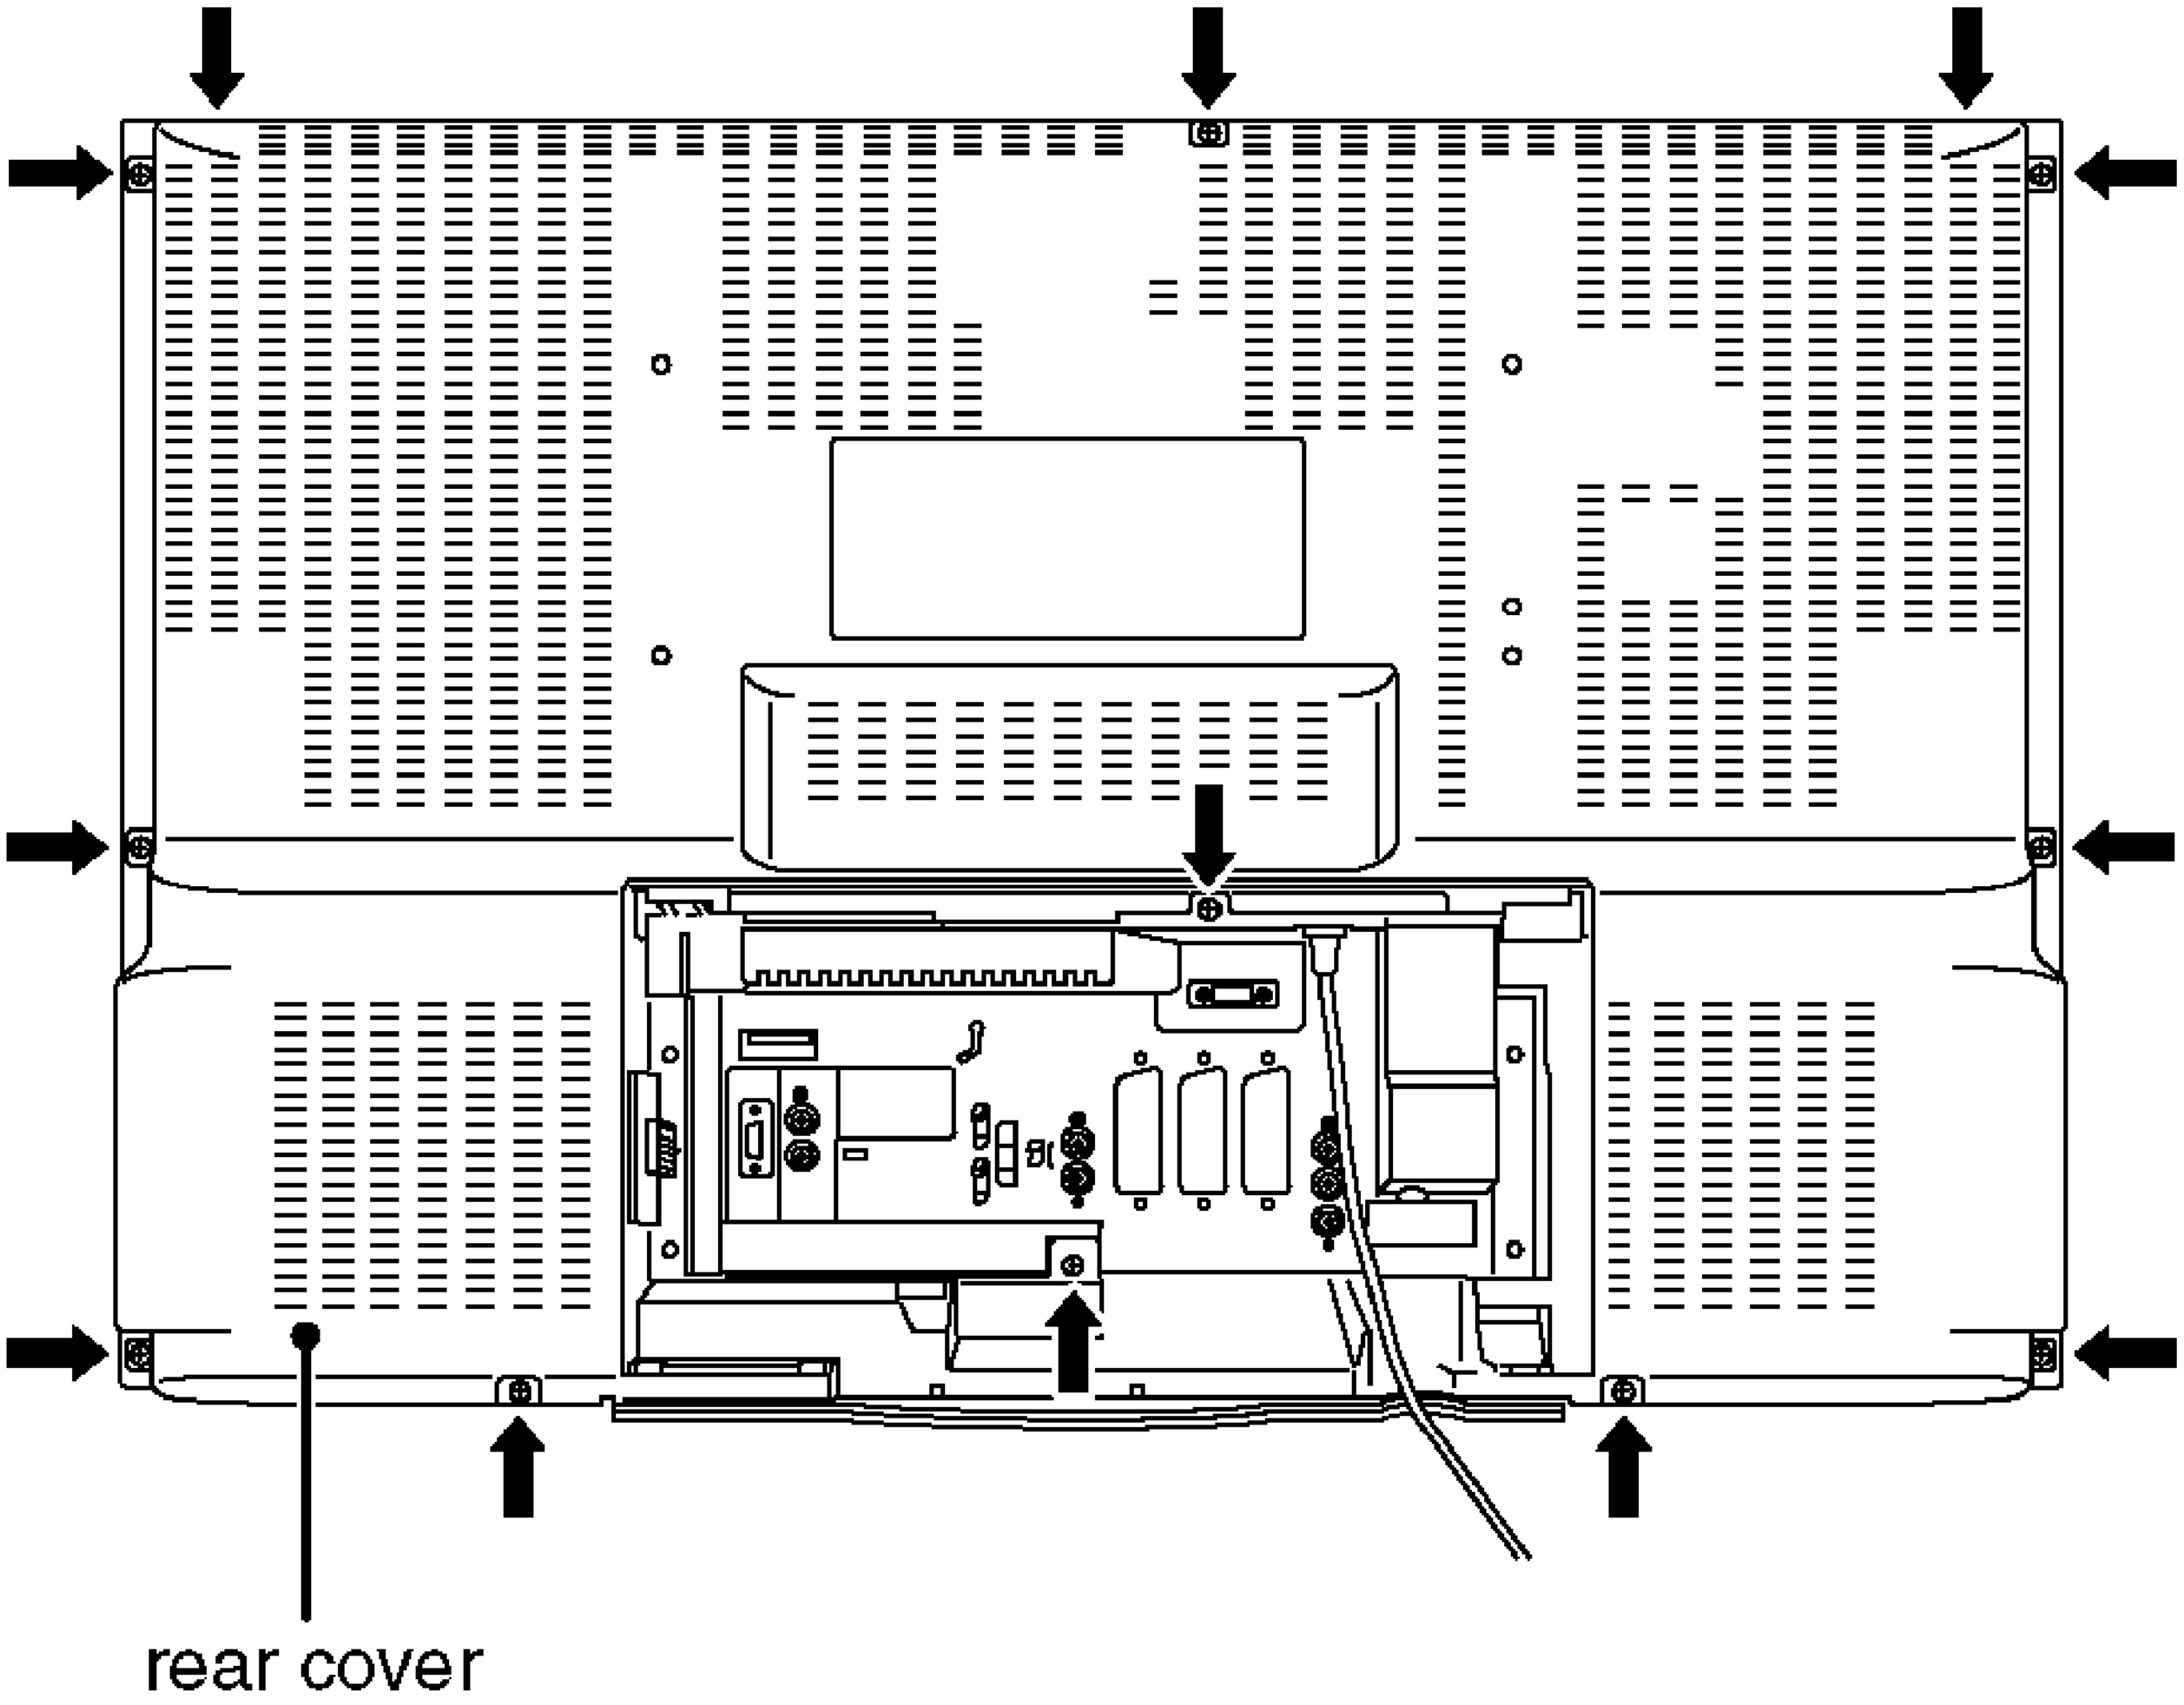

7.3. Removing the speaker box L and R

1. Remove the rear cover. (See 7.2.)
2. Release the speaker cables from the clampers on the speaker box L and R, and disconnect the speaker relay couplers (SPL and SPR).
3. Remove the fixing screws (6pcs).
4. Remove the speaker box L and R.

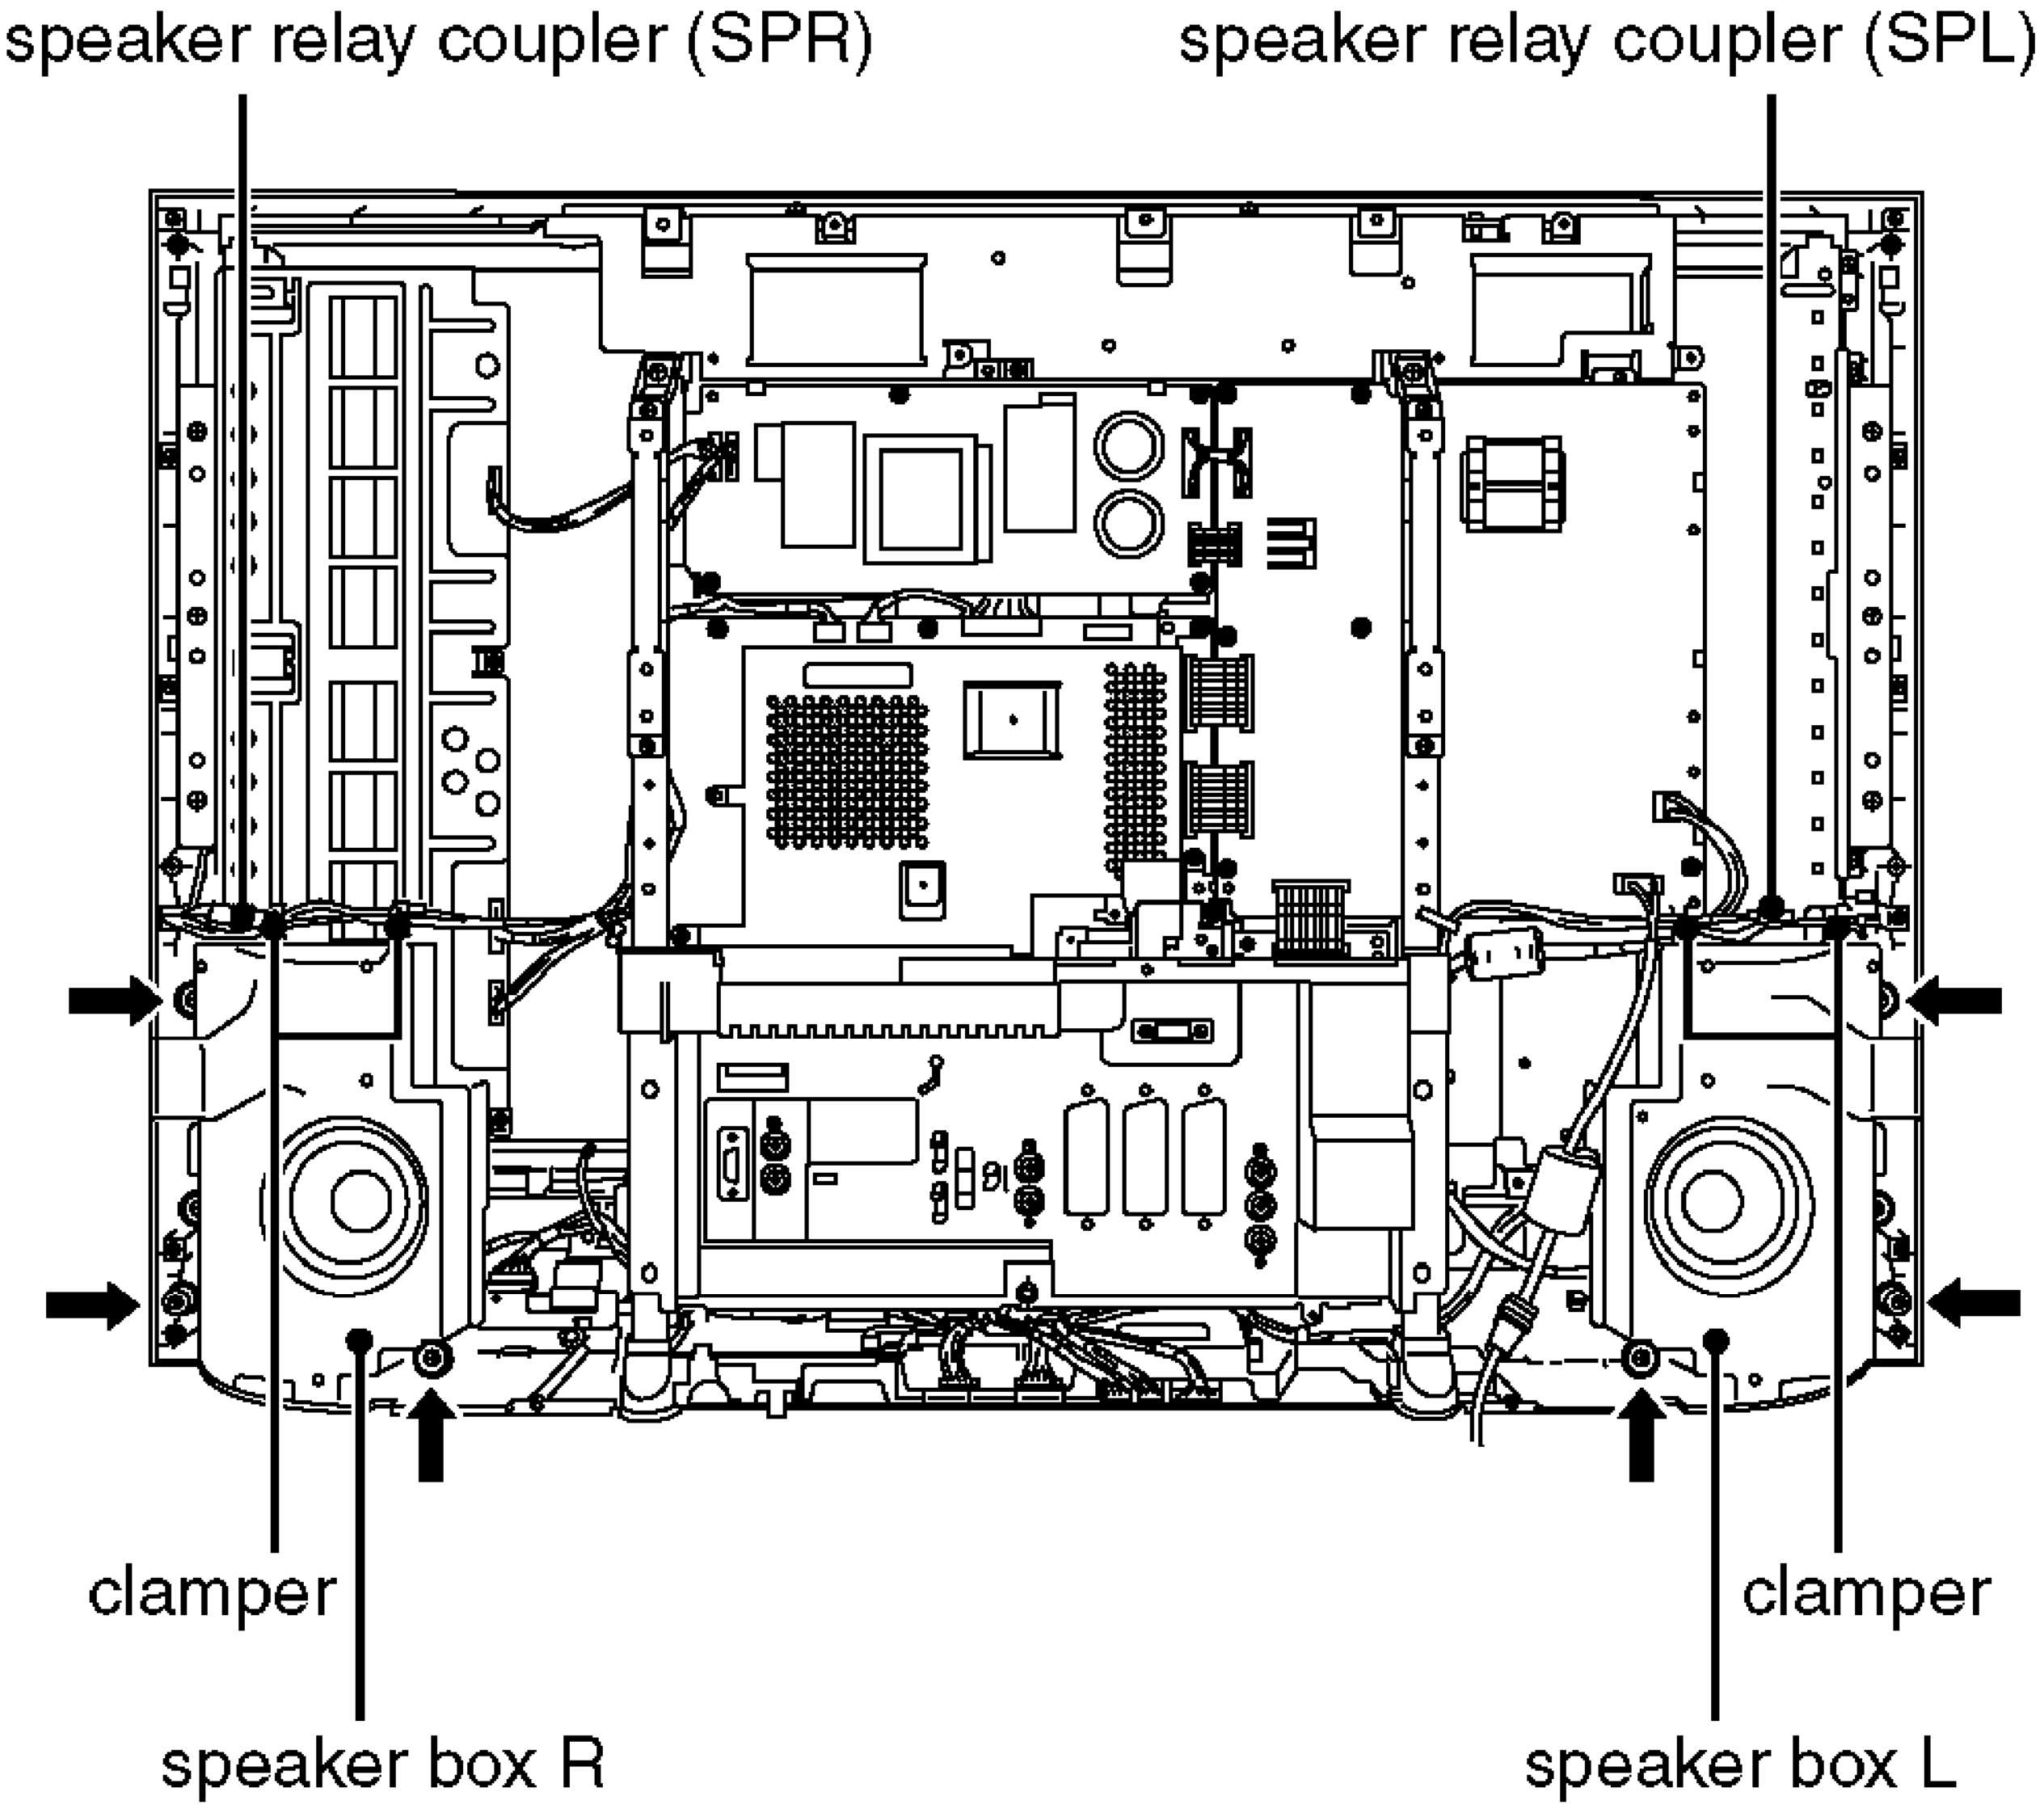
speaker relay coupler (SPR)
speaker relay coupler (SPL)
clamper
clamper
speaker box R
speaker box L

7.4. Removing the rear AV bracket

1. **Remove the rear cover (See 7.2.) and the speaker box L and R. (See 7.3.)**
2. **Release the bushing of AC cord from the rear AV bracket and the clamper on the rear metal frame, disconnect the coupler (AP10) and remove the AC cord.**
3. **Remove the fixing screws (3pcs).**
4. **Remove the rear AV bracket.**

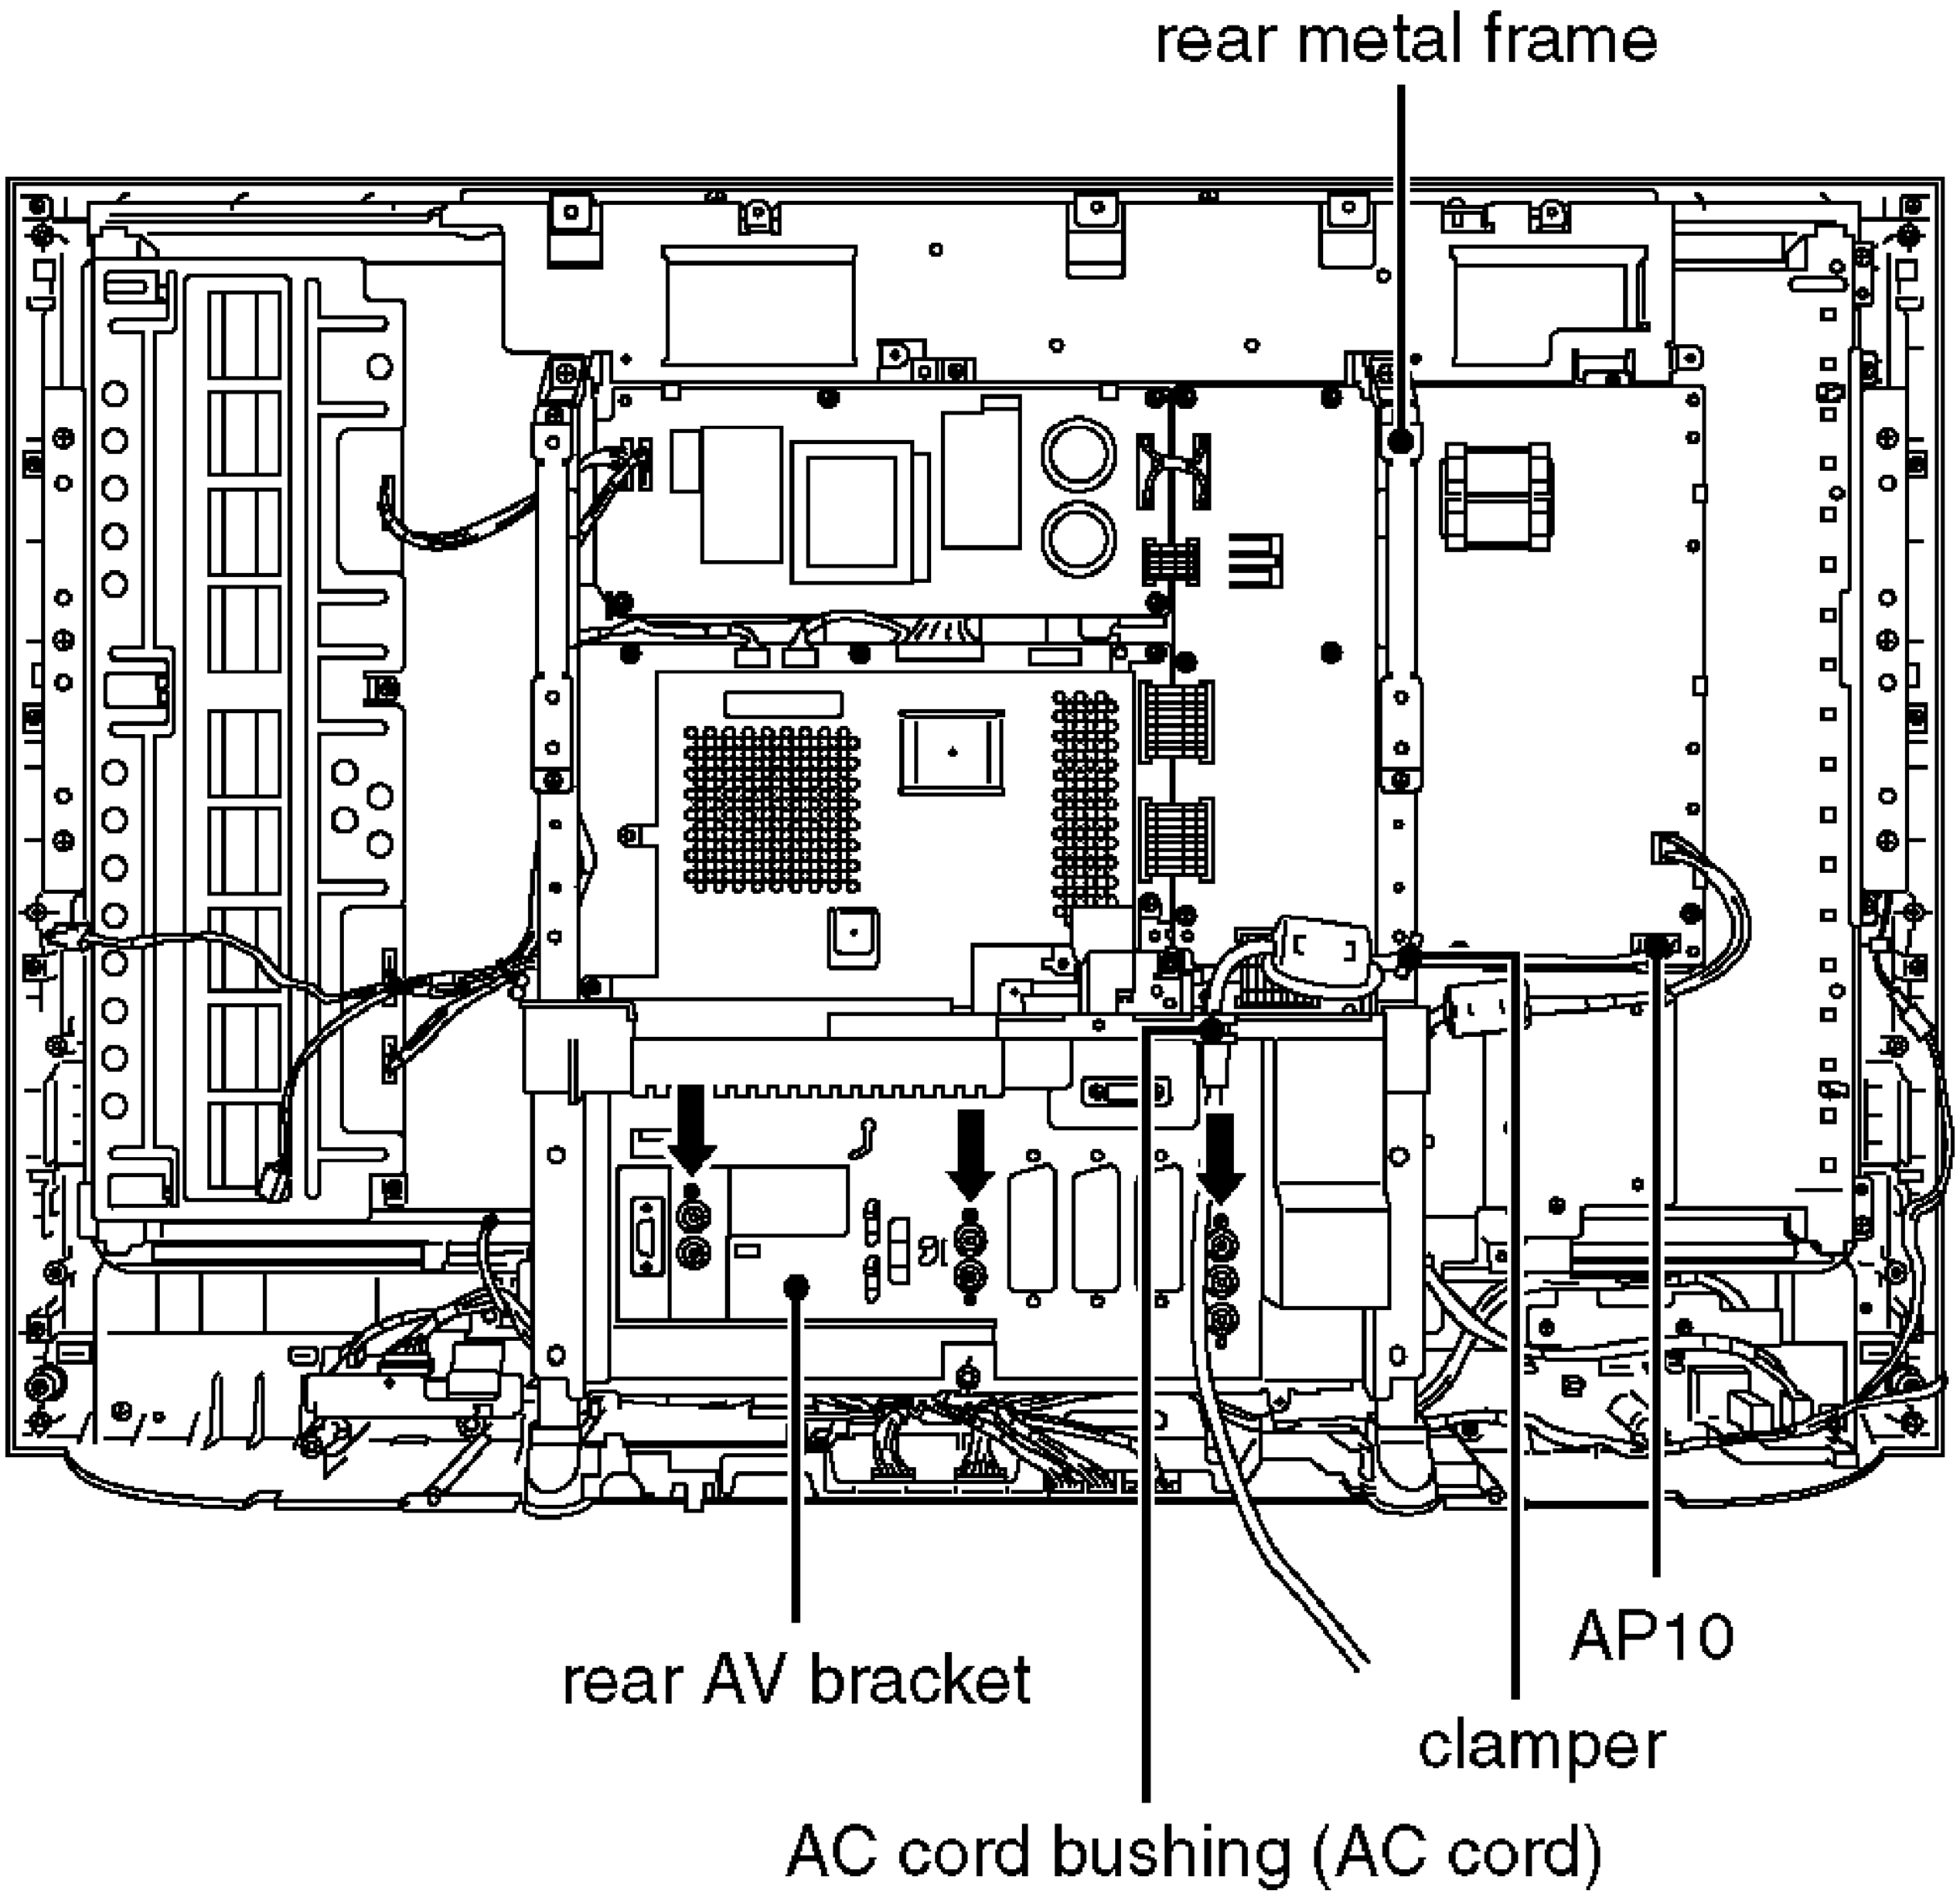
rear metal frame
rear AV bracket
AP10
clamper
AC cord bushing (AC cord)

7.5. Removing the rear metal frame

1. **Remove the rear AV bracket. (See 7.4.)**
2. **Release the cables from the clampers on the rear metal frames.**
3. **Remove the fixing screws (4pcs).**
4. **Remove the rear metal frames (right and left).**

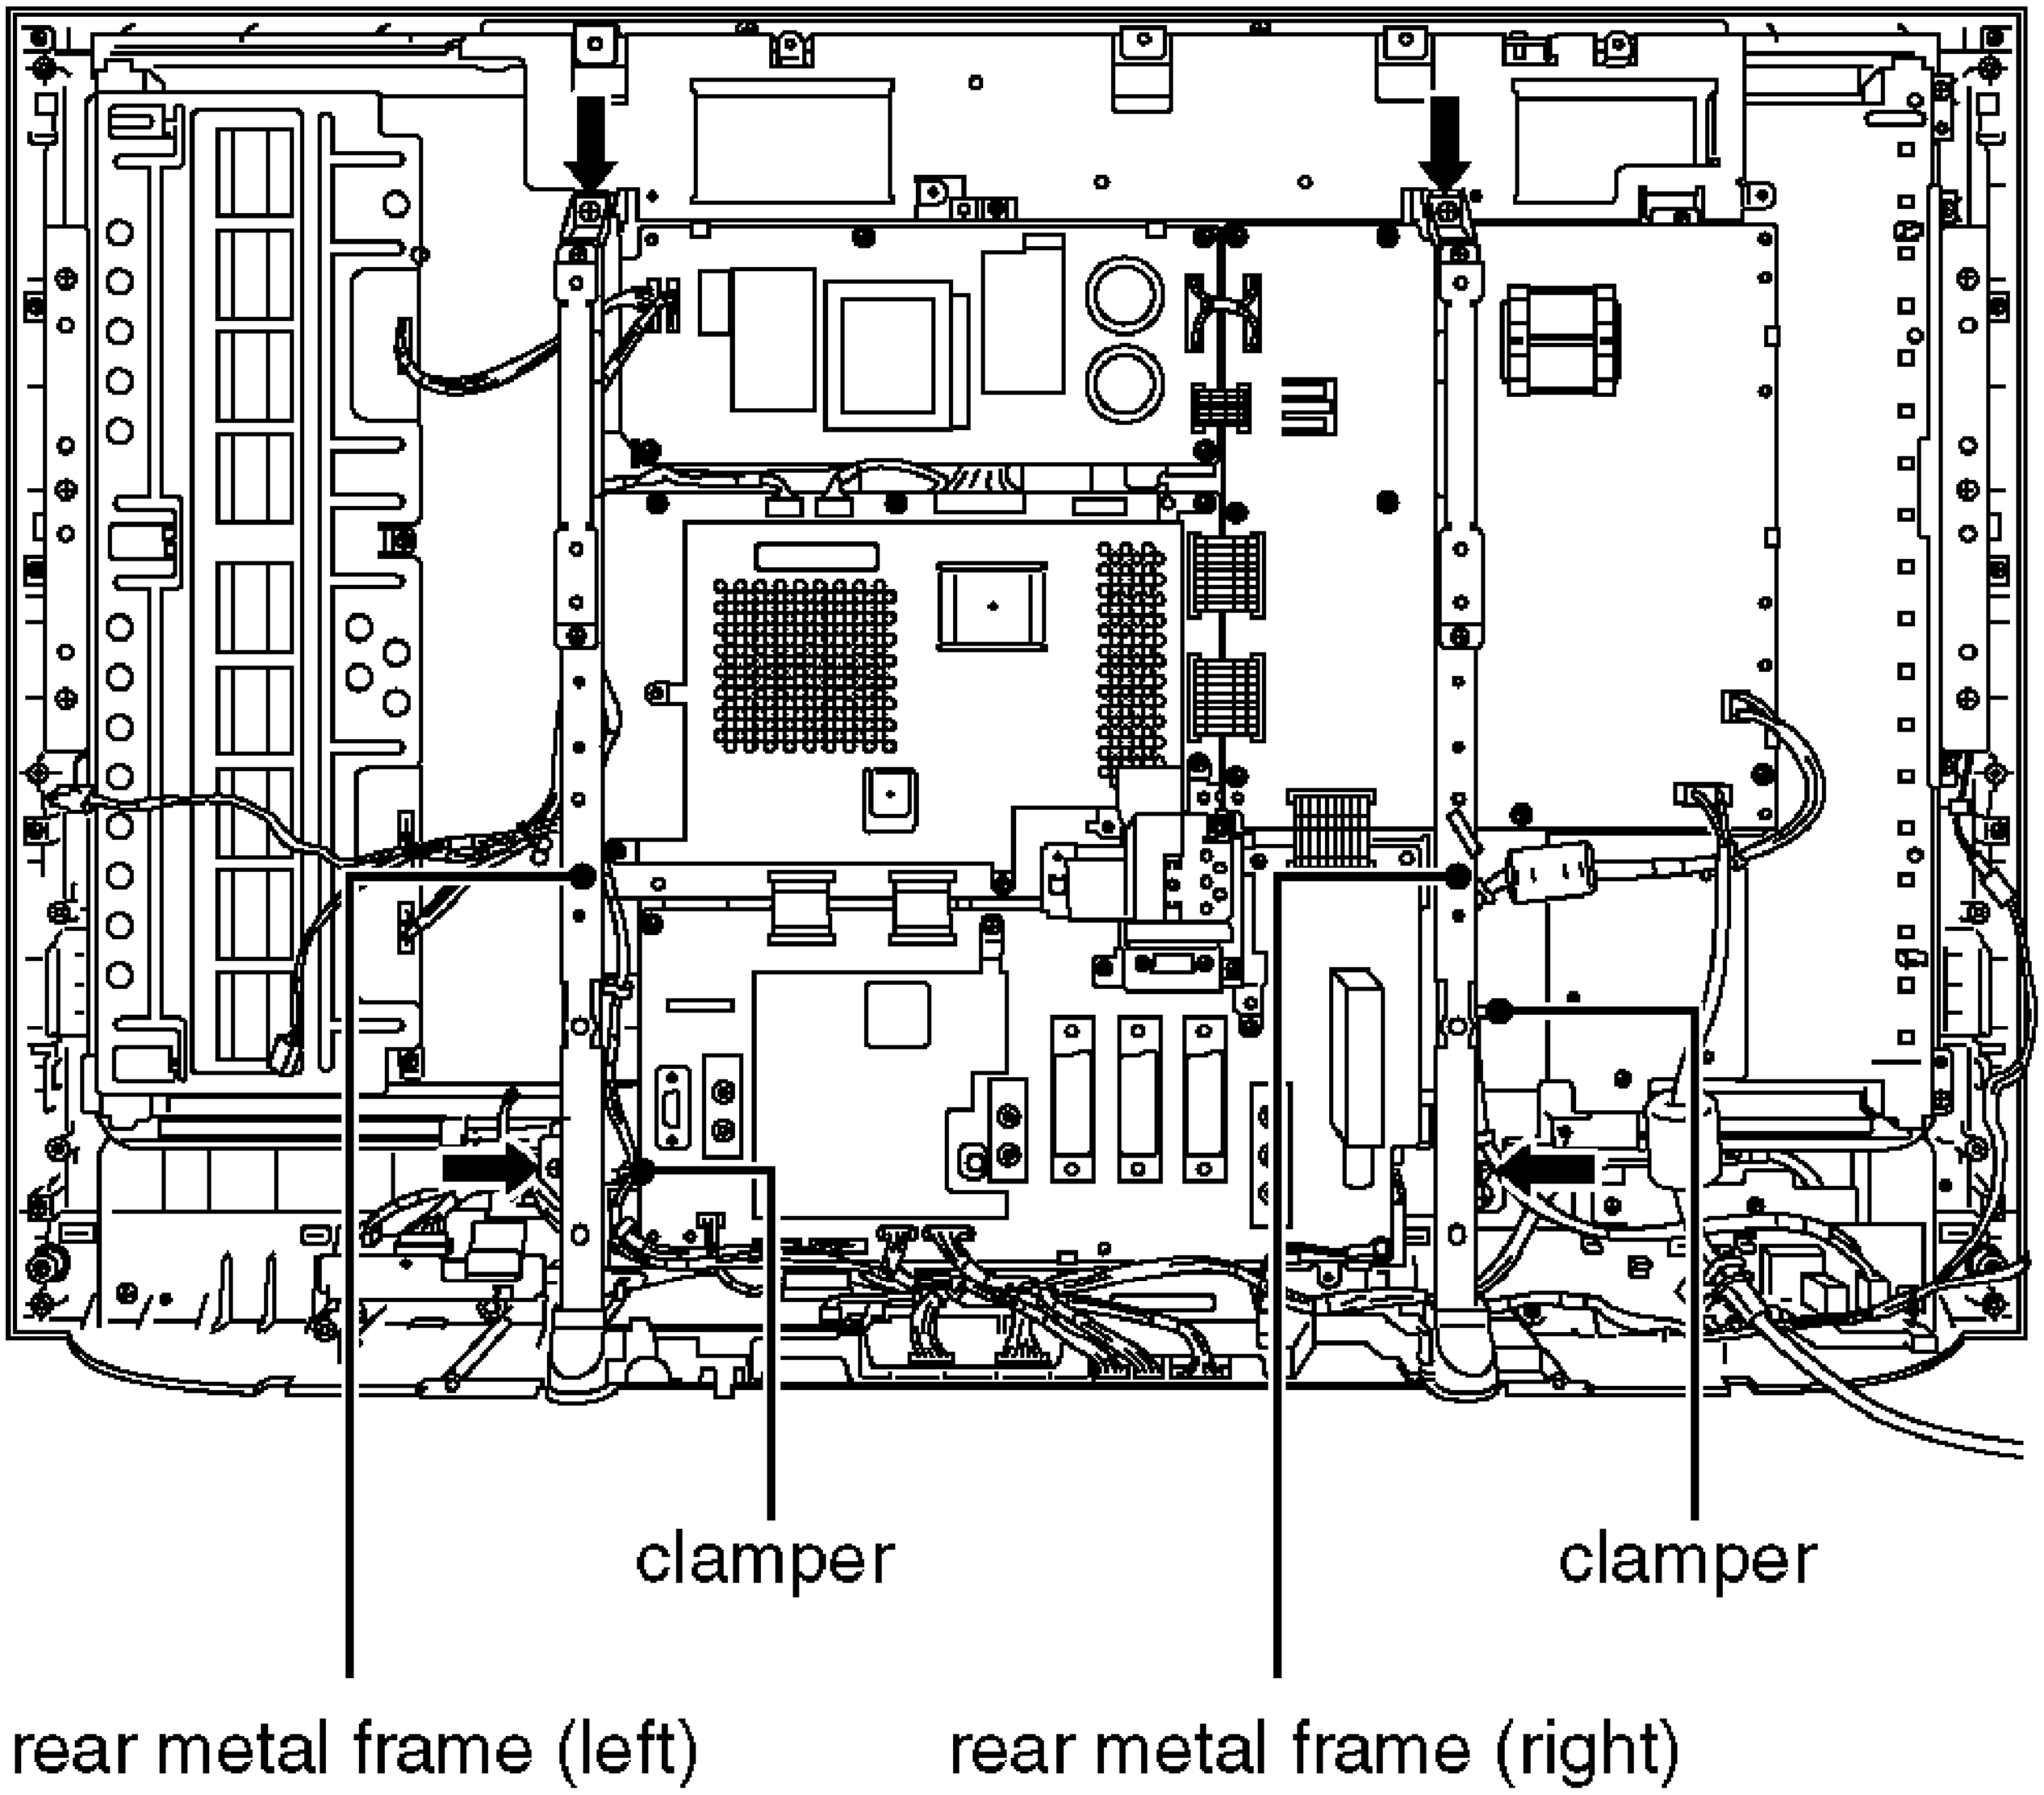
clamper
clamper
rear metal frame (left)
rear metal frame (right)

7.6. Removing the P-Board

1. Remove the rear cover. (See 7.2.)

2. Disconnect the couplers P2 (CN101), P3 (CN201) P4 (CN202), and P1 (CN203).

3. Remove the fixing screw (4pcs).

4. Remove the P-Board.

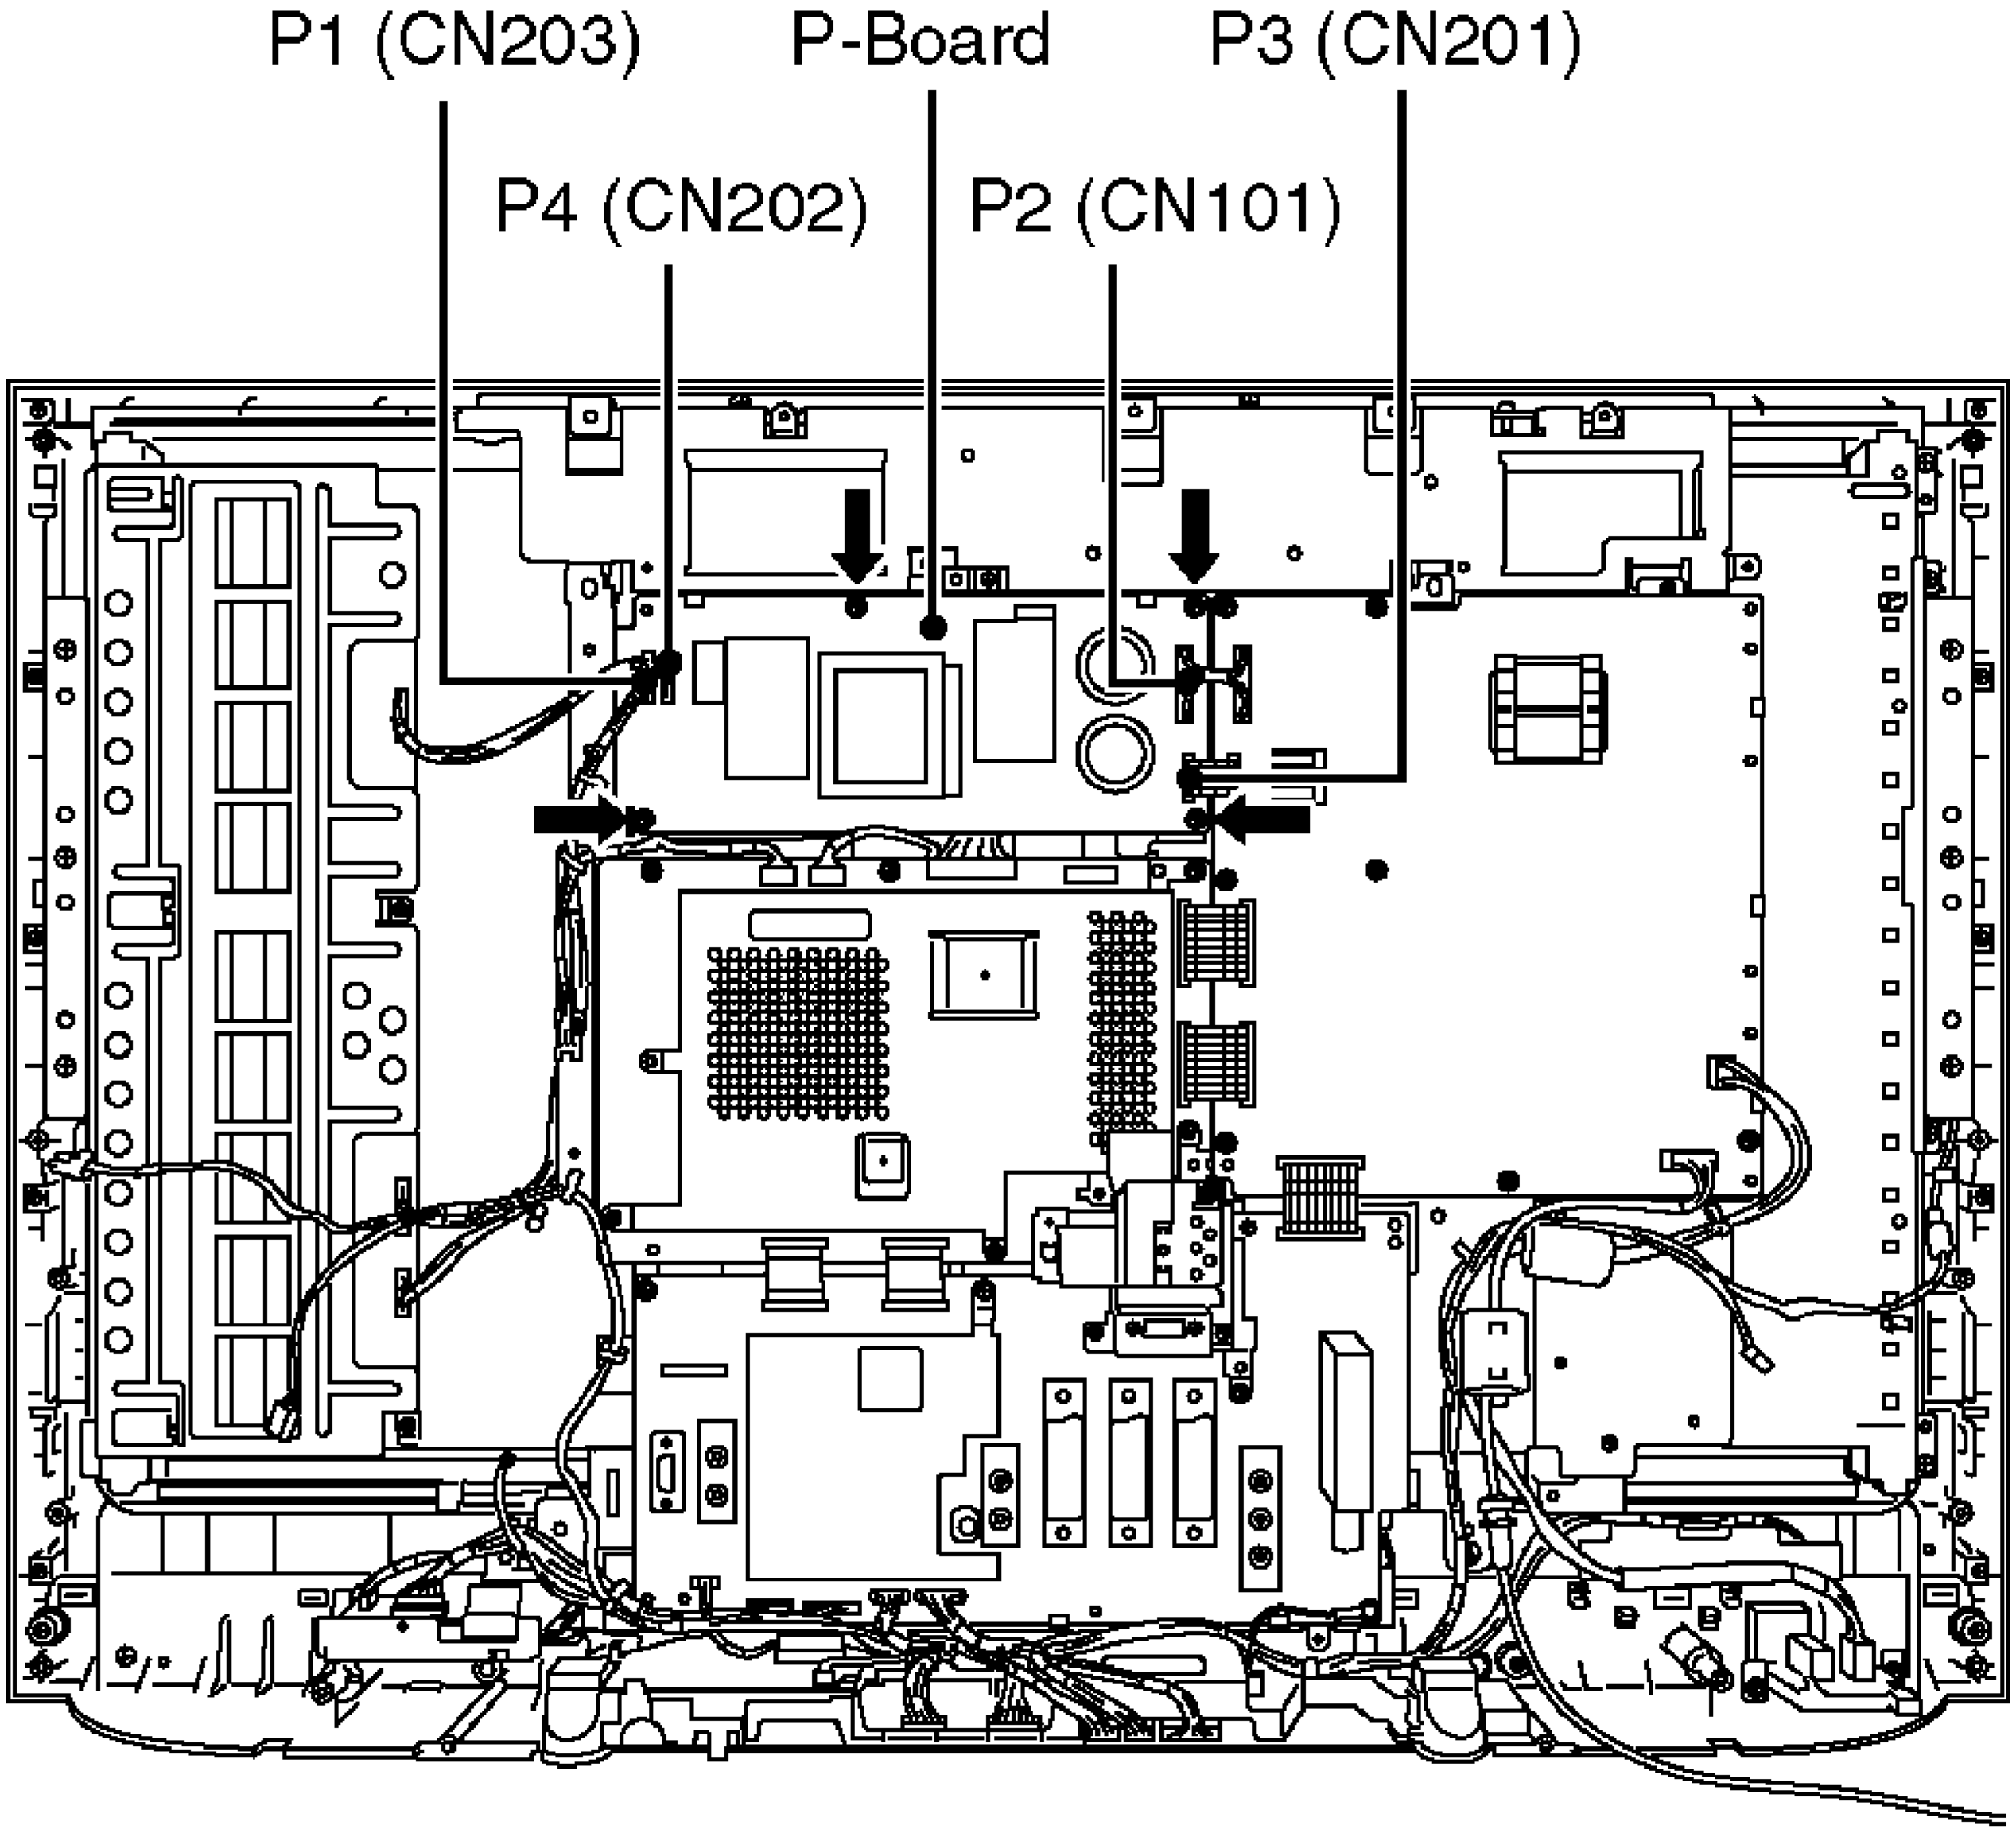
P1 (CN203)
P-Board
P3 (CN201)
P4 (CN202)
P2 (CN101)

7.7. Removing the XV-Board (For LXD500 model only)

1. Remove the rear AV bracket (See 7.4.) and the rear metal frame. (See 7.5.)
2. Disconnect the couplers carefully (XV01 and DG1).
3. Remove the fixing screws (5pcs➡).
4. Remove the XV-Board unit.
5. Remove the screws (5pcs⇨)
6. Remove the XV-Board.

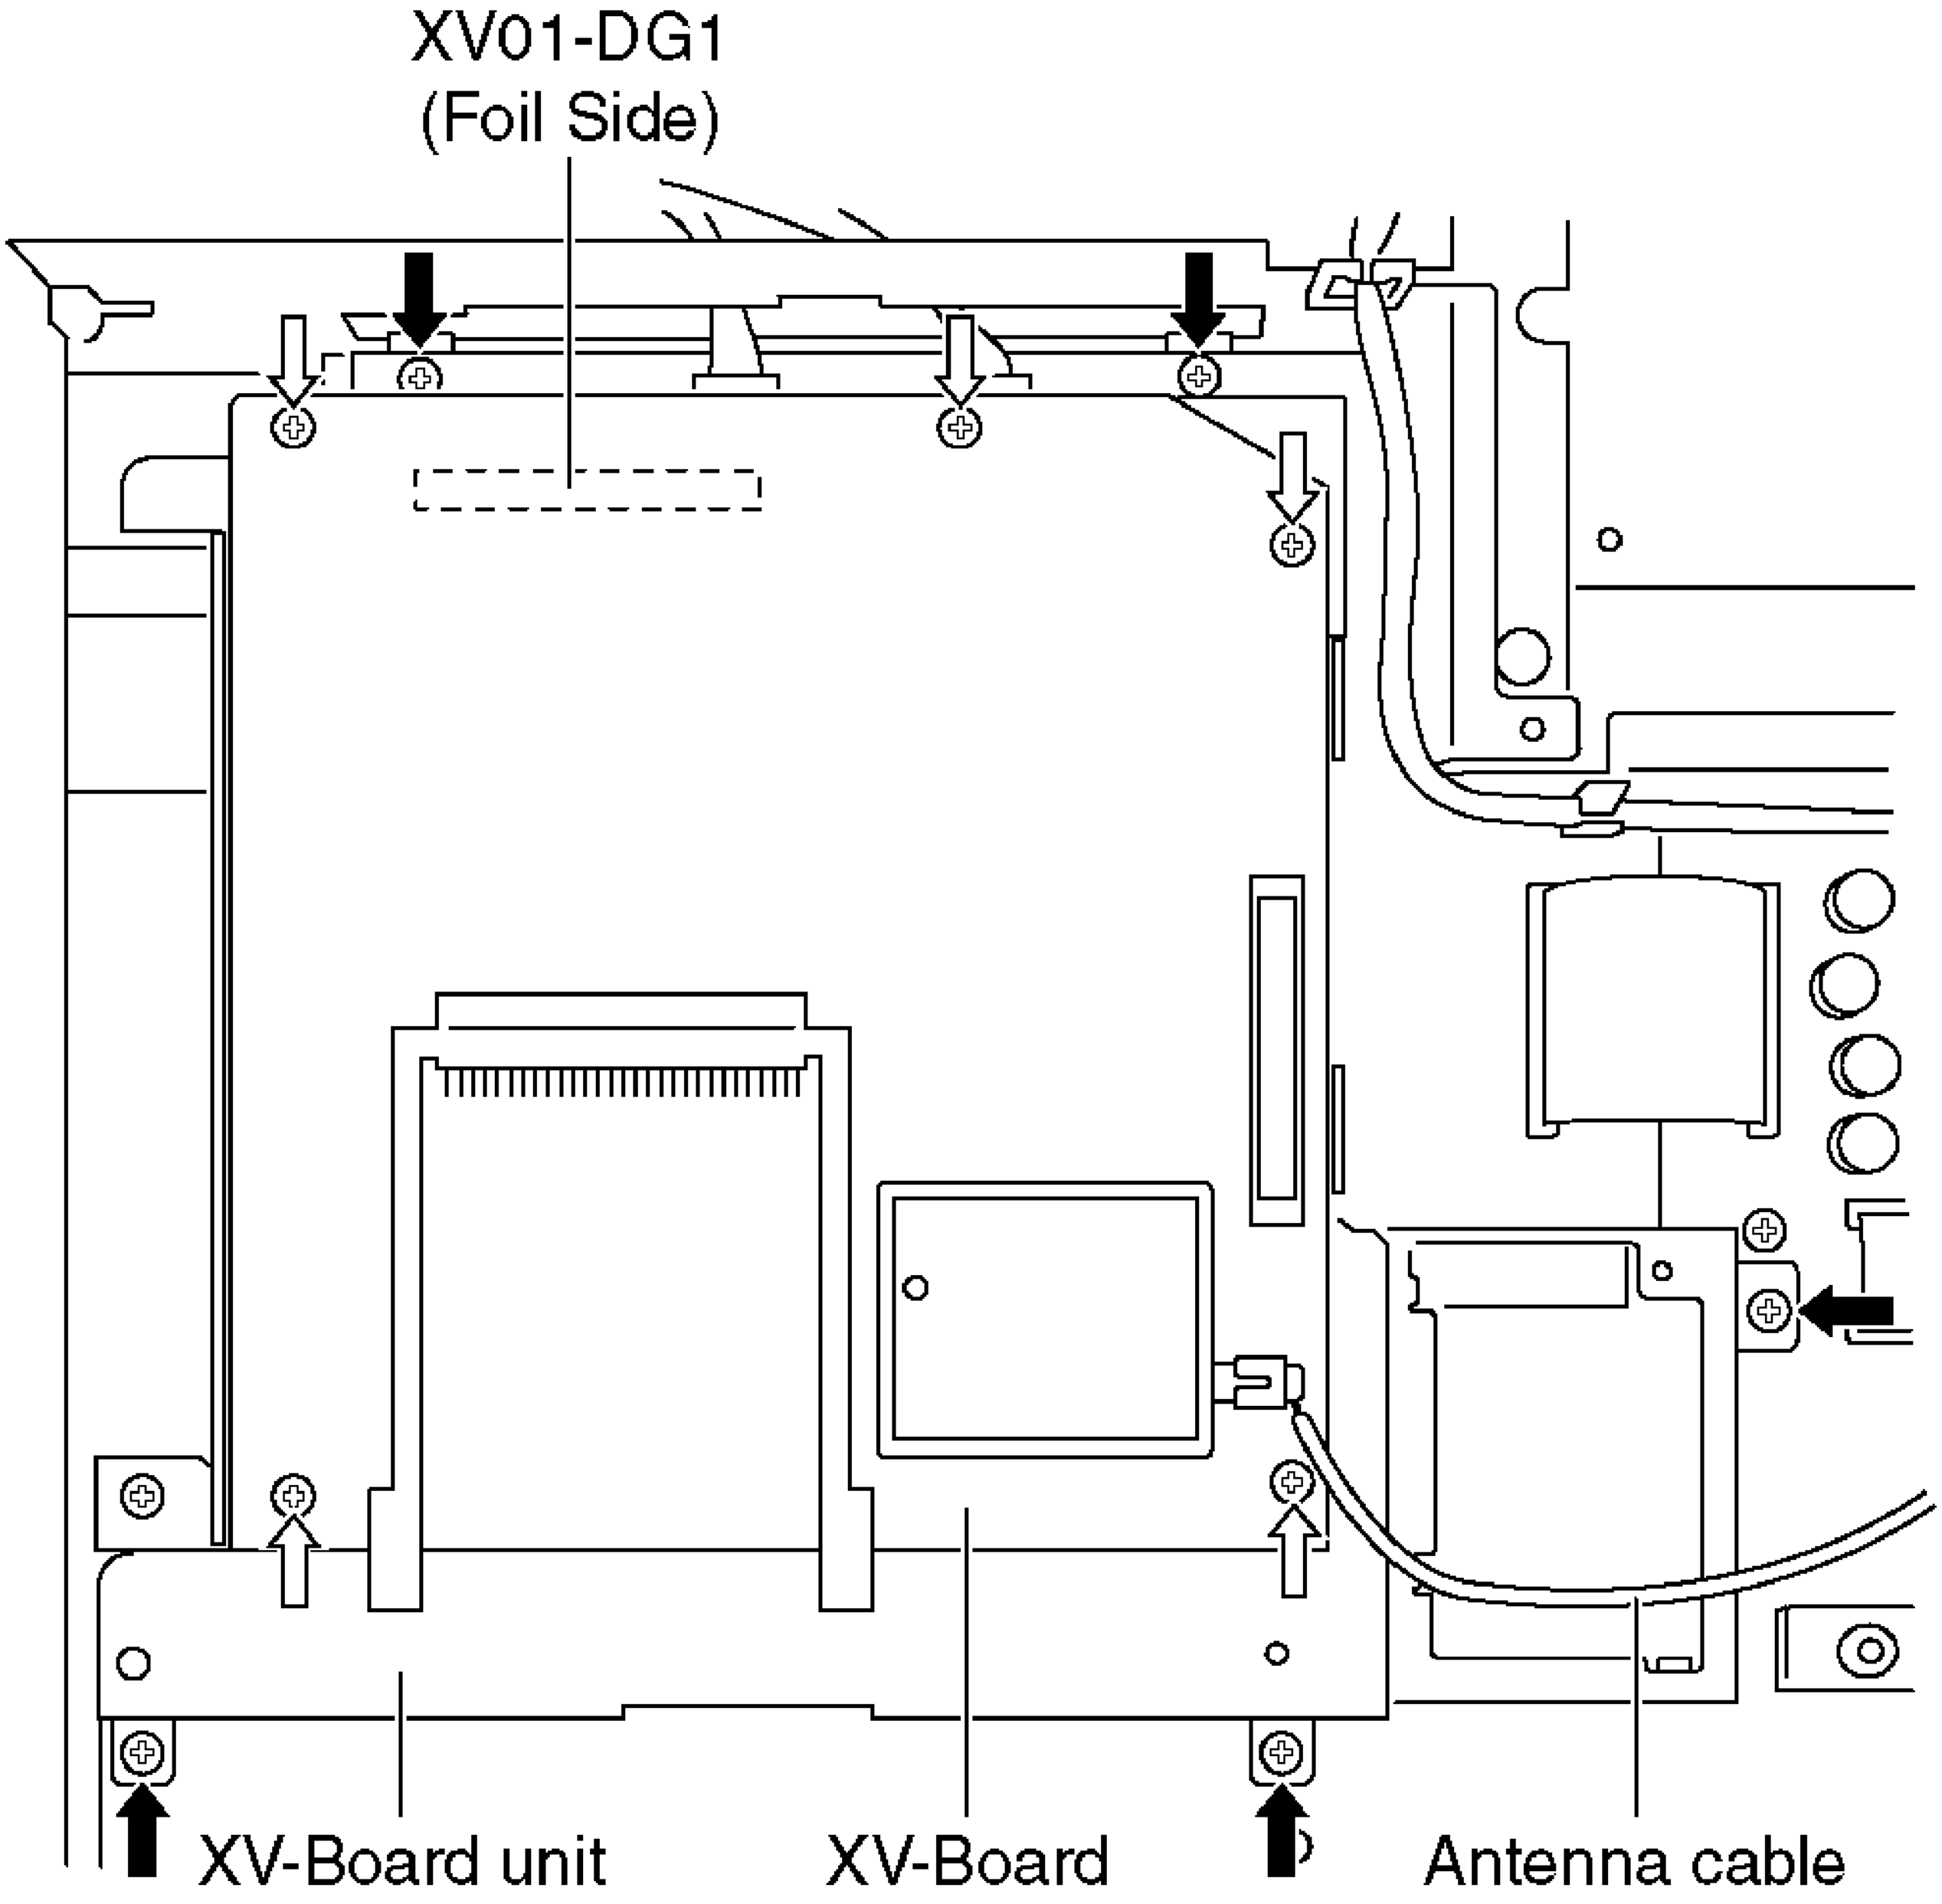
XV01-DG1
(Foil Side)
XV-Board unit
XV-Board
Antenna cable

7.8. Removing the DG-Board

1. **Remove the rear AV bracket (See 7.4.) and the rear metal frame. (See 7.5.)**
2. **Remove the XV-Board unit. (See 7.7.) (for LXD500 model only)**
3. **Disconnect the couplers (DG6, DG8 and DG7), the flexible cables (DG2 and DG3) and the bridge cables (DG4 and DG5).**
4. **Remove the fixing screws (7pcs).**

5. Remove the DG-Board with DV-Board.

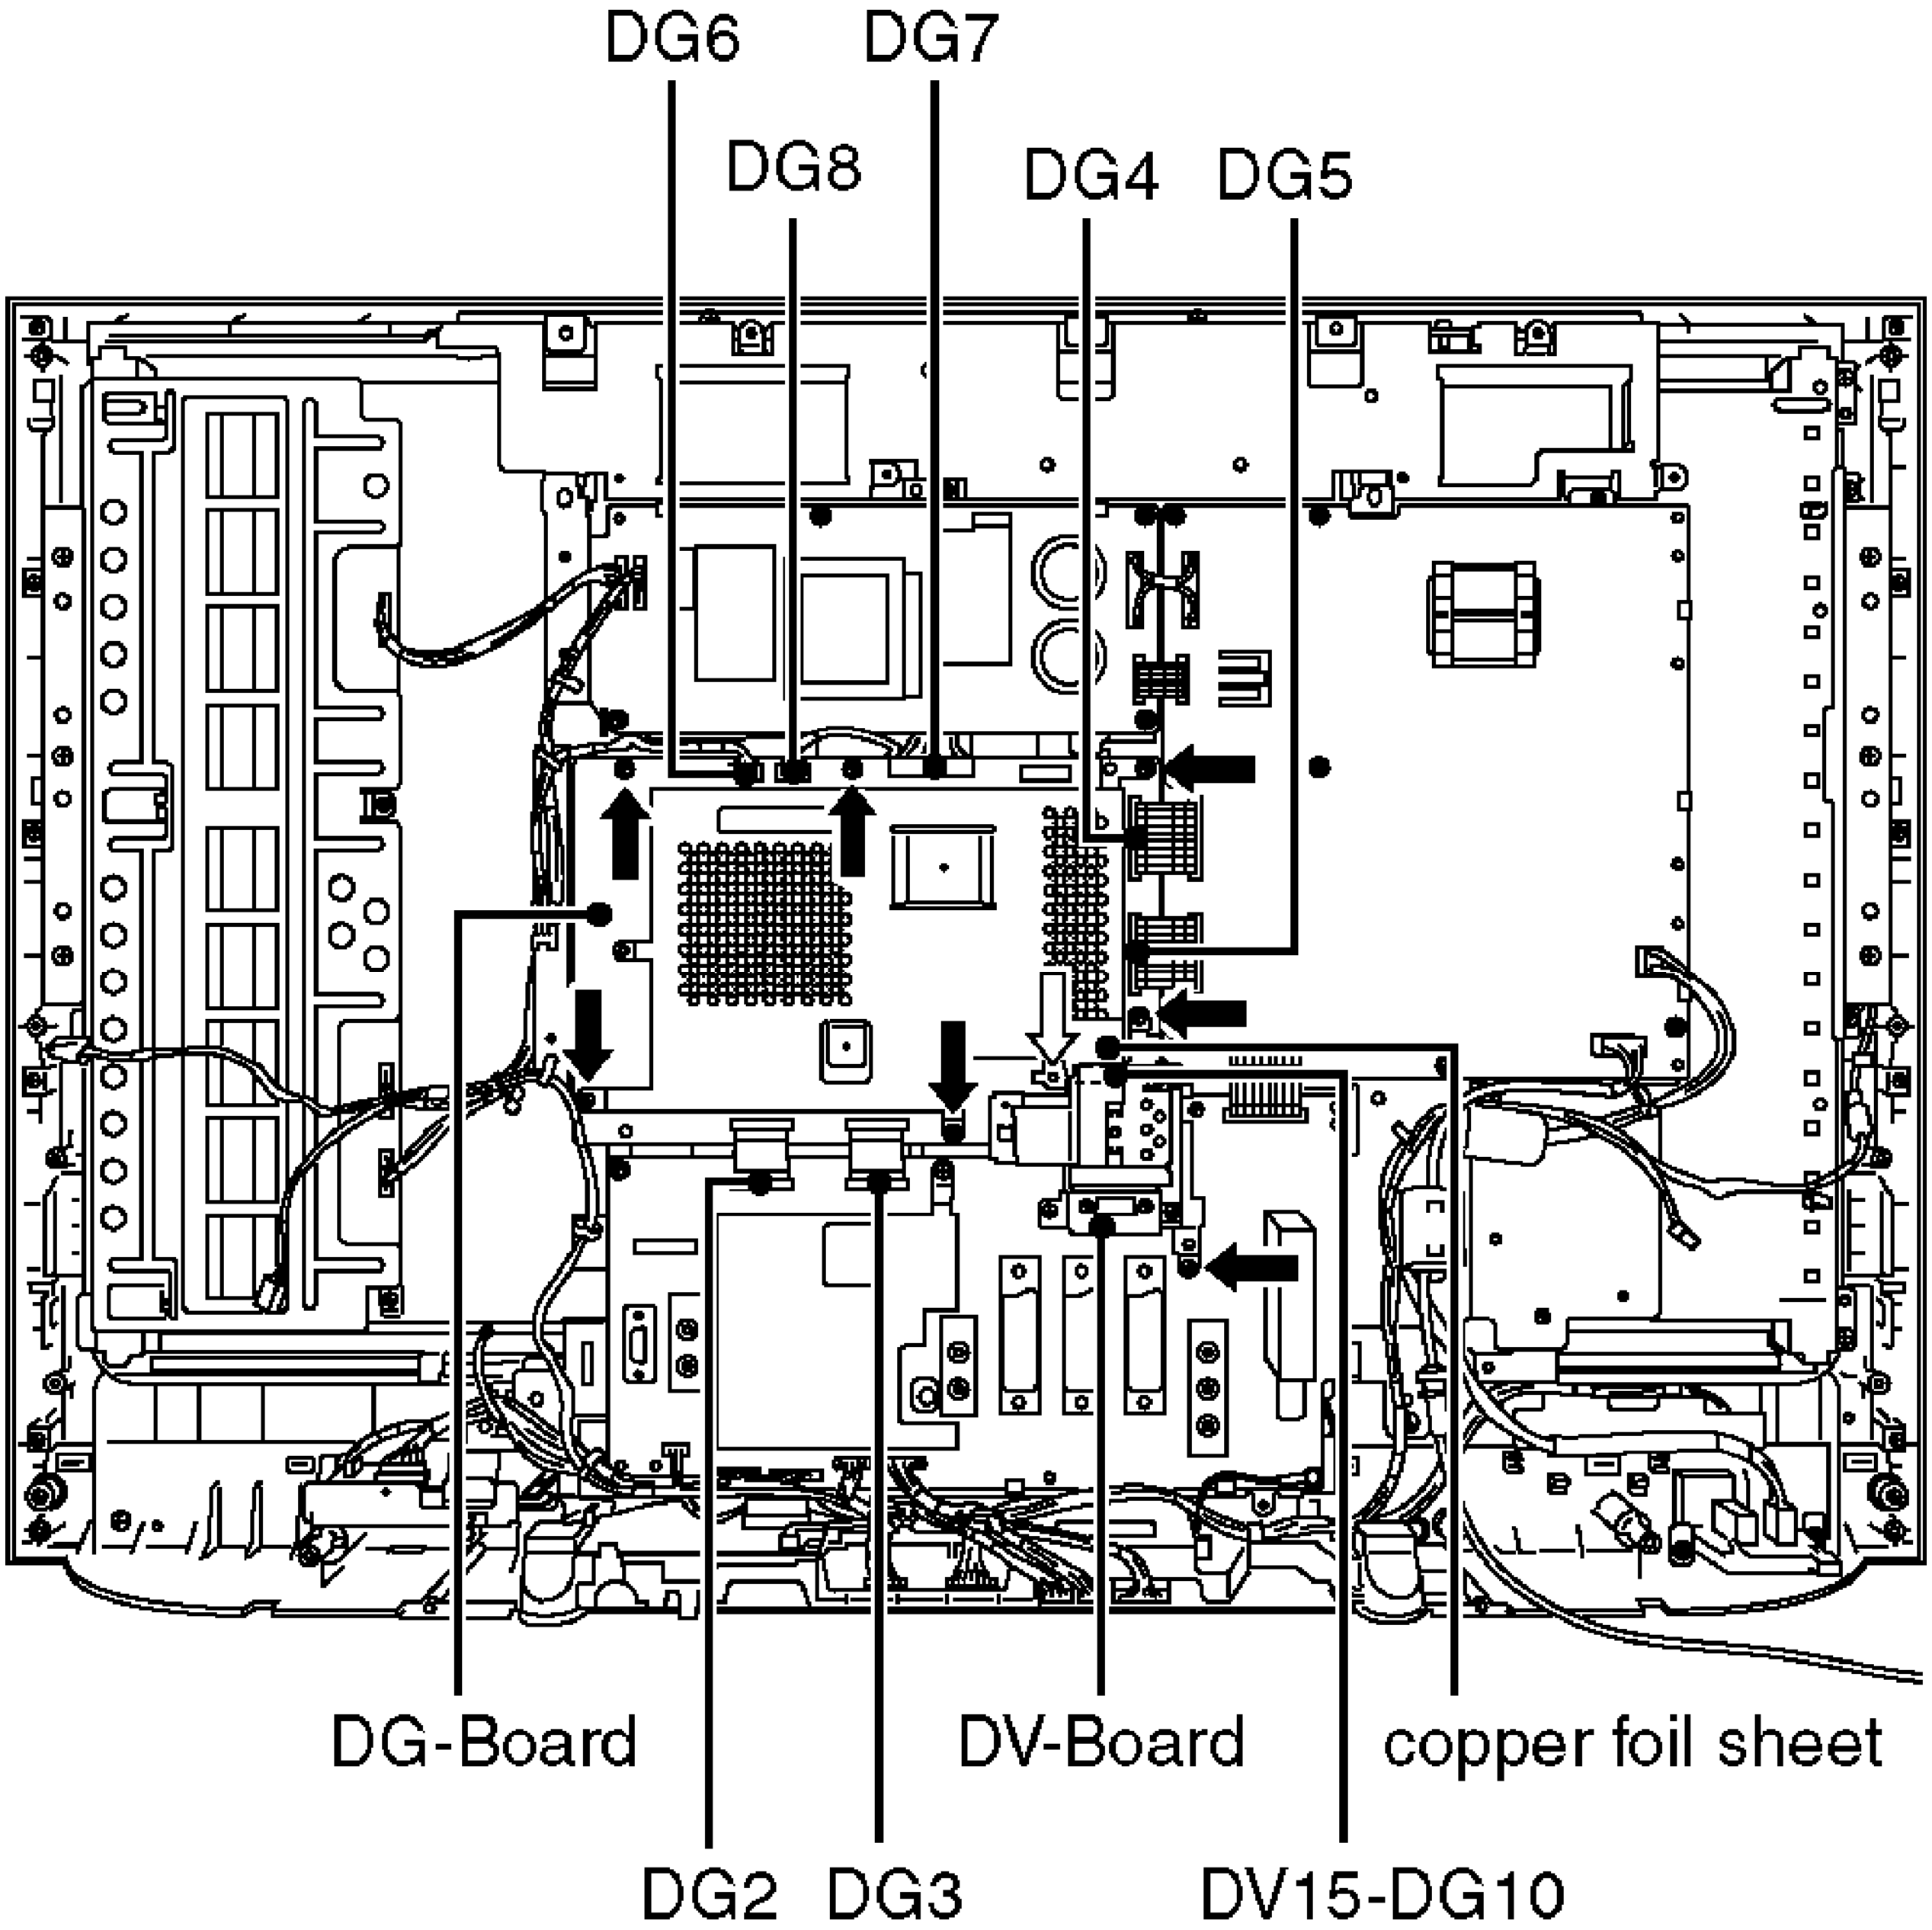
DG6
DG7
DG8
DG4
DG5
DG-Board
DV-Board
copper foil sheet
DG2
DG3
DV15-DG10

7.9. Removing the DV-Board

1. Remove the DG-Board with DV-Board. (See 7.8.)
(See above figure in item 7.8.)

2. Remove a fixing screw (⇨) (reverse side) and remove the copper foil sheet

carefully not to brake.

3. Disconnect the coupler (DV15-DG10) and remove the DV-Board.

7.10. Removing the AP-Board

1. Remove the rear AV bracket ass'y (See 7.4.) and the rear metal frame. (See 7.5.)
2. Disconnect the couplers (AP2, AP6 and AP10 (AC Cord)) and the bridge cables (H1 (AP1) on the H-Board, P3/CN201 (AP3) on the P-Board and DG4 (AP4) and DG5 (AP5) on the DG-Board.
3. Remove the fixing screws (7pcs).
4. Remove the AP-Board.

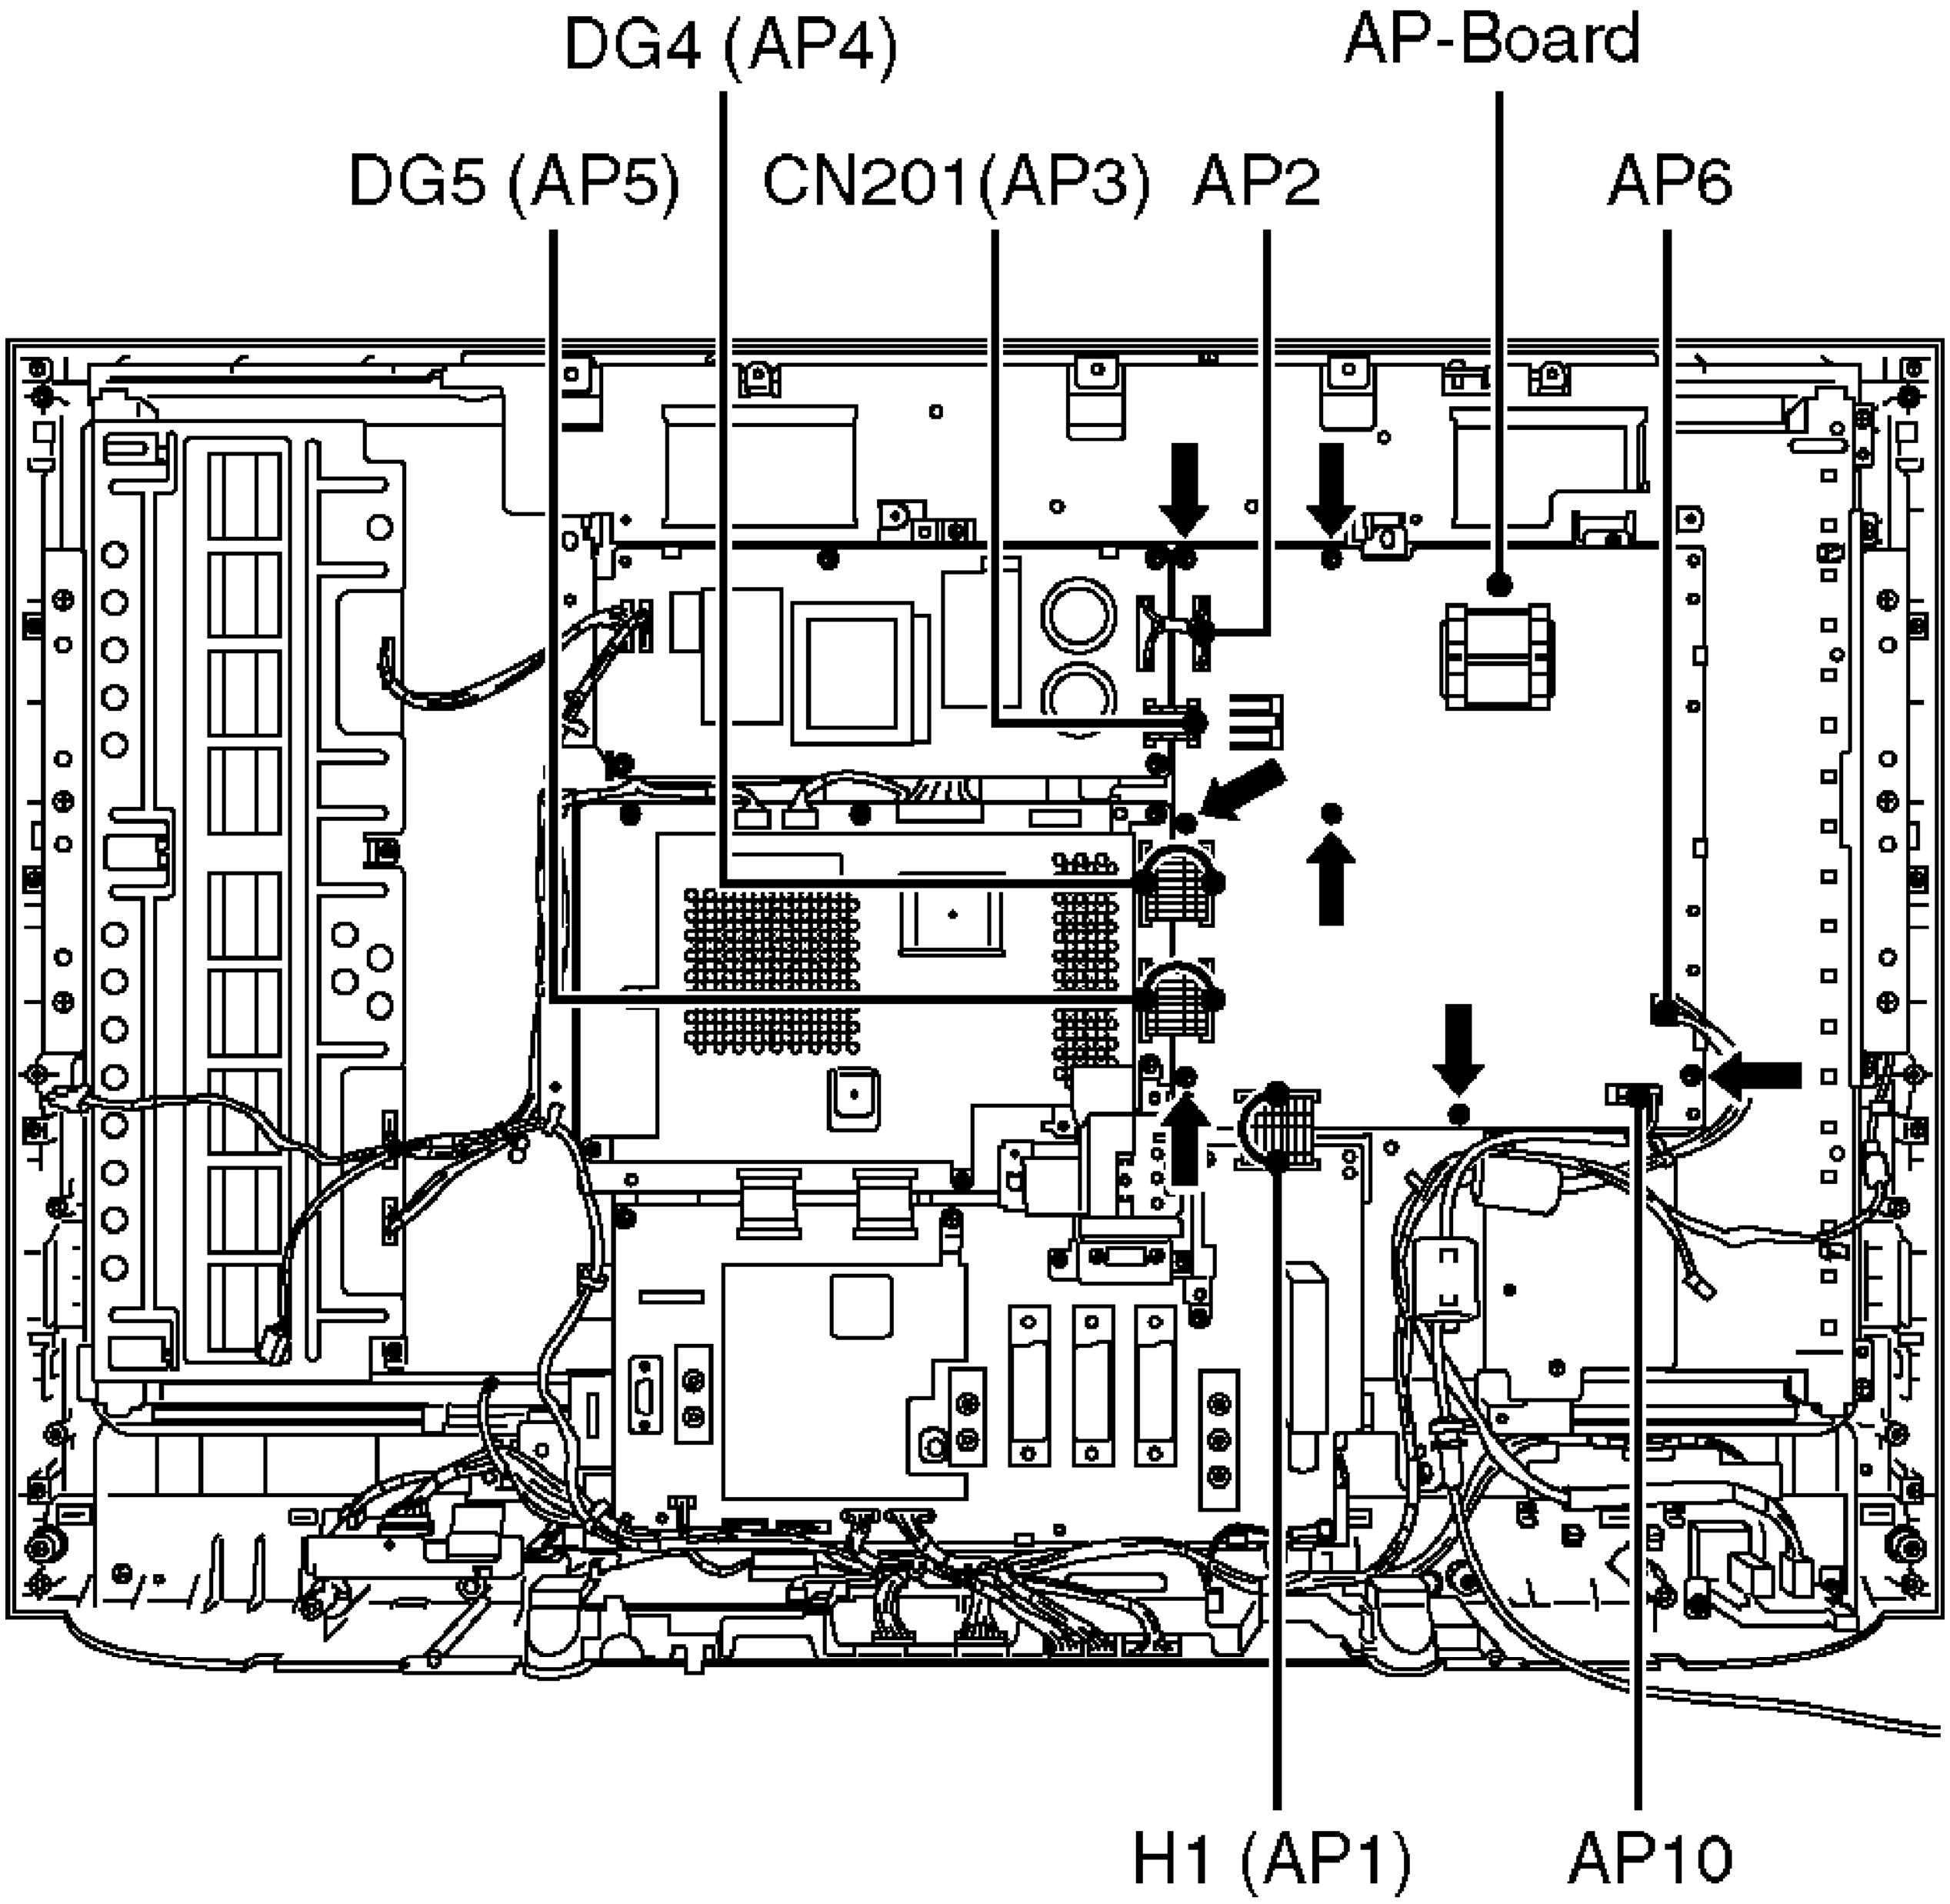
DG4 (AP4)
AP-Board
DG5 (AP5)
CN201(AP3)
AP2
AP6
H1 (AP1)
AP10

7.11. Removing the H-Board

1. Remove the rear AV bracket (See 7.4.) (and the rear metal frame). (See 7.5.)

2. Disconnect the flexible cables (H2 and H3), the bridge cable (H1) and the couplers (H4, H5, H6, H8 and H9).

3. Remove the fixing screws (4pcs).

4. Remove the H-Board.

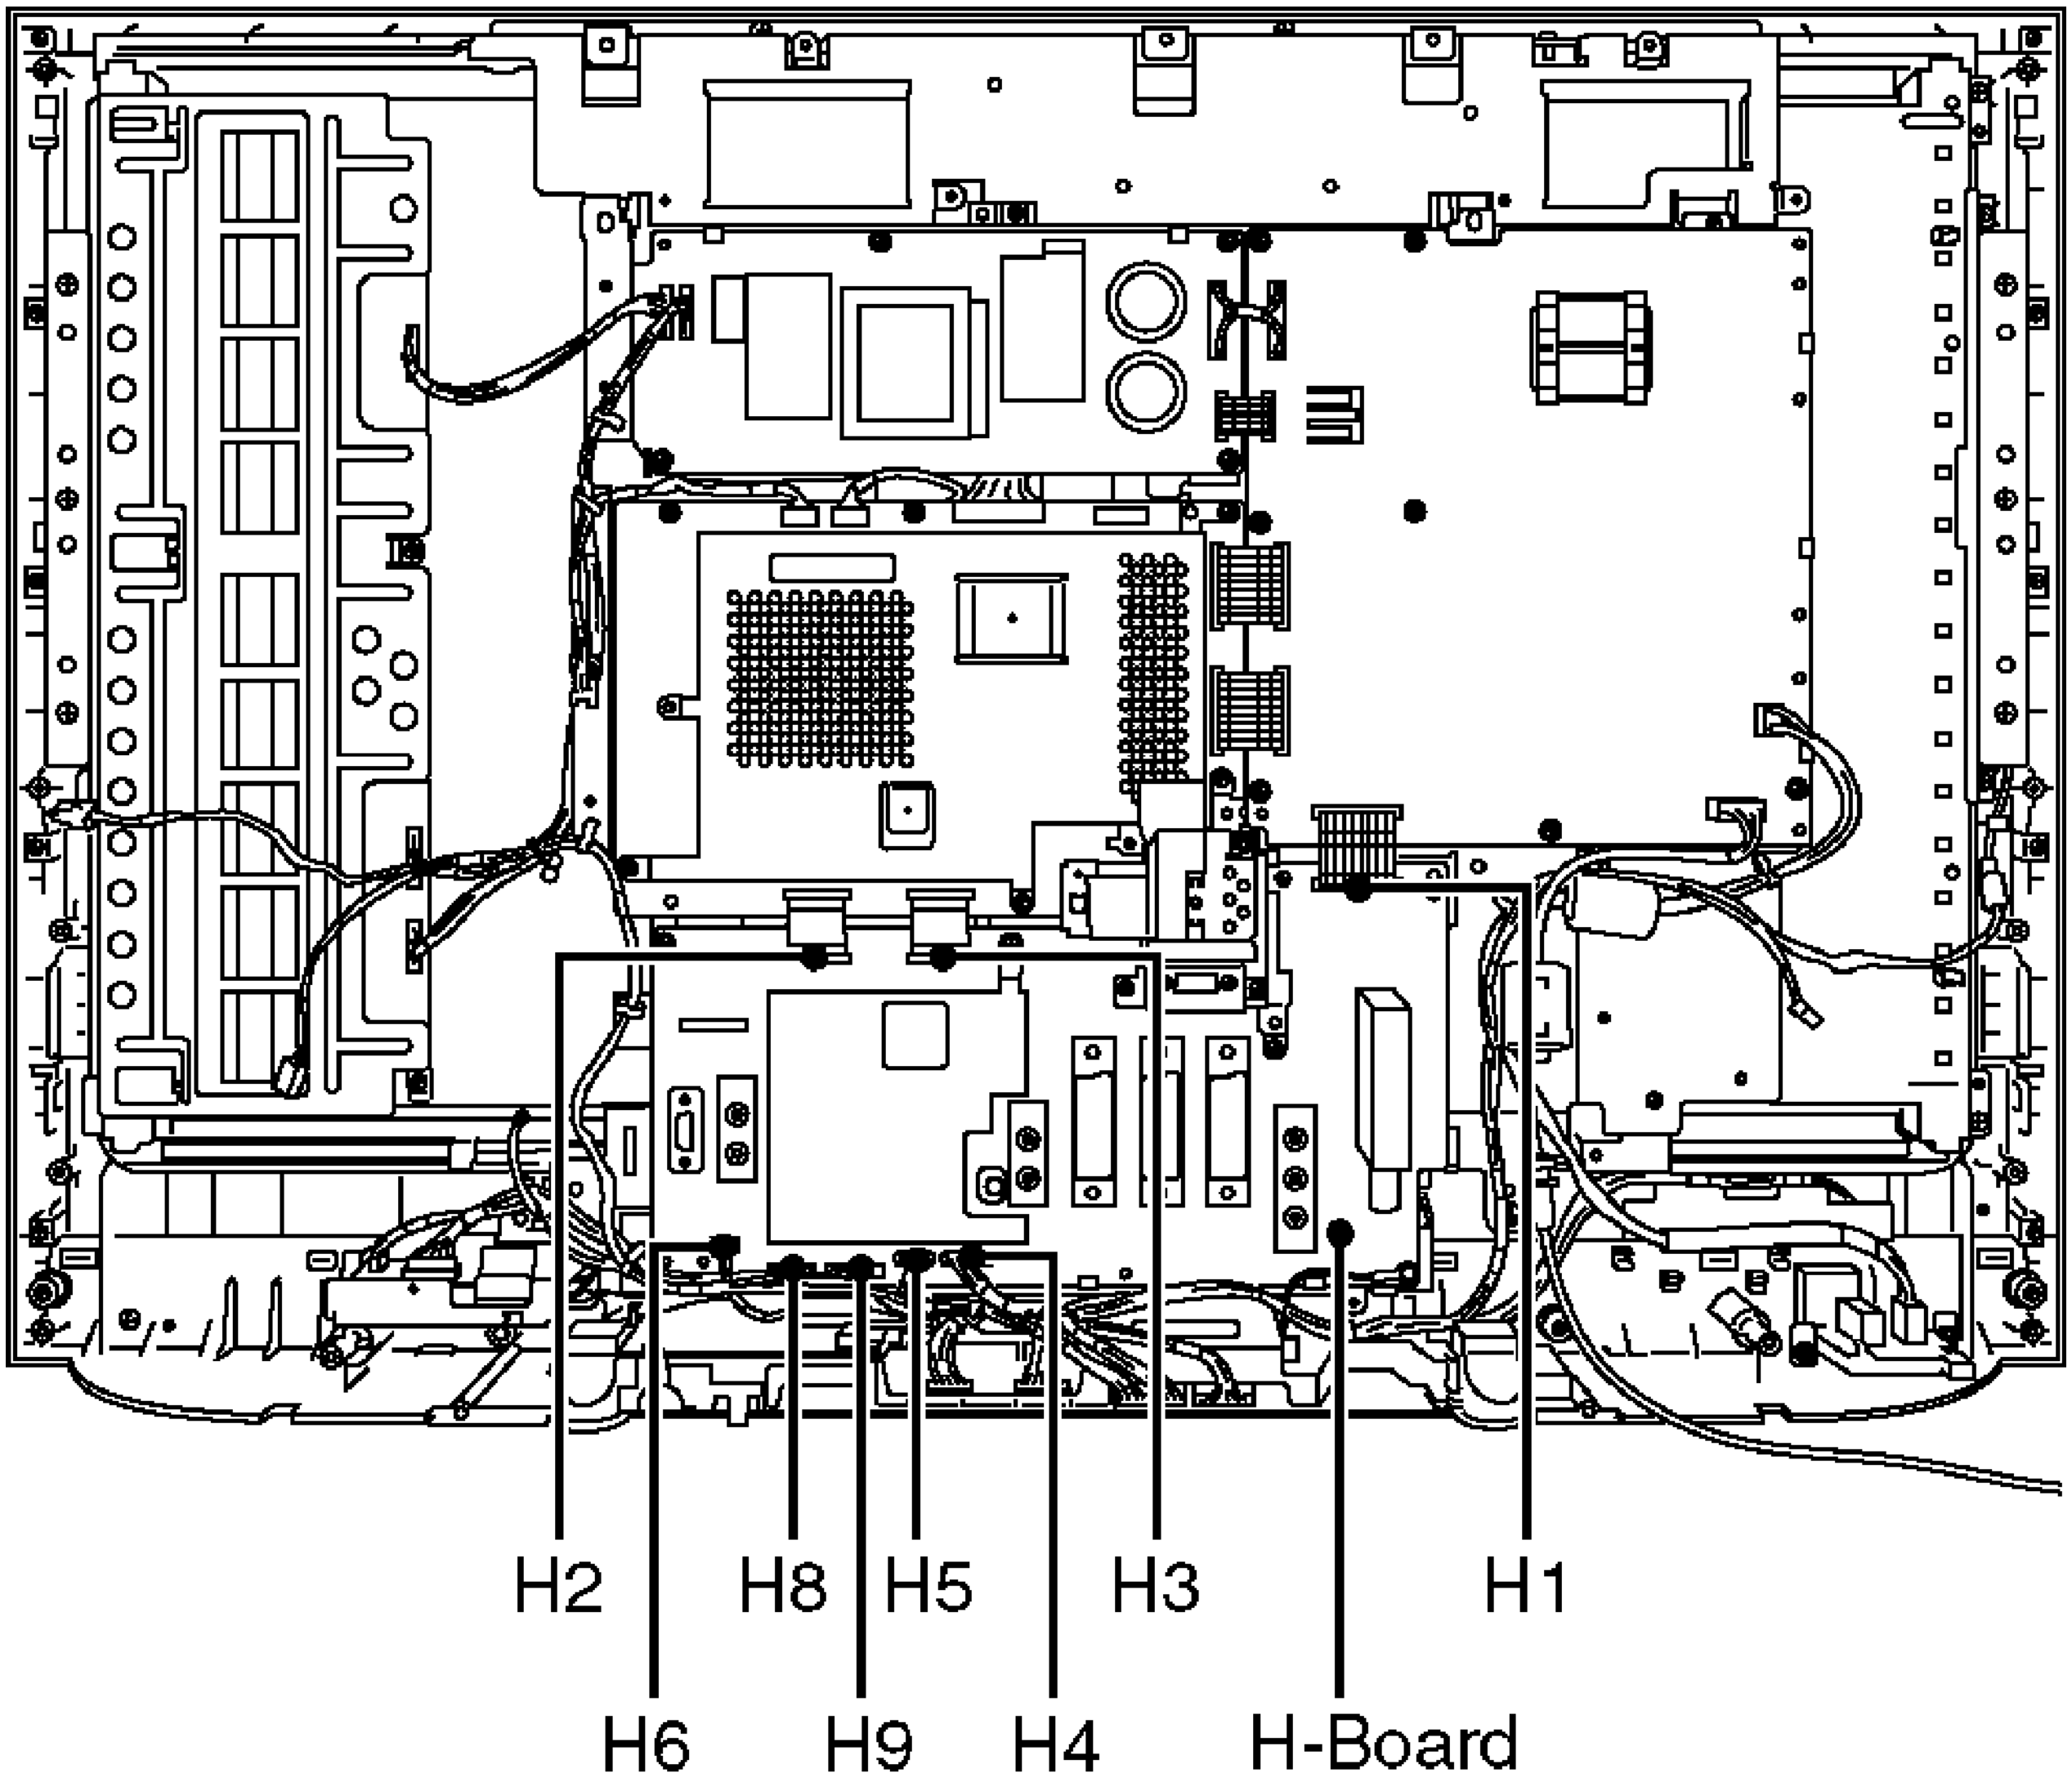

7.12. Removing G-Board bracket (G-Board and GP-Board)

1. **Remove the rear AV bracket (See 7.4.) and the rear metal frames. (See 7.5.)**
2. **Remove the fixing screws (2pcs➡) and pull out the rear AV bracket slightly.**
3. **Disconnect the flexible cable (GP10) and the couplers (G1, G4, G5, G10, G11 and GP6).**
4. **Remove a screw on the DG-Board and release the earth lug from the DG-Board.**
5. **Release the cables from the cable holders of the G-Board bracket.**
6. **Remove the G-Board bracket with the G-Board and GP-Board.**

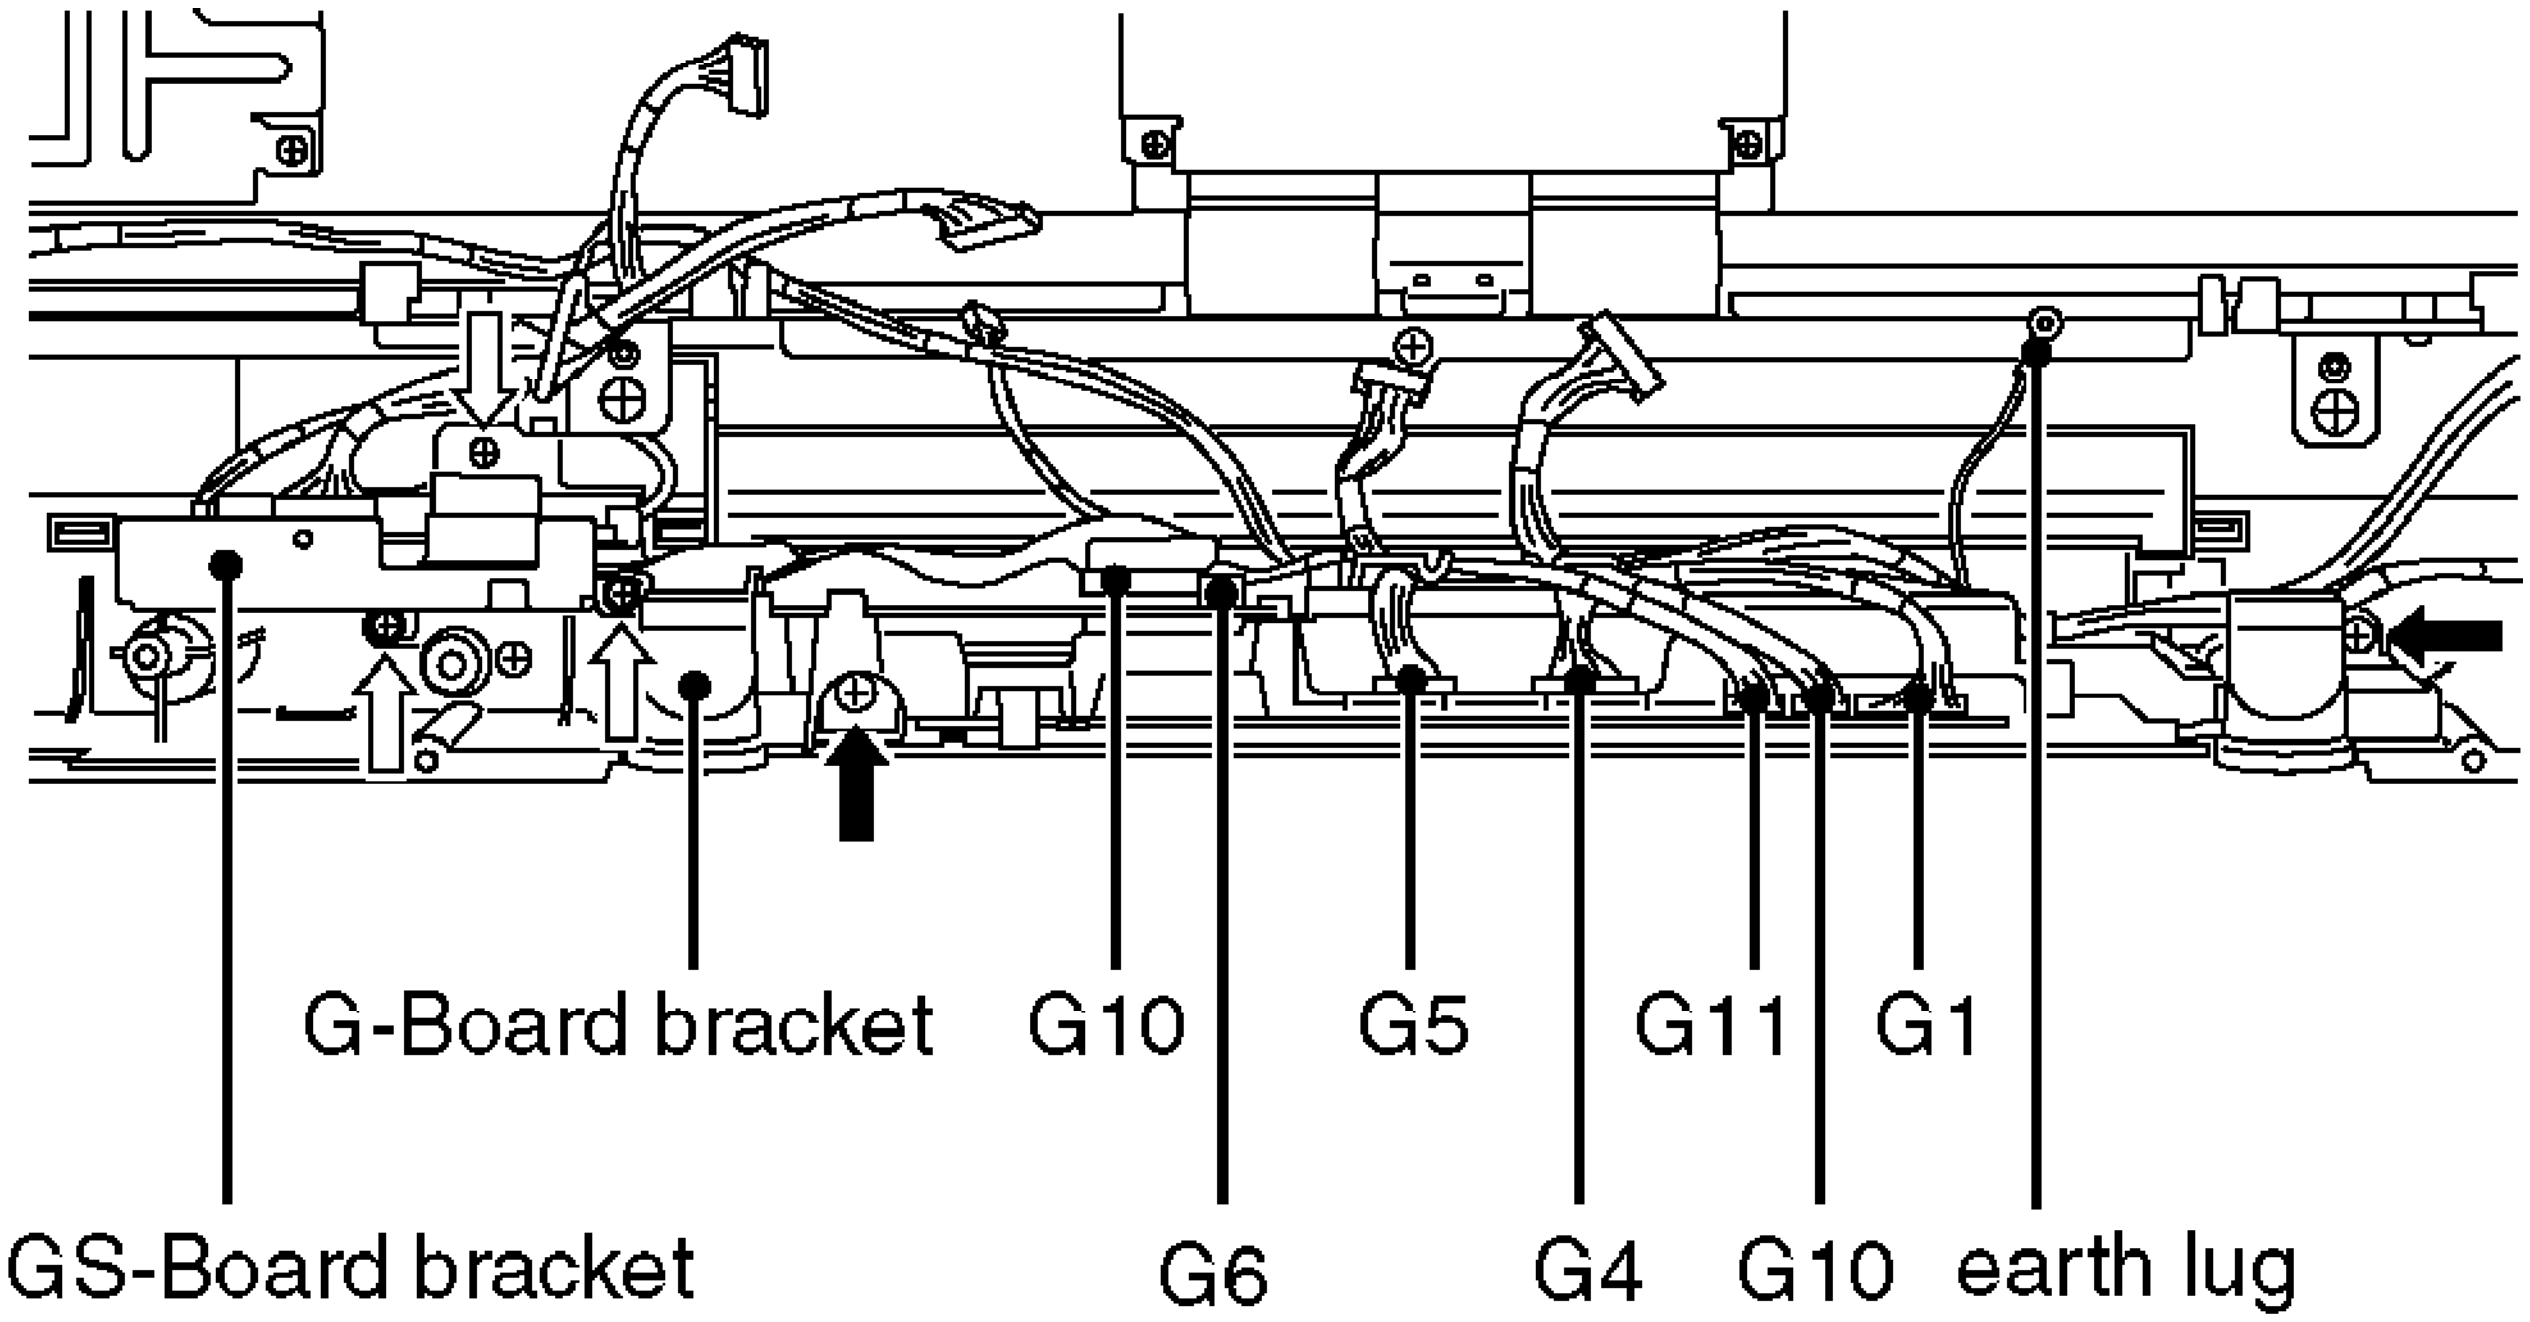
G-Board bracket
G10
G5
G11
G1
GS-Board bracket
G6
G4
G10
earth lug

7.13. Removing the G-Board and GP-Board

1. Remove the G-Board bracket. (See 7.12.)
<Removing the G-Board>

2. Push the hooks (7 points) to release the G-Board from the G-Board bracket.

3. Remove the G-Board.

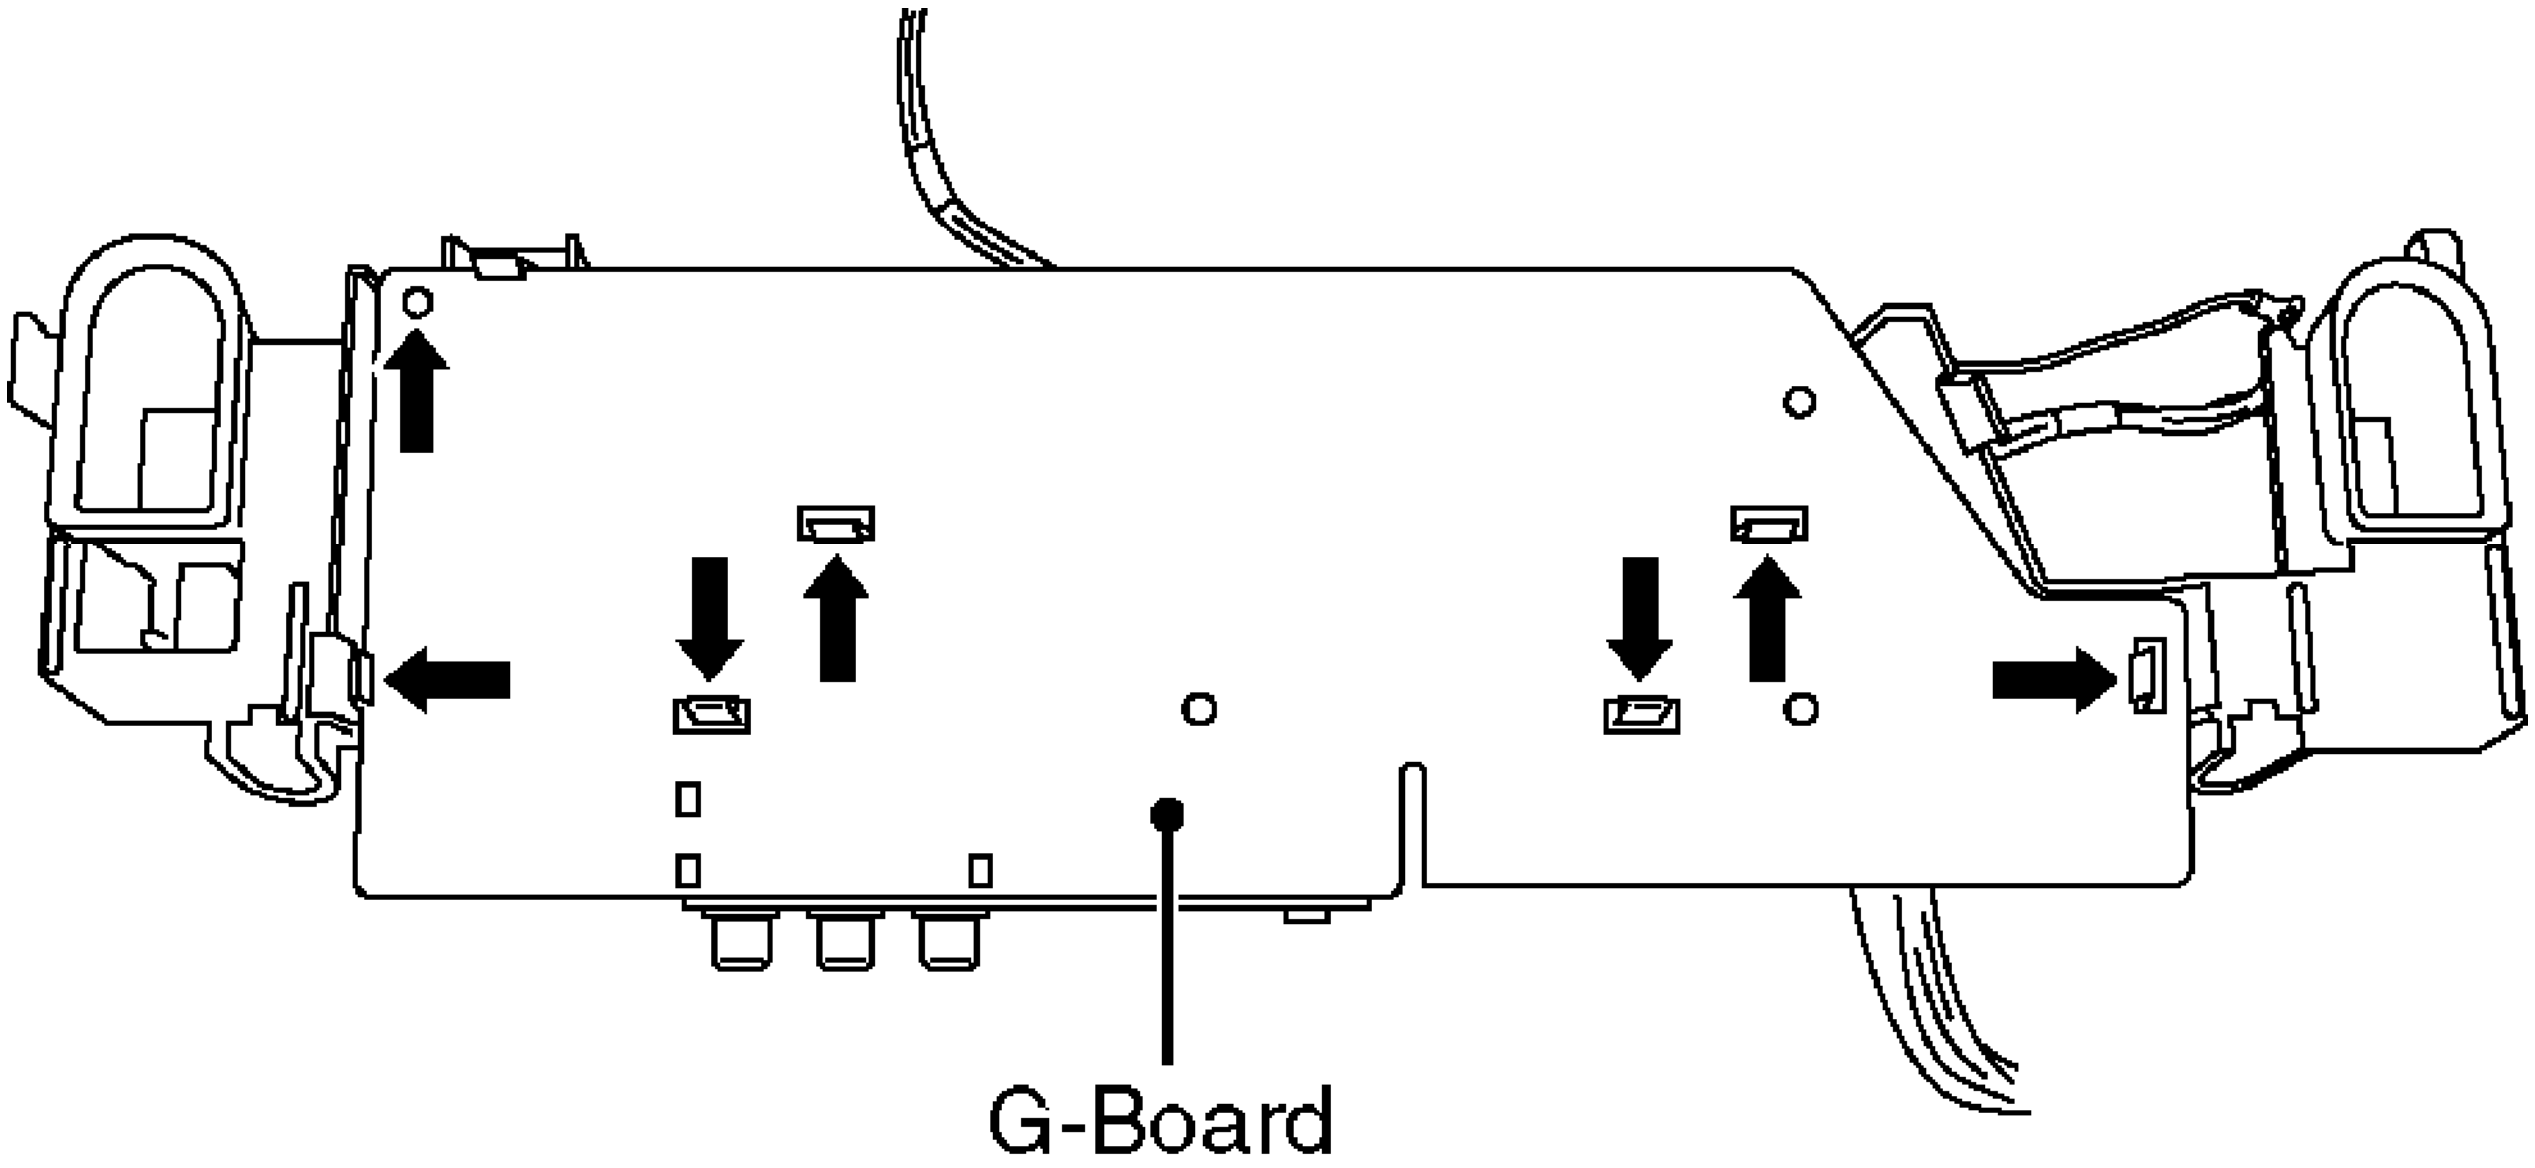

<Removing the GP-Board>

4. Remove the screws (2pcs➡) and push the hooks (2 points⇨).

5. Remove the GP-Board.

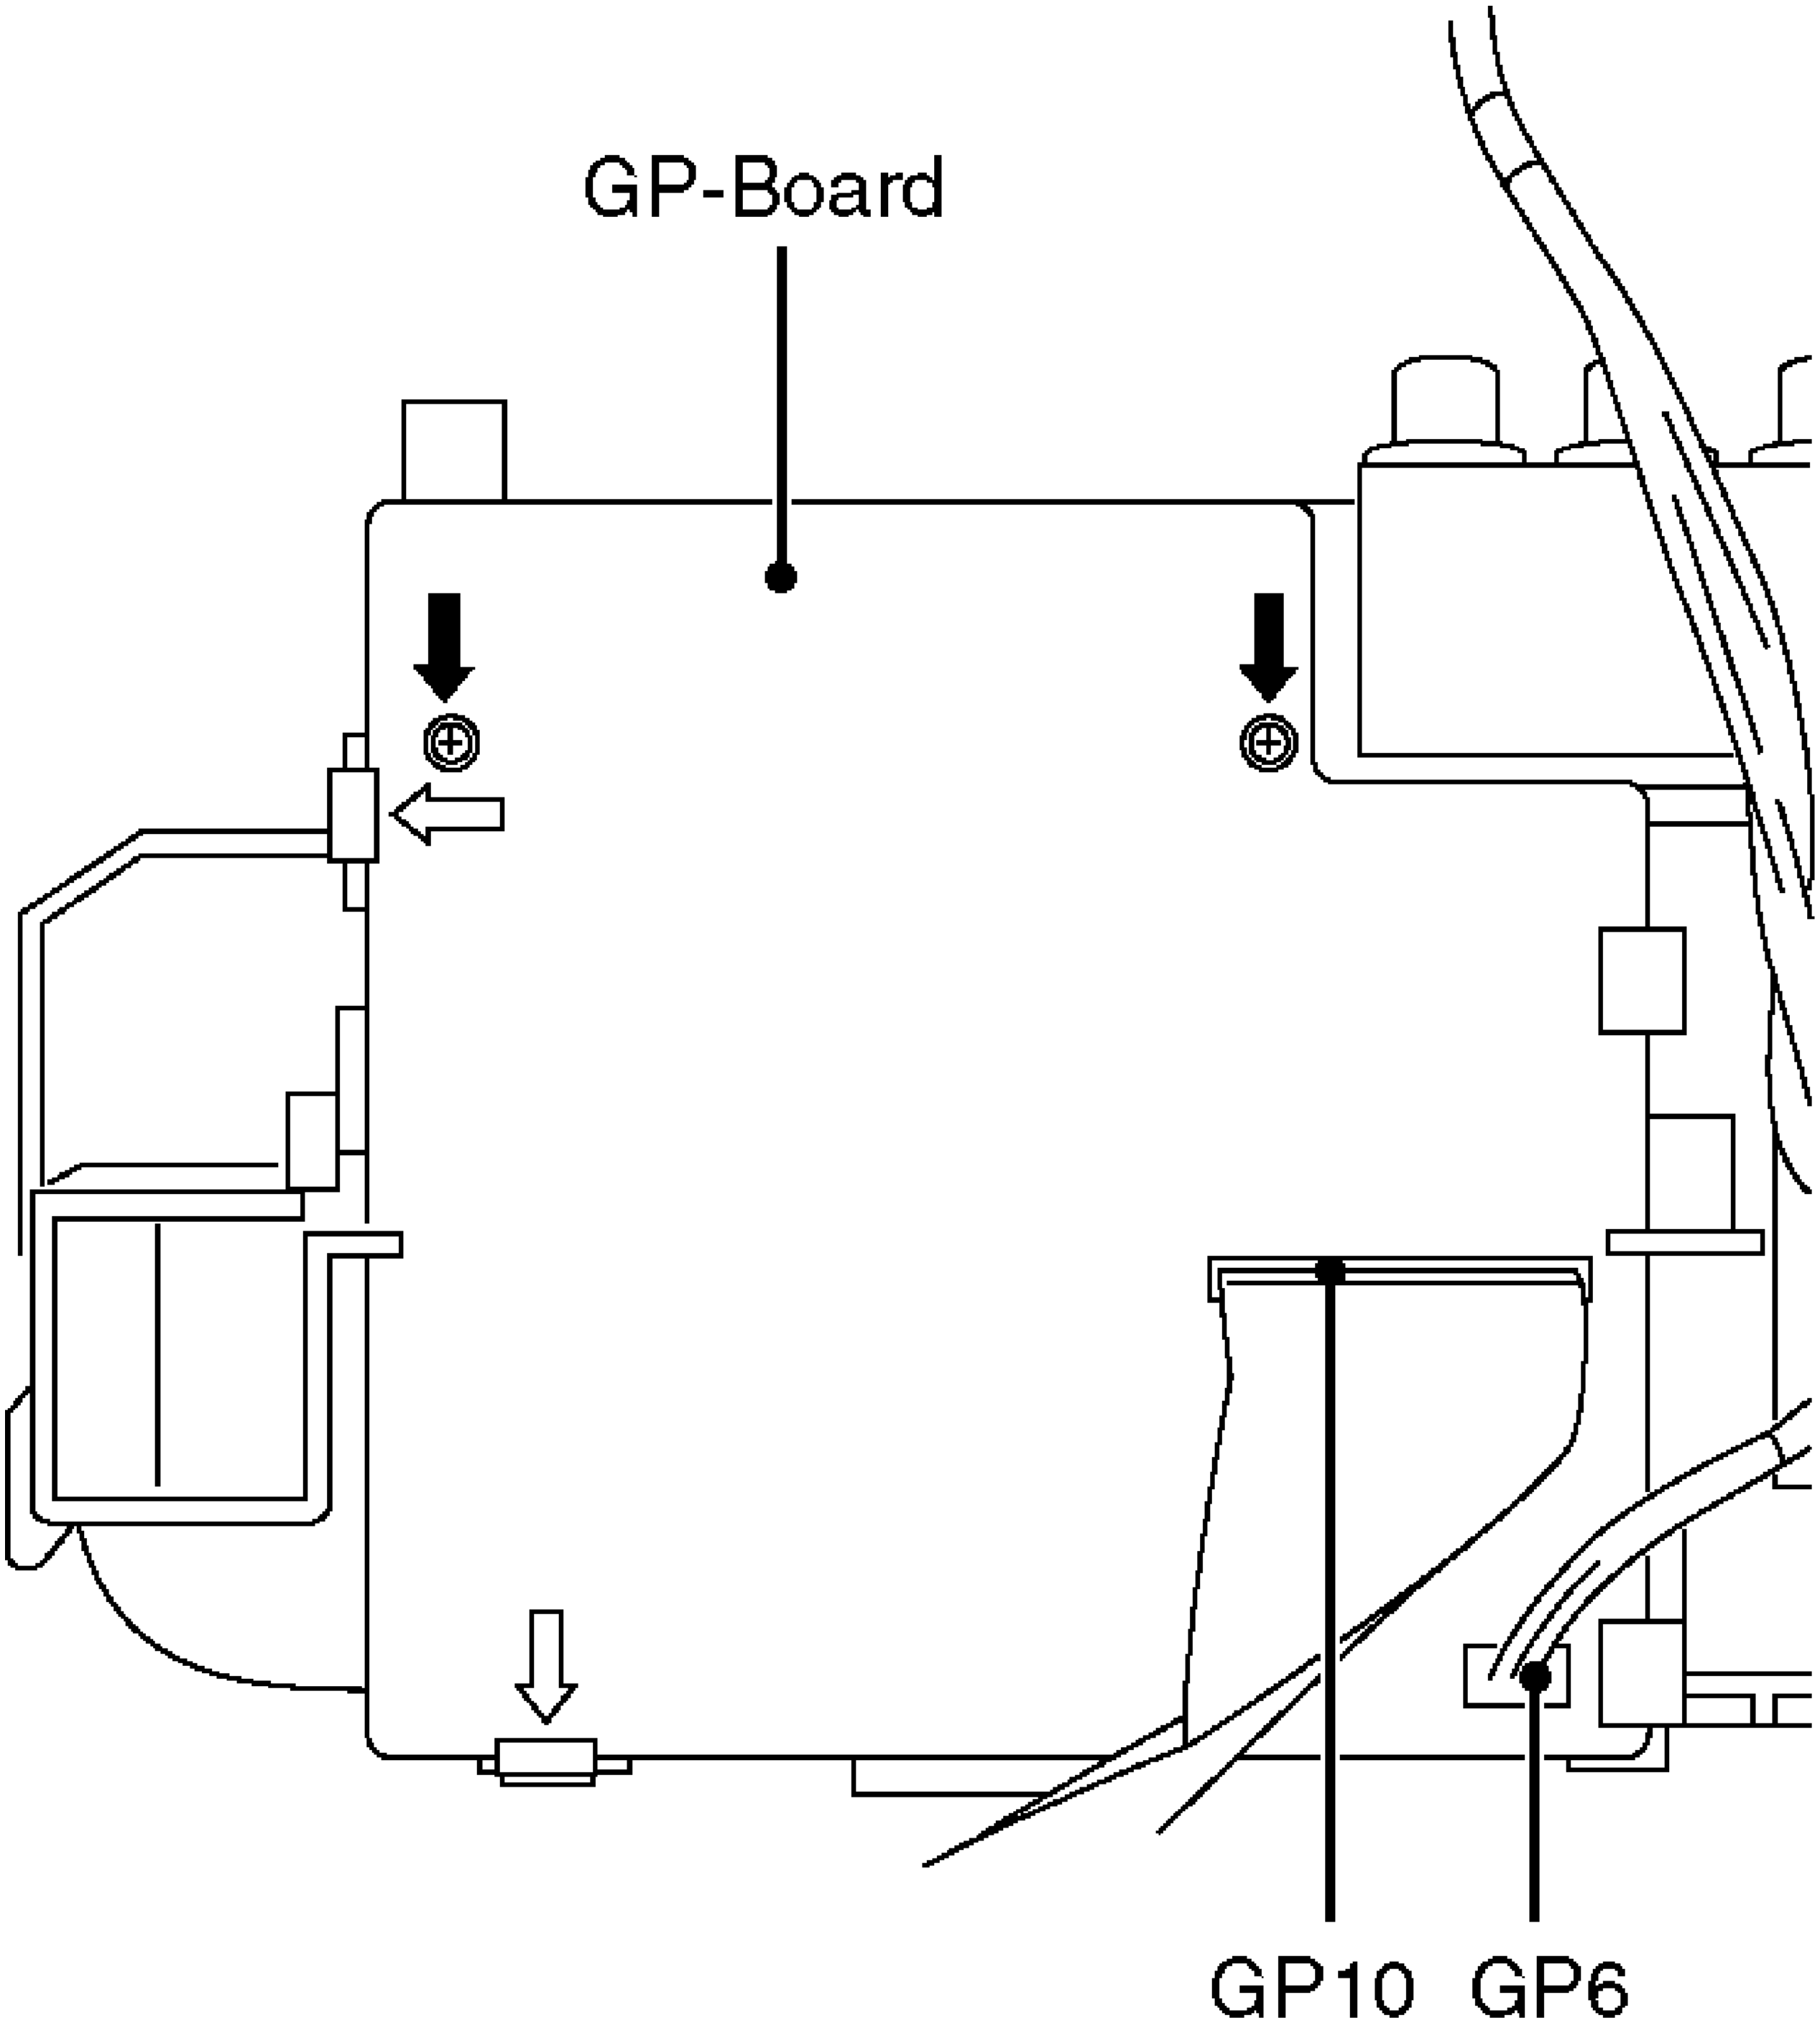
GP-Board
GP10
GP6

7.14. Removing the GS-Board bracket.

1. Remove the screws (3pcs⇨) (See figure in item 7.12.)

2. Remove the GS-Board bracket.

3. Remove the couplers (GS9 and GS10) and a flexible cable (GS3).

4. Remove the screws (2pcs➡).

5. Remove the GS-Board

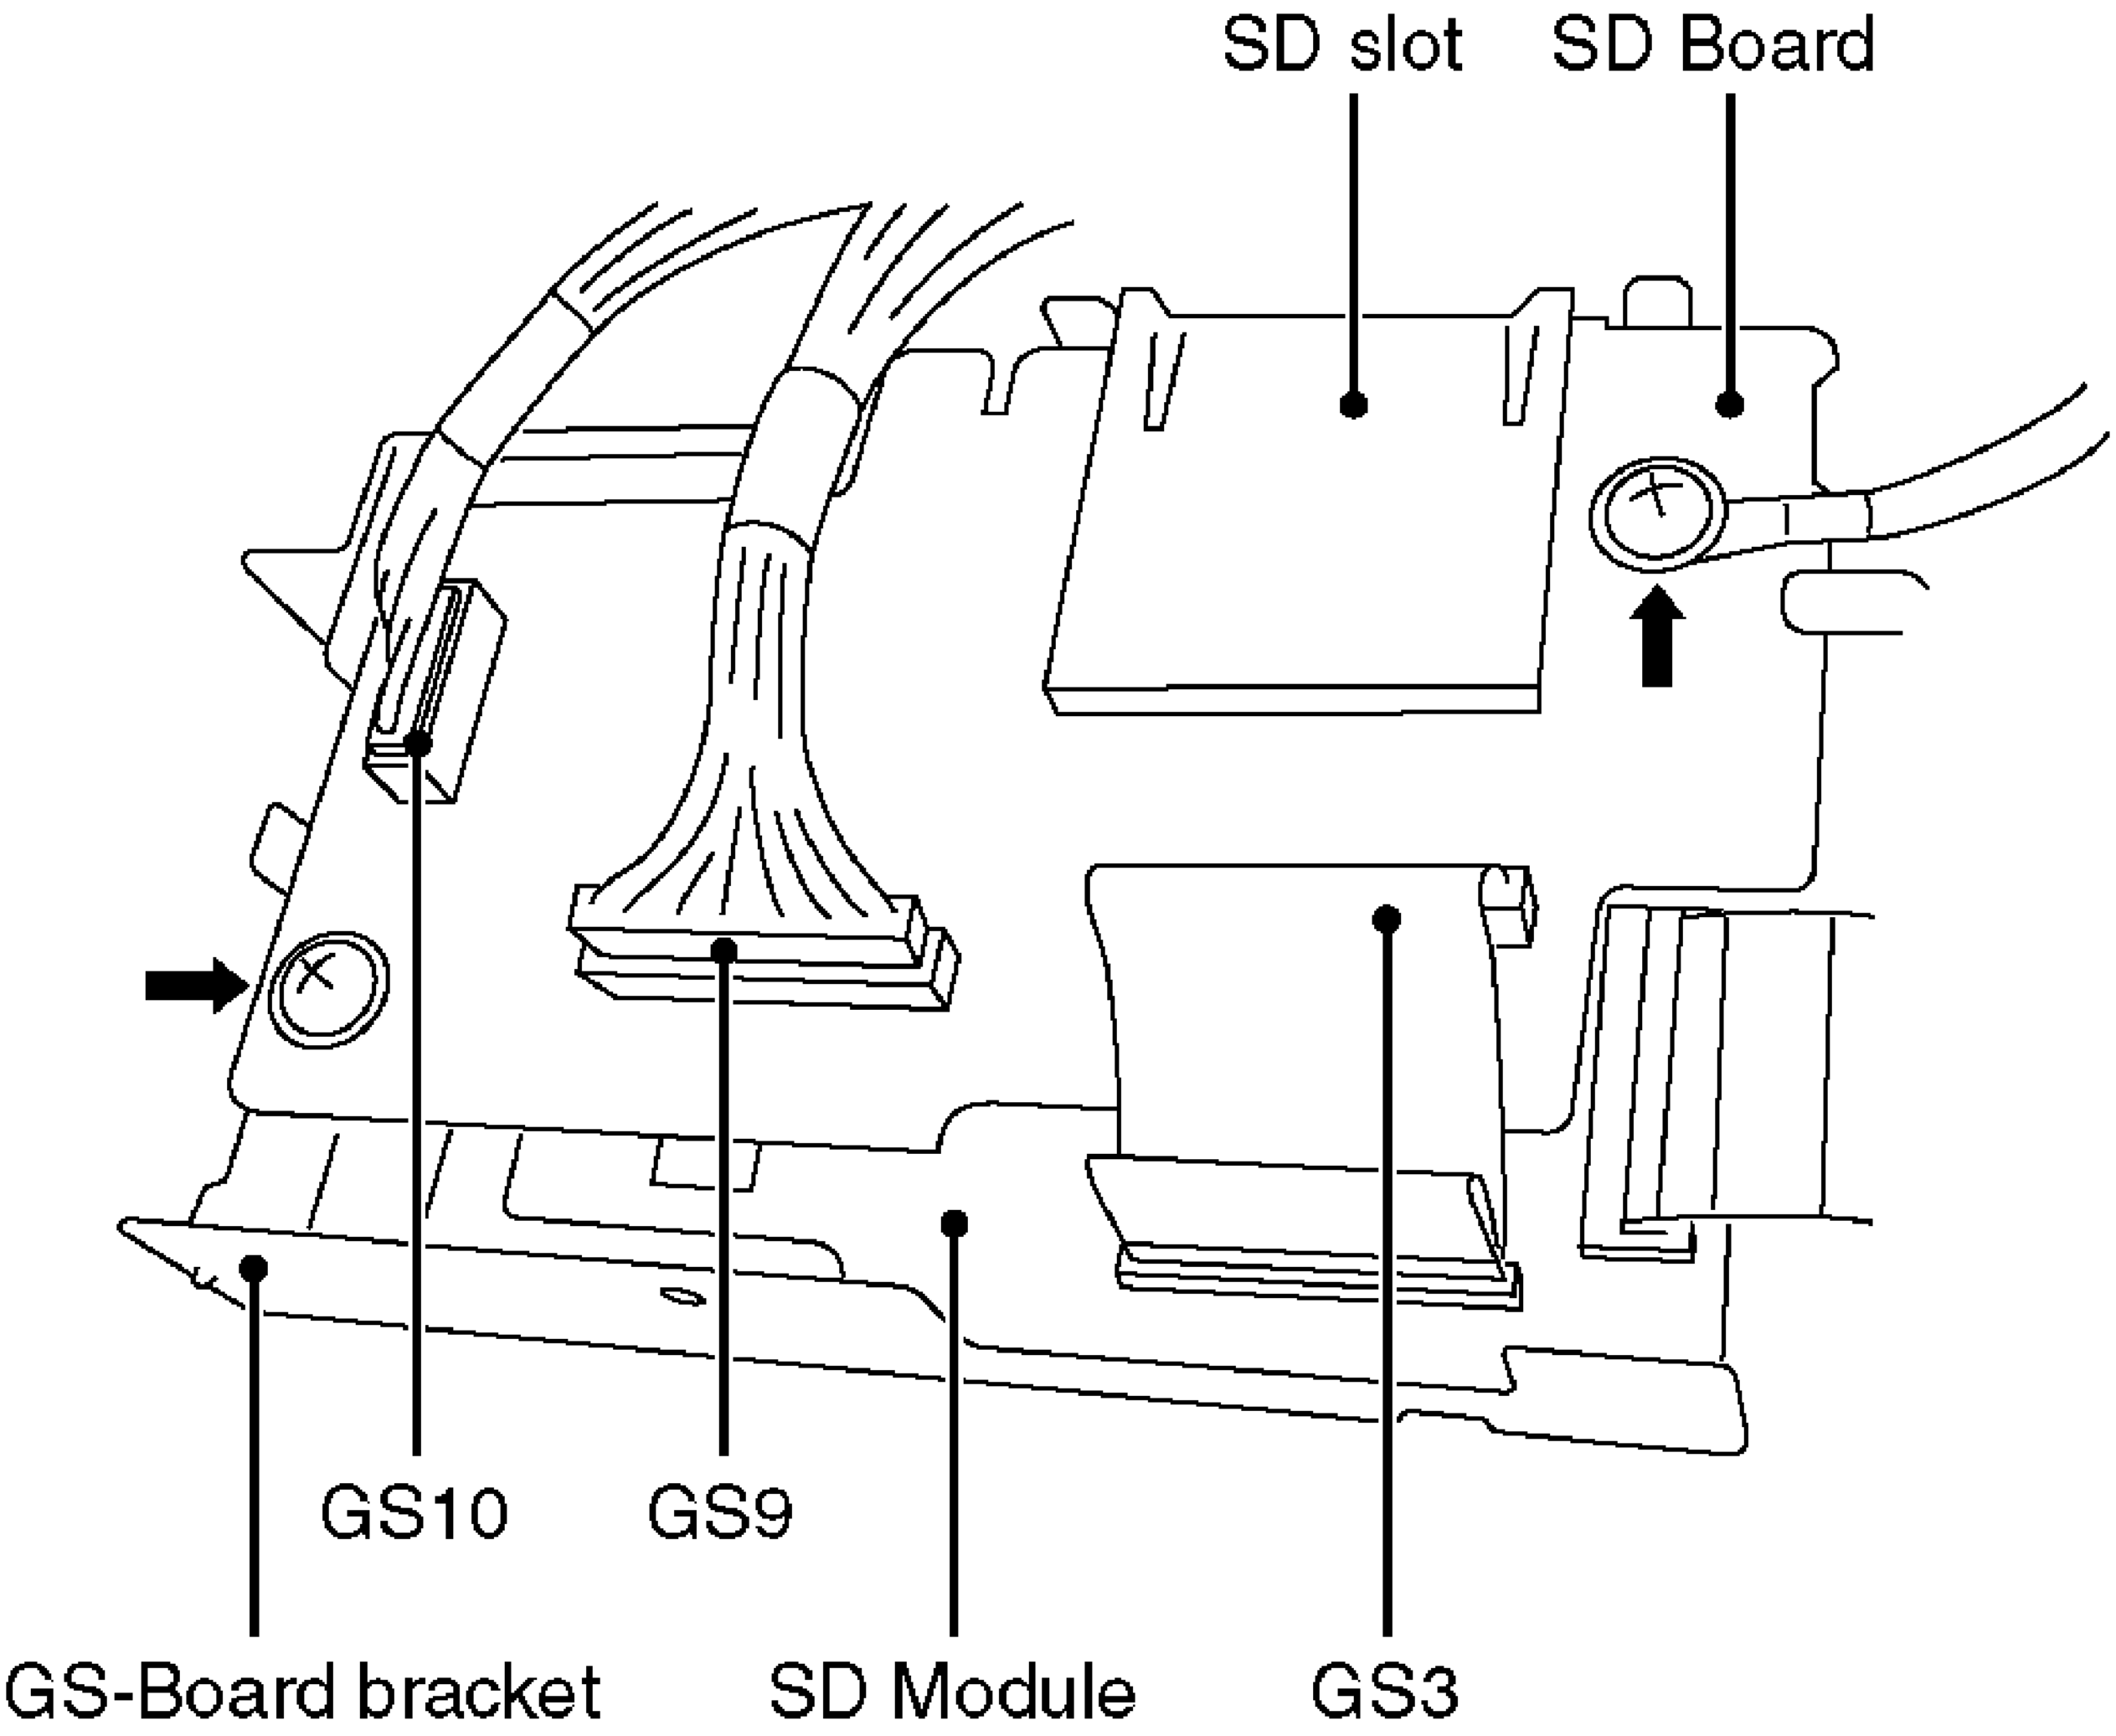
SD slot
SD Board
GS10
GS9
GS-Board bracket
SD Module
GS3

7.15. Removing the K-Board

1. Remove the rear cover (See 7.2.) and the speaker box R. (See 7.3.)

2. Remove a coupler (K6).

3. Remove the screws (2pcs➡).

4. Remove the K-Board bracket with the K-Board.

5. Remove a screw (⇨) and remove the K-Board.

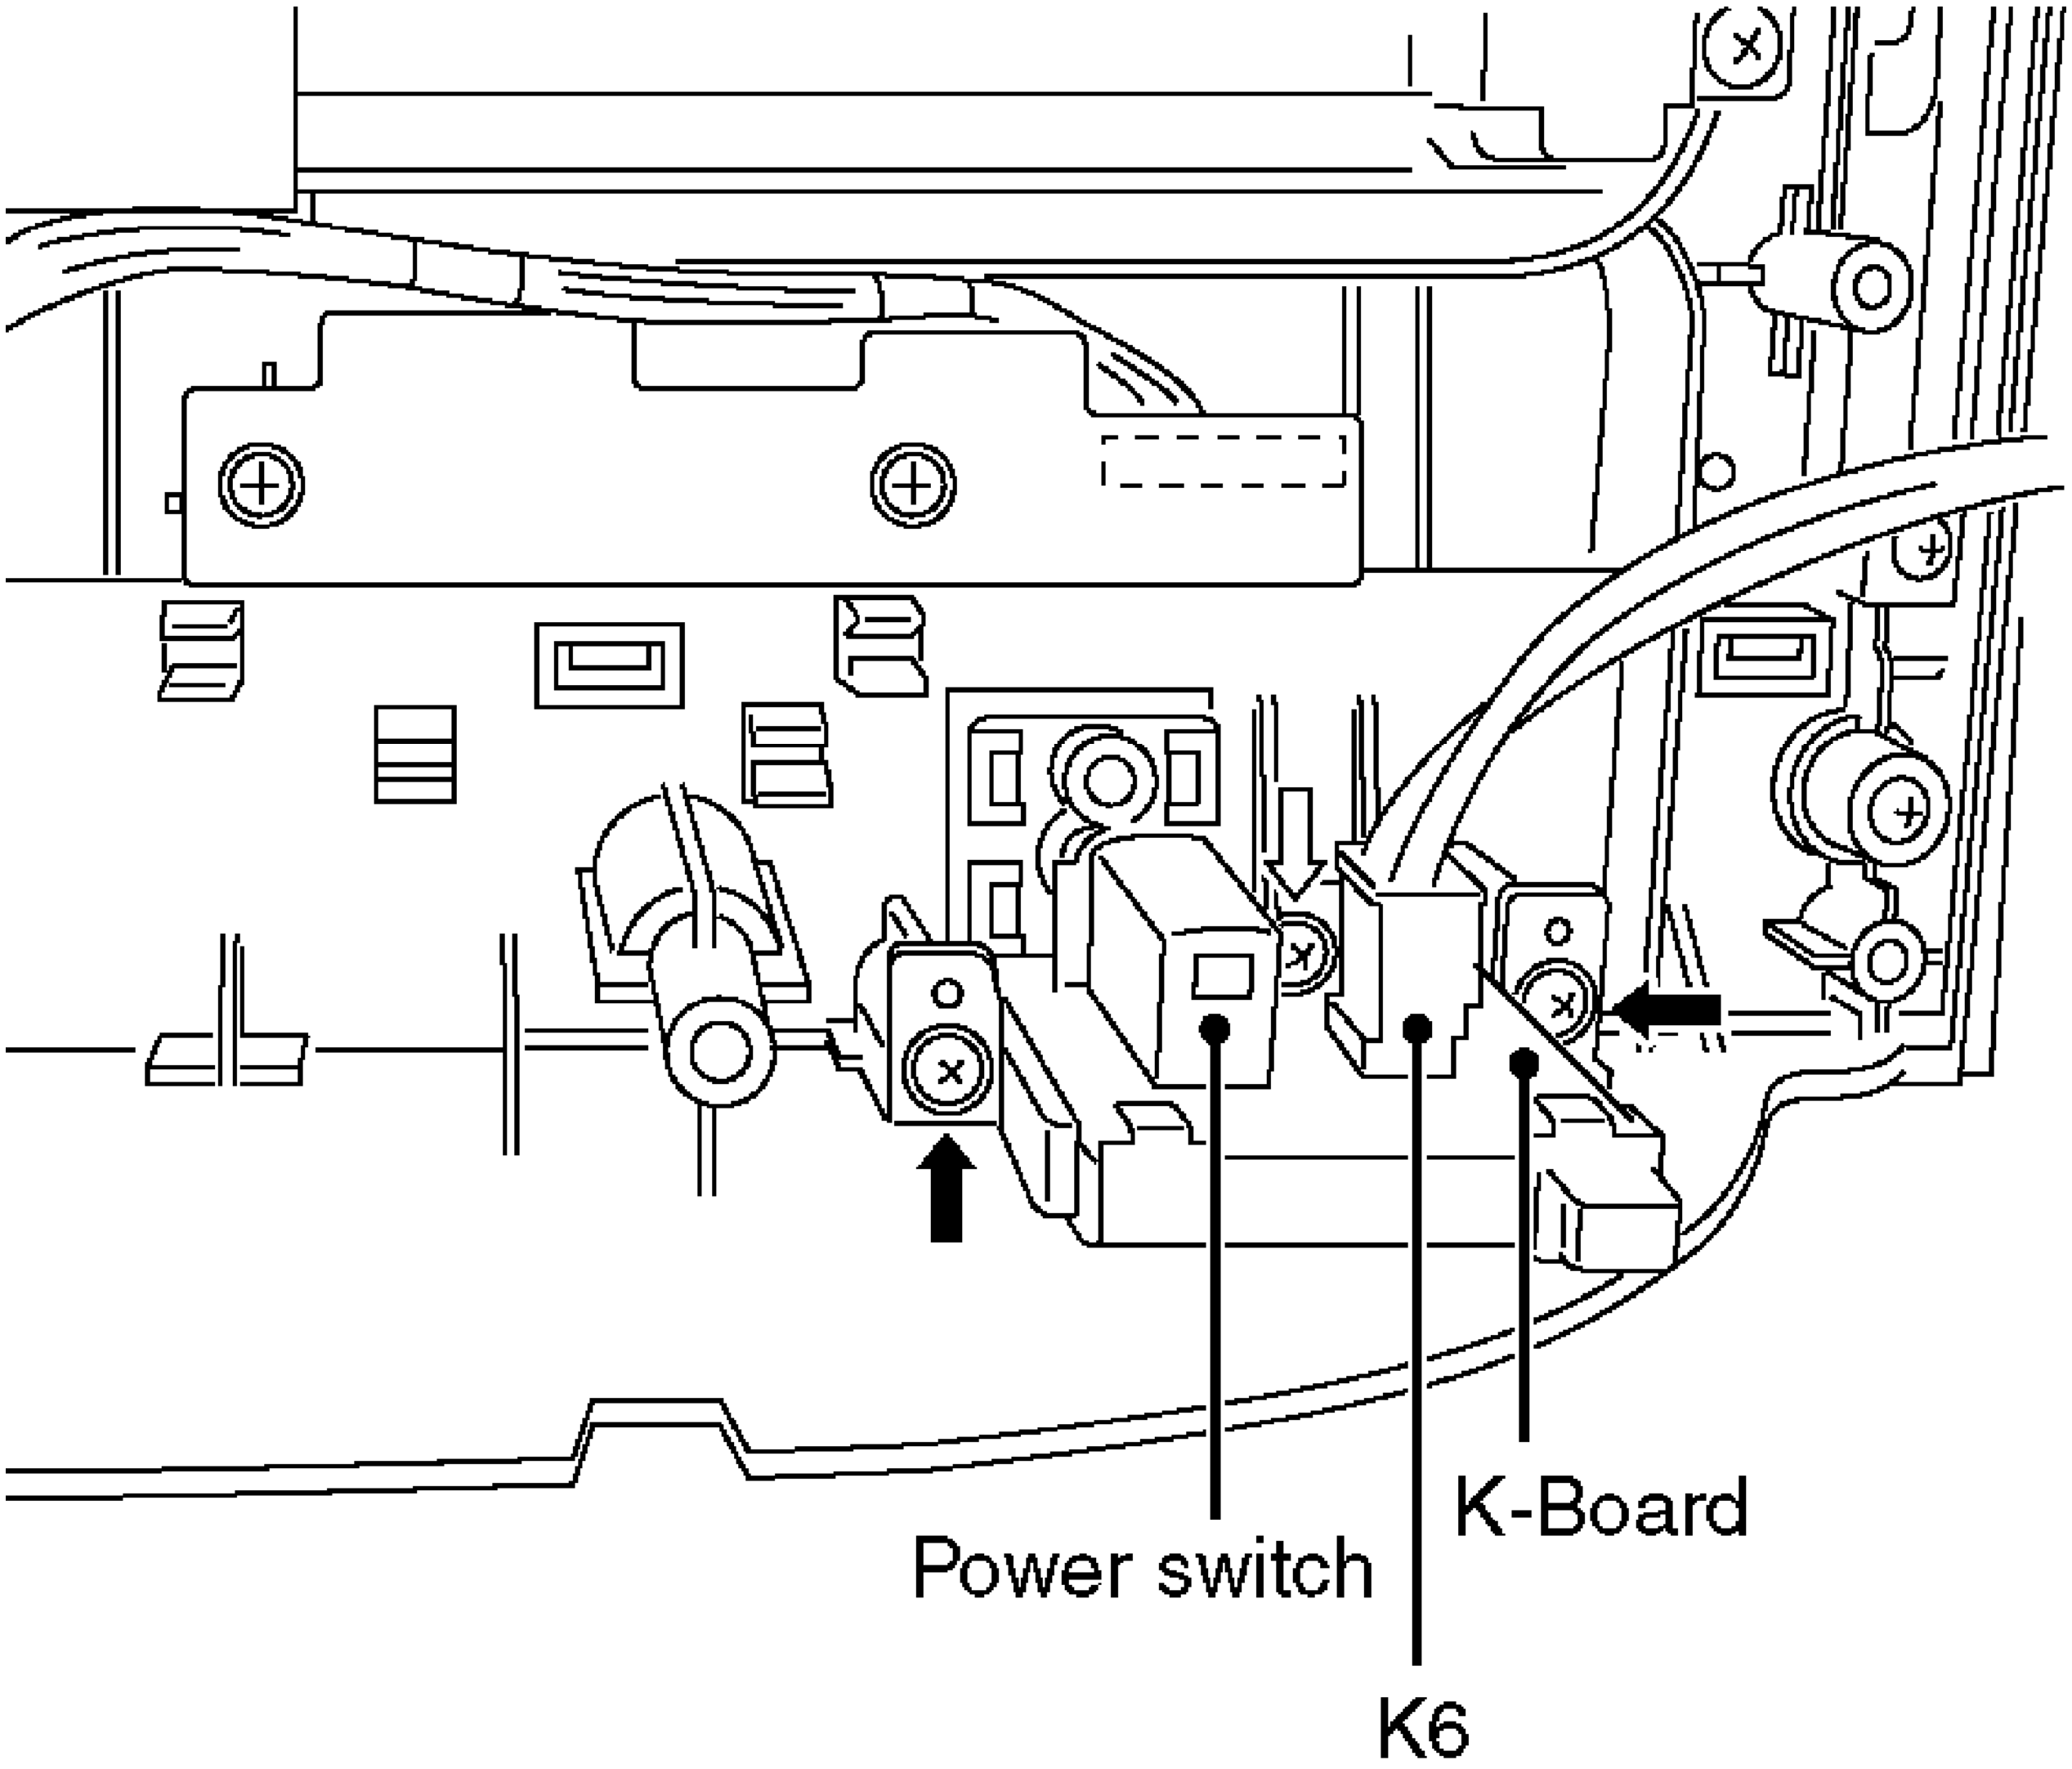

7.16. Removing the V-Board

1. Remove the rear cover (See 7.2.) and the speaker box R. (See 7.3.)

2. Remove the screws (2pcs).

3. Remove the V-Board.

4. Disconnect the coupler (V1).

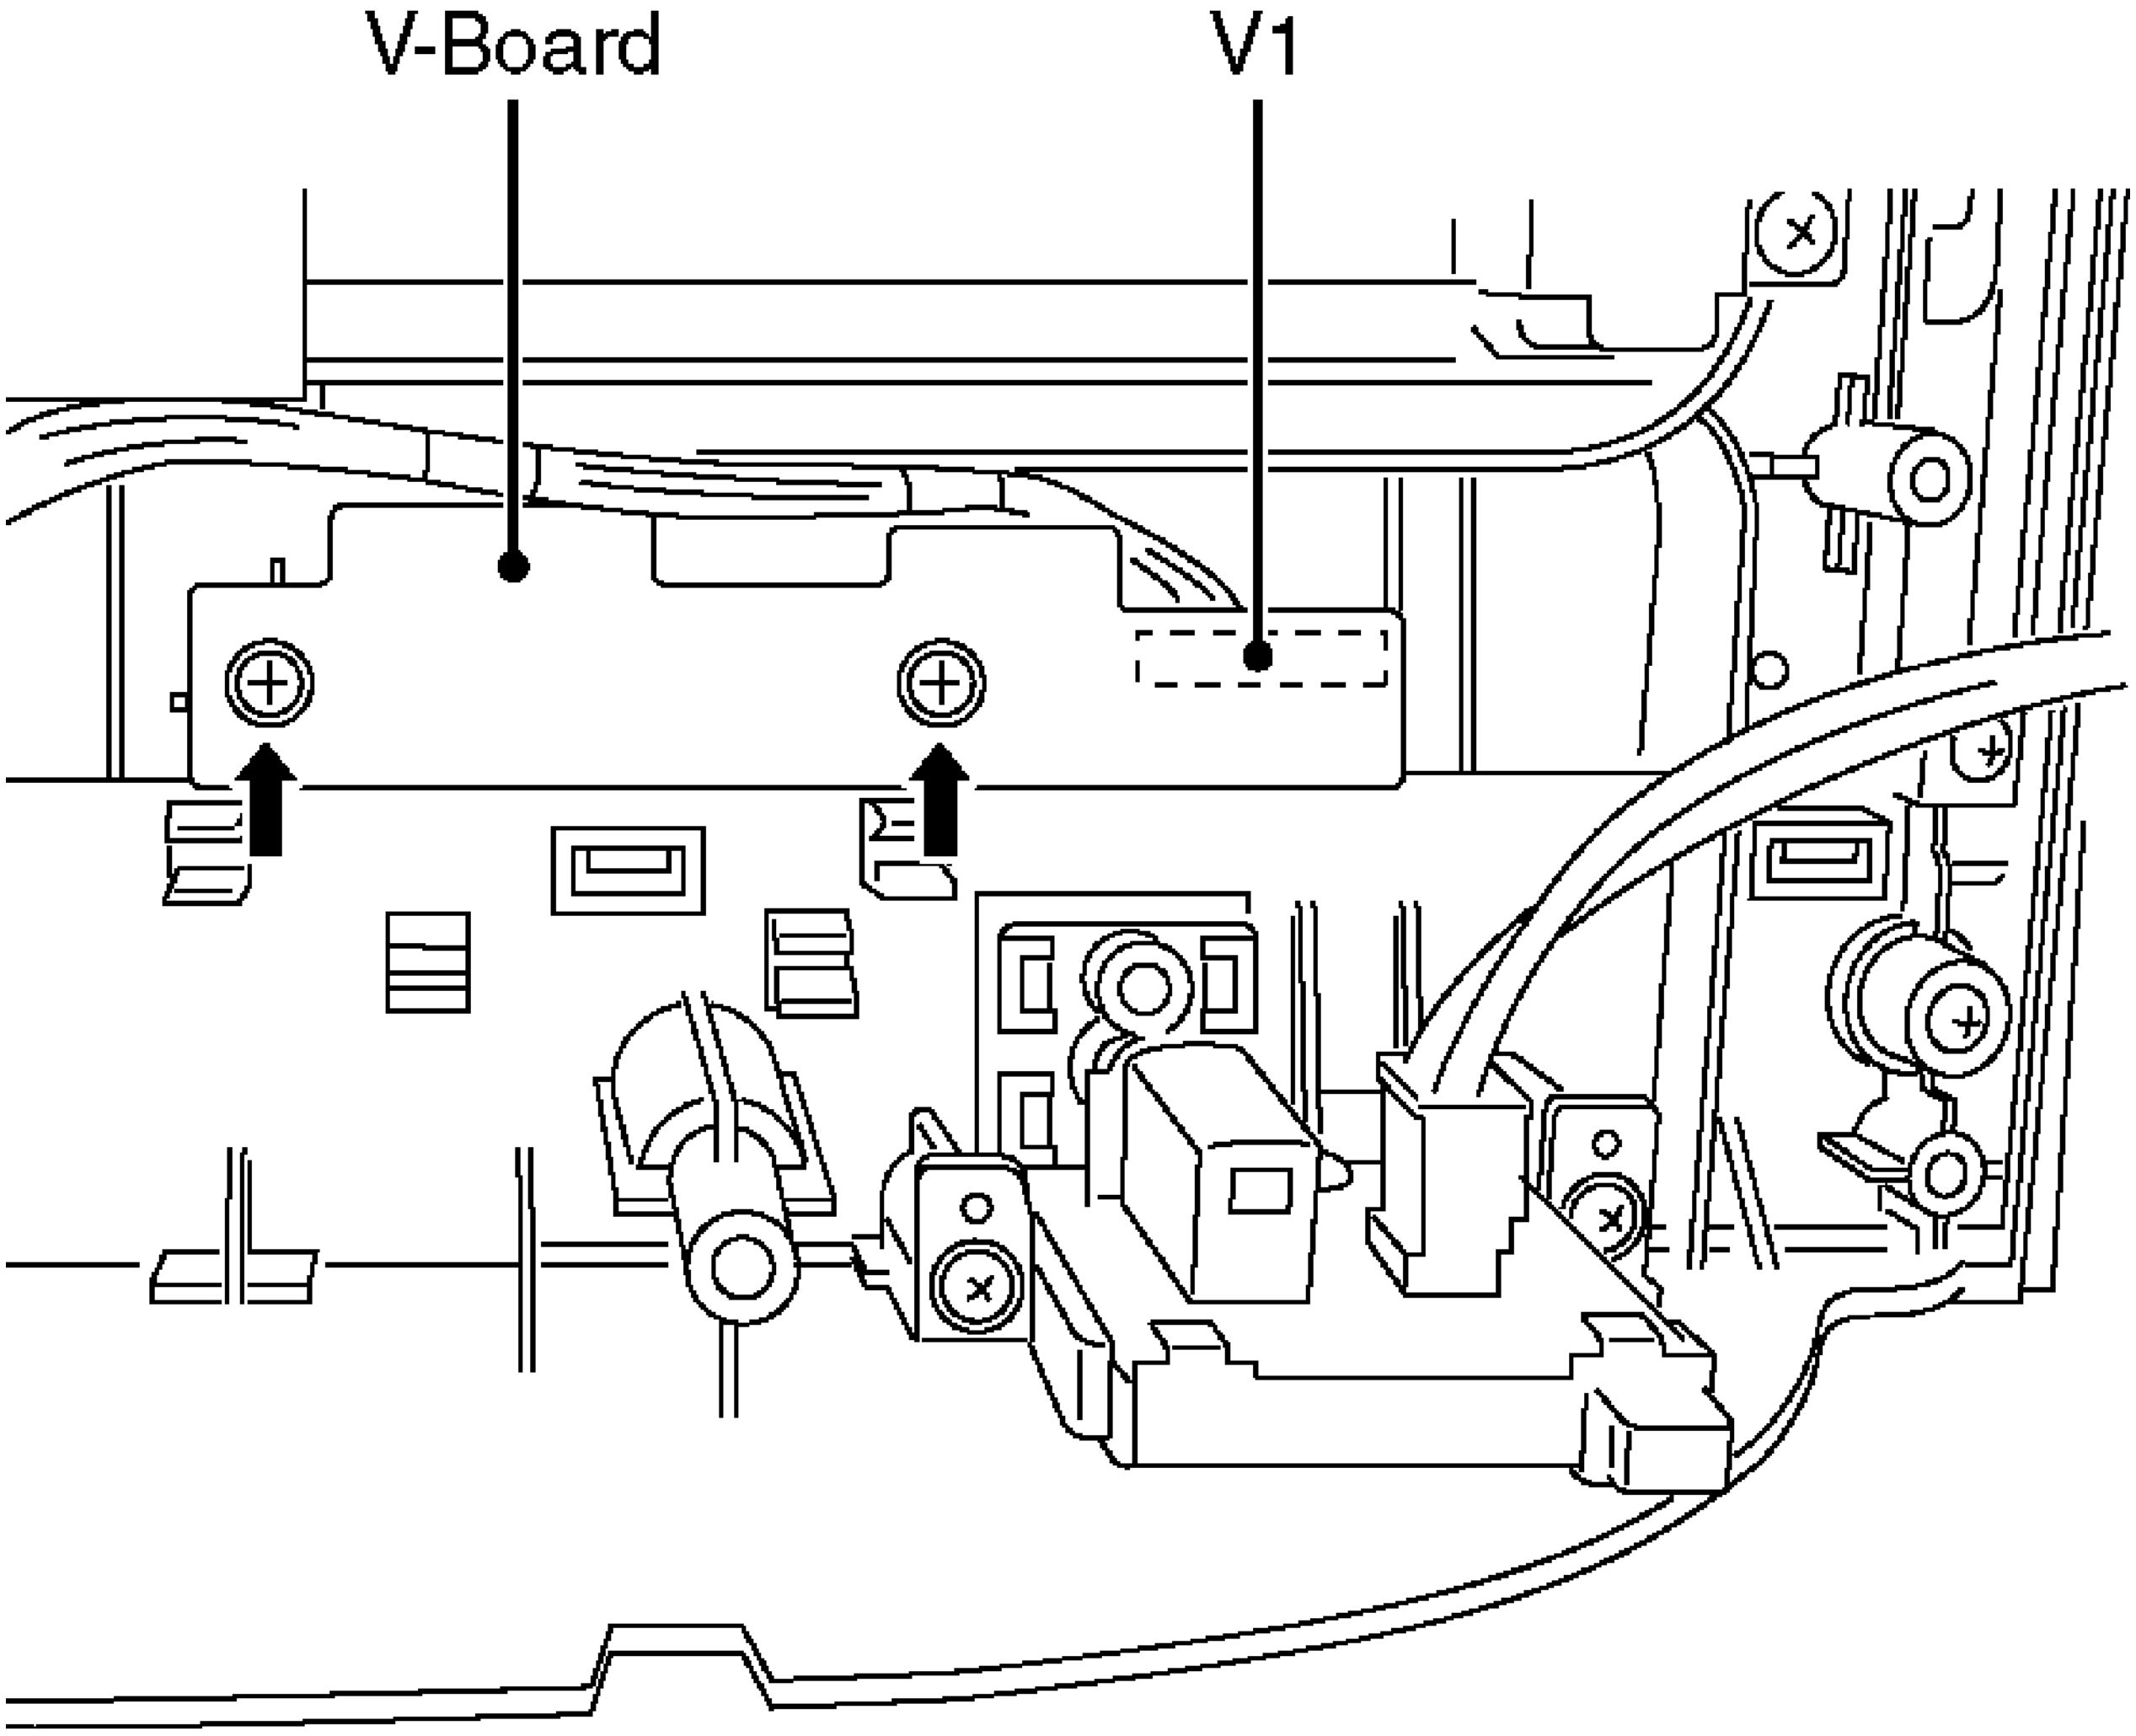

7.17. Removing the main chassis

1. Remove the rear AV bracket (See 7.4.) and the rear metal frame. (See 7.5.)
2. Disconnect the couplers (CN202, CN203, DG6, DG7, DG8, H4, H5, H6, H8, H9, AP6, AP10) and the earth lug (on the H-Board) from G-Board.
3. Release the cables from the clampers on the main chassis.
4. Remove the fixing screws (3pcs).
5. Remove the main chassis with the P-Board, the AP-Board, the DG-Board (with DV-Board and XV-Board) and the H-Board.

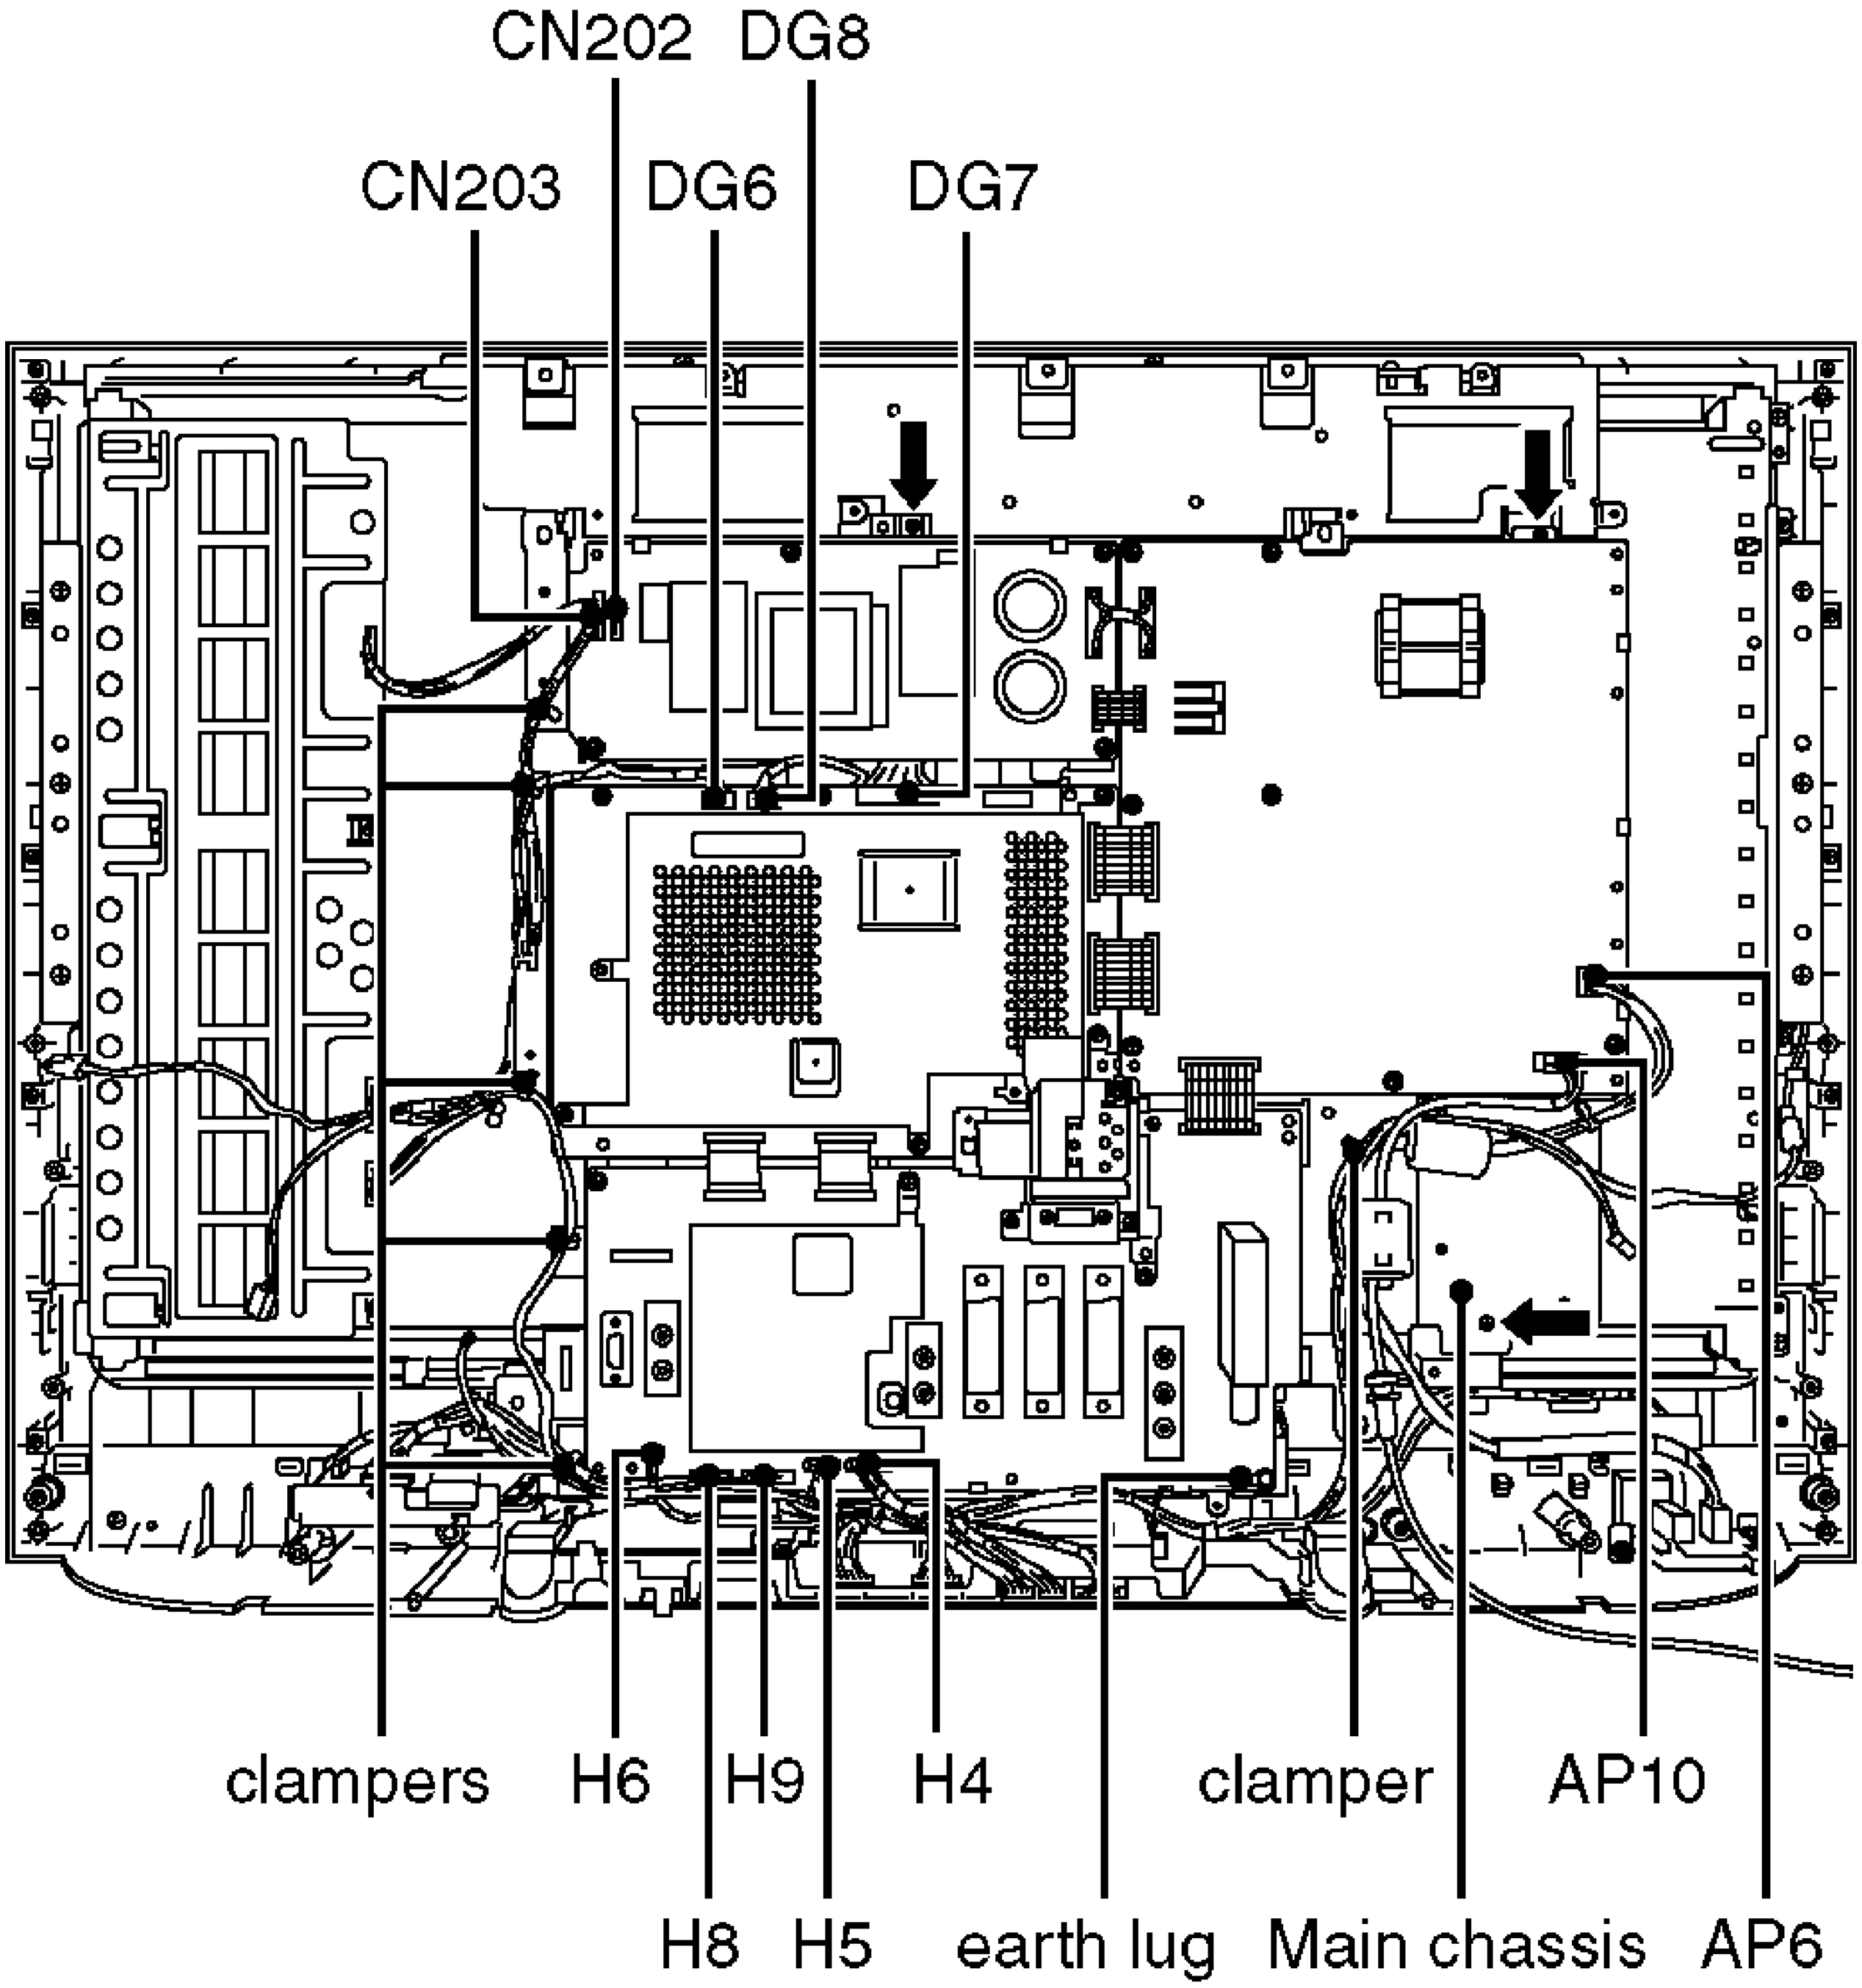
CN202
DG8
CN203
DG6
DG7
clampers
H6
H9
H4
clamper
AP10
H8
H5
earth lug
Main chassis
AP6

7.18. Removing the LCD panel

1. Remove the main chassis. (See 7.17.)

2. Remove the fixing screws (11pcs➡).

3. Remove the LCD panel and LCD panel holders (right and left).

4. Remove the screw (4pcs⇨).

5. Remove the LCD panel holders (top and bottom).

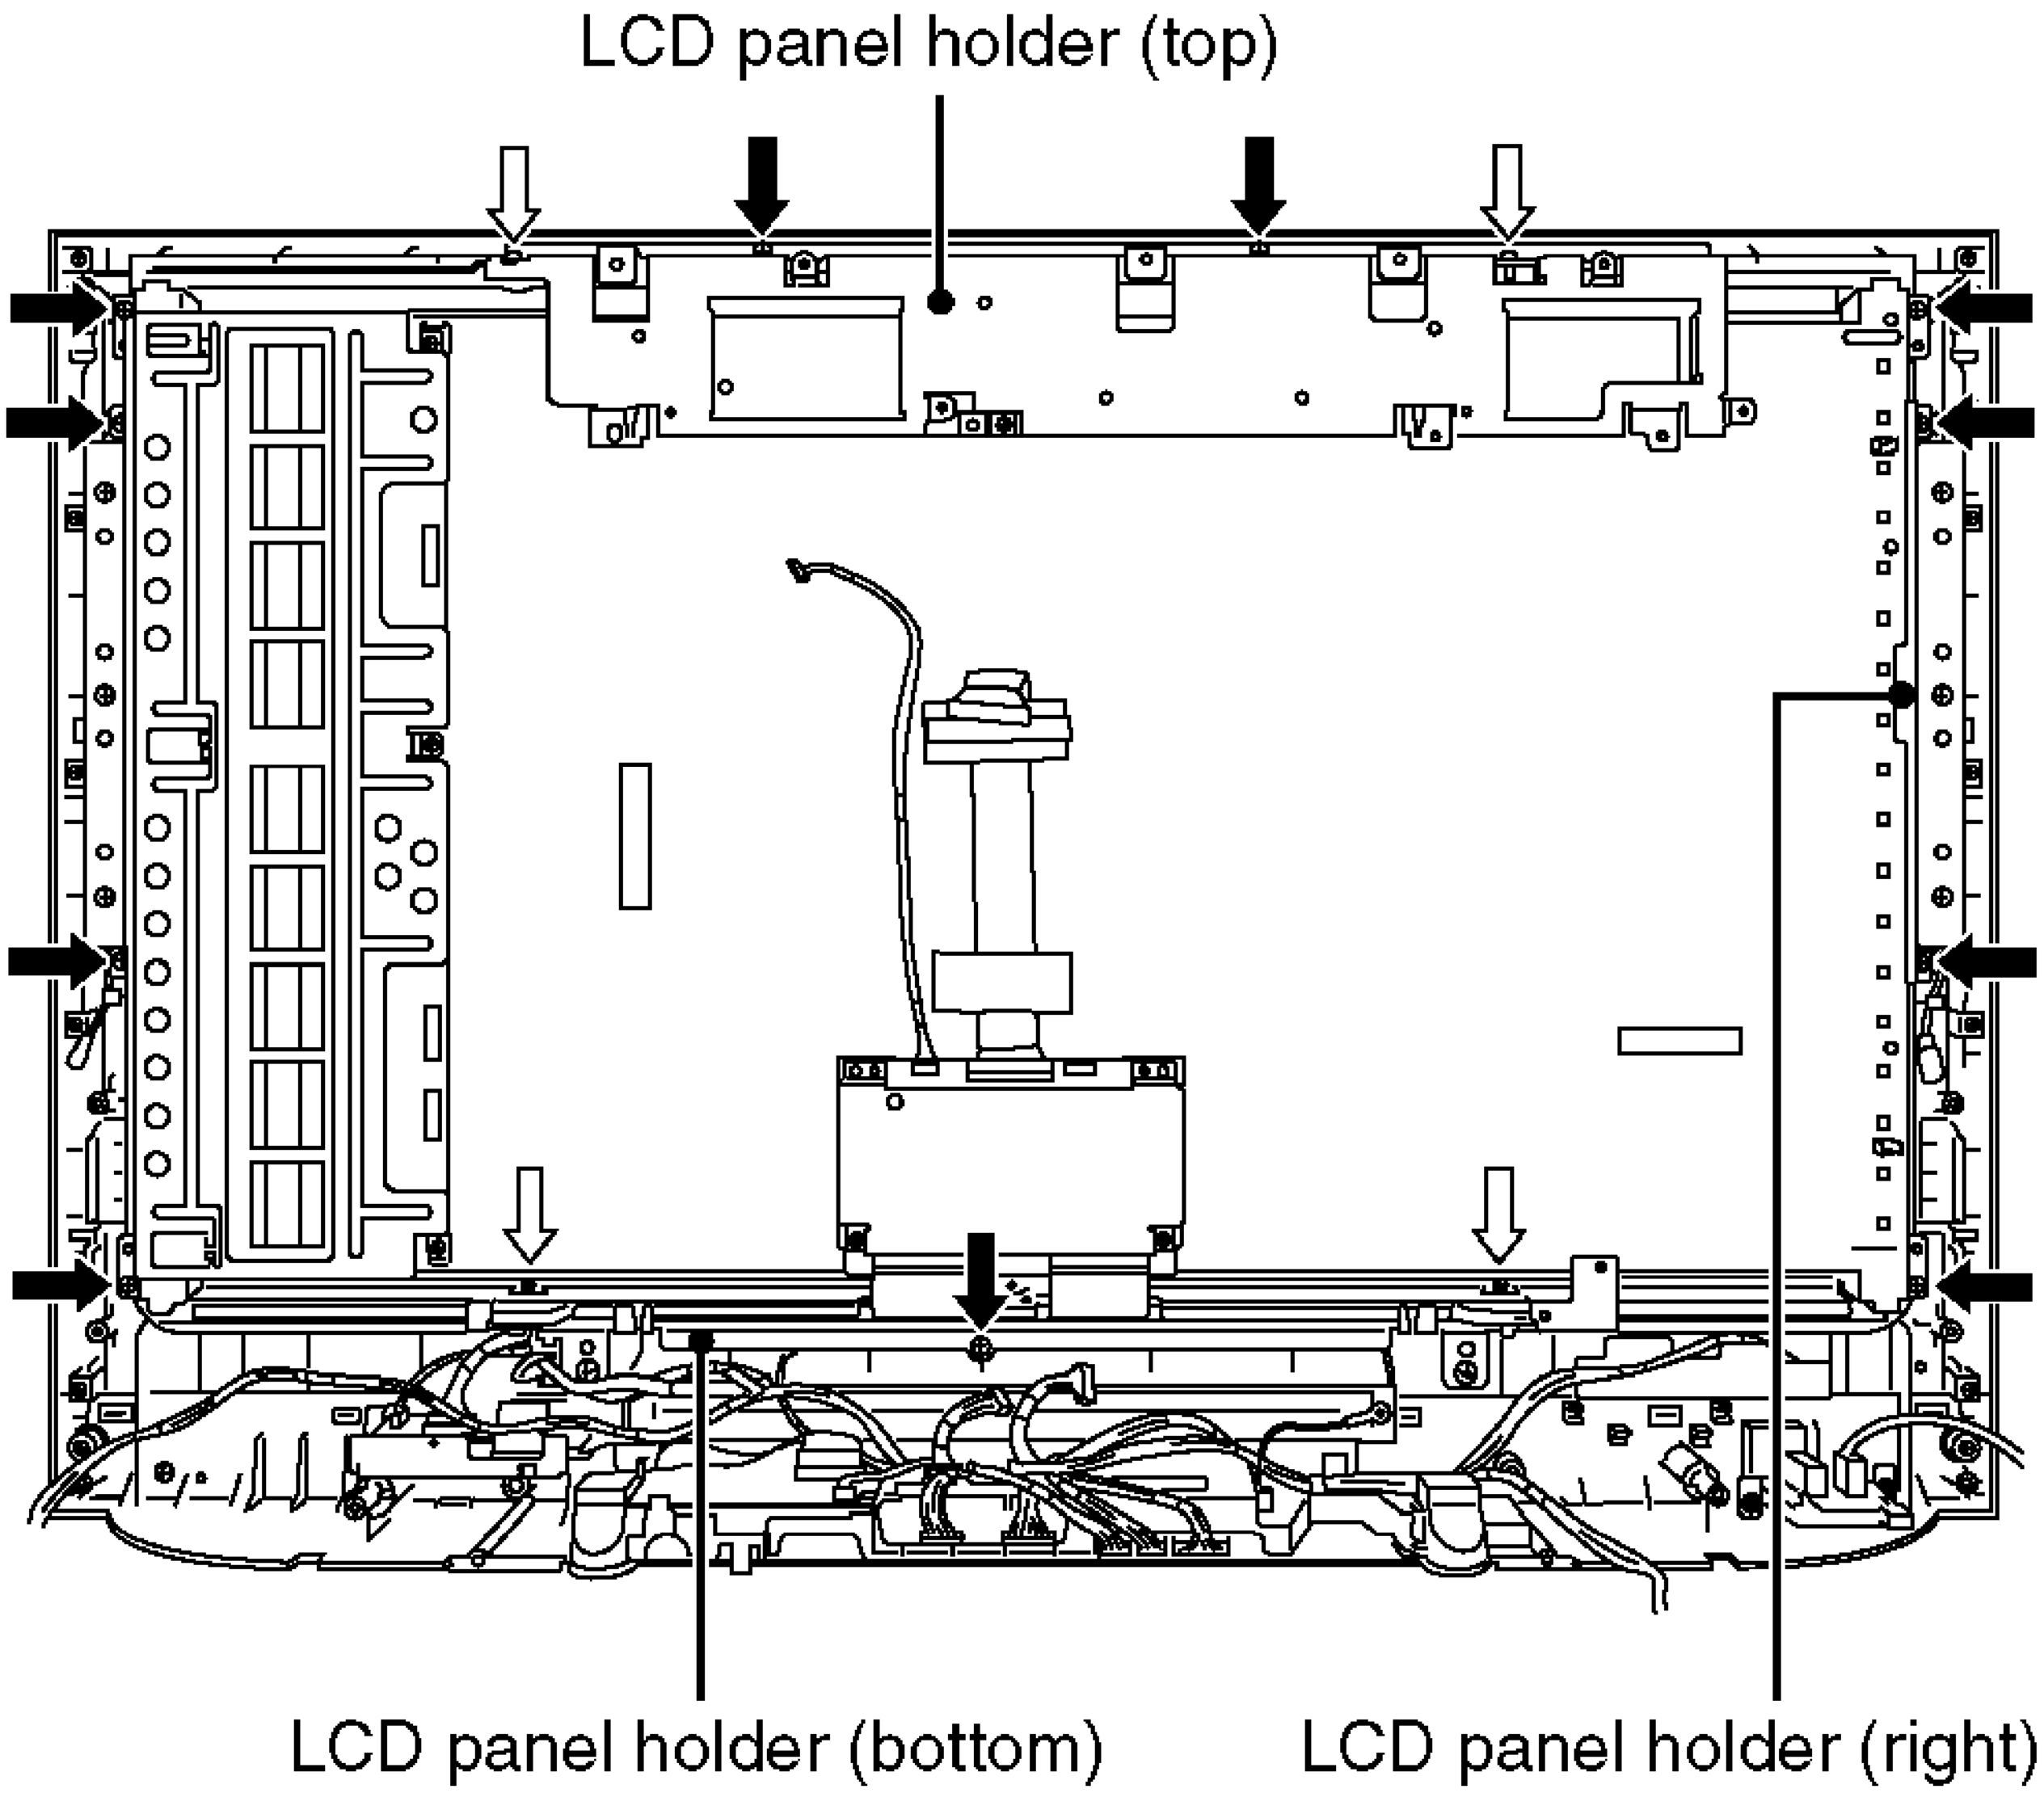
LCD panel holder (top)
LCD panel holder (bottom)
LCD panel holder (right)

8. Service Mode Function

MPU controls the functions switching for each IICs through IIC bus in this chassis. The following setting and adjustment can be adjusted by remote control in Service Mode.

8.1. How to enter SERVICE 1

1. **In main menu, move to choose sound menu, set BASS to MAXIMUM, and set TREBLE to MINIMUM.**
2. **Simultaneously press INDEX button on remote control and DOWN button [－／∨] on the TV set.**

8.2. How to enter SERVICE 2

1. **Enter the SERVICE 1 mode.**
2. **Set the channel to CH99.**
3. **Press HOLD button on remote control.**

Note:

To exit from Service mode, press N or Power button on remote control.

SERVICE 1

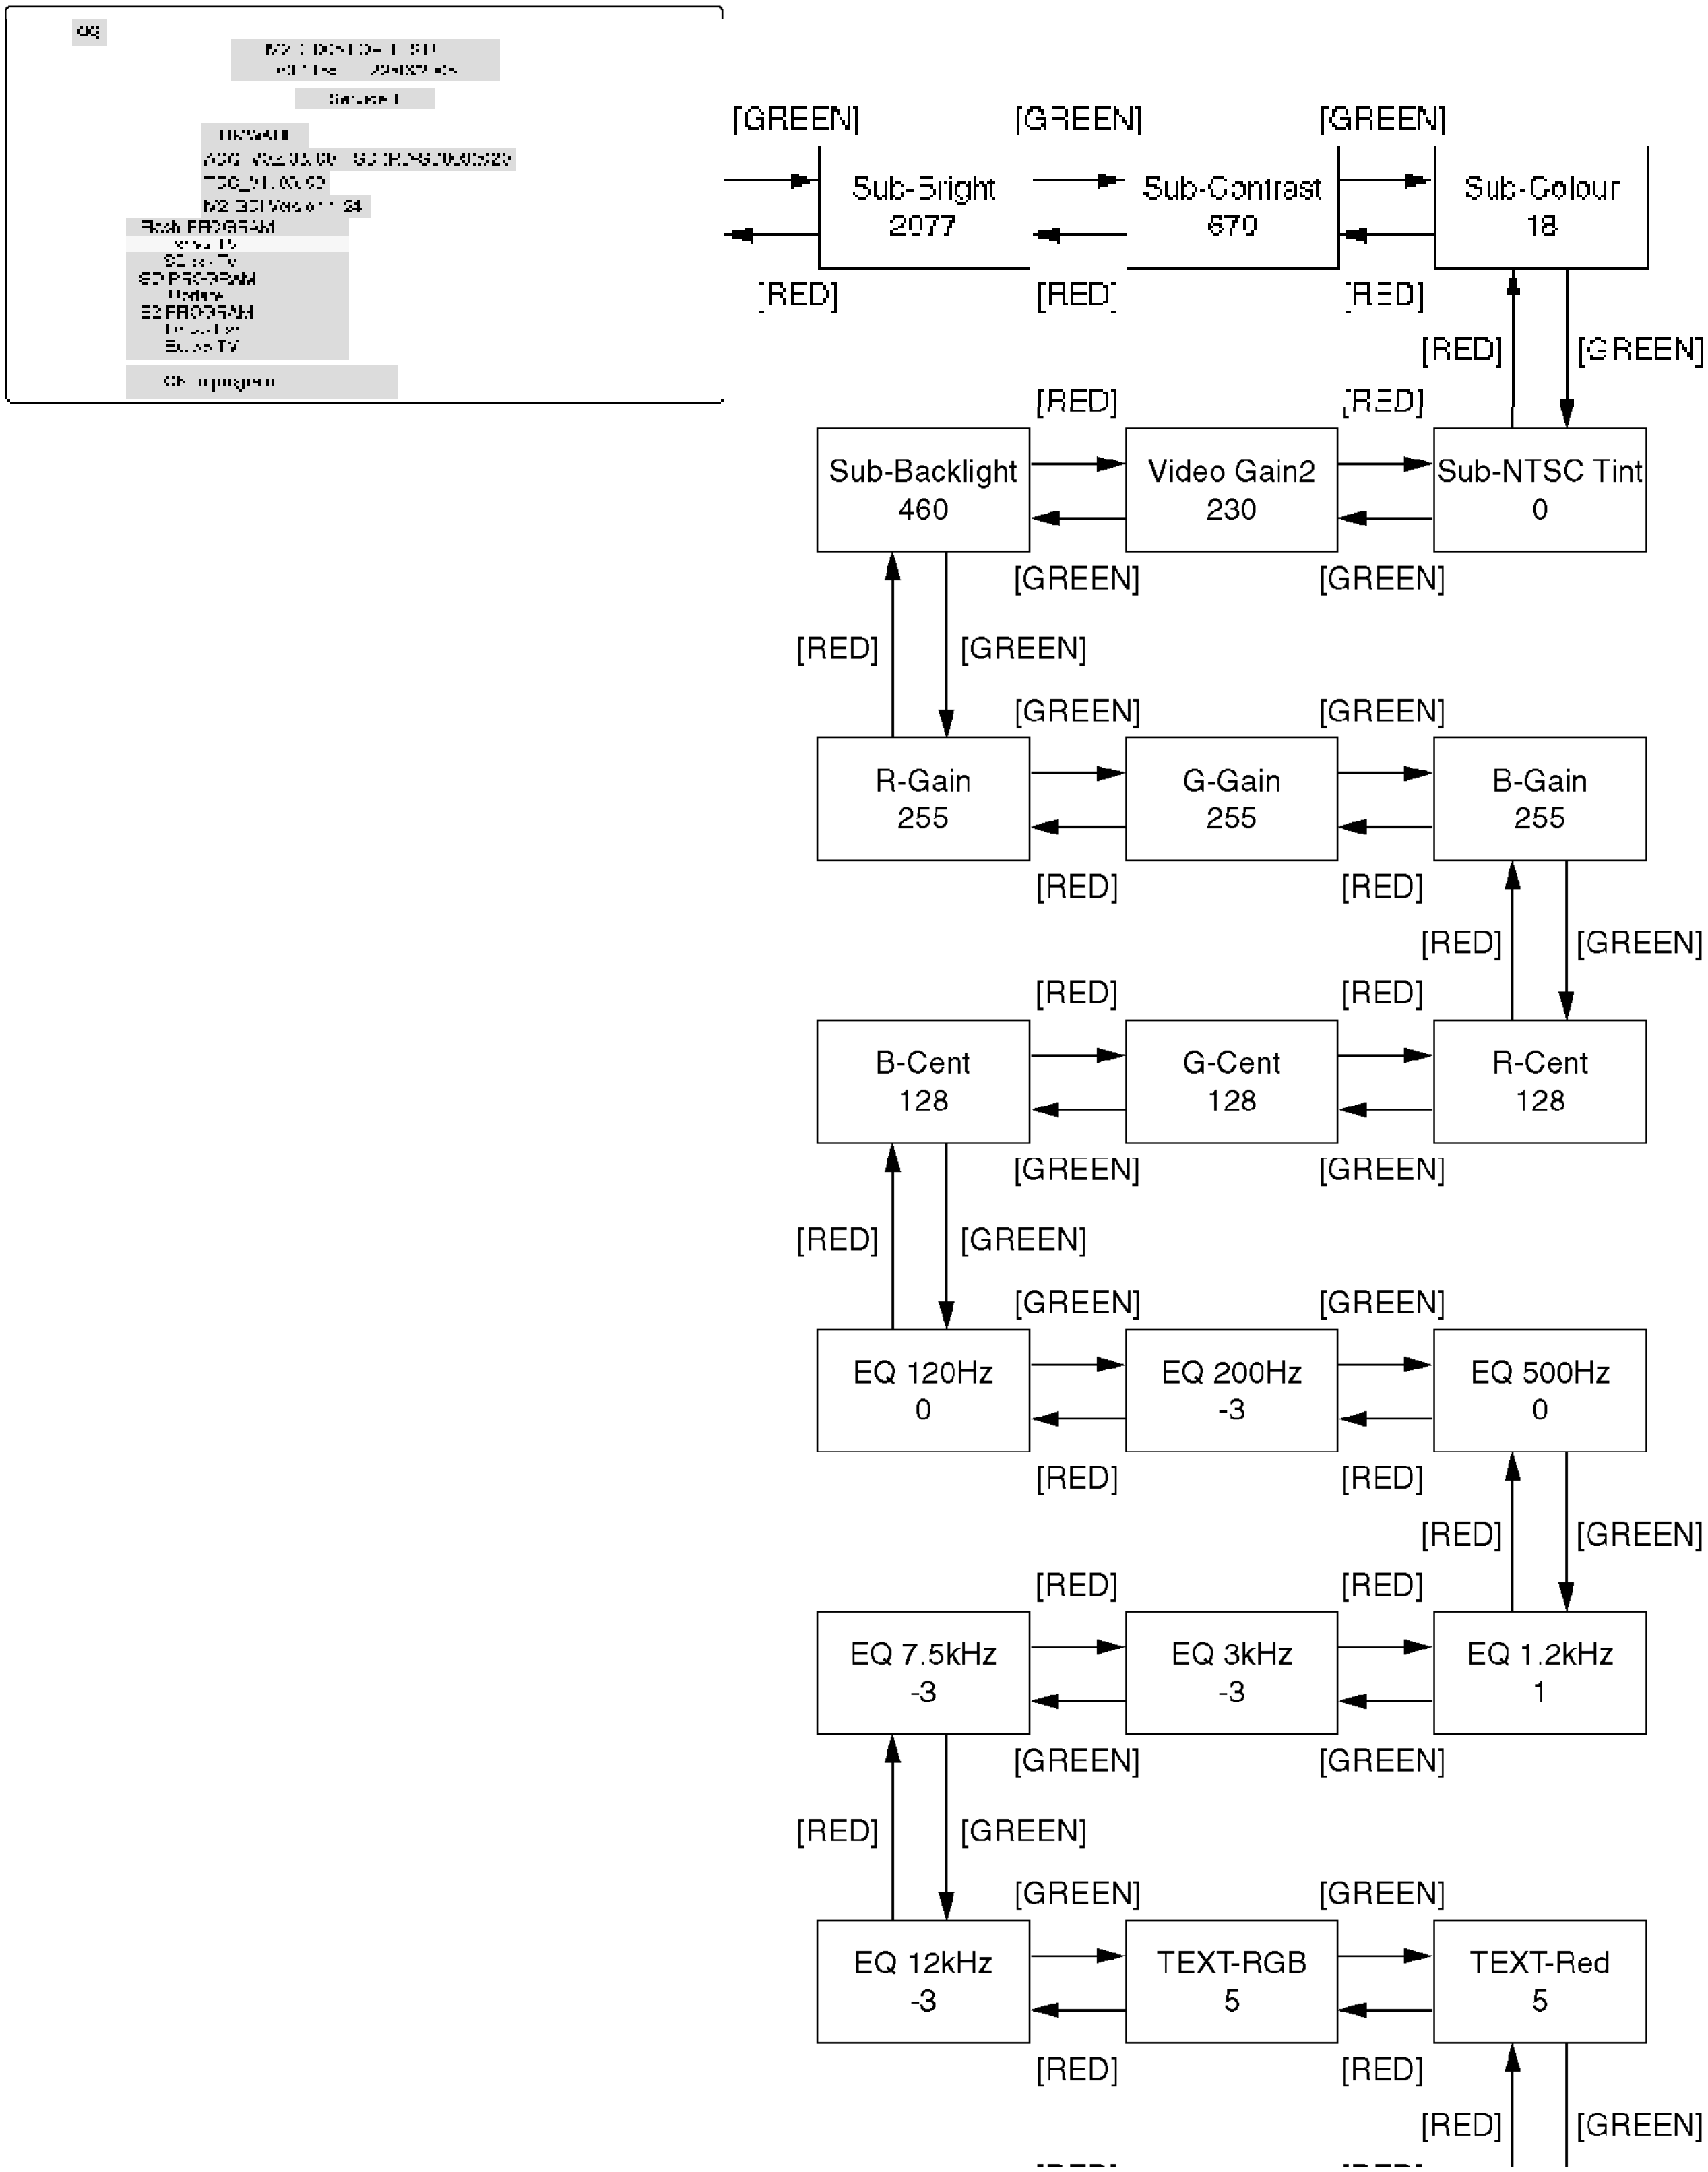
Flash PROGRAM
SD PROGRAM
E2 PROGRAM
[GREEN]
[RED]
Sub-Bright
2077
Sub-Contrast
670
Sub-Colour
18
Sub-Backlight
460
Video Gain2
230
Sub-NTSC Tint
0
R-Gain
255
G-Gain
255
B-Gain
255
B-Cent
128
G-Cent
128
R-Cent
128
EQ 120Hz
0
EQ 200Hz
-3
EQ 500Hz
0
EQ 7.5kHz
-3
EQ 3kHz
-3
EQ 1.2kHz
1
EQ 12kHz
-3
TEXT-RGB
5
TEXT-Red
5

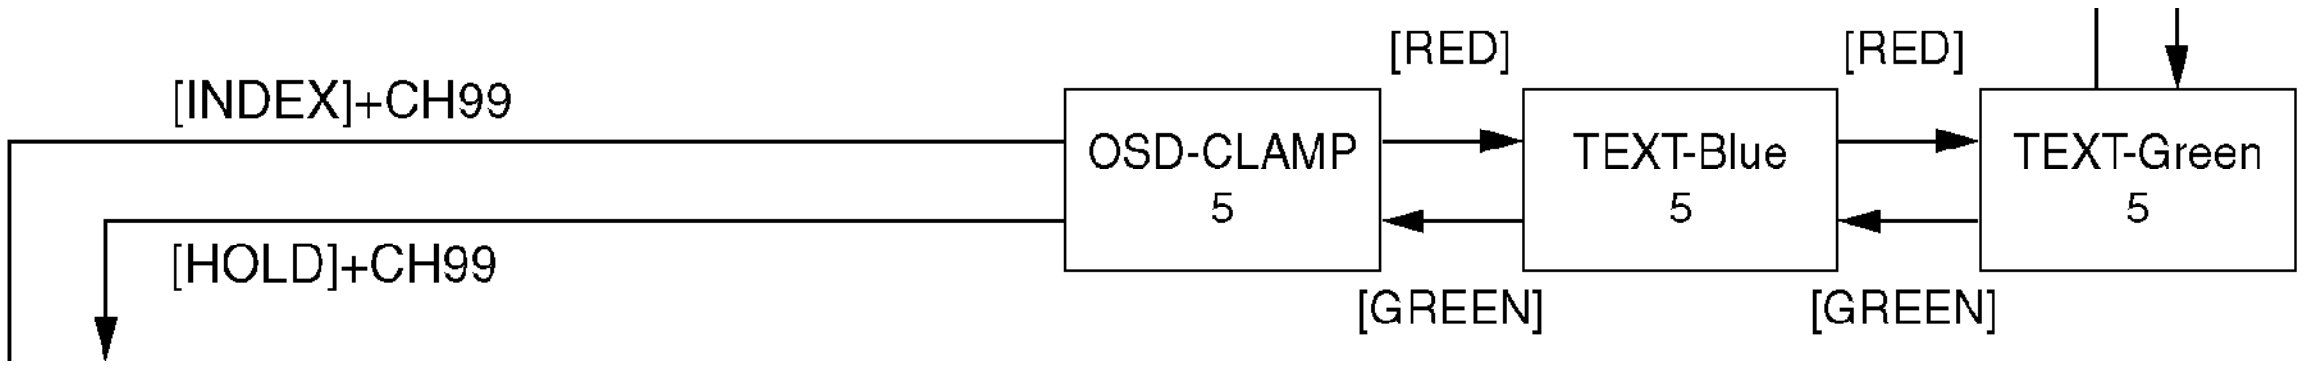
[INDEX]+CH99
[HOLD]+CH99
OSD-CLAMP
5
[RED]
TEXT-Blue
5
[RED]
TEXT-Green
5
[GREEN]
[GREEN]

SERVICE 2

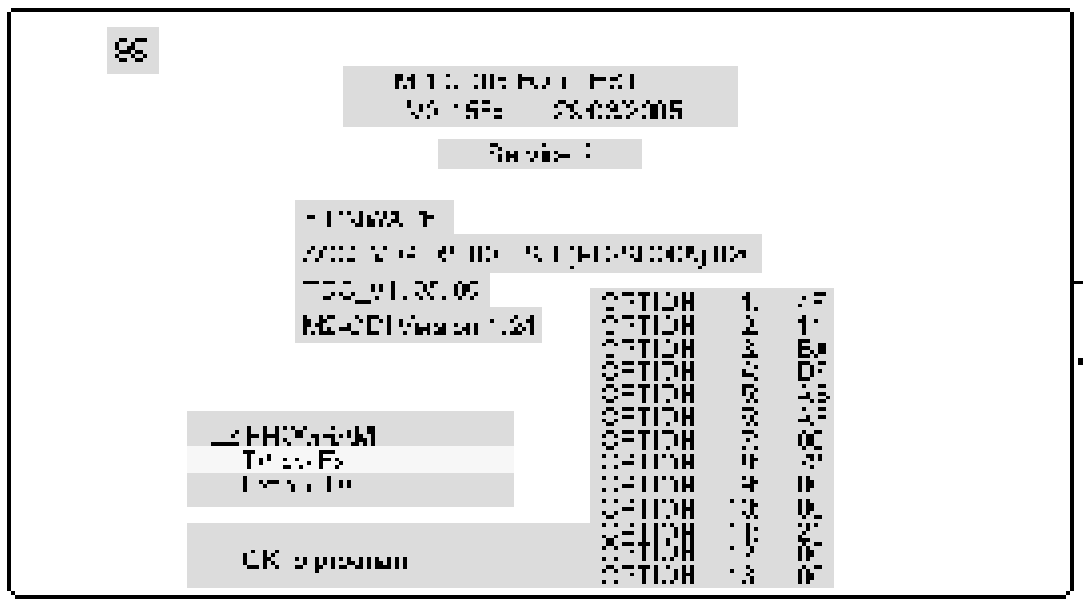

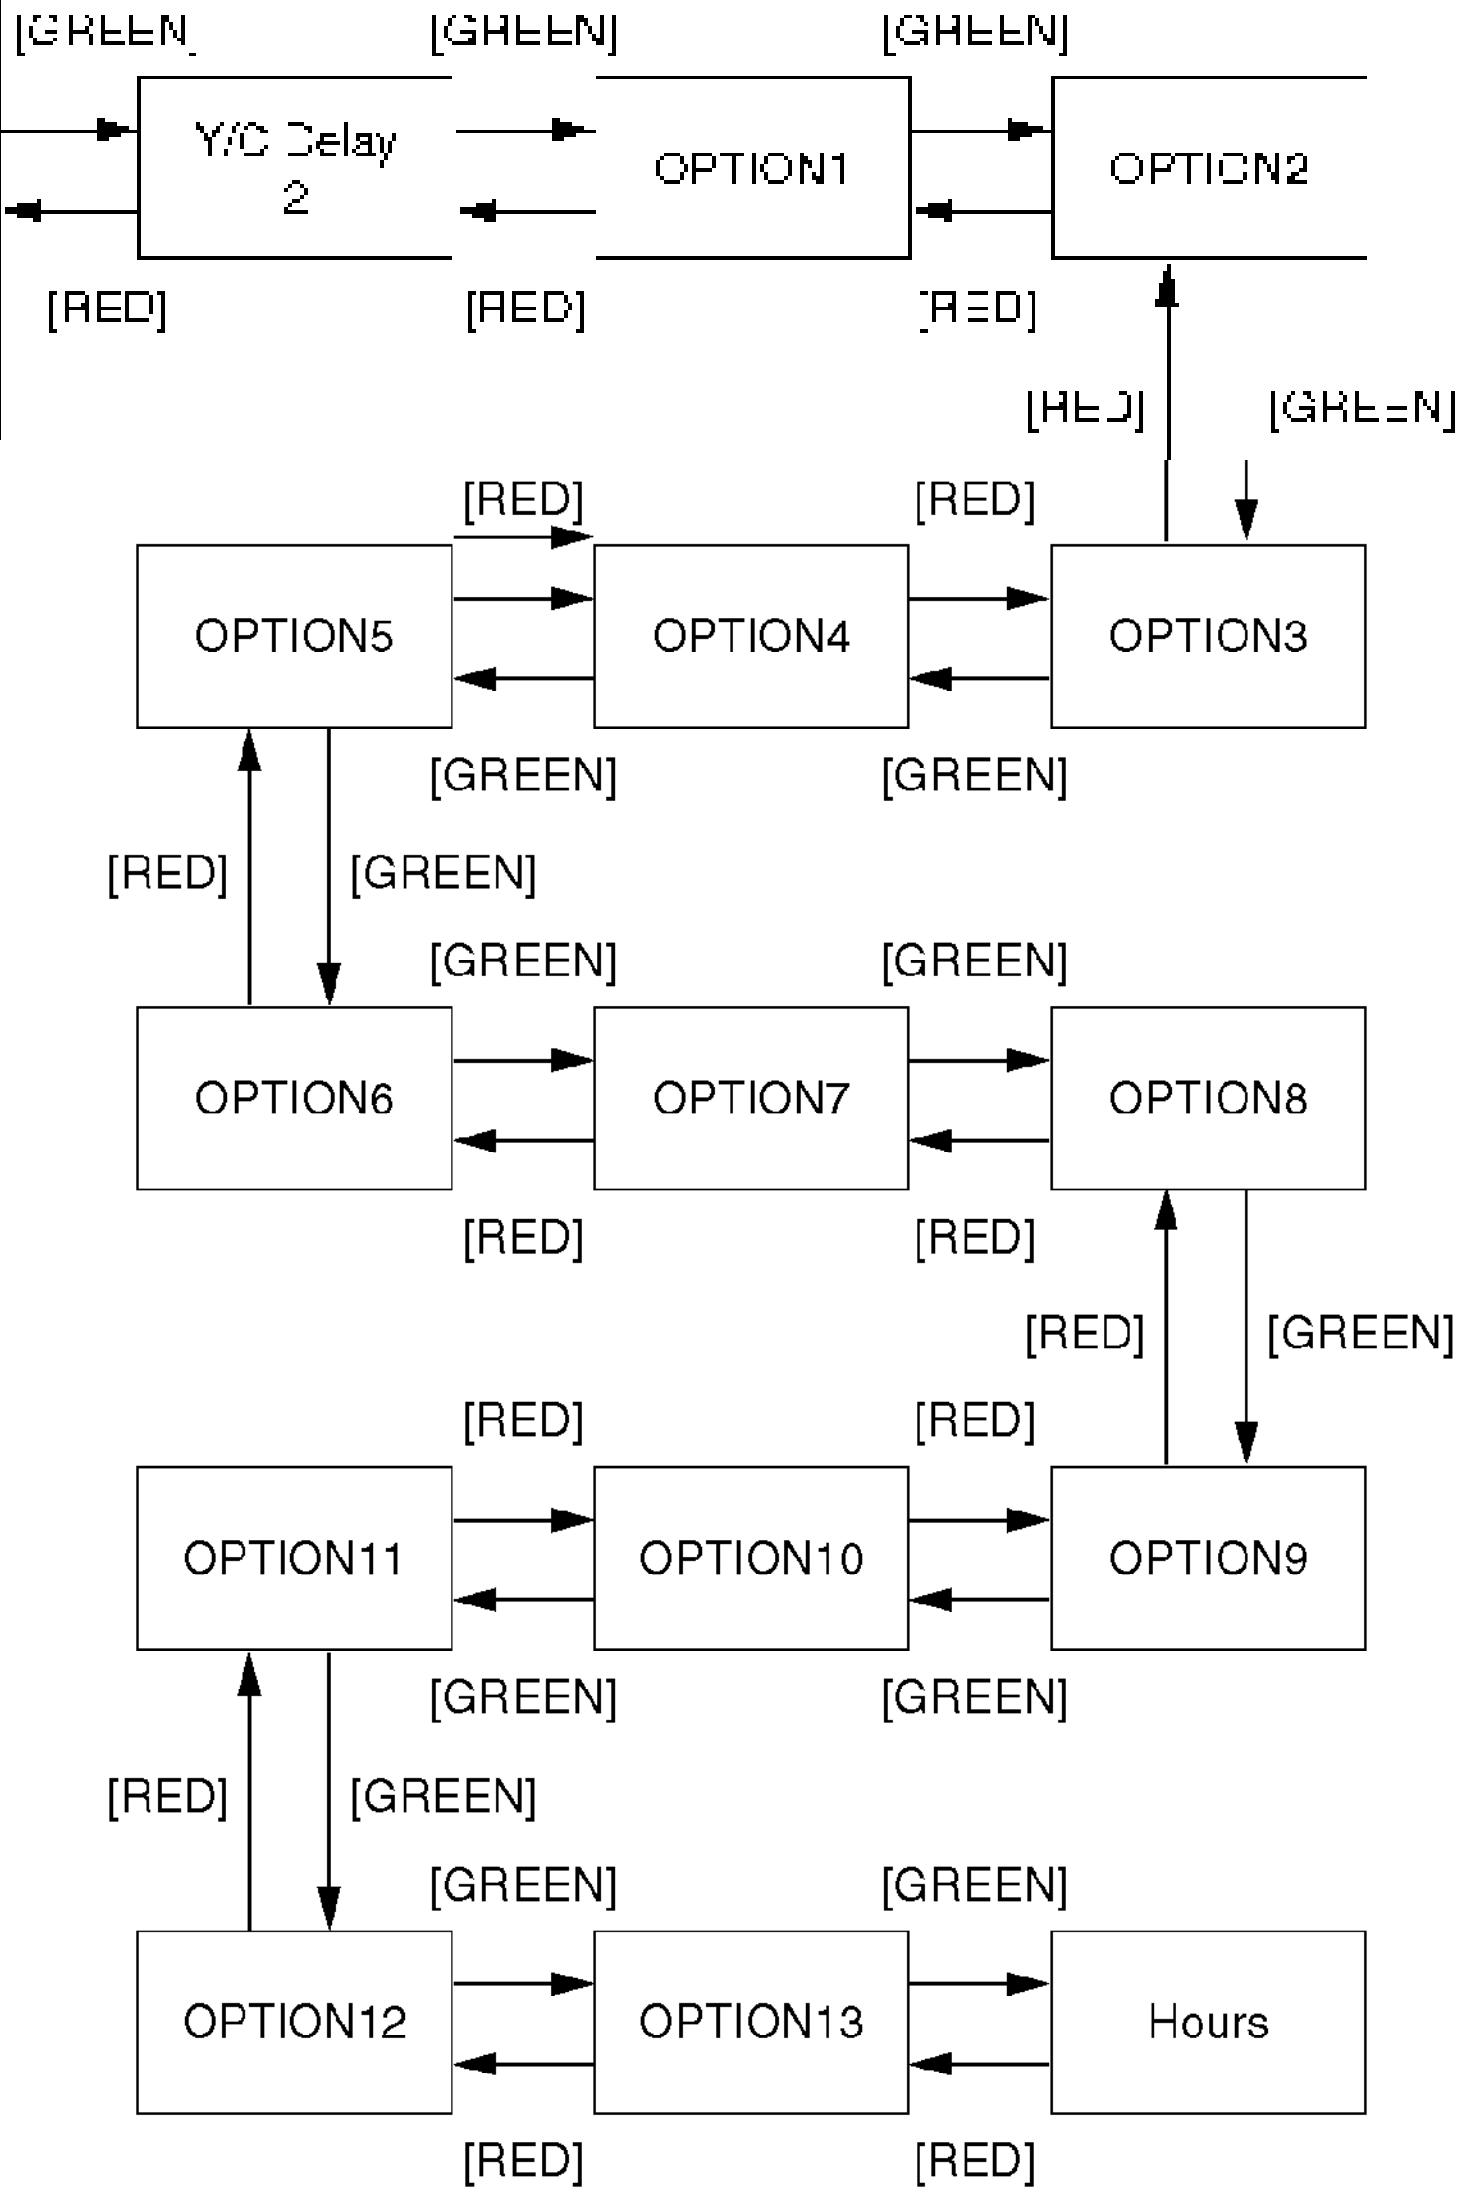
[GREEN]
[GREEN]
[GREEN]
Y/C Delay
2
OPTION1
OPTION2
[RED]
[RED]
[RED]
[RED]
[GREEN]
[RED]
[RED]
OPTION5
OPTION4
OPTION3
[GREEN]
[GREEN]
[RED]
[GREEN]
[GREEN]
[GREEN]
OPTION6
OPTION7
OPTION8
[RED]
[RED]
[RED]
[GREEN]
[RED]
[RED]
OPTION11
OPTION10
OPTION9
[GREEN]
[GREEN]
[RED]
[GREEN]
[GREEN]
[GREEN]
OPTION12
OPTION13
Hours
[RED]
[RED]

Key Command

- Press the **RED/GREEN** button to step up/down through the functions and adjustments.
- Press the **YELLOW/BLUE** button to change the adjustment values or function.
- Press the numerical button 1-7 to change 0/1 of each option item.
- Press the **OK** button after each adjustment has been made to store the required values.

8.3. Option Description

option1			
	b0	Colour system	Auto(1)
	b1		SECAM(1)
	b2		NTSC(1)
	b3		M.NTSC(1)
	b4	A2 select 6.5MHz	5.742MHz(0) 6.742MHz(1)
	b5	SIF	I only(0), BG only(1)
	b6		I/BG/DK/L(2), BG/DK(3)
	b7	free	
option2			
	b0	A2 enable	enable(1)
	b1		not used
	b2		not used
	b3		not used
	b4	NICAM enable	enable(1)
	b5		not used
	b6		not used
	b7		not used
option3			
	b0	SASO enable	SASO enable(1)
	b1	Fine tuning	Enable(1)
	b2	Search speed	Slow(1) Fast(0)
	b3	Tuner	MACO tuner (1), Others (0)
	b4	HYPER	UHF only (0), UHF/VHF (1)
	b5	IF I2C	I2C controlled Tuner IF module (1)
	b6	NICAM C4 bit	enable(1)
	b7	Blue Back	BLUE BACK on/off selection in menu(0)
option4			
	b0	Aspect AUTO	enable(1)
	b1	S1/S2 enable	enable(1)
	b2	ID-1	enable(1)
	b3	User aspect Just	enable(1)
	b4	User aspect 14:9	enable(1)
	b5	ALBD 14:9	14:9 enable, Zoom3 disable at self wide(1)/ Zoom1, Zoom3 enable at self wide (0)
	b6	TEXT	enable(1)
	b7	TEXT TOP	TOP enable (1)
option5			
	b0	CH Blanking	Blanking enable (1)
	b1	AV Blanking	Blanking enable (1)
	b2	Noise mute	Noise mute enable(0)
	b3	sub picture	without sub-picture(0), with sub-picture(1)
	b4	2tuner	2tuner(1),1tuner(0)
	b5	AV Input	3rotation(1) / 2rotation without front RCA (0)
	b6	Panel (LCD)	Samsung Panel(1)/SHARP Panel(0)
	b7	Large size (LCD)	32(1)/26(0) for LCD
option6			
	b0	SD module	with SD module (1)
	b1	SD module Ext.Rec(PAL)	enable(1)
	b2	SD module Ext.Rec(NTSC)	enable(1)
	b3	SD module Ext.Rec(SECAM)	enable(1)
	b4	IDTV	enable(1)
	b5	HDMI	enable(1)
	b6	Ext. HV input	without HV input(0) / with HV input(1)
	b7	PC	enable(1)
option7		**Area option**	
	b0	Asia	Asia(1),europe(0)
	b1	Australia	not used
	b2	Ireland/India	Ireland(1)

	b2	Ireland/India	Ireland(1)
	b3	UK/Korea	UK(1)
	b4	Lang1	not used
	b5	Lang2	not used
	b6	Lower POS	not used
	b7	Owner ID	not used

option8		**Euro option**	
	b0	ACI all country	ACI enable(1), only Netherlands(0)
	b1	ACI auto MP	ACI auto multi package enable (1)
	b2	ACI offset	ACI offset for VCR prog. enable(1)
	b3	Power up EC-Mode	Power on EC enable (1)
	b4	AVLink	Q-Link off selectable in menu (1)
	b5	Volume correction	TV Volume coorrection enable (1)
	b6	MPX/NICAM display	Display NICAM (0), Display MPX (1)
	b7	Albd Reset Off	enable(1)
option9		**Asia option1**	
	b0	CH Plan	ASIA / M.E. / HK/UK / CHINA(1)
	b1		NZ/INDNES(1)
	b2		AUSTRALIA(1)
	b3		E.EUROPE(1)
	b4		SPECIAL(1)
	b5		AMERICA(1)
	b6		CATV(1)
	b7		JAPAN(1)
option10		**Asia option2**	
	b0	NICAM priority	ASIA/M.E.(1)
	b1		HK/UK(1)
	b2		CHINA(1)
	b3		NZ/INDN(1)
	b4		AUSTRA(1)
	b5		E.EURO(1)
	b6		SPECIAL(1)
	b7	HDMI AVI Aspect	enable(1)
option11		**Additional**	
	b0	Remocon Type	Delux(1) / Leader(0)
	b1	Environment AI (PDP)	enable, with viewing mode auto (1) / disable, without viewing mode auto(0)
	b2	WSS14:9 off	WSS 14:9 off (1)
	b3	IRD Reset Check	ON(1) / OFF(0)
	b4	IRD Polling Check	ON(1) / OFF(0)
	b5	Contrast AI	enable(1)
	b6	Exdac4 Slave address	not used
	b7	PanelMCUNew	not used
option12			
	b0		
	b1		
	b2		
	b3		
	b4		
	b5		
	b6		
	b7	HDMI EC Mode	enable(1)
option13			
	b0		
	b1		
	b2		
	b3		
	b4		
	b5		
	b6		
	b7		

8.4. Option Code Setting

If the memory IC (IC1107) or DG Board is replaced, option code should be re-memorized.
If you use for other model, you should re-memorized the different option code in SERVICE 2 mode.

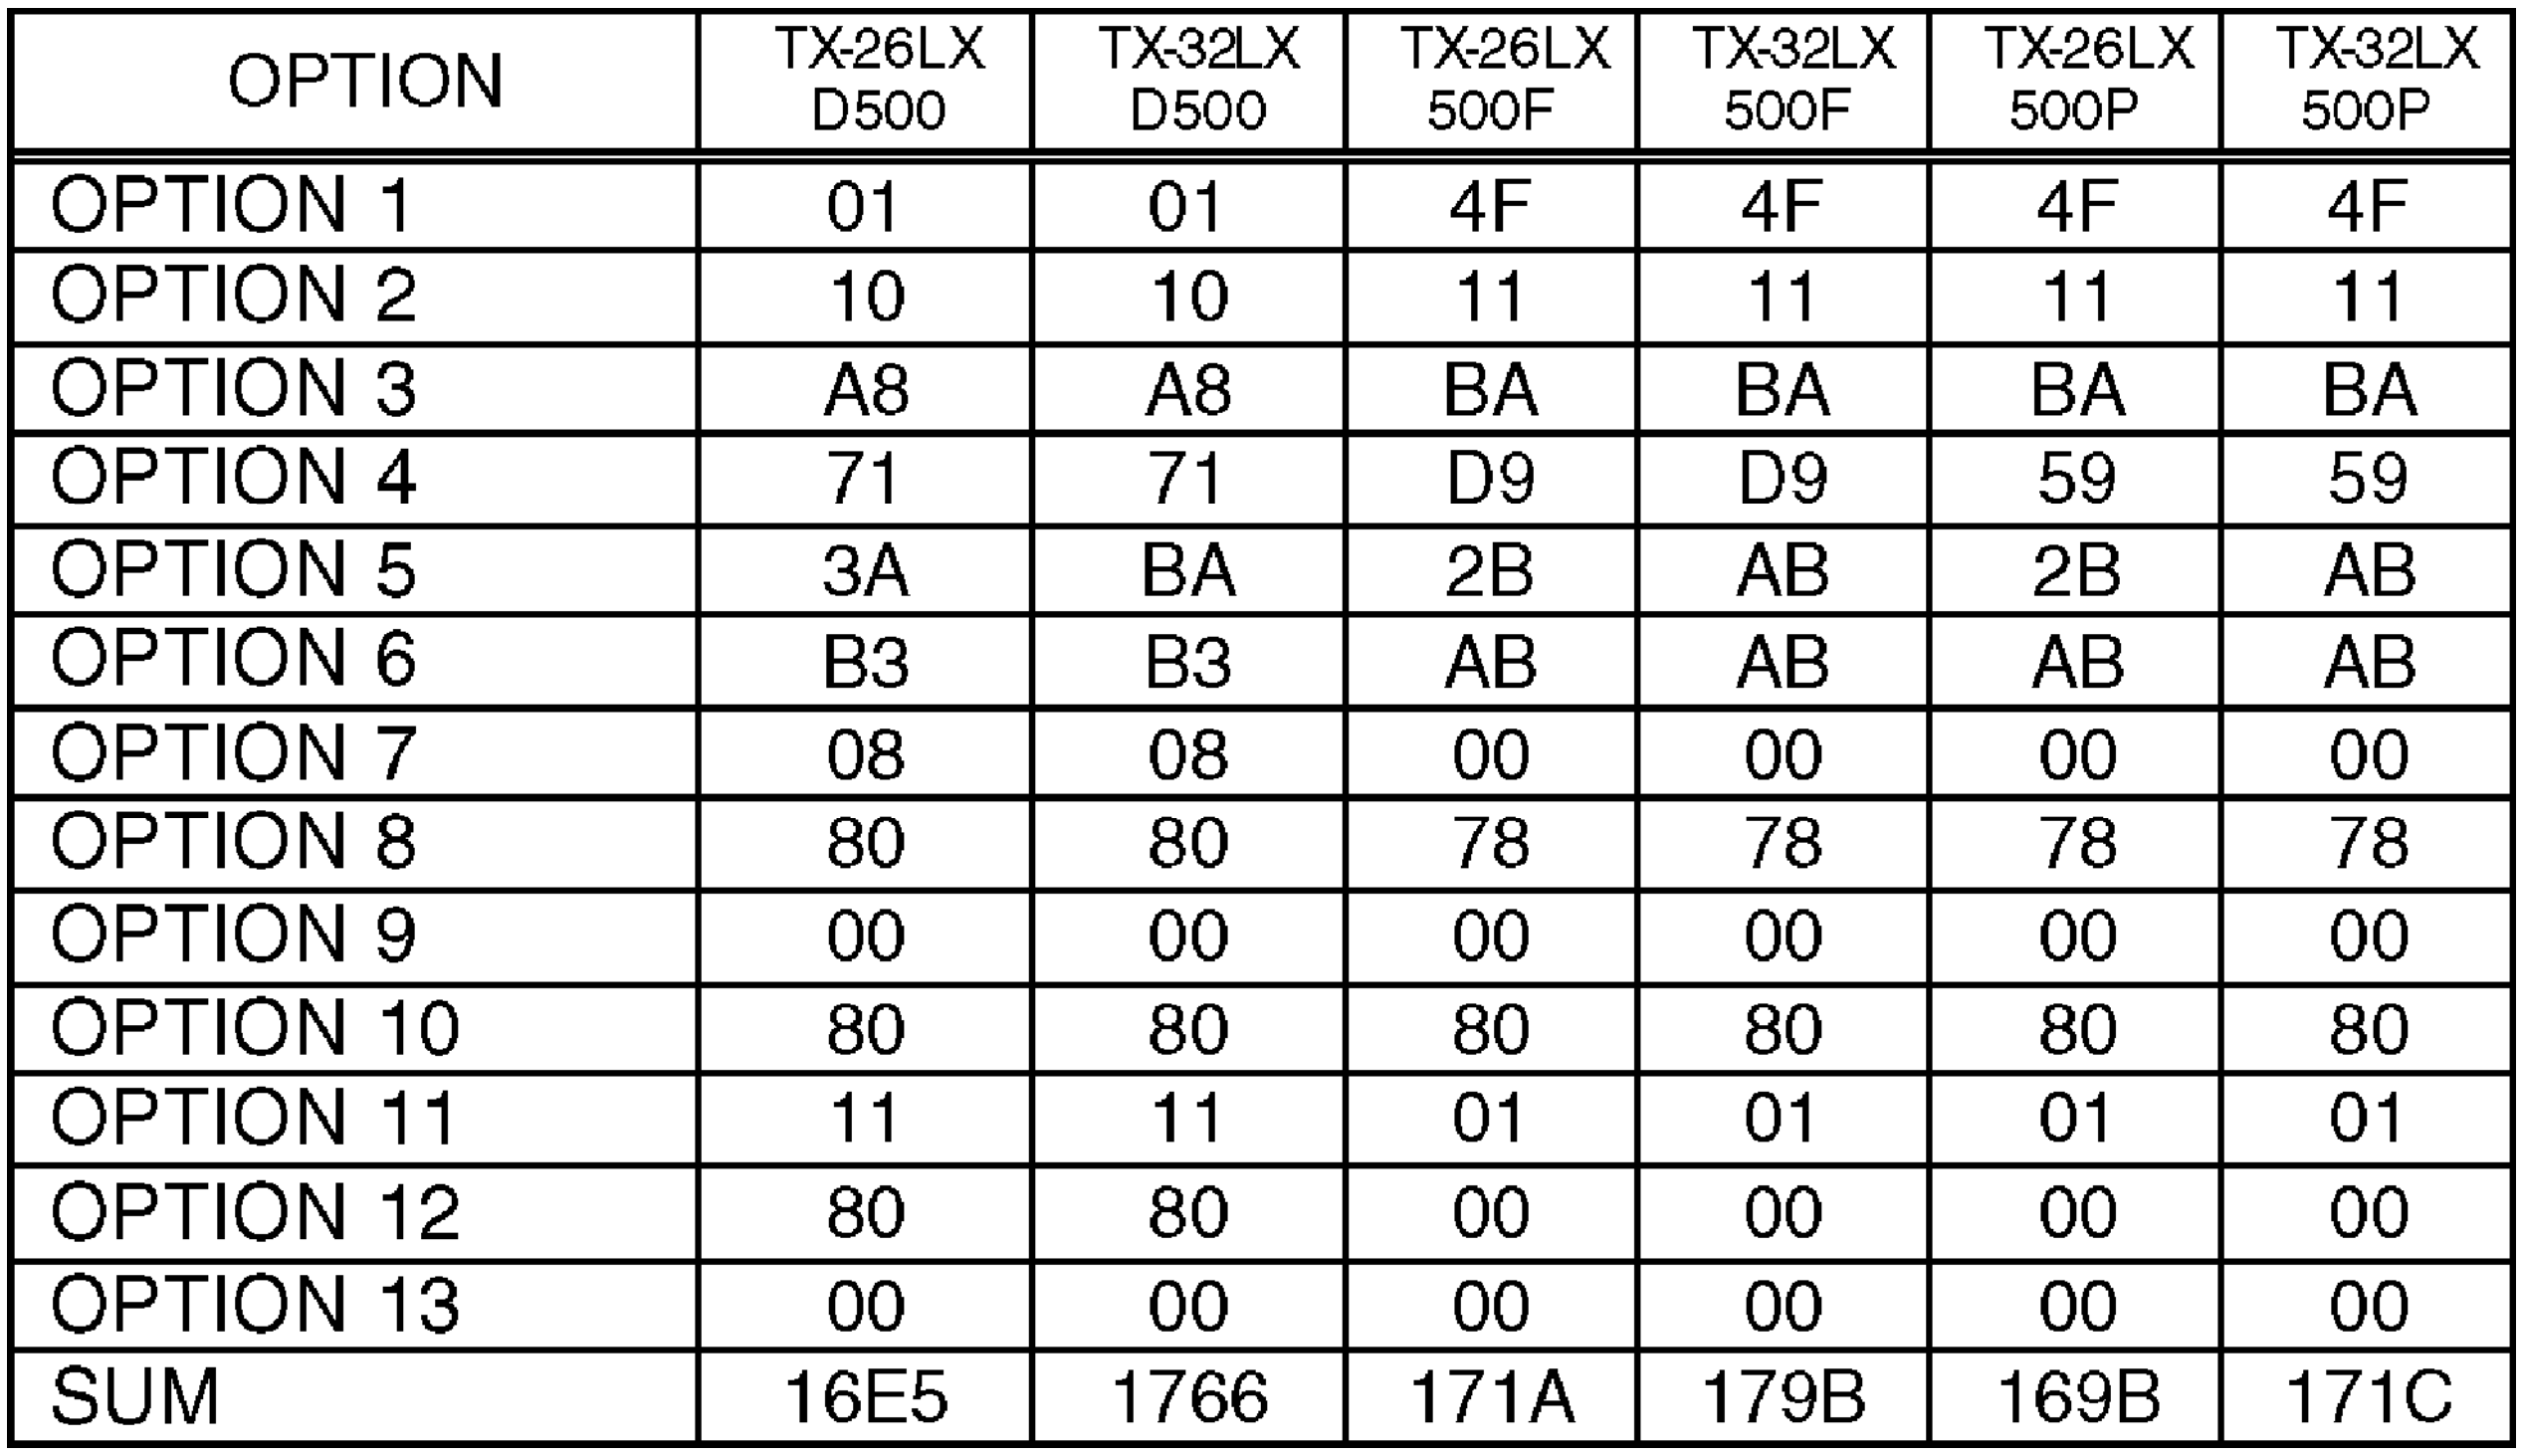

OPTION	TX-26LX D500	TX-32LX D500	TX-26LX 500F	TX-32LX 500F	TX-26LX 500P	TX-32LX 500P
OPTION 1	01	01	4F	4F	4F	4F
OPTION 2	10	10	11	11	11	11
OPTION 3	A8	A8	BA	BA	BA	BA
OPTION 4	71	71	D9	D9	59	59
OPTION 5	3A	BA	2B	AB	2B	AB
OPTION 6	B3	B3	AB	AB	AB	AB
OPTION 7	08	08	00	00	00	00
OPTION 8	80	80	78	78	78	78
OPTION 9	00	00	00	00	00	00
OPTION 10	80	80	80	80	80	80
OPTION 11	11	11	01	01	01	01
OPTION 12	80	80	00	00	00	00
OPTION 13	00	00	00	00	00	00
SUM	16E5	1766	171A	179B	169B	171C

9. Adjustment method

9.1. Sub-Contrast/White Balance Adjustment

Instrument Name	Connect to	Remarks
1. Remote controller 2. LCD WB meter (Minolta CS-1000A equivalent) 3. Communication jig 4. Computer for external control		Correlation can be also taken by CA-210 or equivalent

Procedure	Remarks
-Sub-Contrast adjustment 1. Receive PAL colour bar (100% white) RF signal. 2. Enter “Sub-Contrast” adj. in SERVICE 1 mode. 3. Start adjusting by using Blue key. 4. If the adjustment finished normally, the letter of “Sub-Contrast” will change from red to black. -White Balance adjustment 1. Procedure basically perform checking using the production software and make automatic adjustment using external computer. 2. It adjusts in the mode of Colour balance Normal/ Warm/ Cool as follows. (UK/Euro 500 series model)	Let the panel stand for more than hours at more than 20 °C. Basically perform adjustments in the ambient environment of room temperature more than 20 °C. The aging time is more than 20 m at above room temperature -Applied signal 100% full colour bar 0.7Vp-p white peak 87.5% modulation

		Normal	Warm	Cool
*TOP		Normal	Warm	Cool
	x :	0.285±0.003	0.312±0.003	0.272±0.003
	y :	0.290±0.003	0.307±0.003	0.267±0.003
	Y :	> 350.cd/m^2	> 300.cd/m^2	> 350.cd/m^2
*GRAY		Normal	Warm	Cool
	x :	0.285±0.003	0.312±0.003	0.272±0.003
	y :	0.290±0.003	0.307±0.003	0.267±0.003

* The address of EEPROM to write is as follows.
Add. C80-C91

-OSD/TEXT Clamp adjustment

1. Press F button and YELLOW button, and enter “TEXT RGB” adj. mode.
2. In condition of default setting, check the noise on the screen of test colour pattern.
3. If there is no noise on the test pattern, the adjustment is completed.
4. If not, change the value by YELLOW or CYAN key to find the suitable value and store the value by OK button.

10. Block Diagram

10.1. Block Diagram (1 of 7)

10.2. Block Diagram (2 of 7)

10.3. Block Diagram (3 of 7)

10.4. Block Diagram (4 of 7)

10.5. Block Diagram (5 of 7)

10.6. Block Diagram (6 of 7)

10.7. Block Diagram (7 of 7)

11. Schematic Diagram

11.1. Schematic Diagram Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

Notes:

1. **Resistor**
   Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
2. **Capacitor**
   Unit of capacitance is μF, unless otherwise noted.
3. Coil
   Unit of inductance is μF, unless otherwise noted.
4. Test Point
   ⚲ : Test Point position
5. Earth Symbol
   ⏚ : Chassis Earth (Cold) ⏚ : Line Earth (Hot)
6. Voltage Measurement
   Voltage is measured by a DC voltmeter.
   Conditions of the measurement are the following:
   Power Source .... AC 220-240V, 50/60Hz
   Receiving Signal .... Colour Bar signal (RF)
   All customer's controls .... Maximum positions
7. Number in red circle indicates waveform nember.
   (See waveform pattern table.)
8. When arrow mark (↗) is found, connection is easily found from the direction of arrow
9. Indicates the major signal flow. : Video ➡ Audio ⇨
10. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks:

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.

   The circuit is defined by HOT and COLD indications in the schematic diagram. Take the follwing precautions.

   All circuits, except the Power Circuit, are cold.

   Precautions

   a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.

   b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.

   c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.

      Connect the earth of instruments to the earth connection of the circuit being measured.

   d. Make sure to disconnect the power plug before removing the chassis.

11.2. Interconnection (1 of 2) Schematic Diagram

11.3. Interconnection (2 of 2) Schematic Diagram

11.4. AP-Board (1 of 2) Schematic Diagram

11.5. AP-Board (2 of 2) Schematic Diagram

11.6. H-Board (1 of 4) Schematic DIagram

11.7. H-Board (2 of 4) Schematic Diagram

11.8. H-Board (3 of 4) Schematic Diagram

11.9. H-Board (4 of 4) Schematic Diagram

11.10. XV-Board (1 of 5) Schematic Diagram

11.11. XV-Board (2 of 5) Schematic Diagram

11.12. XV-Board (3 of 5) Schematic Diagram

11.13. XV-Board (4 of 5) Schematic Diagram

11.14. XV-Board (5 of 5) Schematic Diagram

11.15. DV-Board Schematic Diagram

11.16. DG-Board (1 of 7) Schematic Diagram

11.17. DG-Board (2 of 7) Schematic Diagram

11.18. DG-Board (3 of 7) Schematic Diagram

11.19. DG-Board (4 of 7) Schematic Diagram

11.20. DG-Board (5 of 7) Schematic Diagram

11.21. DG-Board (6 of 7) Schematic Diagram

11.22. DG-Board (7 of 7) Schematic Diagram

11.23. G-Board Schematic Diagram

11.24. GP and V-Board Schematic Diagram

11.25. GS-Board Schematic Diagram

12. Printed Circuit Board

12.1. AP-Board

12.2. H-Board

12.3. XV-Board

12.4. DG-Board

12.5. DV, GP, and GS-Board

12.6. G-Board

12.7. K and V-Board

13. Exploded View and Replacement Parts List.

13.1. Set Layout

13.2. Front Chassis Layout

13.3. Cabinet Ass’y Layout

13.4. Packing

13.5. Mechanical Replacement Parts List

Note:

All parts except parts mentioned [PAVCCZ] in the Remarks column are supplied by AVC-SPC.

Parts mentioned [PAVCCZ] are supplied by PAVCCZ.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
1	EAB833AL	SPEAKER BOX (LEFT)	1	
2	EAB833AR	SPEAKER BOX (RIGHT)	1	
3	EAK7E14A2	SQUAWKER SP (L&R)	2	
	J0KF00000018	FILTER	1	
	K1YY68000009	PC CARD CONNECTOR	1	
	K2CQ2DZ00005	AC CORD	1	TX-26/32LX500F/P PAVCCZ ⚠
	K2CT2DZ00008	AC CORD	1	TX-26/32LXD500 PAVCCZ ⚠
4	L5EDD6Q00006	LCD PANEL	1	26INCH ⚠
4	L5EDD8Q00010	LCD PANEL	1	32INCH ⚠
5	N2QAKB000056	REMOTE CONTROL	1	TX-26/32LXD500 PAVCCZ
5	N2QAKB000057	REMOTE CONTROL	1	TX-26/32LX500F/P PAVCCZ
	TBLA0145	STAND ASSY	1	
	TBLA0146	SUPPORTING FRAME ASSY	1	
	TBLG3071	RUBBER FOOT(FRONT/REAR)	2	
	TBLG3073	RUBBER FOOT(L/R)	2	
6	TBMA163	PANASONIC BADGE	1	
7	TBXA46502	POWER BUTTON(FINISH)	1	
8	TEKC029	DANPER	1	
9	TEKX020	SD DOOR	1	
10	TES4G204	SPRING	1	
	TESD074	COIL SPRING	1	
	THTD010N	SCREW	1	
11	TKKC5203-1	PANEL LIGHT	1	TX-26/32LXD500 PAVCCZ
11	TKKC5211-1	PANEL LIGHT	1	TX-26/32LX500F/P PAVCCZ
12	TKKC5214	SD PANEL	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
	TKKL5290	CONNECTOR COVER	1	
13	TKP0E12801	REAR AV BRACLET	1	TX-26/32LXD500 PAVCCZ
13	TKP0E12901	REAR AV BRACLET	1	TX-26/32LX500F/P PAVCCZ
14	TKPA94502	DOOR	1	
26	TKPA94602	BOTTOM PANEL(L)	1	32INCH PAVCCZ
27	TKPA94702	BOTTOM PANEL(R)	1	32INCH PAVCCZ
26	TKPA94802	BOTTOM PANEL(L)	1	42INCH PAVCCZ
27	TKPA94902	BOTTOM PANEL(R)	1	42INCH PAVCCZ
15	TKRA46401	SD ORNAMENT	1	
16	TKXA18501	CABLE COVER	1	
	TMK0E720	SPONGE	4	PAVCCZ
	TMKG579	SPONGE(WOOFER)	2	
	TMM15414-2	CLAMPER	4	
	TMM15481	CLAMPER	8	
	TMM15481	CLAMPER	2	
	TMM7468-1	CLAMPER	1	
	TMM76416-1	CLAMPER	3	26INCH
	TMM76416-1	CLAMPER	4	32INCH
	TMME061	CLAMPER	1	26INCH
	TMME110	CLAMPER	1	
	TMME187	CLAMPER	1	
17	TMW0E105	FRONT BRACKET	1	PAVCCZ
18	TMWA044-1	K PRINT BRACKET	1	PAVCCZ
19	TMWX032	SD BRACKET	1	
20	TPC0E61401	PACKING CASE	1	26INCH PAVCCZ
20	TPC0E61501	PACKING CASE	1	32INCH PAVCCZ
21	TPD0E0070	CUSHION(BOTTOM)	1	26INCH PAVCCZ
22	TPD0E0071	CUSHION(TOP)	1	26INCH PAVCCZ
21	TPD0E0072	CUSHION(BOTTOM)	1	32INCH PAVCCZ
22	TPD0E0073	CUSHION(TOP)	1	32INCH PAVCCZ
23	TPD0E1012	CUSHION(REAR)	1	26INCH PAVCCZ
23	TPD0E1013	CUSHION(REAR)	1	32INCH PAVCCZ
24	TPE0E4006	SET COVER	1	32INCH PAVCCZ
24	TPE0E4008	SET COVER	1	26INCH PAVCCZ
	TQA0E1058	SCHEMATIC	1	TX-26/32LX500F PAVCCZ
25	TQB0E0122A	INSTRUCTION BOOK(GERMAN)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122B	INSTRUCTION BOOK(DUTCH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122C	INSTRUCTION BOOK(ITALIAN)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122D	INSTRUCTION BOOK(FRENCH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122E	INSTRUCTION BOOK(SPANISH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122F	INSTRUCTION BOOK(SWEDISH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122K	INSTRUCTION BOOK(DANISH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0122U	INSTRUCTION BOOK(ENGLISH)	1	TX-26/32LX500F PAVCCZ ⚠
25	TQB0E0123L	INSTRUCTION BOOK(RUSSIAN)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123M	INSTRUCTION BOOK(BULGARIAN)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123N	INSTRUCTION BOOK(ROMANIAN)	1	TX-26/32LX500P PAVCCZ ⚠

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
25	TQB0E0123P	INSTRUCTION BOOK(POLISH)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123Q	INSTRUCTION BOOK(HUNGARIAN)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123R	INSTRUCTION BOOK(CZECH)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123U	INSTRUCTION BOOK(ENGLISH)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0123Y	INSTRUCTION BOOK(UKRAINE)	1	TX-26/32LX500P PAVCCZ ⚠
25	TQB0E0129	INSTRUCTION BOOK(ENGLISH)	1	TX-26/32LXD500 PAVCCZ ⚠
	TSXL431	CABLE (H2-DG2 H3-DG3)	2	
	TSXL432	CABLE (GP1-SD1)	1	
	TSXL433	CABLE (GS3-SD3)	1	
	TTPA0423	PANEL ASSY(L)	1	32INCH PAVCCZ
	TTPA0424	PANEL ASSY(R)	1	32INCH PAVCCZ
	TTPA0425	PANEL ASSY(L)	1	26INCH PAVCCZ
	TTPA0426	PANEL ASSY(R)	1	26INCH PAVCCZ
28	TTUA1161	REAR COVER	1	32INCH ⚠
28	TTUA1162	REAR COVER	1	26INCH ⚠
29	TTYA0717	CABINET ASSY	1	TX-32LXD500 PAVCCZ ⚠
29	TTYA0718	CABINET ASSY	1	TX-32LX500F/P PAVCCZ ⚠
29	TTYA0720	CABINET ASSY	1	TX-26LXD500 PAVCCZ ⚠
29	TTYA0721	CABINET ASSY	1	TX-26LX500F/P PAVCCZ ⚠
30	TXFBL010Q49	PEDESTAL ASSY	1	
	TXJ/G10LLM	SPEAKER LEAD G10-SP(LEFT)	1	32INCH
	TXJ/G10LPM	SPEAKER LEAD G10-SP(LEFT)	1	26INCH
	TXJ/G11LLM	SPEAKER LEAD G11-SP(RIGHT)	1	32INCH
	TXJ/G11LPM	SPEAKER LEAD G11-SP(RIGHT)	1	26INCH
	TXJTNR0LSM	RF CABLE	1	TX-32LXD500 PAVCCZ
	XSN2+W4FJ	SCREW(PC CARD SOCKET)	2	
	XSS6+16FJK	SCREW(STAND SUPPORT METAL)	4	
	XTB4+15JFJ	SCREW	23	32INCH
	XTB4+15JFJ	SCREW	19	26INCH
	XTB4+18JFJK	SCREWiBACK COVER)	11	
	XTV3+10JFJK	SCREW(HDMI)	3	
	XTV3+12GFJ	SCREW	8	
	XTV3+8JFJ	SCREW	4	
	XTW3+12TFJ	SCREW	10	
	XTW3+8TFJ	SCREW	36	
	XTWT4+Z15DFJ	SCREW(SP BOXj	6	
	XYN2+F5FJ	SCREW(TOP`BOT)	1	
	XYN3+F6FJ	SCREW(LCD PANEL FIX METAL)	3	
	XYN3+J8FJ	SCREW	3	
	XYN4+F10FJ	SCREW(LCD FIXED METAL)	4	
	XYN4+F20FJK	SCREW(SETj	4	
	XZBT6530	POLY BAG	1	

14. Electrical Replacement Parts List

14.1. Electrical Replacement Parts List Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.

RTL (Retention Time Limited)

Note: The marking (RTL) indicates that the Retention Time is Limited for this item. After the discontinuation of this assembly in production, the item will continue to be available for a specific period of time. The retention period of availability is dependant on the type of assembly, and in accordance with the laws governing part and product retention. After the end of this period, the assembly will no longer be available.

Abbreviation of part name and description

1. Resistor

Example:

ERD25TJ104 C 100KOHM, J, 1/4W

Type Allowance

Type	Allowance
C : Carbon	F : ±1%
F : Fuse	G : ±2%
M : Metal Oxide	J : ±5%
Metal FIlm	K : ±10%
S : Solid	M : ±20%
W : Wire Wound	

2. Capacitor

Example:

ECKF1H103ZF C 0.01UF, Z, 50V

Type Allowance

Type	Allowance
C : Ceramic	C : ±0.25pF
E : Electrolytic	D : ±0.5pF
P : Polyester	F : ±1pF
Polyprop	G : ±3pF
lene	J : ±5pF
T : Tantalum	K : ±10pF
	L : ±15pF
	M : ±20pF
	P : +100%, -0%
	Z : +80%, -20%

14.2. Electrical Replacement Parts List (TX-32/26LXD500)

Note:
All parts except parts mentioned [PAVCCZ] in the Remarks column are supplied by AVC-SPC.
Parts mentioned [PAVCCZ] are supplied by PAVCCZ.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
AP1	K1KA23A00005	23P CONNECTOR	1	
AP2	K1KA04A00576	4P CONNECTOR	1	
AP3	K1KA11A00124	11P CONNECTOR	1	
AP4,P5	K1KA23A00003	23P CONNECTOR	2	
AP6	K1KA02A00626	2P CONNECTOR	1	
AP10	K1KA02A00613	2P CONNECTOR	1	
C1001	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1004	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1005	EEEHB1C220UR	C 22PF, J, 16V	1	
C1006	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1007	EEEHB1C220UR	C 22PF, J, 16V	1	
C1008	EEEHB0J101P	C 100PF, J, 6.3V	1	
C1009	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C1101	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1102	EEEHB1C470P	C 47PF, J, 16V	1	
C1103	EEEHB0G101R	C 100PF, J, 4V	1	
C1104,05	ECJ1XB0J105K	C 1UF, K, 16V	2	
C1106,07	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1109	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1110	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1112	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1113	EEFCD0G560R	56UF,	1	
C1115	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1116	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1117	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1119	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1120	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1121	EEEHB1C470P	C 47PF, J, 16V	1	
C1122	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1124	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1125	EEVHB1C100R	E 10UF, 16V	1	
C1126,27	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1128	EEVHB0G101R	E 100UF 4V	1	
C1129	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1130	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1131	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1132,33	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1134	EEVHB0G101R	E 100UF 4V	1	
C1135	EEEHB0G221P	C 220PF, J, 4V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1136	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1138-41	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C1142	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1144	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1145	ECJ1XC1H180J	C 18PF, J, 50V	1	
C1146	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1147	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1148	ECJ1VB1H221K	C 220UF, K, 50V	1	
C1149	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1150	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1152	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1153	ECJ1VB1H221K	C 220UF, K, 50V	1	
C1154	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1156	EEVHB1C100R	E 10UF, 16V	1	
C1157,58	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1160	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1161,62	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1164	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1165-67	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C1168	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1169	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1170-73	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C1175,76	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1177	EEVHB0G101R	E 100UF 4V	1	
C1178	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1179	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1180,81	ECJ1XC1H271J	C 270PF, J, 50V	2	
C1182	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1183	ECJ1XC1H271J	C 270PF, J, 50V	1	
C1186	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1187,88	ECJ1XC1H271J	C 270PF, J, 50V	2	
C1189-91	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C1199-03	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C1204,05	ECJ1XC1H102J	C 1000PF, J, 50V	2	
C1209	EEEHB0G221P	C 220PF, J, 4V	1	
C2005,06	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2019-32	ECJ1XC1H561J	C 560PF, J, 50V	14	
C2051,52	ECJ3XB1C105K	C 1UF, K, 16V	2	
C2053	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2054	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2055	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2056	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2057-60	ECJ1VF1C105Z	C 1UF, Z, 16V	4	
C2063	EEEHB1A471UP	C 470PF, J, 10V	1	
C2064	EEEHB1C220UR	C 22PF, J, 16V	1	
C2065	EEEHB1C101UP	C 100PF, J, 16V	1	
C2105	EEEHB1C101UP	C 100PF, J, 16V	1	
C2106	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2112,13	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C2115,16	ECJ1XC1H470J	C 47PF, J, 50V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2117	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2118,19	EEEHP1E220P	C 22PF	2	
C2123,24	ECJ2FB1A225K	C 2.2UF, K, 10V	2	
C2125,26	ECJ1XB1H102K	C 1000UF, Z, 50V	2	
C2127	EEEHB1C101UP	C 100PF, J, 16V	1	
C2128	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2129,30	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C2131	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2132	EEEHB1E470P	C 47PF, J, 25V	1	
C2133,34	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2135,36	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C2137-43	ECJ1VF1H104Z	C 0.1UF, Z, 50V	7	
C2144,45	ECJ3XB1C105K	C 1UF, K, 16V	2	
C2146	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2147	EEEHB1C101UP	C 100PF, J, 16V	1	
C2148-50	ECJ1VB1C105K	C 0.01UF, K, 16V	3	
C2151	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2152	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2153	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2154	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2155	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2156	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2157	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2158	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2159,60	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C2161	EEEHB1C101UP	C 100PF, J, 16V	1	
C2162-69	ECJ1VB1C105K	C 0.01UF, K, 16V	8	
C2172	ECJ1VB1H332K	C 3300PF, K, 50V	1	
C2173	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2174	ECJ1VB1H332K	C 3300PF, K, 50V	1	
C2175-77	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C2178,79	EEEHB1C100R	C 10PF, J, 16V	2	
C2181	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2183	EEEHB1H3R3R	C 3.3PF, J, 50V	1	
C2184,85	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C2186	EEEHB1C101UP	C 100PF, J, 16V	1	
C2189,90	ECJ1VF1C105Z	C 1UF, Z, 16V	2	
C2191	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2192	EEEHB1C100R	C 10PF, J, 16V	1	
C2195	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2196	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2198	EEEHB1C101UP	C 100PF, J, 16V	1	
C2199	ECJ1VC1H560J	C 56PF, J, 50V	1	
C2200	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2201,02	ECJ1XC1H030C	C 3PF, C, 50V	2	
C2203	ECJ1VC1H100C	C 10PF, C, 50V	1	
C2204	ECJ1XC1H220J	C 22PF, J, 50V	1	
C2206	EEEHB1C101UP	C 100PF, J, 16V	1	
C2207	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2211	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2214	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C2215	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2216	ECJ3YB1A106M	C 10UF, M,6.3V	1	
C2217	EEEHB1E470P	C 47PF, J, 25V	1	
C2218-23	ECJ3XB1C105K	C 1UF, K, 16V	6	
C2301,02	ECJ1VB1H223K	C 0.22UF, K, 50V	2	
C2315	ECJ1VB1H123K	C 0.012UF, K, 50V	1	
C2317,18	ECJ1VB1H123K	C 0.012UF, K, 50V	2	
C2320	ECJ1VB1H123K	C 0.012UF, K, 50V	1	
C2326,27	ECJ1VB1C473K	C 0.047UF, K, 16V	2	
C2328,29	F2A1C101A121	E 100UF, 16V	2	
C2331,32	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C2335	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2347	EEEHB1C220UR	C 22PF, J, 16V	1	
C2348	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2349	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C2350	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2351	EEEHB1H100P	C 10PF, J, 50V	1	
C2352	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2353	EEEHB1C101UP	C 100PF, J, 16V	1	
C2356	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2357	EEEHB1C101UP	C 100PF, J, 16V	1	
C2366,67	ECJ1XC1H330J	C 33PF, J, 50V	2	
C2520	ECA1VM471	E 470UF, 35V	1	
C2521	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2522-24	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2525	ECA1EHG470	E 47UF, 25V	1	
C2526	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2527	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2528	ECA1EHG102	E 1000UF, 25V	1	
C2529	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2530	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2531	ECA1HM2R2	E 2.2UF, 50V	1	
C2534	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2535,36	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2537	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2538-40	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2541	ECA1EHG470	E 47UF, 25V	1	
C2542	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2543	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2544	ECA1EHG102	E 1000UF, 25V	1	
C2545	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2546	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2547	ECA1HM2R2	E 2.2UF, 50V	1	
C2550	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2551,52	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2553	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2554-56	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2557	ECA1EHG470	E 47UF, 25V	1	
C2558	ECJ2FB1E224K	C 22UF, K, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2559	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2560	ECA1EHG102	E 1000UF, 25V	1	
C2561	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2562	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2563	ECA1HM2R2	E 2.2UF, 50V	1	
C2566	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2567,68	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2569	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2570-72	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2573	ECA1EHG470	E 47UF, 25V	1	
C2574	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2575	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2576	ECA1EHG102	E 1000UF, 25V	1	
C2577	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2578	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2579	ECA1HM2R2	E 2.2UF, 50V	1	
C2582	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2583,84	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2585	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2586-89	ECJ2XB1H153K	C 0.015UF, K, 50V	4	
C2590-93	ECJ1XB1H102K	C 1000UF, Z, 50V	4	
C2611-14	ECJ2FB1E475M	C 4.7UF, K, 25V	4	
C3001-03	ECJ1XB1H102K	C 1000UF, Z, 50V	3	
C3005-07	ECJ1VF1H104Z	C 0.1UF, Z, 50V	3	
C3014	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3015	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C3016,17	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3018	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3019-28	ECJ1VB1A105K	C 0.01UF, Z, 50V	10	
C3029	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3031-33	ECJ1VB1A105K	C 0.01UF, Z, 50V	3	
C3035,36	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3038	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3039	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3040	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3041	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3042,43	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3044	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3045	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C3046	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3047	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C3048	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3049-56	ECJ1VB1A105K	C 0.01UF, Z, 50V	8	
C3057	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3058	EEEHB1C471UP	C 470PF, J, 16V	1	
C3059	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C3060,61	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C3062,63	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3064	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3066	ECEA1CN470U	E 47UF, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C3067	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3068	ECEA1CN470U	E 47UF, 16V	1	
C3069	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3070	ECEA1CN470U	E 47UF, 16V	1	
C3071	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3074	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3201,02	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C3206	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C3207	ECA1AHG102	E 1000UF, 10V	1	
C3209	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3210	F2A1H100A120	E 10UF, 50V	1	
C3212	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3214	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3216	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3227	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3229-31	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C3233	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3235	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3236	F2A1H100A120	E 10UF, 50V	1	
C3237,38	ECJ1XC1H330J	C 33PF, J, 50V	2	
C3240	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3241-44	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C3245	EEEHB1C220R	C 22PF, J, 16V	1	
C3246,47	EEEHB1A330R	C 33PF, J, 10V	2	
C3248	EEEHB0J220R	C 22PF, J, 6.3V	1	
C3249	EEEHB1H100P	C 10PF, J, 50V	1	
C3305	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3307	EEEHB1C101UP	C 100PF, J, 16V	1	
C3309	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3848,49	ECJ2XC1H561J	C 560PF, J, 50V	2	
C3850,51	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C4001	EEVHB0G101R	E 100UF 4V	1	
C4002	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4003	EEFCD0G560R	56UF,	1	
C4004,05	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4006	EEEHB1C100R	C 10PF, J, 16V	1	
C4007	EEVHP1C100R	E 10UF, 16V	1	
C4008	ECJ2FB1C684K	C 68UF, Z, 16V	1	
C4009	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C4012	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4013	EEVHB0J470R	E 47UF, 6.3V	1	
C4014,15	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4016	EEVHB1E330	E 33UF, 25V	1	
C4017,18	ECJ3XB0J106M	C 10UF, M,6.3V	2	
C4019	EEVHB1C100R	E 10UF, 16V	1	
C4020-22	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4024	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4025	EEVHB0J470R	E 47UF, 6.3V	1	
C4026	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4027-29	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4030	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4031-36	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4038	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4039	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4040	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4041	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4042,43	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4044	ECJ1VB1C823K	C 0.082UF, K, 16V	1	
C4045	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4047,48	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4049	EEVHB0J470R	E 47UF, 6.3V	1	
C4050	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4051	EEVHB0G101R	E 100UF 4V	1	
C4052	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4053-55	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4056-58	ECJ3XB0J106M	C 10UF, M,6.3V	3	
C4059,60	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4061	EEVHB1E330	E 33UF, 25V	1	
C4063	ECJ1XC1H050C	C 5PF, C, 50V	1	
C4075,76	ECJ1XC1H220J	C 22PF, J, 50V	2	
C4079	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4084	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4086	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4091,92	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4093-95	ECJ1VB1C105K	C 0.01UF, K, 16V	3	
C4097	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4099	EEVHB0J470R	E 47UF, 6.3V	1	
C4100	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4101-04	ECJ1VB1H103K	C 0.001UF, K, 50V	4	
C4105	EEVHB0G101R	E 100UF 4V	1	
C4106	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4107	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4108	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4109	EEVHB0J470R	E 47UF, 6.3V	1	
C4110	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4112,13	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4114	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4115	ECJ3YB0J335K	C 33UF, J, 25V	1	
C4116	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4118	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4119-22	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C4124,25	ECJ1XC1H102J	C 1000PF, J, 50V	2	
C4127,28	ECJ1VB0J225K	C 2.2UF, K, 6.3V	2	
C4129	EEEHB0G221P	C 220PF, J, 4V	1	
C4130,31	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4132	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4135	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4137	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4138-40	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4141,42	ECJ1XC1H102J	C 1000PF, J, 50V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4143-52	ECJ1XB1C104K	C 0.1UF, Z, 16V	10	
C4153	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4154	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4155	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4156	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4157	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4158	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4159	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4160	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4163	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4164	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4165	ECJ1XC1H180J	C 18PF, J, 50V	1	
C4166,67	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4168	ECJ1XC1H150J	C 15PF, J, 50V	1	
C4169	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4170	ECJ1VB1H562K	C 5600PF, K, 50V	1	
C4171	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4172	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4173	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4175	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4176,77	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4178,79	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4183,84	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4186-88	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4189	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4190,91	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4192,93	ECJ1VB0J225K	C 2.2UF, K, 6.3V	2	
C4194	ECJ3YB0J335K	C 33UF, J, 25V	1	
C4195	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4198	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4199,00	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4201	EEEHB1C470P	C 47PF, J, 16V	1	
C4202	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4203	ECJ1XC1H181J	C 180PF, J, 50V	1	
C4205	ECJ1XC1H181J	C 180PF, J, 50V	1	
C4206,07	ECJ1XC1H330J	C 33PF, J, 50V	2	
C4209	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4210	EEEHB1C470P	C 47PF, J, 16V	1	
C4219	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C4220	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4221,22	EEEHP1C100R	C 10PF, J, 16V	2	
C4223	ECJ1VB1H272K	C 2700PF, K, 50V	1	
C4224	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4225	EEEHB1C100R	C 10PF, J, 16V	1	
C4226	F1J0J1060004	C 0.010UF, K, 16V	1	
C4228	F1J0J1060004	C 0.010UF, K, 16V	1	
C4230	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4231	ECJ1VB1H272K	C 2700PF, K, 50V	1	
C4232	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4233	EEEHB1C470P	C 47PF, J, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4234	EEVHB0J470R	E 47UF, 6.3V	1	
C4235-46	ECJ1XB1C104K	C 0.1UF, Z, 16V	12	
C4247	EEVHB0J470R	E 47UF, 6.3V	1	
C4248-52	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C4255-57	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4258	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4259	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4262-67	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4268	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4269	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4270	EEVHB0J470R	E 47UF, 6.3V	1	
C4271-84	ECJ1XB1C104K	C 0.1UF, Z, 16V	14	
C4286	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4287-89	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4293,94	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4295	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4296	EEEHB0J330R	C 33PF, J, 6.3V	1	
C4297,98	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4299	EEEHB0J220R	C 22PF, J, 6.3V	1	
C4300	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4308	EEVHB0J470R	E 47UF, 6.3V	1	
C4309,10	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4311	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4312	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4313	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4314	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4315	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4316	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4317	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4318,19	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4320	EEVHB0G221P	E 220UF, 4V	1	
C4322-24	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4325	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4326	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4327	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4328	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4329	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4330	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4331	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4332,33	ECJ1XC1H150J	C 15PF, J, 50V	2	
C4334,35	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4336	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4337	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4338	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4339	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4340	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4341	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4342	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4343	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4344	EEEHB1A101P	C 100PF, J, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4345	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4346	EEEHB1A101P	C 100PF, J, 10V	1	
C4347	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4348	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4349	EEFCD0G560R	56UF,	1	
C4350	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4351	EEEHB0G221P	C 220PF, J, 4V	1	
C4353	ECJ1VB1E223K	C 0.023UF, K, 25V	1	
C4356	ECJ1VB1E223K	C 0.023UF, K, 25V	1	
C4357	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4360	EEEHB0G221P	C 220PF, J, 4V	1	
C4362,63	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4364	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4367	EEEHB1A101P	C 100PF, J, 10V	1	
C4368,69	ECJ3YB1C475K	C 0.047UF, K, 16V	2	
C4370	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4371,72	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4373,74	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4375	EEVHB0J470R	E 47UF, 6.3V	1	
C4376-96	ECJ1XB1C104K	C 0.1UF, Z, 16V	21	
C4397	EEVHB0J470R	E 47UF, 6.3V	1	
C4398-10	ECJ1XB1C104K	C 0.1UF, Z, 16V	13	
C4411	EEVHB0J470R	E 47UF, 6.3V	1	
C4412	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4415-20	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4421	EEVHB0J470R	E 47UF, 6.3V	1	
C4422	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4424	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4425	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4426-30	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C4431	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4432-34	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C4435	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4436-41	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4444	ECJ1VB0J334K	C 0.33UF, K,6.3V	1	
C4445	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4447	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4448	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4449	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4450	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4453	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4456	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4457,58	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4459	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4460	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4461	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4462	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4465	ECJ1XC1H820J	C 82PF, J, 50V	1	
C4468	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4470,71	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4472	EEEHB1C470P	C 47PF, J, 16V	1	
C4473	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4474	EEVHB0J220	E 22UF 6.3V	1	
C4476	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4478	EEEHB1C470P	C 47PF, J, 16V	1	
C4488-91	ECJ1VB1H103K	C 0.001UF, K, 50V	4	
C4503	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4504	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4506	ECJ1VB0J474K	C 0.47UF, K, 6.3V	1	
C4507	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4517,18	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4519	EEEHB1C470P	C 47PF, J, 16V	1	
C4524	EEVHB0J470R	E 47UF, 6.3V	1	
C4525,26	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4527	EEEHB1C100R	C 10PF, J, 16V	1	
C4529	EEEHB1C470P	C 47PF, J, 16V	1	
C4536	EEEHB0J101P	C 100PF, J, 6.3V	1	
C4540	EEEHB0G221P	C 220PF, J, 4V	1	
C4543	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4544	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4547	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4549-75	ECJ1XC1H102J	C 1000PF, J, 50V	27	
C4577-79	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4584	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4586,87	ECJ2FB0J335K	C 3.3UF, K, 16V	2	
C4588	EEEHB1A101P	C 100PF, J, 10V	1	
C4591	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4592	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4594	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4595	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4596,97	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C4598-40	ECJ1XC1H102J	C 1000PF, J, 50V	43	
C4650,51	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4652,53	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4654	EEFCD0G560R	56UF,	1	
C4661	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4662,63	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4666	EEFCD0G560R	56UF,	1	
C4667-69	ECJ1XB0J105K	C 1UF, K, 16V	3	
C4671	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4672	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C4673	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4675	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4678-81	ECJ1XB0J105K	C 1UF, K, 16V	4	
C4683	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4684-89	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4694	EEVHB1E330	E 33UF, 25V	1	
C4695,96	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4697	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4698	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4699	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4702	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4703	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4704	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4705	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4706	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4707	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4710	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4711	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4712	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4713	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4716	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4717	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4720	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4721	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4722	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4723	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4726	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4727	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4730	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4731	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4732	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4733	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4736	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4737	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4738	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4739	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4740	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4741	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4744	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4745	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4746	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4747	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4748	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4749	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4752	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4753	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4754	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4755	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4756	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4757	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4758	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4759	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4760	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4761	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4762	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4763	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4764	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4765	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4766	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4767	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4768	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4769	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4770	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4771	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4772	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4773	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4774	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4775	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4776	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4777	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4779	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4780	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4781	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4782,83	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4784	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4785,86	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4788	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4791	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4792	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4793	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4794,95	ECJ1XC1H101J	C 100PF, J, 50V	2	
C4796	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4805	ECJ2FB0J335K	C 3.3UF, K, 16V	1	
C5001	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5004	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C5005	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5013	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5014	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5016	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5017	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C5018	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5019	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5020	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5030	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5034	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5036	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5039,40	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C5044	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5046	ECJ1XC1H471J	C 470PF, J, 50V	1	
C5047	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5049	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5054	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5056	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5057	ECJ1XC1H101J	C 100PF, J, 50V	1	
C5133	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5134	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5135,36	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C5137	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5140,41	ECJ1VF1A105Z	C 1UF, Z, 10V	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C5143	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5144	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6521	EEEHB1C220R	C 22PF, J, 16V	1	
C6522	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6529	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6530	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C6531	EEEHB1C220R	C 22PF, J, 16V	1	
C6536	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6537	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6538,39	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C6546	EEEHB1A330R	C 33PF, J, 10V	1	
C6549-54	ECJ1XC1H680J	C 68PF, J, 50V	6	
C6556	ECJ1XC1H680J	C 68PF, J, 50V	1	
C6559-88	ECJ1XC1H680J	C 68PF, J, 50V	30	
C6590-07	ECJ1XC1H101J	C 100PF, J, 50V	18	
C6706	EEEHB1C470P	C 47PF, J, 16V	1	
C6707	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6709,10	F1H1A1050028	E 1UF, 50V	2	
C6712,13	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C6715	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6716	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C6730	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6733	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6740	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6741	EEEHB1C100R	C 10PF, J, 16V	1	
C6747	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6748	F1H1A1050028	E 1UF, 50V	1	
C6749	ECJ1VB1C103K	C 0.010UF, K, 16V	1	
C6750	EEVHB1C101P	E 100UF, 16V	1	
C7002,03	ECKDNA331MB7	C 330PF, M,	2	⚠
C7004,05	ECKDNA101MB	C 100PF	2	⚠
C7007	ECKD3A472KBP	C 4700PF, K, 1KV	1	
C7008	ECQU2A334BN9	P 0.33UF, M,250V	1	⚠
C7009,10	ECQU2A104BN9	P 0.1UF, 250V	2	⚠
C7011	ECQU2A334BN9	P 0.33UF, M,250V	1	⚠
C7012	ECKDNA101MB	C 100PF	1	⚠
C7100	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7101	ECKD3D471KBP	C 470PF, K, 2KV	1	
C7102	ECJ2VC2A101J	E 100UF, 100V	1	
C7104	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C7105	ECQV1H104JM	P 0.1UF, J, 50V	1	
C7106	ECA1HM010	E 1UF, 50V	1	
C7109,10	ECA2WHG100	E 10UF, 450V	2	
C7111	ECA1HM010	E 1UF, 50V	1	
C7112	EEUFC1V680	E 68UF, 35V	1	
C7114	F2A1C1020027	E 1000UF, 16V	1	
C7115	ECQV1H104JM	P 0.1UF, J, 50V	1	
C7116	ECA1AHG222	E 2200UF, 10V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7117	F1J1A1050002	C 1UF, Z, 50V	1	
C7118	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7202	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C7203	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7204-07	F1J1A1050002	C 1UF, Z, 50V	4	
C7208	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C7209	F2A1C101A121	E 100UF, 16V	1	
C7210	ECJ2VB1C224K	C 0.22UF, K, 16V	1	
C7211	ECA1HM330	E 33UF, 50V	1	
C7212	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7301	F2A1H471A531	E 470UF, 50V	1	
C7302	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7303	F2A1C1020027	E 1000UF, 16V	1	
C7305,06	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7307	ECA1VM102	E 1000UF, 35V	1	
C7401	F2A1H471A531	E 470UF, 50V	1	
C7402	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7403	F2A1C1020027	E 1000UF, 16V	1	
C7405,06	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7407	F2A1C681A117	E 680UF, 16V	1	
C7412	F1J1A1050002	C 1UF, Z, 50V	1	
C7501,02	ECA1HM100	E 10UF, 50V	2	
C7503,04	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C7505	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C7506	ECA1VHG471	E 470UF, 35V	1	
C7601	ECJ2FB1E224K	C 22UF, K, 25V	1	
C7602,03	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7605	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7609	ECJ2FB1E224K	C 22UF, K, 25V	1	
C7701	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7702	ECA1HM221	E 220UF, 50V	1	
C7703	F2A1C1020027	E 1000UF, 16V	1	
C7705	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7706	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7751	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7752	ECA1HM221	E 220UF, 50V	1	
C7753	EEUFC1A471	E 470UF, 10V	1	
C7754	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7755	ECJ2XB1H682K	C 6800PF, K, 50V	1	
C7756	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7851	ECA1HM100	E 10UF, 50V	1	
C7853	ECA1HM100	E 10UF, 50V	1	
C7854	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7951	ECA1VHG471	E 470UF, 35V	1	
C7952-61	ECJ2XB1H103K	C 0.01UF, K, 50V	10	
C7963-65	ECJ2XB1H103K	C 0.01UF, K, 50V	3	
C7966,67	ECA1EM101	E 100UF, 25V	2	
C8001	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8002	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8003	ECJ0EB1C103K	C0.010UF, K, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C8004	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8005	EEEHB1C100R	C 10PF, J, 16V	1	
C8007	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C8010	ECJ0EC1H050C	C 5PF, D, 50V	1	
C8015	ECJ1VC1H080C	C 8PF, C, 50V	1	
C8019,20	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8021	ECJ0EB1H102K	C 1000PF, K, 50V	1	
C8030	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8034,35	ECJ1VB1C104K	C 0.1UF, K, 16V	2	
C8037	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8039,40	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8041	EEEHB0G101R	C 100PF, J, 4V	1	
C8042,43	ECJ1VC1H070C	C 7PF, C, 50V	2	
C8046,47	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8048	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8051,52	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8055	EEEHB1C470P	C 47PF, J, 16V	1	
C8056	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8058-61	ECJ0EB1C103K	C0.010UF, K, 16V	4	
C8062	F1G1A1540001	C 0.15UF, K, 10V	1	PAVCCZ
C8071	ECJ0EC1H270J	C 270PF, K, 50V	1	
C8073	ECJ0EC1H270J	C 270PF, K, 50V	1	
C8098	ECGRL0G680R	C 68PF, J, 4V	1	
C8099,00	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C8101,02	ECJ1VB0J105K	C 1UF, K, 6.3V	2	
C8103,04	ECJ0EB1A104K	C 0.1UF, K, 10V	2	
C8105	EEEHB0G101R	C 100PF, J, 4V	1	
C8106,07	ECJ1VB0J105K	C 1UF, K, 6.3V	2	
C8108	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8109	EEEHB0G101R	C 100PF, J, 4V	1	
C8110	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8121	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8128,29	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8131	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8132	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8134	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8136	ECGRL0G680R	C 68PF, J, 4V	1	
C8137	ECJ1VB0J334K	C 0.33UF, K,6.3V	1	
C8138	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8139	ECGRL0G680R	C 68PF, J, 4V	1	
C8140	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8141	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8142	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8143	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8144	ECJ0EB1A104K	C 0.1UF, K, 10V	1	
C8145	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8146	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8147	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8148	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8149	ECJ1VB0J105K	C 1UF, K, 6.3V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C8150	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8151	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8154-56	ECJ1VB1C104K	C 0.1UF, K, 16V	3	
C8157	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8160	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8161	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8162	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8163	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8164	ECJ0EB1C103K	C0.010UF, K, 16V	1	
C8165	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8166	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8167	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8168	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8169	EEEHB0G470R	C 47PF, J, 4V	1	
C8170,71	ECJ1VB1C104K	C 0.1UF, K, 16V	2	
C8172	EEEHB0G470R	C 47PF, J, 4V	1	
C8173-75	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C8176	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8182	ECJ0EC1H121J	C 120PF, K, 50V	1	
C8186	ECJ0EC1H680J	C 680PF, K, 50V	1	
C8189	ECJ0EF1C104Z	C 0.10UF, Z, 16V	1	
C8193	EEEHB0J101P	C 100PF, J, 6.3V	1	
C8194	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
C8202,03	EEEHB1C470P	C 47PF, J, 16V	2	
C8204	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C8205,06	ECJ1VB1C104K	C 0.1UF, K, 16V	2	
C8207	EEEHB1C470P	C 47PF, J, 16V	1	
C8208	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C8210	ECJ0EB1A333K	C 0.033UF, K, 10V	1	
C8212	ECJ0EB1C223K	C 0.022UF, K, 16V	1	
C8240	ECJ1VB0J105K	C 1UF, K, 6.3V	1	
C8268	ECJ1VB0J105K	C 1UF, K, 6.3V	1	
C8269	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8303	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8305,06	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C8314	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8315	ECJ2FF1A475Z	C 4.7UF, Z, 10V	1	
C8317,18	ECJ2FF1A475Z	C 4.7UF, Z, 10V	2	
C8319	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8320-23	ECJ1VB0J105K	C 1UF, K, 6.3V	4	
C8327	EEEHB1C470P	C 47PF, J, 16V	1	
C8329	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8330,31	ECJ0EC1H181J	C 180PF, K, 50V	2	
C8332	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8334,35	ECJ0EC1H330J	C 330PF, K, 50V	2	
C8340	ECJ0EB1C682K	C 6800UF, K, 16V	1	
C8341	ECJ0EB1C822K	C 8200UF, K, 16V	1	
C8342,43	ECGRL0G680R	C 68PF, J, 4V	2	
C8344	ECJ0EB1C223K	C 0.022UF, K, 16V	1	
C8345	ECJ0EB1A273K	C 0.027UF, K, 10V	1	PAVCCZ

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C8349-51	ECJ1VB1C104K	C 0.1UF, K, 16V	3	
C8361	EEEHB1C470P	C 47PF, J, 16V	1	
C8372	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8376	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8397	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8401	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8403,04	ECJ0EF1C104Z	C 0.10UF, Z, 16V	2	
C8406,07	ECJ0EF1C104Z	C 0.10UF, Z, 16V	2	
C8409	ECJ0EF1C104Z	C 0.10UF, Z, 16V	1	
C8410	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8413,14	ECJ0EF1C104Z	C 0.10UF, Z, 16V	2	
C8415	ERJ2GEJ222	M 2.2KOHM, J,0.063W	1	
C8416	ECJ0EF1C104Z	C 0.10UF, Z, 16V	1	
C8419	ECJ0EF1C104Z	C 0.10UF, Z, 16V	1	
C8421	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8423	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8425	ECJ1VB1C104K	C 0.1UF, K, 16V	1	
C8427	EEEHB1C470P	C 47PF, J, 16V	1	
C8428	ECJ0EF1C104Z	C 0.10UF, Z, 16V	1	
C8430-32	ECJ0EF1C104Z	C 0.10UF, Z, 16V	3	
C8433,34	ECJ0EB1C103K	C0.010UF, K, 16V	2	
C8467	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C8501,02	ECJ0EC1H180J	C 180PF, K, 50V	2	
C8504	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C8506	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C8507	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C8508	ECJ1XF1C334Z	C 0.33UF, Z, 16V	1	
C8509	EEEHB0J101P	C 100PF, J, 6.3V	1	
C8870	ECJ1XC1H471J	C 470PF, J, 50V	1	
C8872	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C8910	ECJ0EF1H103Z	C 0.01UF, Z, 50V	1	
D1001	MAZ8043M	ZENER DIODE	1	
D1002	B3ACA0000272	DIODE	1	PAVCCZ
D1003	MAZ8043M	ZENER DIODE	1	
D1005	B3AAA0000770	DIODE	1	
D1101	MA8120M	ZENER DIODE	1	
D1104	MA152	DIODE	1	
D1106-11	MA8062MTX	ZENER DIODE	6	
D1113	MA111	DIODE	1	
D2003	MA152	DIODE	1	
D2004	MA157A	DIODE	1	
D2005	MA111	DIODE	1	
D2006	MA152	DIODE	1	
D2104	MA152K	DIODE	1	
D2105-18	MA8140M	ZENER DIODE	14	
D2119	MA3120M	ZENER DIODE	1	
D2120	MA152K	DIODE	1	
D2124,25	MA8056-M	DIODE	2	
D2513-16	MA704A	DIODE	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D2517-20	MA8140M	ZENER DIODE	4	
D3015-19	MA8140M	ZENER DIODE	5	
D3020	B0BC3R400001	ZENER DIODE	1	
D3021	MA152	DIODE	1	
D3022,23	MA111	DIODE	2	
D3024	MA3100M	ZENER DIODE	1	
D3026-31	MA111	DIODE	6	
D3201	MA152K	DIODE	1	
D3813	MA8140M	ZENER DIODE	1	
D3815	MA8140M	ZENER DIODE	1	
D3825,26	MA8140M	ZENER DIODE	2	
D4001	MA152K	DIODE	1	
D4004,05	B0JCPD000026	DIODE	2	
D4006,07	B0JCDD000002	DIODE	2	
D4008	MA152K	DIODE	1	
D4009	MA111	DIODE	1	
D5013-23	D4ED13900001	DIODE	11	
D5025	MA3056M	ZENER DIODE	1	
D6702	B3AEB0000065	DIODE	1	
D7001-03	ERZV10V621T2	VARISTOR	3	⚠
D7004	B0FBAT000008	DIODE	1	⚠
D7101	ERA22-10	DIODE	1	
D7104	B0JAMG000025	DIODE	1	
D7105	MA4150LTA	ZENER DIODE	1	
D7106	MA111	DIODE	1	
D7107	B0EBKT000007	DIODE	1	⚠
D7109	TVSSR2KL	DIODE	1	
D7110	RY24	DIODE	1	
D7111	B0BA01000070	ZENER DIODE	1	
D7112	ERA22-10	DIODE	1	
D7113	B0JANG000003	DIODE	1	
D7114-16	B0JAMG000025	DIODE	3	
D7201	MA4075M	ZENER DIODE	1	
D7202	MA4140M	ZENER DIODE	1	
D7203	MA8330M	ZENER DIODE	1	
D7204	MA111	DIODE	1	
D7207	MA729	DIODE	1	
D7208,09	MA111	DIODE	2	
D7210	MA4075M	ZENER DIODE	1	
D7211	MA111	DIODE	1	
D7301	MA8100MTX	ZENER DIODE	1	
D7302	MA111	DIODE	1	
D7303	MA8220-M	ZENER DIODE	1	
D7304	MA111	DIODE	1	
D7401	MA8056-M	DIODE	1	
D7402	MA111	DIODE	1	
D7403	MA8130M	ZENER DIODE	1	
D7404,05	MA111	DIODE	2	
D7501	MA111	DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D7601,02	B0HCMM000014	DIODE	2	
D7603,04	MTZJ16C	DIODE	2	
D7605	B0HCMM000014	DIODE	1	
D7606	MA111	DIODE	1	
D7701	B0JCPG000005	DIODE	1	
D7702	B0HCMM000014	DIODE	1	
D7703	MA8100MTX	ZENER DIODE	1	
D7704	MA111	DIODE	1	
D7751	B0JCNG000003	DIODE	1	
D7752	B0HCMM000014	DIODE	1	
D7753	MA8100MTX	ZENER DIODE	1	
D7754	MA111	DIODE	1	
D7851	B0HCMM000014	DIODE	1	
D8002	MA728	DIODE	1	
D8006	MA3082HTX	ZENER DIODE	1	
D8203,04	B0JCPE000004	DIODE	2	
D8501	B0CCAB000039	DIODE	1	
DG1	K1KBB0A00006	CONNECTOR	1	
DG2,G3	K1MN40B00044	40P CONNECTOR	2	
DG4,G5	K1KB23A00003	23P CONNECTOR	2	
DG6	K1KA08BA0047	8P CONNECTOR	1	
DG7	K1KB30B00032	30P CONNECTOR	1	
DG8	K1KA07BA0047	7P CONNECTOR	1	
DG10	K1KA60A00156	60P CONNECTOR	1	
DG11	K1KA08AA0150	8P CONNECTOR	1	
DG15	K1KA07AA0266	7P CONNECTOR	1	
DV15	K1KB60A00132	60P CONNECTOR	1	
F7000-1,-2	K3GE1ZA00010	FUSE HOLDER	2	
F7000	K5D502BNA001	AC FUSE	1	⚠
FL3301,02	J0HABB000003	LC FILTER	2	
FL4005	J0HABC000008	LC FILTER	1	
FL4012-15	J0HABC000011	LC FILTER	4	
FL4016-19	ELKE103FA	NOISE FILTER	4	
FL4020-22	J0JBD0000043	CHIP INDUCTOR	3	
FL4023-29	ELKE103FA	NOISE FILTER	7	
FL4033	J0HABC000008	LC FILTER	1	
FL8201	TAX10075	EMI FILTER	1	
G1	K1KA10BA0062	10P CONNECTOR	1	
G4	K1KA30AA0009	30P CONNECTOR	1	
G5	K1KA20AA0009	20P CONNECTOR	1	
G10	K1KA04BA0061	4P CONNECTOR	1	
G11	K1KA05BA0061	5P CONNECTOR	1	
G15	K1KA02A00553	2P CONNECTOR	1	
GP6	K1KA03AA0104	3P CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
GP10	K1MN50A00011	50P CONNECTOR	1	
GS3	K1MN40A00025	40P CONNECTOR	1	
GS8	K1KA07AA0104	7P CONNECTOR	1	
GS9	K1KA15A00148	15P CONNECTOR	1	
H1	K1KB23A00003	23P CONNECTOR	1	
H2,H3	K1MN40B00044	40P CONNECTOR	2	
H4	K1KA30AA0009	30P CONNECTOR	1	
H5	K1KA20AA0009	20P CONNECTOR	1	
H6	K1KA03AA0150	3P CONNECTOR	1	
H8	K1KA07AA0150	7P CONNECTOR	1	
H9	K1KA15A00148	15P CONNECTOR	1	
H12	K1KA09AA0190	9P CONNECTOR	1	
IC1103	C0DBEZG00013	IC	1	
IC1104	C2CBYF000032	IC	1	
IC1105	TC4066BF	MOS IC	1	
IC1106	CXA1875AM	LINEAR IC	1	
IC1107	C3EBHC000024	IC	1	
IC1108	C0EBE0000336	IC	1	
IC1109	C0JBBZ000281	IC	1	
IC1110	C0CBCBD00043	IC	1	
IC1114	C3ABPG000133	IC	1	
IC1115	TVRN654	IC	1	
IC1116	CXA1875AM	LINEAR IC	1	
IC1117	C0JBAZ002186	IC	1	
IC2101	C1BB00000931	IC	1	
IC2102	C0ABBB000038	IC	1	
IC2103	AN77L08M	IC	1	
IC2104	C0ABBB000038	IC	1	
IC2105	AN15861A-VT	IC	1	
IC2106	C1AB00002135	IC	1	
IC2107	C0DBEZE00006	IC	1	
IC2108	C0EBF0000354	IC	1	
IC2111,12	NJM2521MTE1	IC	2	
IC2302,03	C0ABBA000168	IC	2	
IC2500-03	C1BB00000998	IC	4	
IC3001,02	C1AB00001486	IC	2	
IC3004	C1AB00001487	IC	1	
IC3005	AN15866A-VT	IC	1	
IC3006	CXA1315M	LINEAR IC	1	
IC3301	C0JBAZ002205	IC	1	
IC4001	C0ABBB000289	IC	1	
IC4002	C0FBBK000038	IC	1	
IC4005	C1AB00002298	IC	1	
IC4008	C0CBCBD00008	IC	1	
IC4009	C0CBCAD00012	IC	1	
IC4010	C0EBE0000336	IC	1	
IC4011	C0CBCAC00282	IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC4012	C1AB00001834	IC	1	
IC4013	C1AB00002202	IC	1	
IC4014	C0JBAZ002186	IC	1	
IC4024	C0DBAMH00014	IC	1	
IC4025	C0DBAMH00013	IC	1	
IC4033	C0JBCZ000485	IC	1	
IC4041	C0CBCAC00275	IC	1	
IC4042	C0DBEJG00001	IC	1	
IC4044	C0CBCAC00136	IC	1	
IC4047	C0CBCBD00008	IC	1	
IC4048	C0DBEJG00001	IC	1	
IC4049	C0CBABF00020	IC	1	
IC4051	C1ZBZ0002790	IC	1	
IC4052	C3EBJC000055	IC	1	
IC4054	C1AB00002234	IC	1	
IC4055	C3ABQJ000040	IC	1	
IC4057	C1AB00002217	IC	1	
IC4063	C0EBC0000208	IC	1	
IC4081	C1ZBZ0002679	IC	1	
IC5003	MN864721A	IC	1	
IC5015	C0CBCAD00016	IC	1	
IC5017	C3EBFC000037	IC	1	
IC6701	C0CBCBD00008	IC	1	
IC6703	C0JBAZ000851	IC	1	
IC7101	C5HABZZ00165	IC	1	
IC7103	C0DAAMA00003	IC	1	
IC7301	C5HAAKG00002	IC	1	
IC7401	C5HAAKG00002	IC	1	
IC7701	C0DAAZH00020	IC	1	
IC7751	C0DAAZG00014	IC	1	
IC7851	AN1431M	LINEAR IC	1	
IC8003	STV0360CT	IC	1	PAVCCZ
IC8009	C3ABQG000095	IC	1	PAVCCZ
IC8013	MN2WS0025BEA	IC	1	PAVCCZ
IC8019	TVRN488-5	IC	1	PAVCCZ
IC8023,24	C0DBAMH00018	IC	2	PAVCCZ
IC8029	C0FBBK000038	IC	1	
IC8031	BA15218FDX	IC	1	
IC8034	C0DBEJG00001	IC	1	
IC8042	C0EBM0000027	IC	1	
IC8043	C0EBE0000336	IC	1	
IC8213	C0JBAZ001539	IC	1	
IC8401	C0ZBZ0001086	IC	1	PAVCCZ
IC8402	74LVC4245AD	IC	1	PAVCCZ
IC8404	C0JBCZ000255	IC	1	
IC8408-11	C0JBCZ000255	IC	4	
IC8412	C0JBAZ001539	IC	1	
IC8501	74VHCU04MXNL	IC	1	PAVCCZ
IC8864	C0DBFFD00003	IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JK2001,02	K2HA204A0038	JACK	2	
JK3001	K1FB315AA001	CONNECTOR	1	
JK3002-04	K1FB121A0006	JACK	3	
JK3005	K2HA307A0008	JACK	1	
JK3801	K4BK23B00004	AV TERMENAL	1	
JK5001	K1FA119D0001	CONNECTOR	1	
JK6502	K1NA68E00076	CONNECTOR	1	
JK6701	K1NA09E00057	CONNECTOR	1	
JK8401	K1NA68B00038	68P CONNECTOR	1	PAVCCZ
JS1001	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS1101	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2105-08	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
JS2109	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS2500	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3005	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3007-20	ERJ3GEY0R00	M 0 OHM, 1/16W	14	
JS3022	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3204,05	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3213	K5H2022A0023	FUSE	1	PAVCCZ
JS3216-23	ERJ3GEY0R00	M 0 OHM, 1/16W	8	
JS3401	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3901	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4001,02	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS4005-15	ERJ3GEY0R00	M 0 OHM, 1/16W	11	
JS4018,19	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS4026-28	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4032,33	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS4035-37	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4039-48	ERJ3GEY0R00	M 0 OHM, 1/16W	10	
JS4056	ERJ3GEY0R00	M 0 OHM, 1/16W	1	26INCH
JS4057	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4068	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4070-72	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4074-78	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
JS5004	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6502	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6704	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS6718-20	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
K6	K1KA02A00626	2P CONNECTOR	1	
L1101-04	J0JHC0000078	CHIP INDUCTOR	4	
L1106	ELJFA8R2KB	CHIP INDUCTOR	1	
L1108	J0JCC0000241	CHIP INDUCTOR	1	
L1109	J0JHC0000078	CHIP INDUCTOR	1	
L1110	J0JCC0000241	CHIP INDUCTOR	1	
L1111,12	J0JHC0000078	CHIP INDUCTOR	2	
L2001,02	J0JCC0000364	CHIP INDUCTOR	2	
L2003-16	EXC3BB221H	BEAD CHOKE	14	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L2017,18	J0JHC0000078	CHIP INDUCTOR	2	
L2104	ELJPA470KB	CHIP INDUCTOR	1	
L2105-07	J0JHC0000078	CHIP INDUCTOR	3	
L2108	J0JCC0000241	CHIP INDUCTOR	1	
L2109,10	TSK1032	BEAD CHOKE	2	
L2111,12	J0JCC0000241	CHIP INDUCTOR	2	
L2113,14	TSK1032	BEAD CHOKE	2	
L2115	J0JCC0000241	CHIP INDUCTOR	1	
L2117	ELJFA6R8KF	CHIP INDUCTOR	1	
L2118	J0JCC0000241	CHIP INDUCTOR	1	
L2120	J0JHC0000078	CHIP INDUCTOR	1	
L2121	J0JCC0000241	CHIP INDUCTOR	1	
L2122	TSK1032	BEAD CHOKE	1	
L2123	G1C330K00017	INDUCTOR COIL	1	
L2178,79	J0JCC0000241	CHIP INDUCTOR	2	
L2182-87	J0JCC0000241	CHIP INDUCTOR	6	
L2500-03	G1C330K00024	INDUCTION COIL	4	
L2508-11	J0JJC0000011	CHIP INDUCTOR	4	
L3001-03	EXC3BB221H	BEAD CHOKE	3	
L3007,08	J0JHC0000078	CHIP INDUCTOR	2	
L3009	ERJ3GEYJ2R2	M 2.2 OHM,J,1/16W	1	
L3010	J0JHC0000078	CHIP INDUCTOR	1	
L3202	J0JCC0000241	CHIP INDUCTOR	1	
L3205,06	J0JCC0000364	CHIP INDUCTOR	2	
L3210	J0JCC0000364	CHIP INDUCTOR	1	
L3211	ELJNC15NKB	CHIP COIL	1	
L3212	EXC3BB221H	BEAD CHOKE	1	
L3213,14	J0JCC0000364	CHIP INDUCTOR	2	
L3304-07	J0JCC0000241	CHIP INDUCTOR	4	
L3811,12	EXC3BB221H	BEAD CHOKE	2	
L3813,14	J0JCC0000364	CHIP INDUCTOR	2	
L4001	J0JHC0000078	CHIP INDUCTOR	1	
L4002	G1C100KA0008	INDUCTOR COIL	1	
L4003,04	J0JHC0000078	CHIP INDUCTOR	2	
L4006-08	J0JHC0000078	CHIP INDUCTOR	3	
L4014,15	J0JHC0000078	CHIP INDUCTOR	2	
L4016	J0JCC0000241	CHIP INDUCTOR	1	
L4017-19	J0JHC0000078	CHIP INDUCTOR	3	
L4020	J0JCC0000241	CHIP INDUCTOR	1	
L4021	J0JHC0000078	CHIP INDUCTOR	1	
L4022	TALC168T100K	CHIP INDUCTOR COIL	1	
L4023-26	J0JCC0000241	CHIP INDUCTOR	4	
L4028,29	J0JHC0000078	CHIP INDUCTOR	2	
L4030	J0JHC0000045	CHIP INDUCTOR	1	
L4034	J0JHC0000045	CHIP INDUCTOR	1	
L4037,38	J0JHC0000045	CHIP INDUCTOR	2	
L4039	J0JHC0000078	CHIP INDUCTOR	1	
L4041,42	J0JHC0000078	CHIP INDUCTOR	2	
L4043	J0JCC0000241	CHIP INDUCTOR	1	
L4046	J0JHC0000078	CHIP INDUCTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L4052	J0JCC0000241	CHIP INDUCTOR	1	
L4054	G1C220MA0077	INDUCTOR COIL	1	
L4055	G1C470MA0078	INDUCTOR COIL	1	
L4056	G1C220M00041	INDUCTOR COIL	1	
L4057	G1C220MA0077	INDUCTOR COIL	1	
L4058-60	J0JHC0000078	CHIP INDUCTOR	3	
L4062	J0JHC0000078	CHIP INDUCTOR	1	
L4063	J0JCC0000241	CHIP INDUCTOR	1	
L4065,66	J0JCC0000241	CHIP INDUCTOR	2	
L4068-70	J0JCC0000241	CHIP INDUCTOR	3	
L4073	J0JHC0000078	CHIP INDUCTOR	1	
L4075,76	J0JHC0000078	CHIP INDUCTOR	2	
L4079	J0JCC0000241	CHIP INDUCTOR	1	
L4081,82	J0JCC0000241	CHIP INDUCTOR	2	
L4087	J0JHC0000078	CHIP INDUCTOR	1	
L4088	J0JCC0000241	CHIP INDUCTOR	1	
L4090-93	J0JHC0000078	CHIP INDUCTOR	4	
L4095,96	J0JHC0000078	CHIP INDUCTOR	2	
L5001-03	J0JHC0000045	CHIP INDUCTOR	3	
L5007	J0JHC0000045	CHIP INDUCTOR	1	
L5012	J0JHC0000045	CHIP INDUCTOR	1	
L5015-18	J0MAB0000176	LC FILTER	4	
L5021	J0JHC0000045	CHIP INDUCTOR	1	
L5022	J0JCC0000166	CHIP INDUCTOR	1	
L6504	J0JHC0000045	CHIP INDUCTOR	1	
L6701,02	J0JHC0000045	CHIP INDUCTOR	2	
L7001	G0A553G00001	EMI FILTER	1	⚠
L7106	EXCELSA35	BEAD CHOKE	1	
L7108	TALL08N221KA	INDUCTION COIL	1	
L7201	G0A680GA0002	INDUCTION COIL	1	
L7702	VLQSH02R101K	PEAKING COIL	1	
L7752	G0A221ZA0047	CHOKE COIL	1	
L7959	TALL08N151KA	INDUCTOR COIL	1	
L7962	G0A100GA0013	CHOKE COIL	1	
L8004	J0JHC0000045	CHIP INDUCTOR	1	
L8008	J0JHC0000045	CHIP INDUCTOR	1	
L8026	J0JHC0000035	CHIP INDUCTOR	1	
L8029,30	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
L8031-33	J0JHC0000045	CHIP INDUCTOR	3	
L8038	J0JHC0000045	CHIP INDUCTOR	1	
L8042	J0JHC0000045	CHIP INDUCTOR	1	
L8046	ELJPA1R0MB	INDUCTION COIL	1	
L8047,48	G1C220MA0167	INDUCTOR COIL	2	PAVCCZ
L8049	J0JHC0000045	CHIP INDUCTOR	1	
L8051	J0JCC0000241	CHIP INDUCTOR	1	
L8055	G1C100MA0077	INDUCTION COIL	1	
L8059	J0JHC0000045	CHIP INDUCTOR	1	
L8106	ELJFA2R7JB	INDUCTION COIL	1	PAVCCZ
L8141,42	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
L8145	J0JHC0000045	CHIP INDUCTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L8501	ELJNA2R7JB	INDUCTION COIL	1	
LF7002,03	G0B103H00002	CHOKE COIL	2	⚠
LF7004	G0B302H00004	CHOKE COIL	1	⚠
PA6701	K5H1622A0023	FUSE	1	
PC7102	CNC1S171R	IC	1	⚠
Q1001	2SA207700L	TRANSISTOR	1	
Q1003	2SA207700L	TRANSISTOR	1	
Q1004	2SC584500L	TRANSISTOR	1	
Q1101	2SC584500L	TRANSISTOR	1	
Q1105-07	2SC584500L	TRANSISTOR	3	
Q1109-11	2SC584500L	TRANSISTOR	3	
Q1112	UN5211	TRANSISTOR	1	
Q1113	UN5111	TRANSISTOR	1	
Q1114	UN5211	TRANSISTOR	1	
Q1118	UN5211	TRANSISTOR	1	
Q1119	2SA207700L	TRANSISTOR	1	
Q2001,02	2SD13280TL	TRANSISTOR	2	
Q2003,04	2SD601A	TRANSISTOR	2	
Q2006,07	2SD601A	TRANSISTOR	2	
Q2009,10	2SD601A	TRANSISTOR	2	
Q2011,12	2SA207700L	TRANSISTOR	2	
Q2016	2SD601A	TRANSISTOR	1	
Q2017	2SA207700L	TRANSISTOR	1	
Q2102-05	2SA207700L	TRANSISTOR	4	
Q2106	2SD601A	TRANSISTOR	1	
Q2108	2SD601A	TRANSISTOR	1	
Q2113	2SD601A	TRANSISTOR	1	
Q2114,15	2SD13280TL	TRANSISTOR	2	
Q3001-06	2SD601A	TRANSISTOR	6	
Q3008	2SA207700L	TRANSISTOR	1	
Q3009	2SD601A	TRANSISTOR	1	
Q3010-15	2SA207700L	TRANSISTOR	6	
Q3016	2SD601A	TRANSISTOR	1	
Q3017,18	2SA207700L	TRANSISTOR	2	
Q3019-23	2SD601A	TRANSISTOR	5	
Q3202-04	2SA207700L	TRANSISTOR	3	
Q3331-33	2SC2480	TRANSISTOR	3	
Q4001	2SA207700L	TRANSISTOR	1	
Q4004	2SA207700L	TRANSISTOR	1	
Q4007,08	2SA207700L	TRANSISTOR	2	
Q4010-12	2SC584500L	TRANSISTOR	3	
Q4018-20	2SA207700L	TRANSISTOR	3	
Q4024	2SD1030	TRANSISTOR	1	
Q4025,26	2SC584500L	TRANSISTOR	2	
Q4030-32	2SD1030	TRANSISTOR	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q4037	UN2211	TRANSISTOR	1	
Q4038,39	2SC584500L	TRANSISTOR	2	
Q4040	2SA207700L	TRANSISTOR	1	
Q4041-46	2SC584500L	TRANSISTOR	6	
Q4047,48	2SA207700L	TRANSISTOR	2	
Q4049,50	UN5211	TRANSISTOR	2	
Q4052	UN5211	TRANSISTOR	1	
Q4053	UN2215	TRANSISTOR	1	
Q4054	2SC584500L	TRANSISTOR	1	
Q4058	2SC584500L	TRANSISTOR	1	
Q4060-62	2SC584500L	TRANSISTOR	3	
Q4065	2SC584500L	TRANSISTOR	1	
Q4068	2SC584500L	TRANSISTOR	1	
Q4073	2SC584500L	TRANSISTOR	1	
Q4074	XN6501	TRANSISTOR	1	
Q4075	UN5211	TRANSISTOR	1	
Q4076	2SA207700L	TRANSISTOR	1	
Q4077	2SC584500L	TRANSISTOR	1	
Q4080	2SC584500L	TRANSISTOR	1	
Q5001	B1MBACA00008	TRANSISTOR	1	
Q5002,03	2SD601A	TRANSISTOR	2	
Q5004	2SC584500L	TRANSISTOR	1	
Q6501	2SD601A	TRANSISTOR	1	
Q6502	B1DHDC000028	TRANSISTOR	1	
Q6701	UN5211	TRANSISTOR	1	
Q6702	2SC2412K	TRANSISTOR	1	
Q6703,04	UN5211	TRANSISTOR	2	
Q7101,02	2SD601A	TRANSISTOR	2	
Q7202	2SD602	TRANSISTOR	1	
Q7203,04	2SD601A	TRANSISTOR	2	
Q7205,06	2SB709A	TRANSISTOR	2	
Q7207	2SD601A	TRANSISTOR	1	
Q7208	2SC584500L	TRANSISTOR	1	
Q7210	2SA207700L	TRANSISTOR	1	
Q7211	2SD602	TRANSISTOR	1	
Q7212	2SC584500L	TRANSISTOR	1	
Q7214	2SD601A	TRANSISTOR	1	
Q7301,02	UN2210	TRANSISTOR	2	
Q7401,02	UN2210	TRANSISTOR	2	
Q7501	UN2214	TRANSISTOR	1	
Q7502,03	B1DHDD000033	TRANSISTOR	2	
Q7504-06	UN2214	TRANSISTOR	3	
Q7601	2SD602	TRANSISTOR	1	
Q7701	UN2210	TRANSISTOR	1	
Q7702	2SC584500L	TRANSISTOR	1	
Q7751	UN2214	TRANSISTOR	1	
Q7851	2SD602	TRANSISTOR	1	
Q8101	2SA207700L	TRANSISTOR	1	
R1001	ERJ6GEY0R00	M 0 OHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1002	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R1003	ERJ6GEYJ332	M 3.3KOHM,J,1/10W	1	
R1005	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R1006	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R1009	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R1010	ERJ6GEYJ122	M 1.2KOHM,J,1/10W	1	
R1011	ERJ6GEYJ183	M 18KOHM,J,1/10W	1	
R1012	ERJ6GEYJ563	M 56KOHM,J,1/10W	1	
R1013-15	ERJ6GEYJ103	M 10KOHM,J,1/10W	3	
R1101-03	ERJ3GEYJ223	M 22KOHM,J,1/16W	3	
R1105	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1106	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1107	ERJ3GEYJ683	M 68KOHM,J,1/16W	1	
R1110	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1111	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1112	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R1113	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1115	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1116	ERJ3GEYJ683	M 68KOHM,J,1/16W	1	
R1117	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R1119	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R1120	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1121	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R1122	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R1123	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1125	EXB2HV680J	RESISTOR ARRAY	1	
R1127	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1128	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1130	EXB38V680J	RESISTOR ARRAY	1	
R1133	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1135	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1136,37	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R1138	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R1139	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1140	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1143	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1144-48	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R1149	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1150	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1151	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1153	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1155	ERJ3GEYJ225	M 2.2MOHM,J,1/16W	1	
R1158	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1159	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1160	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1161	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1162	EXB2HV680J	RESISTOR ARRAY	1	
R1164	ERJ3EKF2702V	M27.0KOHM, 1/16W	1	
R1165	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1166	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1168	**ERJ3GEYJ473**	**M 47KOHM,J,1/16W**	**1**	
R1171	**ERJ3GEYJ820**	**M 82 OHM,J,1/16W**	**1**	
R1174	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1176	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1177	**ERJ3GEYJ331**	**M 330 OHM,J,1/16W**	**1**	
R1178	**EXB2HV680J**	**RESISTOR ARRAY**	**1**	
R1179	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1180	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1182	**ERJ3GEYJ223**	**M 22KOHM,J,1/16W**	**1**	
R1183	**ERJ3GEYJ471**	**M 470 OHM,J,1/16W**	**1**	
R1184	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1186	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1187	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1188	**D1HG5608A002**	**NETWORK RESISTER**	**1**	
R1189	**ERJ3GEYJ104**	**M 100KOHM,J,1/16W**	**1**	
R1190	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1191	**ERJ3GEYJ104**	**M 100KOHM,J,1/16W**	**1**	
R1192	**ERJ3GEYJ472**	**M 4.7KOHM,J,1/16W**	**1**	
R1194,95	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**2**	
R1197	**ERJ3GEYJ224**	**M 220KOHM,J,1/16W**	**1**	
R1198	**ERJ3GEYJ221**	**M 220 OHM,J,1/16W**	**1**	
R1199	**ERJ3GEYJ680**	**M 68 OHM,J,1/16W**	**1**	
R1200	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1201	**ERJ3GEYJ680**	**M 68 OHM,J,1/16W**	**1**	
R1202	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1203,04	**ERJ3GEYJ680**	**M 68 OHM,J,1/16W**	**2**	
R1205	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1206	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1209	**ERJ3GEYJ821**	**M 820 OHM,J,1/16W**	**1**	
R1210,11	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**2**	
R1212	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1213	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1214	**ERJ3GEYJ471**	**M 470 OHM,J,1/16W**	**1**	
R1215	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1216	**ERJ3GEYJ273**	**M 27KOHM,J,1/16W**	**1**	
R1217	**ERJ3GEYJ332**	**M 3.3KOHM,J,1/16W**	**1**	
R1218,19	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**2**	
R1220	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**1**	
R1221	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1222	**ERJ3GEYJ222**	**M 2.2KOHM,J,1/16W**	**1**	
R1223	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1224	**ERJ3GEYJ332**	**M 3.3KOHM,J,1/16W**	**1**	
R1225	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1226	**ERJ3GEYJ680**	**M 68 OHM,J,1/16W**	**1**	
R1227	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1228,29	**ERJ3GEYJ680**	**M 68 OHM,J,1/16W**	**2**	
R1230	**D1HG5608A002**	**NETWORK RESISTER**	**1**	
R1231	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1233,34	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**2**	
R1236	**ERJ3GEYJ221**	**M 220 OHM,J,1/16W**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1239,40	**ERJ3GEYJ332**	**M 3.3KOHM,J,1/16W**	**2**	
R1241	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1243	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1245	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1246	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1247-50	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**4**	
R1252	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**1**	
R1253	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1255,56	**ERJ3GEYJ332**	**M 3.3KOHM,J,1/16W**	**2**	
R1257	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1258	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**1**	
R1259,60	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**2**	
R1261	**ERJ3EKF2202**	**M 22KOHM, 1/16W**	**1**	
R1262	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1263	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1264	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**1**	
R1265	**ERJ3GEYJ472**	**M 4.7KOHM,J,1/16W**	**1**	
R1267	**ERJ3GEYJ102**	**M 1KOHM,J,1/16W**	**1**	
R1269	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1270,71	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**2**	
R1273	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1274	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1275,76	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**2**	
R1278	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**1**	
R1279	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1281	**ERJ3GEYJ562**	**M 5.6KOHM,J,1/16W**	**1**	
R1282-87	**ERJ3GEYJ512**	**M 5.1KOHM,J,1/16W**	**6**	
R1288,89	**ERJ3GEYJ560**	**M 56 OHM,J,1/16W**	**2**	
R1290	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1291	**ERJ3GEYJ102**	**M 1KOHM,J,1/16W**	**1**	
R1296	**ERJ3GEYJ562**	**M 5.6KOHM,J,1/16W**	**1**	
R1298,99	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**2**	
R1301	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1302	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**1**	
R1303-05	**ERJ3GEYJ220**	**M 22 OHM,J,1/16W**	**3**	
R1306	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1313	**ERJ3EKF1202**	**M 12KOHM, 1/16W**	**1**	
R1319-22	**J0JDC0000054**	**CHIP INDUCTOR**	**4**	
R1323-26	**J0JDC0000054**	**CHIP INDUCTOR**	**4**	
R1328,29	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**2**	
R1331	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**1**	
R1332	**ERJ3GEYJ223**	**M 22KOHM,J,1/16W**	**1**	
R1335	**ERJ3GEY0R00**	**M 0 OHM, 1/16W**	**1**	
R1337,38	**EXB2HV680J**	**RESISTOR ARRAY**	**2**	
R1351,52	**ERJ3GEYJ103**	**M 10KOHM,J,1/16W**	**2**	
R2001,02	**ERJ3GEYJ184**	**M 180KOHM,J,1/16W**	**2**	
R2005	**ERJ3GEYJ104**	**M 100KOHM,J,1/16W**	**1**	
R2006-11	**ERJ3GEYJ223**	**M 22KOHM,J,1/16W**	**6**	
R2012	**ERJ3GEYJ104**	**M 100KOHM,J,1/16W**	**1**	
R2013,14	**ERJ3GEYJ101**	**M 100 OHM,J,1/16W**	**2**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2015,16	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2018,19	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2021,22	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2023,24	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2025	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2027,28	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2030	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2031	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2032	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2033	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2034	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2035,36	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2037	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2038	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2039	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2040	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2041	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2042	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2043	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2044	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2045	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2046	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2047	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2048	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2049	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2050	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2052	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2056	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2057	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R2058	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2059	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2060	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2061	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R2068	ERJ3EKF8201	M 8.2KOHM, 1/16W	1	
R2069	ERJ3GEYJ561	M 560 OHM,J,1/16W	1	
R2070	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2110,11	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2112	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2113	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2115	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2118,19	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R2121	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2123	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2124,25	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2126,27	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R2128,29	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2130,31	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2132	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2133	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2135,36	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2137	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2138	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2139,40	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2147	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2148,49	ERJ3GEYJ273	M 27KOHM,J,1/16W	2	
R2151	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2152	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R2153	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2154	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R2155-60	ERJ3GEYJ221	M 220 OHM,J,1/16W	6	
R2161	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2162	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2163	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2164	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2165,66	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2167	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2168,69	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R2170-77	ERJ3GEYJ221	M 220 OHM,J,1/16W	8	
R2178,79	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2180,81	ERJ3GEYJ561	M 560 OHM,J,1/16W	2	
R2182,83	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2184-87	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R2192,93	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2195,96	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2197	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2198	ERJ3EKF1781	M1.78KOHM, 1/16W	1	
R2200	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2201	ERJ3EKF1601	M 1.6KOHM, 1/16W	1	
R2202	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2204	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R2208	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2209	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2210	ERJ3GEYJ122	M 1.2KOHM,J,1/16W	1	
R2211	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2213	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2214	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2217	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2221	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2229	J0JCC0000241	CHIP INDUCTOR	1	
R2231,32	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2234,35	ERJ3GEYJ391	M 390 OHM,J,1/16W	2	
R2245	ERJ3GEYJ4R7	M 4.7HM,J,1/16W	1	
R2246	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2247	ERJ3GEYJ4R7	M 4.7HM,J,1/16W	1	
R2248	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2249	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2252	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2301	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R2303,04	ERJ3GEYJ153	M 15KOHM,J,1/16W	2	
R2306	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2319,20	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R2321,22	ERJ3GEYJ433	M 43KOHM,J,1/16W	2	
R2327,28	ERJ3GEYJ203	M 20KOHM,J,1/16W	2	
R2329-32	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R2335	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2338-41	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	4	
R2555	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2557	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R2558	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R2559	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2560	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2561	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2562	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2563	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2564	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2565	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2566	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2569	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2570	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R2571	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2572	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2573	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2574	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2575	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2576	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2577	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2578	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2579	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2582	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2583	ERJ3GEYJ123	M 12KOHM,J,1/16W	1	
R2584	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2585	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2586	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2587	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2588	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2589	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2590	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2591	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2592	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2595	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2596	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R2597	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2598	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2599	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2600	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2601	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2602	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2603	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2604	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2605	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2608	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2609	ERJ3GEYJ123	M 12KOHM,J,1/16W	1	
R2610	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2611	ERJ6ENF6800	M 680 OHM, 1/10W	1	
R2623	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2625	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2626-28	ERJ6ENF6800	M 680 OHM, 1/10W	3	
R2634,35	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2643	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2647	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3001-15	ERJ6ENF75R0	M 75 OHM, 1/10W	15	
R3016,17	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R3018,19	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R3020-22	ERJ3EKF2202	M 22KOHM, 1/16W	3	
R3023,24	ERJ3EKF1202	M 12KOHM, 1/16W	2	
R3025	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3026	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R3027,28	ERJ6ENF68R0	M 68 OHM, 1/10W	2	
R3030	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3031	ERJ6ENF68R0	M 68 OHM, 1/10W	1	
R3032,33	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R3034	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R3036,37	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R3038-40	ERJ3GEYJ221	M 220 OHM,J,1/16W	3	
R3041,42	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	2	
R3043	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R3048	ERJ3GEYJ152	M 1.5KOHM,J,1/16W	1	
R3049-51	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R3052	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3053	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3054,55	ERJ3EKF5600	M 560 OHM, 1/16W	2	
R3056	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3057,58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3059-64	ERJ3GEYJ221	M 220 OHM,J,1/16W	6	
R3065	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R3066	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3067	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3068	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R3069	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3071	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3072	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3074,75	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R3077	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3080	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3085	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3086	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3087,88	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R3089,90	ERJ3GEYJ470	M 47 OHM,J,1/16W	2	
R3091	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3092	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3093	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3094-01	ERJ3GEYJ221	M 220 OHM,J,1/16W	8	
R3102	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3106	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3115-18	ERJ3GEYJ101	M 100 OHM,J,1/16W	4	
R3119,20	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3121	ERJ3EKF1000	M 100 OHM, 1/16W	1	
R3122	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3123	ERJ3EKF82R0	M 82 OHM, 1/16W	1	
R3124	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3125	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3126	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3127	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3128	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3129-31	ERJ3GEYJ101	M 100 OHM,J,1/16W	3	
R3132,33	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R3134	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R3135	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3136	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R3138	ERJ3EKF82R0	M 82 OHM, 1/16W	1	
R3139	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3140	ERJ3EKF1000	M 100 OHM, 1/16W	1	
R3141	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3142	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3143	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R3144	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R3145	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3146	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R3152,53	ERJ3GEYJ470	M 47 OHM,J,1/16W	2	
R3154	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3159	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R3163	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R3164	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3166-68	ERJ3EKF75R0	M 0.75HM, 1/16W	3	
R3170	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3171	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3173	ERJ3GEYJ271	M 270 OHM,J,1/16W	1	
R3175	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3176	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R3178	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3179	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R3180	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3201	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3202	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3203	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R3204,05	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R3207	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3208	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R3209,10	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3213-21	ERJ3GEY0R00	M 0 OHM, 1/16W	9	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3224	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R3302	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3305	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3306,07	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R3308,09	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R3310	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3311	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3312	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3313	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3316	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3317	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3318	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3319	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3325	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3339	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3341,42	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3343	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3344	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3345,46	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3347	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3348	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3349,50	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3351	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3352	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3355	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3356-58	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R3359-61	ERJ3GEYJ330	M 33 OHM,J,1/16W	3	
R3362,63	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R3364-68	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R3903	ERJ6ENF6801	M 6.8KOHM, 1/10W	1	
R3904-07	ERJ6GEYJ184	M 180KOHM,J,1/10W	4	
R3918	ERJ6ENF2202	M 2.2KOHM, 1/10W	1	
R3927	ERJ6ENF6802	M 68KOHM, 1/10W	1	
R3941	ERJ6ENF1202	M 12KOHM, 1/10W	1	
R4003-11	ERJ3GEY0R00	M 0 OHM, 1/16W	9	
R4013	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4015	ERJ3GEYJ180	M 18 OHM,J,1/16W	1	
R4016	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4017,18	ERJ3GEYJ180	M 18 OHM,J,1/16W	2	
R4019	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4020	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R4021	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4026	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4031	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4036	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R4042	ERJ3EKF1600	M 160 OHM, 1/16W	1	
R4044	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4052,53	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4054	ERJ3EKF1371	M 13.7 OHM, 1/16W	1	
R4058-60	ERJ3GEY0R00	M 0 OHM, 1/16W	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4061	J0JDC0000054	CHIP INDUCTOR	1	
R4062	ERJ3EKF1691	M1.69KOHM, 1/16W	1	
R4063	J0JDC0000054	CHIP INDUCTOR	1	
R4064	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4066-68	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4069,70	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4071	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4072	J0JDC0000054	CHIP INDUCTOR	1	
R4073	EXB38V220J	RESISTOR ARRAY	1	
R4075	EXB38V220J	RESISTOR ARRAY	1	
R4076	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4077	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4078	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4079	EXB38V220J	RESISTOR ARRAY	1	
R4080-83	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4084,85	EXB38V220J	RESISTOR ARRAY	2	
R4086-88	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4089	ERJ3GEYJ361	M 360 OHM,J,1/16W	1	
R4091	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R4093	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R4095	ERJ6GEYJ361	M 360 OHM,J,1/10W	1	
R4096,97	ERJ6GEYJ561	M 560 OHM,J,1/10W	2	
R4098	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4099	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4109	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4112	ERJ3EKF8450	M 845 OHM, 1/16W	1	
R4118,19	ERJ3EKF4700	M 470 OHM, 1/16W	2	
R4123,24	ERJ3EKF3601	M 3.6KOHM, 1/16W	2	
R4134	ERJ3EKF1331	M13.3KOHM, 1/16W	1	
R4138,39	ERJ6GEYJ821	M 820 OHM,J,1/10W	2	
R4140	ERJ6GEYJ681	M 680 OHM,J,1/10W	1	
R4150-52	ERJ3GEYJ330	M 33 OHM,J,1/16W	3	
R4153	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4156	ERJ6GEYJ331	M 330 OHM,J,1/10W	1	
R4157,58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4159,60	ERJ6GEYJ471	M 470 OHM,J,1/10W	2	
R4166-68	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4169-71	ERJ3GEYJ151	M 150 OHM,J,1/16W	3	
R4172-74	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	3	
R4175	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4176,77	ERJ3EKF1200	M 120 OHM, 1/16W	2	
R4178	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4179	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4180	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4182,83	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4185-87	ERJ3EKF68R0	M 68 OHM,J,1/16W	3	
R4189-94	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R4196	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4197	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4198	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4199	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4200	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4201	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4202	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4203	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4204	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4205-07	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4208	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R4209	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4210-12	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4213	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R4214	ERJ3EKF4700	M 470 OHM, 1/16W	1	
R4215	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4217-19	ERJ3EKF1500	M 150 OHM, 1/16W	3	
R4220	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4222	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4223	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4224	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4225	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4226	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4227	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4228	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4229,30	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4231	ERJ3GEYJ911	M 910 OHM,J,1/16W	1	
R4232-35	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4237	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4238	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4240	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4241	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4242	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4244	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4246,47	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4250-53	ERJ3GEYJ680	M 68 OHM,J,1/16W	4	
R4256	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4257	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4261	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4262	ERJ3GEYJ510	M 51 OHM,J,1/16W	1	
R4263	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4265	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4267	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4268	ERJ3GEYJ510	M 51 OHM,J,1/16W	1	
R4269	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R4270	ERJ3EKF1200	M 120 OHM, 1/16W	1	
R4271	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4272	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4276	D1HG5608A002	NETWORK RESISTER	1	
R4277,78	EXB38V560J	RESISTOR ARRAY	2	
R4283	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4294,95	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4296,97	D1HG5608A002	NETWORK RESISTER	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4298	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4299-01	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4302,03	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R4304	EXB38V560J	RESISTOR ARRAY	1	
R4305,06	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4307	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4308,09	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4310,11	ERJ3EKF3302	M 33KOHM, 1/16W	2	
R4312	ERJ3EKF2202	M 22KOHM, 1/16W	1	
R4313	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4314,15	ERJ3EKF5102	M51.0KOHM, 1/16W	2	
R4321	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4322	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4324	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4325	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4326	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4327	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4328-30	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R4331	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4333	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4336	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R4338,39	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R4340,41	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R4342	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4344,45	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R4348,49	ERJ6GEYJ471	M 470 OHM,J,1/10W	2	
R4350	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4351-54	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R4355	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R4356	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R4357	ERJ3EKF2001	M 2KOHM, 1/16W	1	
R4358	ERJ3EKF4302	M 43KOHM, 1/16W	1	
R4359,60	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4361-65	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R4366-69	D1HG5608A002	NETWORK RESISTER	4	
R4370,71	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4372	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4373	D1HG5608A002	NETWORK RESISTER	1	
R4374-76	ERJ3GEYJ560	M 56 OHM,J,1/16W	3	
R4377	D1HG5608A002	NETWORK RESISTER	1	
R4381-84	ERJ3GEYJ680	M 68 OHM,J,1/16W	4	
R4386	EXB2HV680J	RESISTOR ARRAY	1	
R4388	EXB2HV680J	RESISTOR ARRAY	1	
R4390	EXB2HV680J	RESISTOR ARRAY	1	
R4392	EXB2HV680J	RESISTOR ARRAY	1	
R4393	ERJ3GEYJ750	M 75 OHM,J,1/16W	1	
R4397	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R4398	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4399-01	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4402	EXB38V680J	RESISTOR ARRAY	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4403	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4405	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4406,07	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4411	EXB2HV680J	RESISTOR ARRAY	1	
R4412	EXB38V680J	RESISTOR ARRAY	1	
R4413,14	ERJ3EKF3002	M 30KOHM, 1/16W	2	
R4421	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4422,23	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4424	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4425	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4426-30	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R4431	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4432,33	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R4435	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4437	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4439	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4440	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4441,42	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4443,44	EXB2HV220JV	RESISTOR ARRAY	2	
R4445-48	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4450	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R4451	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4452-57	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R4458	ERJ3EKF5602	M 56KOHM, 1/16W	1	
R4459	ERJ3EKF6802	M 68KOHM, 1/16W	1	
R4461,62	ERJ3GEYJ563	M 56KOHM,J,1/16W	2	
R4463	ERJ3GEYJ154	M 150KOHM,J,1/16W	1	
R4465	ERJ3EKF1502	M 15KOHM, 1/16W	1	
R4466	ERJ3GEYJ154	M 150KOHM,J,1/16W	1	
R4467	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4468,69	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4470,71	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R4472	ERJ3EKF4702	M 47KOHM, 1/16W	1	
R4473	ERJ3EKF3602	M 36KOHM, 1/16W	1	
R4474,75	ERJ3EKF4702	M 47KOHM, 1/16W	2	
R4476,77	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R4478,79	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4480-82	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4484-90	ERJ3GEY0R00	M 0 OHM, 1/16W	7	
R4494	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4495	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4497	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4498-00	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4501	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4502	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4503-05	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4506	ERJ3EKF6200	M 620 OHM, 1/16W	1	
R4507	EXB2HV220JV	RESISTOR ARRAY	1	
R4508	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R4509	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4510	EXB2HV220JV	RESISTOR ARRAY	1	
R4511,12	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4513	ERJ3GEYJ564	M 560KOHM,J,1/16W	1	
R4514	EXB2HV220JV	RESISTOR ARRAY	1	
R4515,16	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4521	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4530	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4548	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4549	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4550	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4553	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4554	ERJ3EKF1801	M 1.8KOHM, 1/16W	1	
R4556	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4557	ERJ3EKF5601	M 5.6KOHM, 1/16W	1	
R4559-61	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4567	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4568	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R4569	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R4575	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4584	J0JDC0000054	CHIP INDUCTOR	1	
R4586	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4589	ERJ3EKF4220	M 422 OHM, 1/10W	1	
R4590	ERJ3EKF5600	M 560 OHM, 1/16W	1	
R4591	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R4592	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4593,94	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R4595,96	ERJ3EKF1581	M1.58KOHM, 1/10W	2	
R4597-00	ERJ6GEYJ102	M 1KOHM,J,1/10W	4	
R4604	ERJ3EKF4220	M 422 OHM, 1/10W	1	
R4606	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4607,08	ERJ3EKF3001	M 3KOHM, 1/16W	2	
R4609	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4610	ERJ3EKF5600	M 560 OHM, 1/16W	1	
R4611	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4612	ERJ3EKF5760	M 576 OHM, 1/16W	1	
R4613,14	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4615	ERJ3EKF5760	M 576 OHM, 1/16W	1	
R4616,17	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4626	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4627	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4628	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4631	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4633	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4634	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4635	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4636	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4638	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4641	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4643	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4644	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4645	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4647	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4648	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4649	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4651	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4653,54	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4658	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4659	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4660	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4662	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4663	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4664-67	J0JDC0000054	CHIP INDUCTOR	4	
R4669,70	J0JDC0000054	CHIP INDUCTOR	2	
R4678	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4681,82	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4685	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4686	ERJ3EKF9100	M 910 OHM, 1/16W	1	
R4687	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R4688	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4689	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4690	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4691,92	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4693,94	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4695	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4697	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4698	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4699	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4700,01	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	2	
R4702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4703	ERJ3EKF8200	M 820 OHM, 1/16W	1	
R4704	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4706	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4709	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4711	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4712	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4713,14	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R4715	ERJ3EKF6802	M 68KOHM, 1/16W	1	
R4716-19	ERJ3GEYJ560	M 56 OHM,J,1/16W	4	
R4722,23	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R4724	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4732,33	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4740-43	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4745	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4746,47	ERJ3EKF3002	M 30KOHM, 1/16W	2	
R4748	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4749	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4750	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4751	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4752	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4753-56	ERJ3GEY0R00	M 0 OHM, 1/16W	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4757-59	ERJ3GEYJ151	M 150 OHM,J,1/16W	3	
R4760	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4761,62	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4764	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4768	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4769,70	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4778	EXB38V560J	RESISTOR ARRAY	1	
R4779	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4781	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4800-02	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4806-08	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4809-11	ERJ3GEYJ473	M 47KOHM,J,1/16W	3	
R4812	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R4816-20	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R5002,03	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5006	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5007	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5011	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5013	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R5014,15	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5017	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R5018	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5019	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R5020	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R5021	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5022	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5023	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R5024,25	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5030	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5033-35	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R5036	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5037-39	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R5040	EXB38V330J	RESISTOR ARRAY	1	
R5041,42	ERJ3GEYJ330	M 33 OHM,J,1/16W	2	
R5043	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R5044,45	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R5077,78	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5176	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5196	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R5334	D1HG5608A002	NETWORK RESISTER	1	
R5335	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5336	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R5337,38	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5347-50	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R5353	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5354	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5356	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5359	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5366	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R5367	D1HG5608A002	NETWORK RESISTER	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R5369-72	ERJ3GEYJ560	M 56 OHM,J,1/16W	4	
R5374	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5375	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5376	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R5391	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R5392,93	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5394,95	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5396	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R5399	ERJ3GEYJ182	M 1.8KOHM,J,1/16W	1	
R6501-03	EXB38V560J	RESISTOR ARRAY	3	
R6535,36	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6537,38	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R6542,43	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6546,47	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6549,50	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6562-65	EXB38V560J	RESISTOR ARRAY	4	
R6566-76	ERJ3GEYJ560	M 56 OHM,J,1/16W	11	
R6589	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6590	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R6591	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R6592,93	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R6596	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R6597	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6598,99	EXB38VR000	RESISTOR ARRAY	2	
R6600	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6601	EXB38VR000	RESISTOR ARRAY	1	
R6602	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6603	EXB38VR000	RESISTOR ARRAY	1	
R6604	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6605	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R6702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6703-05	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
R6707	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R6715	ERJ6GEYJ220	M 22 OHM,J,1/10W	1	
R6716,17	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R6718-20	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R6721	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6722,23	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R6732	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6734	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R6736	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6742	ERJ6GEYJ820	M 82 OHM,J,1/10W	1	
R6743	ERJ6GEYJ562	M 5.6KOHM,J,1/10W	1	
R6745	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6747	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R6749	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6755-59	ERJ6GEY0R00	M 0 OHM, 1/10W	5	
R6765-68	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R6771,72	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R6780-83	ERJ3GEY0R00	M 0 OHM, 1/16W	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R6784	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6785,86	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R6788-92	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R6793	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R7001	ERC12ZGK105	S 1MOHM, K,1/2W	1	⚠
R7002	ERG1SJ470P	M 47 OHM, J, 1W	1	
R7003	ERD75TAJ825	C 8.2MOHM, J,3/4W	1	⚠
R7004	ERF5ZK4R7	W 4.7 OHM, K, 5W	1	
R7005	ERC12ZGK105	S 1MOHM, K,1/2W	1	⚠
R7102	ERX1SJR27P	M0.27 OHM, J, 1W	1	
R7103	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7104	ERDS2TJ822	C 8.2KOHM, J,1/4W	1	
R7106	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7108	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7109	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7110	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7111	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7112	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7113	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7114	ERF2AJ820	W 82 OHM, J, 2W	1	PAVCCZ
R7115	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R7119	ERDS2TJ563	C 56KOHM, J,1/4W	1	
R7121	ERDS2TJ431	C 430 OHM, J,1/4W	1	
R7123	ERDS2TJ222	C 2.2KOHM, J,1/4W	1	
R7124	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7125	ER0S2CKF1052	M10.5KOHM, F,1/4W	1	
R7126	ER0S2CKF1002	M 10KOHM, F,1/4W	1	
R7127-29	ERJ6GEYJ102	M 1KOHM,J,1/10W	3	
R7204	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7205,06	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R7207	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7208	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7209	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7210,11	ERJ6GEYJ473	M 47KOHM,J,1/10W	2	
R7212	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7213-16	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	4	
R7217	ERDS2TJ102	C 1KOHM, J,1/4W	1	
R7218	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7219	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7220	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7221	ERJ14YJ222	M 22KOHM, J,1/4W	1	
R7223	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7224	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R7225	ERJ14YJ222	M 22KOHM, J,1/4W	1	
R7226	ERG2FJ560H	M 56 OHM, J, 2W	1	
R7227	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7228,29	ERJ6GEYJ473	M 47KOHM,J,1/10W	2	
R7232	ERJ14YJ332	M 33KOHM, J,1/4W	1	
R7234,35	ERJ6GEY0R00	M 0 OHM, 1/10W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7236	ERJ14YJ332	M 33KOHM, J,1/4W	1	
R7237,38	ERJ6GEYJ223	M 22KOHM,J,1/10W	2	
R7241	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7242	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7243	ERJ6ENF1002	M 10KOHM, 1/10W	1	
R7247	ERJ6ENF2702	M 27KOHM, 1/10W	1	
R7248	ERDS2TJ102	C 1KOHM, J,1/4W	1	
R7250	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7300	K5G4023A0003	FUSE	1	
R7301	ERJ6ENF1801	M 1.8KOHM, 1/10W	1	
R7302	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7303	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7304	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7305	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7400	K5G4023A0003	FUSE	1	
R7402	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7403	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7404	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7405	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7406	ERJ6ENF3401	M 3.4KOHM, 1/10W	1	
R7407	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7501,02	ERJ6GEYJ223	M 22KOHM,J,1/10W	2	
R7503	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7504	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7505	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7506	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7507	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7508	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7509	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7510	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7513,14	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	2	
R7602	ERG1SJ330P	M 33 OHM, J, 1W	1	
R7603	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7702	ERJ6ENF1001	M 1KOHM, 1/10W	1	
R7703	ERJ6ENF3241	M3.24KOHM, 1/10W	1	
R7704	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7705	ERJ12YJ471	M 470OHM,J, 1/2W	1	
R7707	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7708	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7709	ERDS2TJ472	C 4.7KOHM, J,1/4W	1	
R7710	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7711	ERDS2TJ472	C 4.7KOHM, J,1/4W	1	
R7751	ERJ6ENF1001	M 1KOHM, 1/10W	1	
R7752	ERJ6ENF3091	M3.09KOHM, 1/10W	1	
R7753	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7851	ERG1SJ102P	M 1KOHM, J, 1W	1	
R7852	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7853	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R7855	ERJ6ENF2701	M 2.7KOHM, 1/10W	1	
R7856	ERJ6ENF1001	M 1KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7953	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7955	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7960	K5G2523A0003	FUSE	1	
R8003,04	ERJ2GEJ181	M 180 OHM, J,0.063W	2	
R8006	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8008	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R8010-12	ERJ2GEJ103	M 10KOHM, J,0.063W	3	
R8014,15	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R8016	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8020-22	ERJ2GEJ103	M 10KOHM, J,0.063W	3	
R8023	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8024-26	ERJ2GEJ104	M 100KOHM, J,0.063W	3	
R8027	D1HG5608A002	NETWORK RESISTER	1	
R8028-30	ERJ2GEJ560	M 56 OHM, J,0.063W	3	
R8033	ERJ2GEJ472	M 4.7KOHM, J,0.063W	1	
R8034,35	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R8036	ERJ3GEYJ163	M 16KOHM,J,1/16W	1	
R8039,40	ERJ2GEJ472	M 4.7KOHM, J,0.063W	2	
R8041	ERJ2GEJ154	M 150KOHM, J,0.063W	1	
R8046	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R8047-50	ERJ2GEJ101	M 100 OHM, J,0.063W	4	
R8051	EXB38V330J	RESISTOR ARRAY	1	
R8052-55	ERJ2GEJ103	M 10KOHM, J,0.063W	4	
R8056	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R8057	ERJ2GEJ680	M 68 OHM, J,0.063W	1	
R8058	EXB38V330J	RESISTOR ARRAY	1	
R8059	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8073	ERJ2GEJ105	M 1MOHM, J,0.063W	1	
R8074,75	ERJ2GEJ181	M 180 OHM, J,0.063W	2	
R8076	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8078	ERJ2GEJ222	M 2.2KOHM, J,0.063W	1	
R8079	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8084,85	D1HG1218A002	NETWORK RESISTER	2	
R8086-88	ERJ2GEJ560	M 56 OHM, J,0.063W	3	
R8101	ERJ3GEYF181	M 180 OHM,J,1/16W	1	PAVCCZ
R8104	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8106,07	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R8108	ERJ3EKF2212	M 22KOHM, 1/16W	1	
R8109	ERJ3EKF2402	M 24KOHM, 1/16W	1	
R8110	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8112,13	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R8115	ERJ3GEYF272	M 2.7KOHM, 1/16W	1	
R8117	ERJ6GEYJ471	M 470 OHM,J,1/10W	1	
R8124	ERJ2GEJ471	M 470 OHM, J,0.063W	1	
R8127	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8131	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8132	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8133	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R8136	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8137	ERJ2GEJ121	M 120 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8140,41	ERJ3EKF1001	M 1KOHM, 1/16W	2	
R8144,45	D1HG5608A002	NETWORK RESISTER	2	
R8148,49	D1HG3908A002	NETWORK RESISTER	2	
R8150-59	ERJ2GEJ390	M 39 OHM, J,0.063W	10	
R8161,62	ERJ2GEJ390	M 39 OHM, J,0.063W	2	
R8163	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8165	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8167-71	ERJ2GEJ103	M 10KOHM, J,0.063W	5	
R8172	ERJ2GEJ473	M 47KOHM,J,0.063W	1	
R8173	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8175	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R8176	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8180-82	ERJ2GEJ560	M 56 OHM, J,0.063W	3	
R8183	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8184	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R8185,86	ERJ2GEJ101	M 100 OHM, J,0.063W	2	
R8187	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8193	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8195	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8196	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R8201-04	ERJ2GEJ103	M 10KOHM, J,0.063W	4	
R8214	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8215	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8216,17	ERJ2GEJ560	M 56 OHM, J,0.063W	2	
R8218,19	D1HG33080001	NETWORK RESISTER	2	
R8220-22	D1HG5608A002	NETWORK RESISTER	3	
R8223	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8225	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8232,33	ERJ2GEJ330	M 33 OHM, J,0.063W	2	
R8235	ERJ2GEJ330	M 33 OHM, J,0.063W	1	
R8238-43	ERJ2GEJ330	M 33 OHM, J,0.063W	6	
R8245,46	ERJ2GEJ330	M 33 OHM, J,0.063W	2	
R8250	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8252-54	ERJ2GEJ330	M 33 OHM, J,0.063W	3	
R8255-57	ERJ2GEJ103	M 10KOHM, J,0.063W	3	
R8259	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R8260-63	ERJ2GEJ560	M 56 OHM, J,0.063W	4	
R8264-68	ERJ2GEJ103	M 10KOHM, J,0.063W	5	
R8269	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8271	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8272	EXB38V560J	RESISTOR ARRAY	1	
R8273	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8275	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8277	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8279	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8282	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8284	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
R8286,87	ERJ2GEJ560	M 56 OHM, J,0.063W	2	
R8290	EXB38V560J	RESISTOR ARRAY	1	
R8291,92	ERJ2GEJ560	M 56 OHM, J,0.063W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8308	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8310-15	ERJ3EKF75R0	M 0.75HM, 1/16W	6	
R8319	ERJ3EKF2702V	M27.0KOHM, 1/16W	1	
R8320	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R8321	ERJ3EKF8201	M 8.2KOHM, 1/16W	1	
R8349	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R8350	ERJ3EKF8201	M 8.2KOHM, 1/16W	1	
R8351	ERJ3EKF1002	M 10KOHM, 1/16W	1	
R8352	ERJ3EKF2702V	M27.0KOHM, 1/16W	1	
R8353	ERJ2GEJ332	M 3.3KOHM, J,0.063W	1	
R8354	ERJ2GEJ272	M 2.7KOHM, J,0.063W	1	
R8355,56	EXB2HV104JV	RESISTOR ARRAY	2	
R8357,58	ERJ2GEJ473	M 47KOHM,J,0.063W	2	
R8366	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8367,68	ERJ2GEJ560	M 56 OHM, J,0.063W	2	
R8372-76	ERJ2GEJ560	M 56 OHM, J,0.063W	5	
R8386	J0JCC0000078	CHIP INDUCTOR	1	
R8401	ERJ8GEY0R00	M 0 OHM, 1/8W	1	
R8402	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R8414	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8415,16	ERJ2GEJ223	M 22KOHM, J,0.063W	2	
R8417,18	EXB38V473J	RESISTOR ARRAY	2	
R8419,20	EXB38V101J	RESISTOR ARRAY	2	
R8421	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8422	ERJ3GEYF331	M 330 OHM,J,1/16W	1	PAVCCZ
R8424	ERJ8RSJR10	M 1 OHM, 1/8W	1	
R8425,26	EXB38V101J	RESISTOR ARRAY	2	
R8427-31	ERJ2GEJ560	M 56 OHM, J,0.063W	5	
R8433,34	EXB38V560J	RESISTOR ARRAY	2	
R8435	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R8443	EXB38V560J	RESISTOR ARRAY	1	
R8444	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R8445,46	ERJ2GEJ151	M 150 OHM, J,0.063W	2	
R8447	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R8448	ERJ2GEJ473	M 47KOHM,J,0.063W	1	
R8449,50	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R8451	EXB38V104J	RESISTOR ARRAY	1	
R8452	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R8453	EXB38V104J	RESISTOR ARRAY	1	
R8454	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R8456-59	EXB38V560J	RESISTOR ARRAY	4	
R8460	ERJ2GEJ104	M 100KOHM, J,0.063W	1	
R8461	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8462,63	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R8464	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8465	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8466	EXB38V560J	RESISTOR ARRAY	1	
R8467,68	ERJ2GEJ560	M 56 OHM, J,0.063W	2	
R8469	EXB38V151J	RESISTOR ARRAY	1	
R8474	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8475,76	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R8477,78	ERJ2GEJ560	M 56 OHM, J,0.063W	2	
R8479	ERJ2GEJ203	M 20KOHM,J,0.063W	1	
R8480-82	ERJ2GEJ560	M 56 OHM, J,0.063W	3	
R8483	ERJ2GEJ203	M 20KOHM,J,0.063W	1	
R8484	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R8485	ERJ2GEJ333	M 33KOHM, J,0.063W	1	
R8486	ERJ2GEJ223	M 22KOHM, J,0.063W	1	
R8487	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8488	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8489	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R8491	ERJ3EKF9102	M91.0KOHM, 1/16W	1	
R8492	ERJ3EKF9101	M 9.1KOHM, 1/16W	1	
R8493	ERJ3EKF9102	M91.0KOHM, 1/16W	1	
R8494	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R8495	EXB38V151J	RESISTOR ARRAY	1	
R8496	EXB38V560J	RESISTOR ARRAY	1	
R8497	ERJ3EKF7500	M 750 OHM, 1/16W	1	
R8498	ERJ3EKF6800	M 680 OHM, 1/16W	1	
R8499	ERA3YED243	M 24KOHM 1/16W	1	
R8500	ERJ3EKF1052	M10.5KOHM, 1/16W	1	
R8501	ERJ3EKF2322	M23.2KOHM, 1/16W	1	
R8502	ERJ3EKF1003	M 100KOHM, 1/16W	1	
R8503,04	ERJ2GEJ103	M 10KOHM, J,0.063W	2	
R8505	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R8538,39	ERJ2GEJ101	M 100 OHM, J,0.063W	2	
R8546	ERJ2GEJ333	M 33KOHM, J,0.063W	1	
R8547	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
R8602-04	ERJ2GEJ101	M 100 OHM, J,0.063W	3	
R8605,06	ERJ2GEJ104	M 100KOHM, J,0.063W	2	
R8608	ERJ2GEJ105	M 1MOHM, J,0.063W	1	
R8610	ERJ2GEJ332	M 3.3KOHM, J,0.063W	1	
R8611	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R8614	ERJ2GEJ221	M 220 OHM, J,0.063W	1	
R8615	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8706-09	ERJ2GEJ103	M 10KOHM, J,0.063W	4	
R8711	ERJ2GEJ560	M 56 OHM, J,0.063W	1	
R8712	EXB38V560J	RESISTOR ARRAY	1	
R8713	EXB38V103J	RESISTOR ARRAY	1	
R8714-16	ERJ2GEJ560	M 56 OHM, J,0.063W	3	
R8802	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8821	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8827,28	ERJ2GEJ392	M 3.9KOHM, J,0.063W	2	
R8830	ERJ2GEJ101	M 100 OHM, J,0.063W	1	
R8862-64	ERJ2GE0R00	M 0.0 OHM, J,0.063W	3	
R8899,00	ERJ2GE0R00	M 0.0 OHM, J,0.063W	2	
R8912	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8923	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8926	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8928	ERJ2GEJ101	M 100 OHM, J,0.063W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R8930	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R8931,32	ERJ2GEJ392	M 3.9KOHM, J,0.063W	2	
R8933	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8935	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R8954	ERJ2GEJ103	M 10KOHM, J,0.063W	1	
R8960	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8962-64	ERJ2GEJ101	M 100 OHM, J,0.063W	3	
R8967,68	EXB2HV473JV	RESISTOR ARRAY	2	PAVCCZ
R8969-71	ERJ2GEJ473	M 47KOHM,J,0.063W	3	
R8987	ERJ2GE0R00	M 0.0 OHM, J,0.063W	1	
R8990	ERJ2GEJ102	M 1KOHM, J,0.063W	1	
RL7001,02	K6B1ADA00010	RELAY	2	⚠
RM1001	PNA4701M05TV	REMOCO RECEIVER	1	
RTL	ETXMM565EBB	POWER UNIT	1	PAVCCZ ⚠
RTL	RD-SD008P	SD MODULE	1	PAVCCZ ⚠
RTL	TNP0EXV01AD	CIRCUIT BOARD XV	1	PAVCCZ ⚠
RTL	TNPA3487AA	CIRCUIT BOARD AP	1	PAVCCZ ⚠
RTL	TNPA3489AB	CIRCUIT BOARD G	1	PAVCCZ ⚠
RTL	TNPA3490AC	CIRCUIT BOARD V	1	PAVCCZ ⚠
RTL	TNPA3491AA	CIRCUIT BOARD GP	1	PAVCCZ ⚠
RTL	TNPA3492AB	CIRCUIT BOARD K	1	PAVCCZ ⚠
RTL	TNPA3615AA	CIRCUIT BOARD GS	1	PAVCCZ ⚠
RTL	TXN/H10LLM	CIRCUIT BOARD H	1	PAVCCZ ⚠
RTL	TXNDG10LLM	CIRCUIT BOARD DG	1	32INCH PAVCCZ ⚠
RTL	TXNDG10LPM	CIRCUIT BOARD DG	1	26INCH PAVCCZ ⚠
RTL	TXNDV10LLM	CIRCUIT BOARD DV	1	PAVCCZ ⚠
SN1001	B3L000000020	IC	1	
SW001	ESB92S11B	SWITCH	1	⚠
SW3802-06	EVQPB105K	SWITCH	5	
T7101	ETS25AD1N6AG	SWITCHING TRANS	1	⚠
TU3201	ENGF7301GF	TUNER	1	PAVCCZ ⚠
TU8001	ENV87H06D8F	TUNER	1	PAVCCZ ⚠
V1	K1KA10BA0062	10P CONNECTOR	1	
X1101	H0J600400006	CRYSTAL	1	
X2101	H0J184500027	CRYSTAL	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
X4001	H0J202500016	CRYSTAL	1	
X4002	H0J270500087	CRYSTAL	1	
X8003	H0J241500001	CRYSTAL	1	PAVCCZ
X8006	H0J270500090	CRYSTAL	1	PAVCCZ
XV01	K1KAB0A00011	CONNECTOR	1	
ZA2101-03	TESA169	SHIELD CLIP	3	
ZA2105,06	TESA169	SHIELD CLIP	2	
ZA2108,09	TESA169	SHIELD CLIP	2	
ZA3201-03	K9ZZ00000424	CONNECTOR	3	
ZA4005-16	TESA169	SHIELD CLIP	12	
ZA4018-20	TESA169	SHIELD CLIP	3	
ZA5001	K4CD01000011	TERMINAL	1	
ZA5002,03	TESA169	SHIELD CLIP	2	
ZA5005	K4CD01000011	TERMINAL	1	
ZA7002-05	K9ZZ00000424	CONNECTOR	4	

14.3. Electrical Replacement Parts List (TX-32/26LX500F/P)

Note:
All parts except parts mentioned [PAVCCZ] in the Remarks column are supplied by AVC-SPC.
Parts mentioned [PAVCCZ] are supplied by PAVCCZ.

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
AP1	K1KA23A00005	23P CONNECTOR	1	
AP2	K1KA04A00576	4P CONNECTOR	1	
AP3	K1KA11A00124	11P CONNECTOR	1	
AP4,P5	K1KA23A00003	23P CONNECTOR	2	
AP6	K1KA02A00626	2P CONNECTOR	1	
AP10	K1KA02A00613	2P CONNECTOR	1	
C1004	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1005	EEEHB1C220UR	C 22PF, J, 16V	1	
C1006	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C1007	EEEHB1C220UR	C 22PF, J, 16V	1	
C1008	EEEHB0J101P	C 100PF, J, 6.3V	1	
C1009	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C1101	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1102	EEEHB1C470P	C 47PF, J, 16V	1	
C1103	EEEHB0G101R	C 100PF, J, 4V	1	
C1104,05	ECJ1XB0J105K	C 1UF, K, 16V	2	
C1106,07	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1109	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1110	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1112	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1113	EEFCD0G560R	56UF,	1	
C1115	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1116	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1117	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1119	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1120	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1121	EEEHB1C470P	C 47PF, J, 16V	1	
C1122	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1124	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1125	EEVHB1C100R	E 10UF, 16V	1	
C1126,27	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1128	EEVHB0G101R	E 100UF 4V	1	
C1129	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1130	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1131	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1132,33	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1134	EEVHB0G101R	E 100UF 4V	1	
C1135	EEEHB0G221P	C 220PF, J, 4V	1	
C1136	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1138-41	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C1142	ECJ1XC1H151J	C 150PF, J, 50V	1	
C1144	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1145	ECJ1XC1H180J	C 18PF, J, 50V	1	
C1146	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1147	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1148	ECJ1VB1H221K	C 220UF, K, 50V	1	
C1149	ECJ1XC1H220J	C 22PF, J, 50V	1	
C1150	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C1152	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1153	ECJ1VB1H221K	C 220UF, K, 50V	1	
C1154	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1156	EEVHB1C100R	E 10UF, 16V	1	
C1157,58	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1160	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C1161,62	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1164	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1165-67	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C1168	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C1169	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1170-73	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C1175,76	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C1177	EEVHB0G101R	E 100UF 4V	1	
C1178	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1179	ECJ1XB0J105K	C 1UF, K, 16V	1	
C1180,81	ECJ1XC1H271J	C 270PF, J, 50V	2	
C1182	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1183	ECJ1XC1H271J	C 270PF, J, 50V	1	
C1186	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C1187,88	ECJ1XC1H271J	C 270PF, J, 50V	2	
C1189-91	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C1199-03	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C1204,05	ECJ1XC1H102J	C 1000PF, J, 50V	2	
C1209	EEEHB0G221P	C 220PF, J, 4V	1	
C2005,06	ECJ1XC1H561J	C 560PF, J, 50V	2	
C2019-32	ECJ1XC1H561J	C 560PF, J, 50V	14	
C2051,52	ECJ3XB1C105K	C 1UF, K, 16V	2	
C2053	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2054	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2055	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2056	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2057	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2059	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C2063	EEEHB1A471UP	C 470PF, J, 10V	1	
C2064	EEEHB1C220UR	C 22PF, J, 16V	1	
C2065	EEEHB1C101UP	C 100PF, J, 16V	1	
C2105	EEEHB1C101UP	C 100PF, J, 16V	1	
C2106	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2112,13	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C2115,16	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2117	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2118,19	EEEHP1E220P	C 22PF	2	
C2123,24	ECJ2FB1A225K	C 2.2UF, K, 10V	2	
C2125,26	ECJ1XB1H102K	C 1000UF, Z, 50V	2	
C2127	EEEHB1C101UP	C 100PF, J, 16V	1	
C2128	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2129,30	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C2131	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2132	EEEHB1E470P	C 47PF, J, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2133,34	ECJ1XC1H470J	C 47PF, J, 50V	2	
C2135,36	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C2137-43	ECJ1VF1H104Z	C 0.1UF, Z, 50V	7	
C2144,45	ECJ3XB1C105K	C 1UF, K, 16V	2	
C2146	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2147	EEEHB1C101UP	C 100PF, J, 16V	1	
C2148-50	ECJ1VB1C105K	C 0.01UF, K, 16V	3	
C2151	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2152	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2153	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2154	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2155	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2156	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2157	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C2158	ECJ3XB1C105K	C 1UF, K, 16V	1	
C2159,60	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C2161	EEEHB1C101UP	C 100PF, J, 16V	1	
C2162-65	ECJ1VB1C105K	C 0.01UF, K, 16V	4	
C2166,67	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C2168,69	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C2172	ECJ1VB1H332K	C 3300PF, K, 50V	1	
C2173	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C2174	ECJ1VB1H332K	C 3300PF, K, 50V	1	
C2175-77	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C2178,79	EEEHB1C100R	C 10PF, J, 16V	2	
C2181	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2183	EEEHB1H3R3R	C 3.3PF, J, 50V	1	
C2184,85	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C2186	EEEHB1C101UP	C 100PF, J, 16V	1	
C2189,90	ECJ1VF1C105Z	C 1UF, Z, 16V	2	
C2191	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2192	EEEHB1C100R	C 10PF, J, 16V	1	
C2193,94	ECJ1VF1C105Z	C 1UF, Z, 16V	2	
C2195	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2196	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2198	EEEHB1C101UP	C 100PF, J, 16V	1	
C2199	ECJ1VC1H560J	C 56PF, J, 50V	1	
C2200	ECJ1XC1H470J	C 47PF, J, 50V	1	
C2201,02	ECJ1XC1H030C	C 3PF, C, 50V	2	
C2203	ECJ1VC1H100C	C 10PF, C, 50V	1	
C2204	ECJ1XC1H220J	C 22PF, J, 50V	1	
C2206	EEEHB1C101UP	C 100PF, J, 16V	1	
C2207,08	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C2211	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2212	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2213	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2214	ECJ1XB1H102K	C 1000UF, Z, 50V	1	
C2215	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C2216	ECJ3YB1A106M	C 10UF, M,6.3V	1	
C2217	EEEHB1E470P	C 47PF, J, 25V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2218-23	ECJ3XB1C105K	C 1UF, K, 16V	6	
C2301,02	ECJ1VB1H223K	C 0.22UF, K, 50V	2	
C2315	ECJ1VB1H123K	C 0.012UF, K, 50V	1	
C2317,18	ECJ1VB1H123K	C 0.012UF, K, 50V	2	
C2320	ECJ1VB1H123K	C 0.012UF, K, 50V	1	
C2326,27	ECJ1VB1C473K	C 0.047UF, K, 16V	2	
C2328,29	F2A1C101A121	E 100UF, 16V	2	
C2331,32	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C2335	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2347	EEEHB1C220UR	C 22PF, J, 16V	1	
C2348	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2349	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C2350	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C2351	EEEHB1H100P	C 10PF, J, 50V	1	
C2352	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2353	EEEHB1C101UP	C 100PF, J, 16V	1	
C2356	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C2357	EEEHB1C101UP	C 100PF, J, 16V	1	
C2366,67	ECJ1XC1H330J	C 33PF, J, 50V	2	
C2520	ECA1VM471	E 470UF, 35V	1	
C2521	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2522-24	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2525	ECA1EHG470	E 47UF, 25V	1	
C2526	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2527	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2528	ECA1EHG102	E 1000UF, 25V	1	
C2529	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2530	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2531	ECA1HM2R2	E 2.2UF, 50V	1	
C2534	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2535,36	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2537	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2538-40	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2541	ECA1EHG470	E 47UF, 25V	1	
C2542	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2543	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2544	ECA1EHG102	E 1000UF, 25V	1	
C2545	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2546	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2547	ECA1HM2R2	E 2.2UF, 50V	1	
C2550	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2551,52	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2553	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2554-56	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2557	ECA1EHG470	E 47UF, 25V	1	
C2558	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2559	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2560	ECA1EHG102	E 1000UF, 25V	1	
C2561	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2562	ECJ1VB1H153K	C 0.015UF, K, 50V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C2563	ECA1HM2R2	E 2.2UF, 50V	1	
C2566	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2567,68	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2569	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2570-72	ECJ1VB1H222K	C 2200PF, K, 50V	3	
C2573	ECA1EHG470	E 47UF, 25V	1	
C2574	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2575	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2576	ECA1EHG102	E 1000UF, 25V	1	
C2577	ECJ2FB1E224K	C 22UF, K, 25V	1	
C2578	ECJ1VB1H153K	C 0.015UF, K, 50V	1	
C2579	ECA1HM2R2	E 2.2UF, 50V	1	
C2582	ECJ2FB1E105K	C 1UF, K, 25V	1	
C2583,84	ECJ1VB1H221K	C 220UF, K, 50V	2	
C2585	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C2586-89	ECJ2XB1H153K	C 0.015UF, K, 50V	4	
C2590-93	ECJ1XB1H102K	C 1000UF, Z, 50V	4	
C2611-14	ECJ2FB1E475M	C 4.7UF, K, 25V	4	
C3001-03	ECJ1XB1H102K	C 1000UF, Z, 50V	3	
C3005-07	ECJ1VF1H104Z	C 0.1UF, Z, 50V	3	
C3014	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3015	ECJ3XB1C106M	C 1.0UF, K, 16V	1	
C3016,17	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3018	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3019-28	ECJ1VB1A105K	C 0.01UF, Z, 50V	10	
C3029	ECJ2VF1C105Z	C 1UF, Z, 16V	1	
C3031-33	ECJ1VB1A105K	C 0.01UF, Z, 50V	3	
C3035,36	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3038	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3039	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3040	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3041	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3042,43	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3044	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3045,46	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C3047	ECJ1VB1A105K	C 0.01UF, Z, 50V	1	
C3048	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3049-56	ECJ1VB1A105K	C 0.01UF, Z, 50V	8	
C3057	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3058	EEEHB1C471UP	C 470PF, J, 16V	1	
C3059	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C3060,61	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C3062,63	ECJ1VB1A105K	C 0.01UF, Z, 50V	2	
C3064	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3066	ECEA1CN470U	E 47UF, 16V	1	
C3067	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3068	ECEA1CN470U	E 47UF, 16V	1	
C3069	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3070	ECEA1CN470U	E 47UF, 16V	1	
C3071	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C3074	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3201,02	ECJ1XF1C104Z	C 0.1UF, Z, 16V	2	
C3206	ECJ1VF1C105Z	C 1UF, Z, 16V	1	
C3207	ECA1AHG102	E 1000UF, 10V	1	
C3209	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3210	F2A1H100A120	E 10UF, 50V	1	
C3212	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3214	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3216	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3227	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3229-31	ECJ1XF1C104Z	C 0.1UF, Z, 16V	3	
C3233	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3235	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3236	F2A1H100A120	E 10UF, 50V	1	
C3237,38	ECJ1XC1H330J	C 33PF, J, 50V	2	
C3240	ECJ1VF1H104Z	C 0.1UF, Z, 50V	1	
C3241-44	ECJ1XF1C104Z	C 0.1UF, Z, 16V	4	
C3245	EEEHB1C220R	C 22PF, J, 16V	1	
C3246,47	EEEHB1A330R	C 33PF, J, 10V	2	
C3248	EEEHB0J220R	C 22PF, J, 6.3V	1	
C3249	EEEHB1H100P	C 10PF, J, 50V	1	
C3305	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3307	EEEHB1C101UP	C 100PF, J, 16V	1	
C3309	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C3848,49	ECJ2XC1H561J	C 560PF, J, 50V	2	
C3850,51	ECJ1VF1H104Z	C 0.1UF, Z, 50V	2	
C4001	EEVHB0G101R	E 100UF 4V	1	
C4002	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4003	EEFCD0G560R	56UF,	1	
C4004,05	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4006	EEEHB1C100R	C 10PF, J, 16V	1	
C4007	EEVHP1C100R	E 10UF, 16V	1	
C4008	ECJ2FB1C684K	C 68UF, Z, 16V	1	
C4009	ECJ1XB1C393K	C 0.039UF, K, 16V	1	
C4012	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4013	EEVHB0J470R	E 47UF, 6.3V	1	
C4014,15	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4016	EEVHB1E330	E 33UF, 25V	1	
C4017,18	ECJ3XB0J106M	C 10UF, M,6.3V	2	
C4019	EEVHB1C100R	E 10UF, 16V	1	
C4020-22	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4024	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4025	EEVHB0J470R	E 47UF, 6.3V	1	
C4026	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4027-29	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4030	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4031-36	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4038	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4039	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4040	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4041	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4042,43	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4044	ECJ1VB1C823K	C 0.082UF, K, 16V	1	
C4045	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4047,48	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4049	EEVHB0J470R	E 47UF, 6.3V	1	
C4050	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4051	EEVHB0G101R	E 100UF 4V	1	
C4052	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4053-55	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4056-58	ECJ3XB0J106M	C 10UF, M,6.3V	3	
C4059,60	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4061	EEVHB1E330	E 33UF, 25V	1	
C4063	ECJ1XC1H050C	C 5PF, C, 50V	1	
C4075,76	ECJ1XC1H220J	C 22PF, J, 50V	2	
C4079	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4084	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4086	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4091,92	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4093-95	ECJ1VB1C105K	C 0.01UF, K, 16V	3	
C4097	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4099	EEVHB0J470R	E 47UF, 6.3V	1	
C4100	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4101-04	ECJ1VB1H103K	C 0.001UF, K, 50V	4	
C4105	EEVHB0G101R	E 100UF 4V	1	
C4106	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4107	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4108	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4109	EEVHB0J470R	E 47UF, 6.3V	1	
C4110	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4112,13	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4114	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4115	ECJ3YB0J335K	C 33UF, J, 25V	1	
C4116	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4118	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4119-22	ECJ1XB1C104K	C 0.1UF, Z, 16V	4	
C4124,25	ECJ1XC1H102J	C 1000PF, J, 50V	2	
C4127,28	ECJ1VB0J225K	C 2.2UF, K, 6.3V	2	
C4129	EEEHB0G221P	C 220PF, J, 4V	1	
C4130,31	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4132	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4135	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4137	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4138-40	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4141,42	ECJ1XC1H102J	C 1000PF, J, 50V	2	
C4143-52	ECJ1XB1C104K	C 0.1UF, Z, 16V	10	
C4153	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4154	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4155	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4156	ECJ1XB0J105K	C 1UF, K, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4157	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4158	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4159	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4160	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4163	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4164	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4165	ECJ1XC1H180J	C 18PF, J, 50V	1	
C4166,67	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4168	ECJ1XC1H150J	C 15PF, J, 50V	1	
C4169	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4170	ECJ1VB1H562K	C 5600PF, K, 50V	1	
C4171	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4172	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4173	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4175	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C4176,77	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4178,79	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4183,84	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4186-88	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4189	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4190,91	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4192,93	ECJ1VB0J225K	C 2.2UF, K, 6.3V	2	
C4194	ECJ3YB0J335K	C 33UF, J, 25V	1	
C4195	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4198	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4199,00	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4201	EEEHB1C470P	C 47PF, J, 16V	1	
C4202	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4203	ECJ1XC1H181J	C 180PF, J, 50V	1	
C4205	ECJ1XC1H181J	C 180PF, J, 50V	1	
C4206,07	ECJ1XC1H330J	C 33PF, J, 50V	2	
C4209	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4210	EEEHB1C470P	C 47PF, J, 16V	1	
C4219	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C4220	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4221,22	EEEHP1C100R	C 10PF, J, 16V	2	
C4223	ECJ1VB1H272K	C 2700PF, K, 50V	1	
C4224	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4225	EEEHB1C100R	C 10PF, J, 16V	1	
C4226	F1J0J1060004	C 0.010UF, K, 16V	1	
C4228	F1J0J1060004	C 0.010UF, K, 16V	1	
C4230	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4231	ECJ1VB1H272K	C 2700PF, K, 50V	1	
C4232	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4233	EEEHB1C470P	C 47PF, J, 16V	1	
C4234	EEVHB0J470R	E 47UF, 6.3V	1	
C4235-46	ECJ1XB1C104K	C 0.1UF, Z, 16V	12	
C4247	EEVHB0J470R	E 47UF, 6.3V	1	
C4248-52	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C4255-57	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4258	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4259	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4262-67	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4268	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4269	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4270	EEVHB0J470R	E 47UF, 6.3V	1	
C4271-84	ECJ1XB1C104K	C 0.1UF, Z, 16V	14	
C4286	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4287-89	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4293,94	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4295	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4296	EEEHB0J330R	C 33PF, J, 6.3V	1	
C4297,98	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4299	EEEHB0J220R	C 22PF, J, 6.3V	1	
C4300	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4308	EEVHB0J470R	E 47UF, 6.3V	1	
C4309,10	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4311	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4312	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4313	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4314	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4315	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4316	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4317	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4318,19	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4320	EEVHB0G221P	E 220UF, 4V	1	
C4322-24	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4325	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4326	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4327	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4328	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4329	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4330	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4331	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4332,33	ECJ1XC1H150J	C 15PF, J, 50V	2	
C4334,35	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4336	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4337	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4338	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4339	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4340	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4341	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4342	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4343	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4344	EEEHB1A101P	C 100PF, J, 10V	1	
C4345	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4346	EEEHB1A101P	C 100PF, J, 10V	1	
C4347	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4348	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4349	EEFCD0G560R	56UF,	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4350	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4351	EEEHB0G221P	C 220PF, J, 4V	1	
C4353	ECJ1VB1E223K	C 0.023UF, K, 25V	1	
C4356	ECJ1VB1E223K	C 0.023UF, K, 25V	1	
C4357	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4360	EEEHB0G221P	C 220PF, J, 4V	1	
C4362,63	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4364	ECJ3YB1C475K	C 0.047UF, K, 16V	1	
C4367	EEEHB1A101P	C 100PF, J, 10V	1	
C4368,69	ECJ3YB1C475K	C 0.047UF, K, 16V	2	
C4370	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4371,72	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4373,74	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4375	EEVHB0J470R	E 47UF, 6.3V	1	
C4376-96	ECJ1XB1C104K	C 0.1UF, Z, 16V	21	
C4397	EEVHB0J470R	E 47UF, 6.3V	1	
C4398-10	ECJ1XB1C104K	C 0.1UF, Z, 16V	13	
C4411	EEVHB0J470R	E 47UF, 6.3V	1	
C4412	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4415-20	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4421	EEVHB0J470R	E 47UF, 6.3V	1	
C4422	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4424	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4425	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4426-30	ECJ1XB1C104K	C 0.1UF, Z, 16V	5	
C4431	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4432-34	ECJ1VB1H103K	C 0.001UF, K, 50V	3	
C4435	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4436-41	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4444	ECJ1VB0J334K	C 0.33UF, K,6.3V	1	
C4445	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4447	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4448	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4449	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4450	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4453	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4456	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4457,58	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4459	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4460	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4461	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4462	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4465	ECJ1XC1H820J	C 82PF, J, 50V	1	
C4468	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4470,71	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4472	EEEHB1C470P	C 47PF, J, 16V	1	
C4473	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4474	EEVHB0J220	E 22UF 6.3V	1	
C4476	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4478	EEEHB1C470P	C 47PF, J, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4488-91	ECJ1VB1H103K	C 0.001UF, K, 50V	4	
C4503	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4504	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4506	ECJ1VB0J474K	C 0.47UF, K, 6.3V	1	
C4507	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4517,18	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4519	EEEHB1C470P	C 47PF, J, 16V	1	
C4524	EEVHB0J470R	E 47UF, 6.3V	1	
C4525,26	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C4527	EEEHB1C100R	C 10PF, J, 16V	1	
C4529	EEEHB1C470P	C 47PF, J, 16V	1	
C4536	EEEHB0J101P	C 100PF, J, 6.3V	1	
C4540	EEEHB0G221P	C 220PF, J, 4V	1	
C4547	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4549-75	ECJ1XC1H102J	C 1000PF, J, 50V	27	
C4577-79	ECJ1XB1C104K	C 0.1UF, Z, 16V	3	
C4584	ECJ1XC1H680J	C 68PF, J, 50V	1	
C4586,87	ECJ2FB0J335K	C 3.3UF, K, 16V	2	
C4588	EEEHB1A101P	C 100PF, J, 10V	1	
C4591	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4592	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4594	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4595	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4596,97	ECJ1VB1C105K	C 0.01UF, K, 16V	2	
C4598-40	ECJ1XC1H102J	C 1000PF, J, 50V	43	
C4650,51	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4652,53	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4654	EEFCD0G560R	56UF,	1	
C4661	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4662,63	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4666	EEFCD0G560R	56UF,	1	
C4667-69	ECJ1XB0J105K	C 1UF, K, 16V	3	
C4671	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4672	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C4673	ECJ1VB1H682K	C 6800PF, K, 50V	1	
C4675	ECJ1VB1C105K	C 0.01UF, K, 16V	1	
C4678-81	ECJ1XB0J105K	C 1UF, K, 16V	4	
C4683	ECJ1XB0J105K	C 1UF, K, 16V	1	
C4684-89	ECJ1XB1C104K	C 0.1UF, Z, 16V	6	
C4694	EEVHB1E330	E 33UF, 25V	1	
C4695,96	ECJ1XB0J105K	C 1UF, K, 16V	2	
C4697	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4698	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4699	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4702	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4703	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4704	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4705	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4706	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4707	ECJ1XC1H102J	C 1000PF, J, 50V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4710	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4711	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4712	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4713	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4716	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4717	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4720	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4721	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4722	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4723	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4726	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4727	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4730	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4731	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4732	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4733	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4736	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4737	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4738	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4739	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4740	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4741	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4744	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4745	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4746	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4747	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4748	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4749	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4752	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4753	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4754	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4755	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4756	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4757	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4758	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4759	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4760	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4761	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4762	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4763	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4764	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4765	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4766	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4767	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4768	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4769	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4770	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4771	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	
C4772	**ECJ1XB1C104K**	**C 0.1UF, Z, 16V**	**1**	
C4773	**ECJ1XC1H102J**	**C 1000PF, J, 50V**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C4774	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4775	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4776	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4777	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4779	ECJ3XB0J106M	C 10UF, M,6.3V	1	
C4780	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4781	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4782,83	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4784	ECJ1XC1H102J	C 1000PF, J, 50V	1	
C4785,86	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C4788	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C4791	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4792	ECJ1XC1H101J	C 100PF, J, 50V	1	
C4793	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4794,95	ECJ1XC1H101J	C 100PF, J, 50V	2	
C4796	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C4805	ECJ2FB0J335K	C 3.3UF, K, 16V	1	
C5001	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5004	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C5005	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5013	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5014	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5016	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5017	ECJ1VF1A105Z	C 1UF, Z, 10V	1	
C5018	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5019	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5020	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5030	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5034	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5036	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5039,40	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C5044	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5046	ECJ1XC1H471J	C 470PF, J, 50V	1	
C5047	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5049	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5054	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5056	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5057	ECJ1XC1H101J	C 100PF, J, 50V	1	
C5133	ECJ2FF1C475Z	C 0.047UF, Z, 16V	1	
C5134	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C5135,36	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C5137	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5140,41	ECJ1VF1A105Z	C 1UF, Z, 10V	2	
C5143	ECJ1VB1H102K	C 1000PF, K, 50V	1	
C5144	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6521	EEEHB1C220R	C 22PF, J, 16V	1	
C6522	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6529	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6530	ECJ1VB0J225K	C 2.2UF, K, 6.3V	1	
C6531	EEEHB1C220R	C 22PF, J, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C6536	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6537	ECJ1XF1C104Z	C 0.1UF, Z, 16V	1	
C6538,39	ECJ1VB1H103K	C 0.001UF, K, 50V	2	
C6546	EEEHB1A330R	C 33PF, J, 10V	1	
C6549-54	ECJ1XC1H680J	C 68PF, J, 50V	6	
C6556	ECJ1XC1H680J	C 68PF, J, 50V	1	
C6559-88	ECJ1XC1H680J	C 68PF, J, 50V	30	
C6590-07	ECJ1XC1H101J	C 100PF, J, 50V	18	
C6706	EEEHB1C470P	C 47PF, J, 16V	1	
C6707	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6709,10	F1H1A1050028	E 1UF, 50V	2	
C6712,13	ECJ1XB1C104K	C 0.1UF, Z, 16V	2	
C6715	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6716	ECJ1VB1H103K	C 0.001UF, K, 50V	1	
C6730	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6733	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6740	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6741	EEEHB1C100R	C 10PF, J, 16V	1	
C6747	ECJ1XB1C104K	C 0.1UF, Z, 16V	1	
C6748	F1H1A1050028	E 1UF, 50V	1	
C6749	ECJ1VB1C103K	C 0.010UF, K, 16V	1	
C6750	EEVHB1C101P	E 100UF, 16V	1	
C7002,03	ECKDNA331MB7	C 330PF, M,	2	⚠
C7004,05	ECKDNA101MB	C 100PF	2	⚠
C7007	ECKD3A472KBP	C 4700PF, K, 1KV	1	
C7008	ECQU2A334BN9	P 0.33UF, M,250V	1	⚠
C7009,10	ECQU2A104BN9	P 0.1UF, 250V	2	⚠
C7011	ECQU2A334BN9	P 0.33UF, M,250V	1	⚠
C7012	ECKDNA101MB	C 100PF	1	⚠
C7100	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7101	ECKD3D471KBP	C 470PF, K, 2KV	1	
C7102	ECJ2VC2A101J	E 100UF, 100V	1	
C7104	ECJ2XB1H102K	C 1000PF, K, 50V	1	
C7105	ECQV1H104JM	P 0.1UF, J, 50V	1	
C7106	ECA1HM010	E 1UF, 50V	1	
C7109,10	ECA2WHG100	E 10UF, 450V	2	
C7111	ECA1HM010	E 1UF, 50V	1	
C7112	EEUFC1V680	E 68UF, 35V	1	
C7114	F2A1C1020027	E 1000UF, 16V	1	
C7115	ECQV1H104JM	P 0.1UF, J, 50V	1	
C7116	ECA1AHG222	E 2200UF, 10V	1	
C7117	F1J1A1050002	C 1UF, Z, 50V	1	
C7118	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7202	ECJ2VB1C104K	C 0.1UF, K, 16V	1	
C7203	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7204-07	F1J1A1050002	C 1UF, Z, 50V	4	
C7208	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C7209	F2A1C101A121	E 100UF, 16V	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
C7210	ECJ2VB1C224K	C 0.22UF, K, 16V	1	
C7211	ECA1HM330	E 33UF, 50V	1	
C7212	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7301	F2A1H471A531	E 470UF, 50V	1	
C7302	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7303	F2A1C1020027	E 1000UF, 16V	1	
C7305,06	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7307	ECA1VM102	E 1000UF, 35V	1	
C7401	F2A1H471A531	E 470UF, 50V	1	
C7402	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7403	F2A1C1020027	E 1000UF, 16V	1	
C7405,06	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7407	F2A1C681A117	E 680UF, 16V	1	
C7412	F1J1A1050002	C 1UF, Z, 50V	1	
C7501,02	ECA1HM100	E 10UF, 50V	2	
C7503,04	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C7505	ECJ2FB0J225K	C 2.2UF, Z, 16V	1	
C7506	ECA1VHG471	E 470UF, 35V	1	
C7601	ECJ2FB1E224K	C 22UF, K, 25V	1	
C7602,03	ECJ2FB1H104K	C 0.1UF, K, 50V	2	
C7605	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7609	ECJ2FB1E224K	C 22UF, K, 25V	1	
C7701	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7702	ECA1HM221	E 220UF, 50V	1	
C7703	F2A1C1020027	E 1000UF, 16V	1	
C7705	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7706	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7751	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7752	ECA1HM221	E 220UF, 50V	1	
C7753	EEUFC1A471	E 470UF, 10V	1	
C7754	ECJ2XB1H103K	C 0.01UF, K, 50V	1	
C7755	ECJ2XB1H682K	C 6800PF, K, 50V	1	
C7756	ECJ2FB1H104K	C 0.1UF, K, 50V	1	
C7951	ECA1VHG471	E 470UF, 35V	1	
C7952-61	ECJ2XB1H103K	C 0.01UF, K, 50V	10	
C7964,65	ECJ2XB1H103K	C 0.01UF, K, 50V	2	
C7966,67	ECA1EM101	E 100UF, 25V	2	
D1001	MAZ8043M	ZENER DIODE	1	
D1003	MAZ8043M	ZENER DIODE	1	
D1005	B3AAA0000770	DIODE	1	
D1101	MA8120M	ZENER DIODE	1	
D1104	MA152	DIODE	1	
D1106-11	MA8062MTX	ZENER DIODE	6	
D1113	MA111	DIODE	1	
D2003	MA152	DIODE	1	
D2004	MA157A	DIODE	1	
D2005	MA111	DIODE	1	
D2006	MA152	DIODE	1	
D2104	MA152K	DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D2105-18	MA8140M	ZENER DIODE	14	
D2119	MA3120M	ZENER DIODE	1	
D2120	MA152K	DIODE	1	
D2124,25	MA8056-M	DIODE	2	
D2513-16	MA704A	DIODE	4	
D2517-20	MA8140M	ZENER DIODE	4	
D3015-19	MA8140M	ZENER DIODE	5	
D3020	B0BC3R400001	ZENER DIODE	1	
D3021	MA152	DIODE	1	
D3022,23	MA111	DIODE	2	
D3024	MA3100M	ZENER DIODE	1	
D3026-31	MA111	DIODE	6	
D3201	MA152K	DIODE	1	
D3813	MA8140M	ZENER DIODE	1	
D3815	MA8140M	ZENER DIODE	1	
D3825,26	MA8140M	ZENER DIODE	2	
D4001	MA152K	DIODE	1	
D4004,05	B0JCPD000026	DIODE	2	
D4006,07	B0JCDD000002	DIODE	2	
D4008	MA152K	DIODE	1	
D4009	MA111	DIODE	1	
D5013-23	D4ED13900001	DIODE	11	
D5025	MA3056M	ZENER DIODE	1	
D6702	B3AEB0000065	DIODE	1	
D7001-03	ERZV10V621T2	VARISTOR	3	⚠
D7004	B0FBAT000008	DIODE	1	⚠
D7101	ERA22-10	DIODE	1	
D7104	B0JAMG000025	DIODE	1	
D7105	MA4150LTA	ZENER DIODE	1	
D7106	MA111	DIODE	1	
D7107	B0EBKT000007	DIODE	1	⚠
D7109	TVSSR2KL	DIODE	1	
D7110	RY24	DIODE	1	
D7111	B0BA01000070	ZENER DIODE	1	
D7112	ERA22-10	DIODE	1	
D7113	B0JANG000003	DIODE	1	
D7114-16	B0JAMG000025	DIODE	3	
D7201	MA4075M	ZENER DIODE	1	
D7202	MA4140M	ZENER DIODE	1	
D7203	MA8330M	ZENER DIODE	1	
D7204	MA111	DIODE	1	
D7207	MA729	DIODE	1	
D7208,09	MA111	DIODE	2	
D7210	MA4075M	ZENER DIODE	1	
D7211	MA111	DIODE	1	
D7301	MA8100MTX	ZENER DIODE	1	
D7302	MA111	DIODE	1	
D7303	MA8220-M	ZENER DIODE	1	
D7304	MA111	DIODE	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
D7401	MA8056-M	DIODE	1	
D7402	MA111	DIODE	1	
D7403	MA8130M	ZENER DIODE	1	
D7404,05	MA111	DIODE	2	
D7501	MA111	DIODE	1	
D7601,02	B0HCMM000014	DIODE	2	
D7603,04	MTZJ16C	DIODE	2	
D7605	B0HCMM000014	DIODE	1	
D7606	MA111	DIODE	1	
D7701	B0JCPG000005	DIODE	1	
D7702	B0HCMM000014	DIODE	1	
D7703	MA8100MTX	ZENER DIODE	1	
D7704	MA111	DIODE	1	
D7751	B0JCNG000003	DIODE	1	
D7752	B0HCMM000014	DIODE	1	
D7753	MA8100MTX	ZENER DIODE	1	
D7754	MA111	DIODE	1	
DG2,G3	K1MN40B00044	40P CONNECTOR	2	
DG4,G5	K1KB23A00003	23P CONNECTOR	2	
DG6	K1KA08BA0047	8P CONNECTOR	1	
DG7	K1KB30B00032	30P CONNECTOR	1	
DG8	K1KA07BA0047	7P CONNECTOR	1	
DG10	K1KA60A00156	60P CONNECTOR	1	
DG11	K1KA08AA0150	8P CONNECTOR	1	
DG15	K1KA07AA0266	7P CONNECTOR	1	
DV15	K1KB60A00132	60P CONNECTOR	1	
F7000-1,-2	K3GE1ZA00010	FUSE HOLDER	2	
F7000	K5D502BNA001	AC FUSE	1	⚠
FL3301,02	J0HABB000003	LC FILTER	2	
FL4005	J0HABC000008	LC FILTER	1	
FL4012-15	J0HABC000011	LC FILTER	4	
FL4020-22	J0JBD0000043	CHIP INDUCTOR	3	
FL4023-29	ELKE103FA	NOISE FILTER	7	
FL4033	J0HABC000008	LC FILTER	1	
G1	K1KA10BA0062	10P CONNECTOR	1	
G4	K1KA30AA0009	30P CONNECTOR	1	
G5	K1KA20AA0009	20P CONNECTOR	1	
G10	K1KA04BA0061	4P CONNECTOR	1	
G11	K1KA05BA0061	5P CONNECTOR	1	
G15	K1KA02A00553	2P CONNECTOR	1	
GP6	K1KA03AA0104	3P CONNECTOR	1	
GP10	K1MN50A00011	50P CONNECTOR	1	
GS3	K1MN40A00025	40P CONNECTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
GS8	K1KA07AA0104	7P CONNECTOR	1	
GS9	K1KA15A00148	15P CONNECTOR	1	
H1	K1KB23A00003	23P CONNECTOR	1	
H2,H3	K1MN40B00044	40P CONNECTOR	2	
H4	K1KA30AA0009	30P CONNECTOR	1	
H5	K1KA20AA0009	20P CONNECTOR	1	
H6	K1KA03AA0150	3P CONNECTOR	1	
H8	K1KA07AA0150	7P CONNECTOR	1	
H9	K1KA15A00148	15P CONNECTOR	1	
H12	K1KA09AA0190	9P CONNECTOR	1	
IC1103	C0DBEZG00013	IC	1	
IC1104	C2CBYF000032	IC	1	
IC1105	TC4066BF	MOS IC	1	
IC1106	CXA1875AM	LINEAR IC	1	
IC1107	C3EBHC000024	IC	1	
IC1108	C0EBE0000336	IC	1	
IC1109	C0JBBZ000281	IC	1	
IC1110	C0CBCBD00043	IC	1	
IC1114	C3ABPG000133	IC	1	
IC1115	TVRN655	IC	1	⚠
IC1116	CXA1875AM	LINEAR IC	1	
IC1117	C0JBAZ002186	IC	1	
IC2101	C1BB00000931	IC	1	
IC2102	C0ABBB000038	IC	1	
IC2103	AN77L08M	IC	1	
IC2104	C0ABBB000038	IC	1	
IC2105	AN15861A-VT	IC	1	
IC2106	C1AB00002135	IC	1	
IC2107	C0DBEZE00006	IC	1	
IC2108	C0EBF0000354	IC	1	
IC2111,12	NJM2521MTE1	IC	2	
IC2302,03	C0ABBA000168	IC	2	
IC2500-03	C1BB00000998	IC	4	
IC3001,02	C1AB00001486	IC	2	
IC3004	C1AB00001487	IC	1	
IC3005	AN15866A-VT	IC	1	
IC3006	CXA1315M	LINEAR IC	1	
IC3301	C0JBAZ002205	IC	1	
IC4001	C0ABBB000289	IC	1	
IC4002	C0FBBK000038	IC	1	
IC4005	C1AB00002298	IC	1	
IC4008	C0CBCBD00008	IC	1	
IC4009	C0CBCAD00012	IC	1	
IC4010	C0EBE0000336	IC	1	
IC4011	C0CBCAC00282	IC	1	
IC4012	C1AB00001834	IC	1	
IC4013	C1AB00002202	IC	1	
IC4014	C0JBAZ002186	IC	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
IC4024	C0DBAMH00014	IC	1	
IC4025	C0DBAMH00013	IC	1	
IC4033	C0JBCZ000485	IC	1	
IC4041	C0CBCAC00275	IC	1	
IC4042	C0DBEJG00001	IC	1	
IC4044	C0CBCAC00136	IC	1	
IC4047	C0CBCBD00008	IC	1	
IC4048	C0DBEJG00001	IC	1	
IC4049	C0CBABF00020	IC	1	
IC4051	C1ZBZ0002790	IC	1	
IC4052	C3EBJC000055	IC	1	
IC4054	C1AB00002234	IC	1	
IC4055	C3ABQJ000040	IC	1	
IC4057	C1AB00002217	IC	1	
IC4063	C0EBC0000208	IC	1	
IC4081	C1ZBZ0002679	IC	1	
IC5003	MN864721A	IC	1	
IC5015	C0CBCAD00016	IC	1	
IC5017	C3EBFC000037	IC	1	
IC6701	C0CBCBD00008	IC	1	
IC6703	C0JBAZ000851	IC	1	
IC7101	C5HABZZ00165	IC	1	
IC7103	C0DAAMA00003	IC	1	
IC7301	C5HAAKG00002	IC	1	
IC7401	C5HAAKG00002	IC	1	
IC7701	C0DAAZH00020	IC	1	
IC7751	C0DAAZG00014	IC	1	
JK2001,02	K2HA204A0038	JACK	2	
JK3001	K1FB315AA001	CONNECTOR	1	
JK3002-04	K1FB121A0006	JACK	3	
JK3005	K2HA307A0008	JACK	1	
JK3801	K4BK23B00004	AV TERMENAL	1	
JK5001	K1FA119D0001	CONNECTOR	1	
JK6502	K1NA68E00076	CONNECTOR	1	
JK6701	K1NA09E00057	CONNECTOR	1	
JS1002	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS1101	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS2105-08	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
JS2109	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS2500	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS3005	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3007-20	ERJ3GEY0R00	M 0 OHM, 1/16W	14	
JS3022	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3204,05	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS3207	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS3213	K5H2022A0023	FUSE	1	PAVCCZ
JS3216-23	ERJ3GEY0R00	M 0 OHM, 1/16W	8	
JS3403	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
JS3901	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4001,02	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS4005-15	ERJ3GEY0R00	M 0 OHM, 1/16W	11	
JS4018,19	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
JS4026-28	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4031	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4035-37	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4039-48	ERJ3GEY0R00	M 0 OHM, 1/16W	10	
JS4059	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4068	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS4070-72	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
JS4074-78	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
JS5004	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6502	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
JS6704	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
JS6718-20	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
K6	K1KA02A00626	2P CONNECTOR	1	
L1101-04	J0JHC0000078	CHIP INDUCTOR	4	
L1106	ELJFA8R2KFB	CHIP INDUCTOR	1	
L1108	J0JCC0000241	CHIP INDUCTOR	1	
L1109	J0JHC0000078	CHIP INDUCTOR	1	
L1110	J0JCC0000241	CHIP INDUCTOR	1	
L1111,12	J0JHC0000078	CHIP INDUCTOR	2	
L2001,02	J0JCC0000364	CHIP INDUCTOR	2	
L2003-16	EXC3BB221H	BEAD CHOKE	14	
L2017,18	J0JHC0000078	CHIP INDUCTOR	2	
L2104	ELJPA470KFB	CHIP INDUCTOR	1	
L2105-07	J0JHC0000078	CHIP INDUCTOR	3	
L2108	J0JCC0000241	CHIP INDUCTOR	1	
L2109,10	TSK1032	BEAD CHOKE	2	
L2111,12	J0JCC0000241	CHIP INDUCTOR	2	
L2113,14	TSK1032	BEAD CHOKE	2	
L2115	J0JCC0000241	CHIP INDUCTOR	1	
L2117	ELJFA6R8KFB	CHIP INDUCTOR	1	
L2118	J0JCC0000241	CHIP INDUCTOR	1	
L2120	J0JHC0000078	CHIP INDUCTOR	1	
L2121	J0JCC0000241	CHIP INDUCTOR	1	
L2122	TSK1032	BEAD CHOKE	1	
L2123	G1C330K00017	INDUCTOR COIL	1	
L2178,79	J0JCC0000241	CHIP INDUCTOR	2	
L2182-87	J0JCC0000241	CHIP INDUCTOR	6	
L2500-03	G1C330K00024	INDUCTION COIL	4	
L2508-11	J0JJC0000011	CHIP INDUCTOR	4	
L3001-03	EXC3BB221H	BEAD CHOKE	3	
L3007,08	J0JHC0000078	CHIP INDUCTOR	2	
L3009	ERJ3GEYJ2R2	M 2.2 OHM,J,1/16W	1	
L3010	J0JHC0000078	CHIP INDUCTOR	1	
L3202,03	J0JCC0000241	CHIP INDUCTOR	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L3205,06	**J0JCC0000364**	**CHIP INDUCTOR**	**2**	
L3210	**J0JCC0000364**	**CHIP INDUCTOR**	**1**	
L3211	**ELJNC15NKBB**	**CHIP COIL**	**1**	**PAVCCZ**
L3212	**EXC3BB221H**	**BEAD CHOKE**	**1**	
L3213,14	**J0JCC0000364**	**CHIP INDUCTOR**	**2**	
L3304-07	**J0JCC0000241**	**CHIP INDUCTOR**	**4**	
L3811,12	**EXC3BB221H**	**BEAD CHOKE**	**2**	
L3813,14	**J0JCC0000364**	**CHIP INDUCTOR**	**2**	
L4001	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4002	**G1C100KA0008**	**INDUCTOR COIL**	**1**	
L4003,04	**J0JHC0000078**	**CHIP INDUCTOR**	**2**	
L4006-08	**J0JHC0000078**	**CHIP INDUCTOR**	**3**	
L4014,15	**J0JHC0000078**	**CHIP INDUCTOR**	**2**	
L4016	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4017-19	**J0JHC0000078**	**CHIP INDUCTOR**	**3**	
L4020	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4021	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4022	**TALC168T100K**	**CHIP INDUCTOR COIL**	**1**	
L4023-26	**J0JCC0000241**	**CHIP INDUCTOR**	**4**	
L4028,29	**J0JHC0000078**	**CHIP INDUCTOR**	**2**	
L4030	**J0JHC0000045**	**CHIP INDUCTOR**	**1**	
L4034	**J0JHC0000045**	**CHIP INDUCTOR**	**1**	
L4037,38	**J0JHC0000045**	**CHIP INDUCTOR**	**2**	
L4039	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4041,42	**J0JHC0000078**	**CHIP INDUCTOR**	**2**	
L4043	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4046	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4052	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4054	**G1C220MA0077**	**INDUCTOR COIL**	**1**	
L4055	**G1C470MA0078**	**INDUCTOR COIL**	**1**	
L4056	**G1C220M00041**	**INDUCTOR COIL**	**1**	
L4057	**G1C220MA0077**	**INDUCTOR COIL**	**1**	
L4058-60	**J0JHC0000078**	**CHIP INDUCTOR**	**3**	
L4062	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4063	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4065,66	**J0JCC0000241**	**CHIP INDUCTOR**	**2**	
L4068-70	**J0JCC0000241**	**CHIP INDUCTOR**	**3**	
L4073	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4075	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4079	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4081,82	**J0JCC0000241**	**CHIP INDUCTOR**	**2**	
L4087	**J0JHC0000078**	**CHIP INDUCTOR**	**1**	
L4088	**J0JCC0000241**	**CHIP INDUCTOR**	**1**	
L4090-93	**J0JHC0000078**	**CHIP INDUCTOR**	**4**	
L4095,96	**J0JHC0000078**	**CHIP INDUCTOR**	**2**	
L5001-03	**J0JHC0000045**	**CHIP INDUCTOR**	**3**	
L5007	**J0JHC0000045**	**CHIP INDUCTOR**	**1**	
L5012	**J0JHC0000045**	**CHIP INDUCTOR**	**1**	
L5015-18	**J0MAB0000176**	**LC FILTER**	**4**	
L5021	**J0JHC0000045**	**CHIP INDUCTOR**	**1**	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
L5022	J0JCC0000166	CHIP INDUCTOR	1	
L6504	J0JHC0000045	CHIP INDUCTOR	1	
L6701,02	J0JHC0000045	CHIP INDUCTOR	2	
L7001	G0A553G00001	EMI FILTER	1	⚠
L7106	EXCELSA35	BEAD CHOKE	1	
L7108	TALL08N221KA	INDUCTION COIL	1	
L7201	G0A680GA0002	INDUCTION COIL	1	
L7702	VLQSH02R101K	PEAKING COIL	1	
L7752	G0A221ZA0047	CHOKE COIL	1	
L7959	TALL08N151KA	INDUCTOR COIL	1	
L7962	G0A100GA0013	CHOKE COIL	1	
LF7002,03	G0B103H00002	CHOKE COIL	2	⚠
LF7004	G0B302H00004	CHOKE COIL	1	⚠
PA6701	K5H1622A0023	FUSE	1	
PC7102	CNC1S171R	IC	1	⚠
Q1003	2SA207700L	TRANSISTOR	1	
Q1004	2SC584500L	TRANSISTOR	1	
Q1101	2SC584500L	TRANSISTOR	1	
Q1105-07	2SC584500L	TRANSISTOR	3	
Q1109-11	2SC584500L	TRANSISTOR	3	
Q1112	UN5211	TRANSISTOR	1	
Q1113	UN5111	TRANSISTOR	1	
Q1114	UN5211	TRANSISTOR	1	
Q1118	UN5211	TRANSISTOR	1	
Q1119	2SA207700L	TRANSISTOR	1	
Q2001,02	2SD13280TL	TRANSISTOR	2	
Q2003,04	2SD601A	TRANSISTOR	2	
Q2006,07	2SD601A	TRANSISTOR	2	
Q2009,10	2SD601A	TRANSISTOR	2	
Q2011,12	2SA207700L	TRANSISTOR	2	
Q2016	2SD601A	TRANSISTOR	1	
Q2017	2SA207700L	TRANSISTOR	1	
Q2102-05	2SA207700L	TRANSISTOR	4	
Q2106-09	2SD601A	TRANSISTOR	4	
Q2113	2SD601A	TRANSISTOR	1	
Q2114,15	2SD13280TL	TRANSISTOR	2	
Q3001-06	2SD601A	TRANSISTOR	6	
Q3008	2SA207700L	TRANSISTOR	1	
Q3009	2SD601A	TRANSISTOR	1	
Q3010-15	2SA207700L	TRANSISTOR	6	
Q3016	2SD601A	TRANSISTOR	1	
Q3017,18	2SA207700L	TRANSISTOR	2	
Q3019-23	2SD601A	TRANSISTOR	5	
Q3202-04	2SA207700L	TRANSISTOR	3	
Q3331-33	2SC2480	TRANSISTOR	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q4001	2SA207700L	TRANSISTOR	1	
Q4004	2SA207700L	TRANSISTOR	1	
Q4007,08	2SA207700L	TRANSISTOR	2	
Q4010-12	2SC584500L	TRANSISTOR	3	
Q4018-20	2SA207700L	TRANSISTOR	3	
Q4024	2SD1030	TRANSISTOR	1	
Q4025,26	2SC584500L	TRANSISTOR	2	
Q4030-32	2SD1030	TRANSISTOR	3	
Q4037	UN2211	TRANSISTOR	1	
Q4038,39	2SC584500L	TRANSISTOR	2	
Q4040	2SA207700L	TRANSISTOR	1	
Q4041-46	2SC584500L	TRANSISTOR	6	
Q4047,48	2SA207700L	TRANSISTOR	2	
Q4049,50	UN5211	TRANSISTOR	2	
Q4052	UN5211	TRANSISTOR	1	
Q4053	UN2215	TRANSISTOR	1	
Q4054	2SC584500L	TRANSISTOR	1	
Q4058	2SC584500L	TRANSISTOR	1	
Q4060-62	2SC584500L	TRANSISTOR	3	
Q4065	2SC584500L	TRANSISTOR	1	
Q4068	2SC584500L	TRANSISTOR	1	
Q4073	2SC584500L	TRANSISTOR	1	
Q4074	XN6501	TRANSISTOR	1	
Q4075	UN5211	TRANSISTOR	1	
Q4076	2SA207700L	TRANSISTOR	1	
Q4077	2SC584500L	TRANSISTOR	1	
Q4080	2SC584500L	TRANSISTOR	1	
Q5001	B1MBACA00008	TRANSISTOR	1	
Q5002,03	2SD601A	TRANSISTOR	2	
Q5004	2SC584500L	TRANSISTOR	1	
Q6501	2SD601A	TRANSISTOR	1	
Q6502	B1DHDC000028	TRANSISTOR	1	
Q6701	UN5211	TRANSISTOR	1	
Q6702	2SC2412K	TRANSISTOR	1	
Q6703,04	UN5211	TRANSISTOR	2	
Q7101,02	2SD601A	TRANSISTOR	2	
Q7202	2SD602	TRANSISTOR	1	
Q7203,04	2SD601A	TRANSISTOR	2	
Q7205,06	2SB709A	TRANSISTOR	2	
Q7207	2SD601A	TRANSISTOR	1	
Q7208	2SC584500L	TRANSISTOR	1	
Q7210	2SA207700L	TRANSISTOR	1	
Q7211	2SD602	TRANSISTOR	1	
Q7212	2SC584500L	TRANSISTOR	1	
Q7214	2SD601A	TRANSISTOR	1	
Q7301,02	UN2210	TRANSISTOR	2	
Q7401,02	UN2210	TRANSISTOR	2	
Q7501	UN2214	TRANSISTOR	1	
Q7502,03	B1DHDD000033	TRANSISTOR	2	
Q7504-06	UN2214	TRANSISTOR	3	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
Q7601	2SD602	TRANSISTOR	1	
Q7701	UN2210	TRANSISTOR	1	
Q7702	2SC584500L	TRANSISTOR	1	
Q7751	UN2214	TRANSISTOR	1	
R1002	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R1005	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R1009	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R1010	ERJ6GEYJ122	M 1.2KOHM,J,1/10W	1	
R1011	ERJ6GEYJ183	M 18KOHM,J,1/10W	1	
R1012	ERJ6GEYJ563	M 56KOHM,J,1/10W	1	
R1013-15	ERJ6GEYJ103	M 10KOHM,J,1/10W	3	
R1101-03	ERJ3GEYJ223	M 22KOHM,J,1/16W	3	
R1105	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1106	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1107	ERJ3GEYJ683	M 68KOHM,J,1/16W	1	
R1110	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1111	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1112	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R1113	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1115	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1116	ERJ3GEYJ683	M 68KOHM,J,1/16W	1	
R1117	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R1119	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R1120	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1121	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R1122	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R1123	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1125	EXB2HV680J	RESISTOR ARRAY	1	
R1127	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1128	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1130	EXB38V680J	RESISTOR ARRAY	1	
R1133	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1135	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1137,38	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R1139	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1140	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1143	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1144-48	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R1149	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1150	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1151	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1153	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1155	ERJ3GEYJ225	M 2.2MOHM,J,1/16W	1	
R1158	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1159	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1160	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1161	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1162	EXB2HV680J	RESISTOR ARRAY	1	
R1164	ERJ3EKF2702V	M27.0KOHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1165	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1166	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1168	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R1171	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R1174	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1176	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1177	ERJ3GEYJ391	M 390 OHM,J,1/16W	1	
R1178	EXB2HV680J	RESISTOR ARRAY	1	
R1179	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1180	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1182	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1183	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R1184	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1186	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1187	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1188	D1HG5608A002	NETWORK RESISTER	1	
R1189	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1190	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1191	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R1192	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1194,95	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1197	ERJ3GEYJ224	M 220KOHM,J,1/16W	1	
R1198	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R1199	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R1200	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1201	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R1202	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1203,04	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R1205	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1206	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1209	ERJ3GEYJ821	M 820 OHM,J,1/16W	1	
R1210,11	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R1212	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1213	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1214	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R1215	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1216	ERJ3GEYJ273	M 27KOHM,J,1/16W	1	
R1217	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R1221	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1222	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R1223	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1224	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R1225	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1226	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R1227	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1228,29	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R1230	D1HG5608A002	NETWORK RESISTER	1	
R1231	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1233,34	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R1236	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R1239,40	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	2	
R1241	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1243	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1245	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1246	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R1247-50	ERJ3GEYJ560	M 56 OHM,J,1/16W	4	
R1253	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1255,56	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	2	
R1257	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1258	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R1259,60	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R1261	ERJ3EKF2202	M 22KOHM, 1/16W	1	
R1262	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1263	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1264	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R1265	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R1267	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1269	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1270,71	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R1273	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1274	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1275,76	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R1278	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R1279	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1281	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R1282-87	ERJ3GEYJ512	M 5.1KOHM,J,1/16W	6	
R1288,89	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R1290	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1291	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R1296	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R1298,99	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R1301	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1303-05	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R1306	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1313	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R1319-22	J0JDC0000054	CHIP INDUCTOR	4	
R1323-26	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R1328,29	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R1331	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R1332	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R1335	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R1337,38	EXB2HV680J	RESISTOR ARRAY	2	
R2001,02	ERJ3GEYJ184	M 180KOHM,J,1/16W	2	
R2005	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R2006-11	ERJ3GEYJ223	M 22KOHM,J,1/16W	6	
R2012	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R2013,14	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2015,16	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2018,19	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2021,22	ERJ3GEY0R00	M 0 OHM, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2023,24	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2025	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2027,28	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2030	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2031	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2032	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2033	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2034	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2035,36	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R2037	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2038	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2039	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2040	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2041	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2042	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2043	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2045	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2046	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2047	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2049	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2050	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2052	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2056	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2057	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R2058	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2059	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2060	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2061	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R2068	ERJ3EKF8201	M 8.2KOHM, 1/16W	1	
R2069	ERJ3GEYJ561	M 560 OHM,J,1/16W	1	
R2070	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2110,11	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2112	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2113	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2115	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2118,19	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R2121	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2123	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2124,25	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2126,27	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R2128,29	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2130,31	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2132	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2133	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2135,36	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R2137	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2138	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2139,40	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2147	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2148,49	ERJ3GEYJ273	M 27KOHM,J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2151	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2152	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R2153	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2154	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R2155-60	ERJ3GEYJ221	M 220 OHM,J,1/16W	6	
R2161	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2162	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2163	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2164	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2165,66	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2167	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2168,69	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R2170-73	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R2176,77	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2178,79	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R2180,81	ERJ3GEYJ561	M 560 OHM,J,1/16W	2	
R2182,83	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R2184-87	ERJ3GEYJ221	M 220 OHM,J,1/16W	4	
R2192,93	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R2195,96	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2197	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2198	ERJ3EKF1781	M1.78KOHM, 1/16W	1	
R2200	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R2201	ERJ3EKF1601	M 1.6KOHM, 1/16W	1	
R2202	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2204	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R2205	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2208	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2209	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2210	ERJ3GEYJ681	M 680 OHM,J,1/16W	1	
R2211	ERJ3GEYJ561	M 560 OHM,J,1/16W	1	
R2213	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R2214	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R2215	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R2216	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2217	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R2221	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2229	J0JCC0000241	CHIP INDUCTOR	1	
R2231,32	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2234,35	ERJ3GEYJ391	M 390 OHM,J,1/16W	2	
R2245	ERJ3GEYJ4R7	M 4.7HM,J,1/16W	1	
R2246	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2247	ERJ3GEYJ4R7	M 4.7HM,J,1/16W	1	
R2248	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R2249	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2252	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R2255,56	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2301	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	
R2303,04	ERJ3GEYJ153	M 15KOHM,J,1/16W	2	
R2306	ERJ3GEYJ153	M 15KOHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2319,20	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R2321,22	ERJ3GEYJ433	M 43KOHM,J,1/16W	2	
R2327,28	ERJ3GEYJ203	M 20KOHM,J,1/16W	2	
R2329,30	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2332	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2335	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2338-41	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	4	
R2555	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2557	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R2558	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R2559	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2560	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2561	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2562	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2563	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2564	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2565	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2566	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2569	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2570	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R2571	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2572	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2573	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2574	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2575	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2576	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2577	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2578	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2579	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2582	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2583	ERJ3GEYJ123	M 12KOHM,J,1/16W	1	
R2584	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2585	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2586	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2587	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2588	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2589	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2590	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2591	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2592	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2595	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2596	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R2597	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2598	ERJ3GEYJ474	M 470KOHM,J,1/16W	1	
R2599	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	1	
R2600	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R2601	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R2602	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R2603	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2604	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R2605	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R2608	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R2609	ERJ3GEYJ123	M 12KOHM,J,1/16W	1	
R2610	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R2611	ERJ6ENF6800	M 680 OHM, 1/10W	1	
R2623	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2625	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2626-28	ERJ6ENF6800	M 680 OHM, 1/10W	3	
R2634,35	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R2643	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R2647	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3001-15	ERJ6ENF75R0	M 75 OHM, 1/10W	15	
R3016,17	ERJ3GEYJ101	M 100 OHM,J,1/16W	2	
R3018,19	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R3020-22	ERJ3EKF2202	M 22KOHM, 1/16W	3	
R3023,24	ERJ3EKF1202	M 12KOHM, 1/16W	2	
R3025	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3026	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R3027,28	ERJ6ENF68R0	M 68 OHM, 1/10W	2	
R3030	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3031	ERJ6ENF68R0	M 68 OHM, 1/10W	1	
R3032,33	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R3034	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R3036,37	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R3038-40	ERJ3GEYJ221	M 220 OHM,J,1/16W	3	
R3041,42	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	2	
R3043	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	1	
R3048	ERJ3GEYJ152	M 1.5KOHM,J,1/16W	1	
R3049-51	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R3052	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3053	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3054,55	ERJ3EKF5600	M 560 OHM, 1/16W	2	
R3056	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3057,58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3059-64	ERJ3GEYJ221	M 220 OHM,J,1/16W	6	
R3065	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	1	
R3066	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3067	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3068	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R3069	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3071	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3072	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3074,75	ERJ3GEYJ221	M 220 OHM,J,1/16W	2	
R3077	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3080	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3085	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3086	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3087	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3089,90	ERJ3GEYJ470	M 47 OHM,J,1/16W	2	
R3091	ERJ3GEY0R00	M 0 OHM, 1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3092	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3093	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3094-01	ERJ3GEYJ221	M 220 OHM,J,1/16W	8	
R3102	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3106	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3115-18	ERJ3GEYJ101	M 100 OHM,J,1/16W	4	
R3119,20	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3121	ERJ3EKF1000	M 100 OHM, 1/16W	1	
R3122	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3123	ERJ3EKF82R0	M 82 OHM, 1/16W	1	
R3124	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3125	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3126	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3127	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3128	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3129-31	ERJ3GEYJ101	M 100 OHM,J,1/16W	3	
R3132,33	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R3134	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R3135	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3136	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R3138	ERJ3EKF82R0	M 82 OHM, 1/16W	1	
R3139	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3140	ERJ3EKF1000	M 100 OHM, 1/16W	1	
R3141	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R3142	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R3143	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R3144	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R3145	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3146	ERJ3GEYJ331	M 330 OHM,J,1/16W	1	
R3152,53	ERJ3GEYJ470	M 47 OHM,J,1/16W	2	
R3154	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3159	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R3163	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R3164	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3166-68	ERJ3EKF75R0	M 0.75HM, 1/16W	3	
R3170	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3171	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R3173	ERJ3GEYJ271	M 270 OHM,J,1/16W	1	
R3175	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3176	ERJ3EKF75R0	M 0.75HM, 1/16W	1	
R3177,78	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R3179	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R3180	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R3201	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3202	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3203	ERJ6GEYJ561	M 560 OHM,J,1/10W	1	
R3204,05	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R3207	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3208	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R3209,10	ERJ3GEY0R00	M 0 OHM, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R3213-21	ERJ3GEY0R00	M 0 OHM, 1/16W	9	
R3224	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R3302	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3305	ERJ6GEYJ101	M 100 OHM,J,1/10W	1	
R3306,07	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R3308,09	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R3310	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3311	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3312	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3313	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3316	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3317	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R3318	ERJ6ENF75R0	M 75 OHM, 1/10W	1	
R3319	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R3325	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3339	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R3341,42	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3343	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3344	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3345,46	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3347	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3348	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3349,50	ERJ3GEYJ183	M 18KOHM,J,1/16W	2	
R3351	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R3352	ERJ6GEYJ221	M 220 OHM,J,1/10W	1	
R3356-58	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R3359-61	ERJ3GEYJ330	M 33 OHM,J,1/16W	3	
R3362,63	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R3364-68	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R3903	ERJ6ENF6801	M 6.8KOHM, 1/10W	1	
R3904-07	ERJ6GEYJ184	M 180KOHM,J,1/10W	4	
R3918	ERJ6ENF2202	M 2.2KOHM, 1/10W	1	
R3927	ERJ6ENF6802	M 68KOHM, 1/10W	1	
R3941	ERJ6ENF1202	M 12KOHM, 1/10W	1	
R4006-11	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R4013	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4015	ERJ3GEYJ180	M 18 OHM,J,1/16W	1	
R4016	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4017,18	ERJ3GEYJ180	M 18 OHM,J,1/16W	2	
R4019	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4020	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R4021	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4026	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4031	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4036	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R4042	ERJ3EKF1600	M 160 OHM, 1/16W	1	
R4044	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4054	ERJ3EKF1371	M 13.7 OHM, 1/16W	1	
R4059,60	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4061	J0JDC0000054	CHIP INDUCTOR	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4062	ERJ3EKF1691	M1.69KOHM, 1/16W	1	
R4063	J0JDC0000054	CHIP INDUCTOR	1	
R4064	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4066-68	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4069,70	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4071	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4072	J0JDC0000054	CHIP INDUCTOR	1	
R4073	EXB38V220J	RESISTOR ARRAY	1	
R4075	EXB38V220J	RESISTOR ARRAY	1	
R4076	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4077	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4078	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4079	EXB38V220J	RESISTOR ARRAY	1	
R4080-83	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4084,85	EXB38V220J	RESISTOR ARRAY	2	
R4086-88	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4089	ERJ3GEYJ361	M 360 OHM,J,1/16W	1	
R4091	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R4093	ERJ3GEYJ181	M 180 OHM,J,1/16W	1	
R4095	ERJ6GEYJ361	M 360 OHM,J,1/10W	1	
R4096,97	ERJ6GEYJ561	M 560 OHM,J,1/10W	2	
R4098	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4099	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4109	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4112	ERJ3EKF8450	M 845 OHM, 1/16W	1	
R4118,19	ERJ3EKF4700	M 470 OHM, 1/16W	2	
R4123,24	ERJ3EKF3601	M 3.6KOHM, 1/16W	2	
R4134	ERJ3EKF1331	M13.3KOHM, 1/16W	1	
R4138,39	ERJ6GEYJ821	M 820 OHM,J,1/10W	2	
R4140	ERJ6GEYJ681	M 680 OHM,J,1/10W	1	
R4150-52	ERJ3GEYJ330	M 33 OHM,J,1/16W	3	
R4153	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4156	ERJ6GEYJ331	M 330 OHM,J,1/10W	1	
R4157,58	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4159,60	ERJ6GEYJ471	M 470 OHM,J,1/10W	2	
R4166-68	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4169-71	ERJ3GEYJ151	M 150 OHM,J,1/16W	3	
R4172-74	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	3	
R4175	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4176,77	ERJ3EKF1200	M 120 OHM, 1/16W	2	
R4178	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4179	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4180	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4182,83	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4185-87	ERJ3EKF68R0	M 68 OHM,J,1/16W	3	
R4189-94	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R4196	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4197	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4198	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4199	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4200	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4201	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4202	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4203	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4204	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4205-07	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4208	ERJ3EKF1401	M 1.4KOHM, 1/16W	1	
R4209	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4210-12	ERJ3EKF33R0	M 33 OHM, 1/16W	3	
R4213	ERJ3EKF2701	M 2.7KOHM, 1/16W	1	
R4214	ERJ3EKF4700	M 470 OHM, 1/16W	1	
R4215	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4217-19	ERJ3EKF1500	M 150 OHM, 1/16W	3	
R4220	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4222	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4223	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4224	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4225	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4226	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4227	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4228	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4229,30	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4231	ERJ3GEYJ911	M 910 OHM,J,1/16W	1	
R4232-35	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4237	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4238	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4240	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4241	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4242	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4244	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4246,47	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4250-53	ERJ3GEYJ680	M 68 OHM,J,1/16W	4	
R4256	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4257	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4261	ERJ3EKF68R0	M 68 OHM,J,1/16W	1	
R4262	ERJ3GEYJ510	M 51 OHM,J,1/16W	1	
R4263	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4265	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4267	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4268	ERJ3GEYJ510	M 51 OHM,J,1/16W	1	
R4269	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R4270	ERJ3EKF1200	M 120 OHM, 1/16W	1	
R4271	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4272	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4276	D1HG5608A002	NETWORK RESISTER	1	
R4277,78	EXB38V560J	RESISTOR ARRAY	2	
R4283	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4294,95	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4296,97	D1HG5608A002	NETWORK RESISTER	2	
R4298	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4299-01	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4302,03	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R4304	EXB38V560J	RESISTOR ARRAY	1	
R4305,06	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4307	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4308,09	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4310,11	ERJ3EKF3302	M 33KOHM, 1/16W	2	
R4312	ERJ3EKF2202	M 22KOHM, 1/16W	1	
R4313	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4314,15	ERJ3EKF5102	M51.0KOHM, 1/16W	2	
R4321	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4322	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4324	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4325	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4326	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4327	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4328-30	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R4331	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4333	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4336	ERJ3GEYJ105	M 1MOHM,J,1/16W	1	
R4338,39	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R4340,41	ERJ3GEYJ331	M 330 OHM,J,1/16W	2	
R4342	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4344,45	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R4348,49	ERJ6GEYJ471	M 470 OHM,J,1/10W	2	
R4350	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4351-54	ERJ3GEYJ103	M 10KOHM,J,1/16W	4	
R4355	ERJ3EKF1202	M 12KOHM, 1/16W	1	
R4356	ERJ3EKF1800	M 180 OHM, 1/16W	1	
R4357	ERJ3EKF2001	M 2KOHM, 1/16W	1	
R4358	ERJ3EKF4302	M 43KOHM, 1/16W	1	
R4359,60	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4361-65	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R4366-69	D1HG5608A002	NETWORK RESISTER	4	
R4370,71	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4372	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4373	D1HG5608A002	NETWORK RESISTER	1	
R4374-76	ERJ3GEYJ560	M 56 OHM,J,1/16W	3	
R4377	D1HG5608A002	NETWORK RESISTER	1	
R4381-84	ERJ3GEYJ680	M 68 OHM,J,1/16W	4	
R4386	EXB2HV680J	RESISTOR ARRAY	1	
R4388	EXB2HV680J	RESISTOR ARRAY	1	
R4390	EXB2HV680J	RESISTOR ARRAY	1	
R4392	EXB2HV680J	RESISTOR ARRAY	1	
R4393	ERJ3GEYJ750	M 75 OHM,J,1/16W	1	
R4397	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R4398	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4399-01	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4402	EXB38V680J	RESISTOR ARRAY	1	
R4403	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4405	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R4406,07	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4411	EXB2HV680J	RESISTOR ARRAY	1	
R4412	EXB38V680J	RESISTOR ARRAY	1	
R4413,14	ERJ3EKF3002	M 30KOHM, 1/16W	2	
R4421	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4422,23	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4424	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4425	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4426-30	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R4431	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4432,33	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R4435	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4437	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4439	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4451	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4452-57	ERJ3GEY0R00	M 0 OHM, 1/16W	6	
R4458	ERJ3EKF5602	M 56KOHM, 1/16W	1	
R4459	ERJ3EKF6802	M 68KOHM, 1/16W	1	
R4461,62	ERJ3GEYJ563	M 56KOHM,J,1/16W	2	
R4463	ERJ3GEYJ154	M 150KOHM,J,1/16W	1	
R4465	ERJ3EKF1502	M 15KOHM, 1/16W	1	
R4466	ERJ3GEYJ154	M 150KOHM,J,1/16W	1	
R4467	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4468,69	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4470,71	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R4472	ERJ3EKF4702	M 47KOHM, 1/16W	1	
R4473	ERJ3EKF3602	M 36KOHM, 1/16W	1	
R4474,75	ERJ3EKF4702	M 47KOHM, 1/16W	2	
R4476,77	ERJ3GEYJ104	M 100KOHM,J,1/16W	2	
R4478,79	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R4480-82	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4484-90	ERJ3GEY0R00	M 0 OHM, 1/16W	7	
R4494	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4495	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4497	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4498-00	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R4501	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4502	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4503-05	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4506	ERJ3EKF6200	M 620 OHM, 1/16W	1	
R4507	EXB2HV220JV	RESISTOR ARRAY	1	
R4508	ERJ3EKF2200	M 220 OHM, 1/16W	1	
R4509	ERJ3EKF4701	M 4.7KOHM, 1/16W	1	
R4510	EXB2HV220JV	RESISTOR ARRAY	1	
R4511,12	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4513	ERJ3GEYJ564	M 560KOHM,J,1/16W	1	
R4514	EXB2HV220JV	RESISTOR ARRAY	1	
R4515,16	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4521	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4530	ERJ3GEYJ220	M 22 OHM,J,1/16W	1	
R4548	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4549	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4550	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4553	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4554	ERJ3EKF1801	M 1.8KOHM, 1/16W	1	
R4556	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4557	ERJ3EKF5601	M 5.6KOHM, 1/16W	1	
R4559-61	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4567	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4568	ERJ3GEYJ333	M 33KOHM,J,1/16W	1	
R4569	ERJ3GEYJ563	M 56KOHM,J,1/16W	1	
R4575	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4584	J0JDC0000054	CHIP INDUCTOR	1	
R4586	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4589	ERJ3EKF4220	M 422 OHM, 1/10W	1	
R4590	ERJ3EKF5600	M 560 OHM, 1/16W	1	
R4591	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R4592	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4593,94	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R4595,96	ERJ3EKF1581	M1.58KOHM, 1/10W	2	
R4597-00	ERJ6GEYJ102	M 1KOHM,J,1/10W	4	
R4604	ERJ3EKF4220	M 422 OHM, 1/10W	1	
R4606	ERJ3EKF1500	M 150 OHM, 1/16W	1	
R4607,08	ERJ3EKF3001	M 3KOHM, 1/16W	2	
R4609	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4610	ERJ3EKF5600	M 560 OHM, 1/16W	1	
R4611	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4612	ERJ3EKF5760	M 576 OHM, 1/16W	1	
R4613,14	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4615	ERJ3EKF5760	M 576 OHM, 1/16W	1	
R4616,17	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4626	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4627	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4628	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4631	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4633	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4634	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4635	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4636	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4638	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4641	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4643	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4644	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4645	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4647	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4648	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4649	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4651	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R4653,54	ERJ3GEY0R00	M 0 OHM, 1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4658	ERJ3GEYJ183	M 18KOHM,J,1/16W	1	
R4659	ERJ3GEYJ471	M 470 OHM,J,1/16W	1	
R4660	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	1	
R4662	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4664-67	J0JDC0000054	CHIP INDUCTOR	4	
R4669,70	J0JDC0000054	CHIP INDUCTOR	2	
R4678	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4681,82	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4685	ERJ3EKF1001	M 1KOHM, 1/16W	1	
R4686	ERJ3EKF9100	M 910 OHM, 1/16W	1	
R4687	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R4688	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R4689	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4690	ERJ3EKF2201	M 2.2KOHM, 1/16W	1	
R4691,92	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4693,94	ERJ3EKF1741	M 17.4 OHM, 1/16W	2	
R4695	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4697	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4698	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4699	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4700,01	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	2	
R4702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4703	ERJ3EKF8200	M 820 OHM, 1/16W	1	
R4704	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4706	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R4709,10	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4711	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R4712	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R4713,14	ERJ3GEYJ680	M 68 OHM,J,1/16W	2	
R4715	ERJ3EKF6802	M 68KOHM, 1/16W	1	
R4716-19	ERJ3GEYJ560	M 56 OHM,J,1/16W	4	
R4722,23	ERJ3GEYJ102	M 1KOHM,J,1/16W	2	
R4724	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4732,33	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R4740-43	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4745	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4746,47	ERJ3EKF3002	M 30KOHM, 1/16W	2	
R4748	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R4749	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4750	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R4751	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R4752	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4753-56	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R4757-59	ERJ3GEYJ151	M 150 OHM,J,1/16W	3	
R4760	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4761,62	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4764	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R4768	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4769,70	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R4778	EXB38V560J	RESISTOR ARRAY	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R4779	ERJ3GEYJ820	M 82 OHM,J,1/16W	1	
R4781	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R4800-02	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4806-08	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R4809-11	ERJ3GEYJ473	M 47KOHM,J,1/16W	3	
R4812	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	1	
R4816-20	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R5002,03	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5006	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5007	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5011	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5013	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R5014,15	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5017	ERJ3GEYJ393	M 39KOHM,J,1/16W	1	
R5018	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5019	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R5020	ERJ3GEYJ104	M 100KOHM,J,1/16W	1	
R5021	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5022	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5023	ERJ3GEYJ680	M 68 OHM,J,1/16W	1	
R5024,25	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5030	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R5033-35	ERJ3GEY0R00	M 0 OHM, 1/16W	3	
R5036	ERJ3GEYJ102	M 1KOHM,J,1/16W	1	
R5037-39	ERJ3GEYJ103	M 10KOHM,J,1/16W	3	
R5040	EXB38V330J	RESISTOR ARRAY	1	
R5041,42	ERJ3GEYJ330	M 33 OHM,J,1/16W	2	
R5043	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R5044,45	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R5077,78	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R5176	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5196	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R5334	D1HG5608A002	NETWORK RESISTER	1	
R5335	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5336	ERJ3GEYJ560	M 56 OHM,J,1/16W	1	
R5337,38	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5347-50	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R5353	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5354	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5356	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5359	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5366	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	1	
R5367	D1HG5608A002	NETWORK RESISTER	1	
R5369-72	ERJ3GEYJ560	M 56 OHM,J,1/16W	4	
R5374	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R5375	ERJ3GEYJ330	M 33 OHM,J,1/16W	1	
R5376	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R5391	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R5392,93	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	2	
R5394,95	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R5396	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R5399	ERJ3GEYJ182	M 1.8KOHM,J,1/16W	1	
R6501-03	EXB38V560J	RESISTOR ARRAY	3	
R6535,36	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6537,38	ERJ3GEY0R00	M 0 OHM, 1/16W	2	
R6542,43	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6546,47	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6549,50	ERJ3GEYJ223	M 22KOHM,J,1/16W	2	
R6562-65	EXB38V560J	RESISTOR ARRAY	4	
R6566-76	ERJ3GEYJ560	M 56 OHM,J,1/16W	11	
R6589	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6590	ERJ3GEYJ221	M 220 OHM,J,1/16W	1	
R6591	ERJ3GEYJ223	M 22KOHM,J,1/16W	1	
R6592,93	ERJ3GEYJ560	M 56 OHM,J,1/16W	2	
R6596	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	1	
R6597	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6598,99	EXB38VR000	RESISTOR ARRAY	2	
R6600	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6601	EXB38VR000	RESISTOR ARRAY	1	
R6602	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6603	EXB38VR000	RESISTOR ARRAY	1	
R6604	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6605	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R6702	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6703-05	ERJ6GEY0R00	M 0 OHM, 1/10W	3	
R6707	ERJ3GEYJ101	M 100 OHM,J,1/16W	1	
R6715	ERJ6GEYJ220	M 22 OHM,J,1/10W	1	
R6716,17	ERJ3GEYJ473	M 47KOHM,J,1/16W	2	
R6718-20	ERJ3GEYJ220	M 22 OHM,J,1/16W	3	
R6721	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6722,23	ERJ3GEYJ220	M 22 OHM,J,1/16W	2	
R6732	ERJ3GEY0R00	M 0 OHM, 1/16W	1	
R6734	ERJ3GEYJ470	M 47 OHM,J,1/16W	1	
R6736	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6742	ERJ6GEYJ820	M 82 OHM,J,1/10W	1	
R6743	ERJ6GEYJ562	M 5.6KOHM,J,1/10W	1	
R6745	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6747	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R6749	ERJ3GEYJ103	M 10KOHM,J,1/16W	1	
R6755-59	ERJ6GEY0R00	M 0 OHM, 1/10W	5	
R6765-68	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R6771,72	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R6780-83	ERJ3GEY0R00	M 0 OHM, 1/16W	4	
R6784	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R6785,86	ERJ3GEYJ103	M 10KOHM,J,1/16W	2	
R6788-92	ERJ3GEY0R00	M 0 OHM, 1/16W	5	
R6793	ERJ3GEYJ473	M 47KOHM,J,1/16W	1	
R7001	ERC12ZGK105	S 1MOHM, K,1/2W	1	⚠
R7002	ERG1SJ470P	M 47 OHM, J, 1W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7003	ERD75TAJ825	C 8.2MOHM, J,3/4W	1	⚠
R7004	ERF5ZK4R7	W 4.7 OHM, K, 5W	1	
R7005	ERC12ZGK105	S 1MOHM, K,1/2W	1	⚠
R7102	ERX1SJR27P	M0.27 OHM, J, 1W	1	
R7103	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7104	ERDS2TJ822	C 8.2KOHM, J,1/4W	1	
R7106	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7108	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7109	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7110	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7111	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7112	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7113	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7114	ERF2AJ820	W 82 OHM, J, 2W	1	PAVCCZ
R7115	ERJ6GEYJ100	M 10 OHM,J,1/10W	1	
R7119	ERDS2TJ563	C 56KOHM, J,1/4W	1	
R7121	ERDS2TJ431	C 430 OHM, J,1/4W	1	
R7123	ERDS2TJ222	C 2.2KOHM, J,1/4W	1	
R7124	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7125	ER0S2CKF1052	M10.5KOHM, F,1/4W	1	
R7126	ER0S2CKF1002	M 10KOHM, F,1/4W	1	
R7127-29	ERJ6GEYJ102	M 1KOHM,J,1/10W	3	
R7204	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7205,06	ERJ6GEYJ102	M 1KOHM,J,1/10W	2	
R7207	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7208	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7209	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7210,11	ERJ6GEYJ473	M 47KOHM,J,1/10W	2	
R7212	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7213-16	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	4	
R7217	ERDS2TJ102	C 1KOHM, J,1/4W	1	
R7218	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7219	ERJ6GEYJ103	M 10KOHM,J,1/10W	1	
R7220	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7221	ERJ14YJ222	M 22KOHM, J,1/4W	1	
R7223	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7224	ERJ6GEYJ152	M 1.5KOHM,J,1/10W	1	
R7225	ERJ14YJ222	M 22KOHM, J,1/4W	1	
R7226	ERG2FJ560H	M 56 OHM, J, 2W	1	
R7227	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7228,29	ERJ6GEYJ473	M 47KOHM,J,1/10W	2	
R7232	ERJ14YJ332	M 33KOHM, J,1/4W	1	
R7234,35	ERJ6GEY0R00	M 0 OHM, 1/10W	2	
R7236	ERJ14YJ332	M 33KOHM, J,1/4W	1	
R7237,38	ERJ6GEYJ223	M 22KOHM,J,1/10W	2	
R7241	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7242	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7243	ERJ6ENF1002	M 10KOHM, 1/10W	1	
R7247	ERJ6ENF2702	M 27KOHM, 1/10W	1	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
R7248	ERDS2TJ102	C 1KOHM, J,1/4W	1	
R7250	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7300	K5G4023A0003	FUSE	1	
R7301	ERJ6ENF1801	M 1.8KOHM, 1/10W	1	
R7302	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7303	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7304	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7305	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7400	K5G4023A0003	FUSE	1	
R7402	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7403	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7404	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7405	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7406	ERJ6ENF3401	M 3.4KOHM, 1/10W	1	
R7407	ERJ6GEYJ473	M 47KOHM,J,1/10W	1	
R7501,02	ERJ6GEYJ223	M 22KOHM,J,1/10W	2	
R7503	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7504	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7505	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7506	ERJ6GEYJ222	M 2.2KOHM,J,1/10W	1	
R7507	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7508	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7509	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7510	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	1	
R7513,14	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	2	
R7602	ERG1SJ330P	M 33 OHM, J, 1W	1	
R7603	ERJ6GEYJ104	M 100KOHM,J,1/10W	1	
R7702	ERJ6ENF1001	M 1KOHM, 1/10W	1	
R7703	ERJ6ENF3241	M3.24KOHM, 1/10W	1	
R7704	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7705	ERJ12YJ471	M 470OHM,J, 1/2W	1	
R7707	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7708	ERJ6GEYJ223	M 22KOHM,J,1/10W	1	
R7709	ERDS2TJ472	C 4.7KOHM, J,1/4W	1	
R7710	ERDS2TJ103	C 10KOHM, J,1/4W	1	
R7711	ERDS2TJ472	C 4.7KOHM, J,1/4W	1	
R7751	ERJ6ENF1001	M 1KOHM, 1/10W	1	
R7752	ERJ6ENF3091	M3.09KOHM, 1/10W	1	
R7753	ERJ6GEYJ102	M 1KOHM,J,1/10W	1	
R7953	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7955	ERJ6GEY0R00	M 0 OHM, 1/10W	1	
R7960	K5G2523A0003	FUSE	1	
RL7001,02	K6B1ADA00010	RELAY	2	⚠
RM1001	PNA4701M05TV	REMOCO RECEIVER	1	
RTL	ETXMM565EBB	POWER UNIT	1	PAVCCZ ⚠
RTL	RD-SD008P	SD MODULE	1	PAVCCZ ⚠

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks
RTL	TNPA3487AC	CIRCUIT BOARD AP	1	PAVCCZ ⚠
RTL	TNPA3489AB	CIRCUIT BOARD G	1	⚠
RTL	TNPA3490AD	CIRCUIT BOARD V	1	PAVCCZ ⚠
RTL	TNPA3491AA	CIRCUIT BOARD GP	1	PAVCCZ ⚠
RTL	TNPA3492AB	CIRCUIT BOARD K	1	⚠
RTL	TNPA3615AA	CIRCUIT BOARD GS	1	⚠
RTL	TXN/H10LMM	CIRCUIT BOARD H	1	PAVCCZ ⚠
RTL	TXNDG10LMM	CIRCUIT BOARD DG	1	TX-32LX500F PAVCCZ ⚠
RTL	TXNDG10LNM	CIRCUIT BOARD DG	1	TX-32LX500P PAVCCZ ⚠
RTL	TXNDG10LQM	CIRCUIT BOARD DG	1	TX-26LX500F PAVCCZ ⚠
RTL	TXNDG10LRM	CIRCUIT BOARD DG	1	TX-26LX500P PAVCCZ ⚠
RTL	TXNDV10LLM	CIRCUIT BOARD DV	1	PAVCCZ ⚠
SN1001	B3L000000020	IC	1	
SW001	ESB92S11B	SWITCH	1	⚠
SW3802-06	EVQPB105K	SWITCH	5	
T7101	ETS25AD1N6AG	SWITCHING TRANS	1	⚠
TU3201	ENG37A12GF	TUNER	1	PAVCCZ ⚠
V1	K1KA10BA0062	10P CONNECTOR	1	
X1101	H0J600400006	CRYSTAL	1	
X2101	H0J184500027	CRYSTAL	1	
X2102	EFCS6504BF	CERAMIC FILTER	1	
X2103	EFCS7004BF	CERAMIC FILTER	1	
X4001	H0J202500016	CRYSTAL	1	
X4002	H0J270500087	CRYSTAL	1	
ZA2101-03	TESA169	SHIELD CLIP	3	
ZA2105,06	TESA169	SHIELD CLIP	2	
ZA2108,09	TESA169	SHIELD CLIP	2	
ZA3201-03	K9ZZ00000424	CONNECTOR	3	
ZA4005-16	TESA169	SHIELD CLIP	12	
ZA4018-20	TESA169	SHIELD CLIP	3	
ZA5001	K4CD01000011	TERMINAL	1	
ZA5002,03	TESA169	SHIELD CLIP	2	
ZA5005	K4CD01000011	TERMINAL	1	
ZA7002-05	K9ZZ00000424	CONNECTOR	4	

Ref. No.	Part No.	Part Name & Description	Pcs	Remarks

15. Schematic Diagram for printing with A4 size

[1] © 2005 Matsushita Electric Industrial Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ XV-BOARD TNP0EXV01AD (4/5)
(TX-32/26LXD500 ONLY)

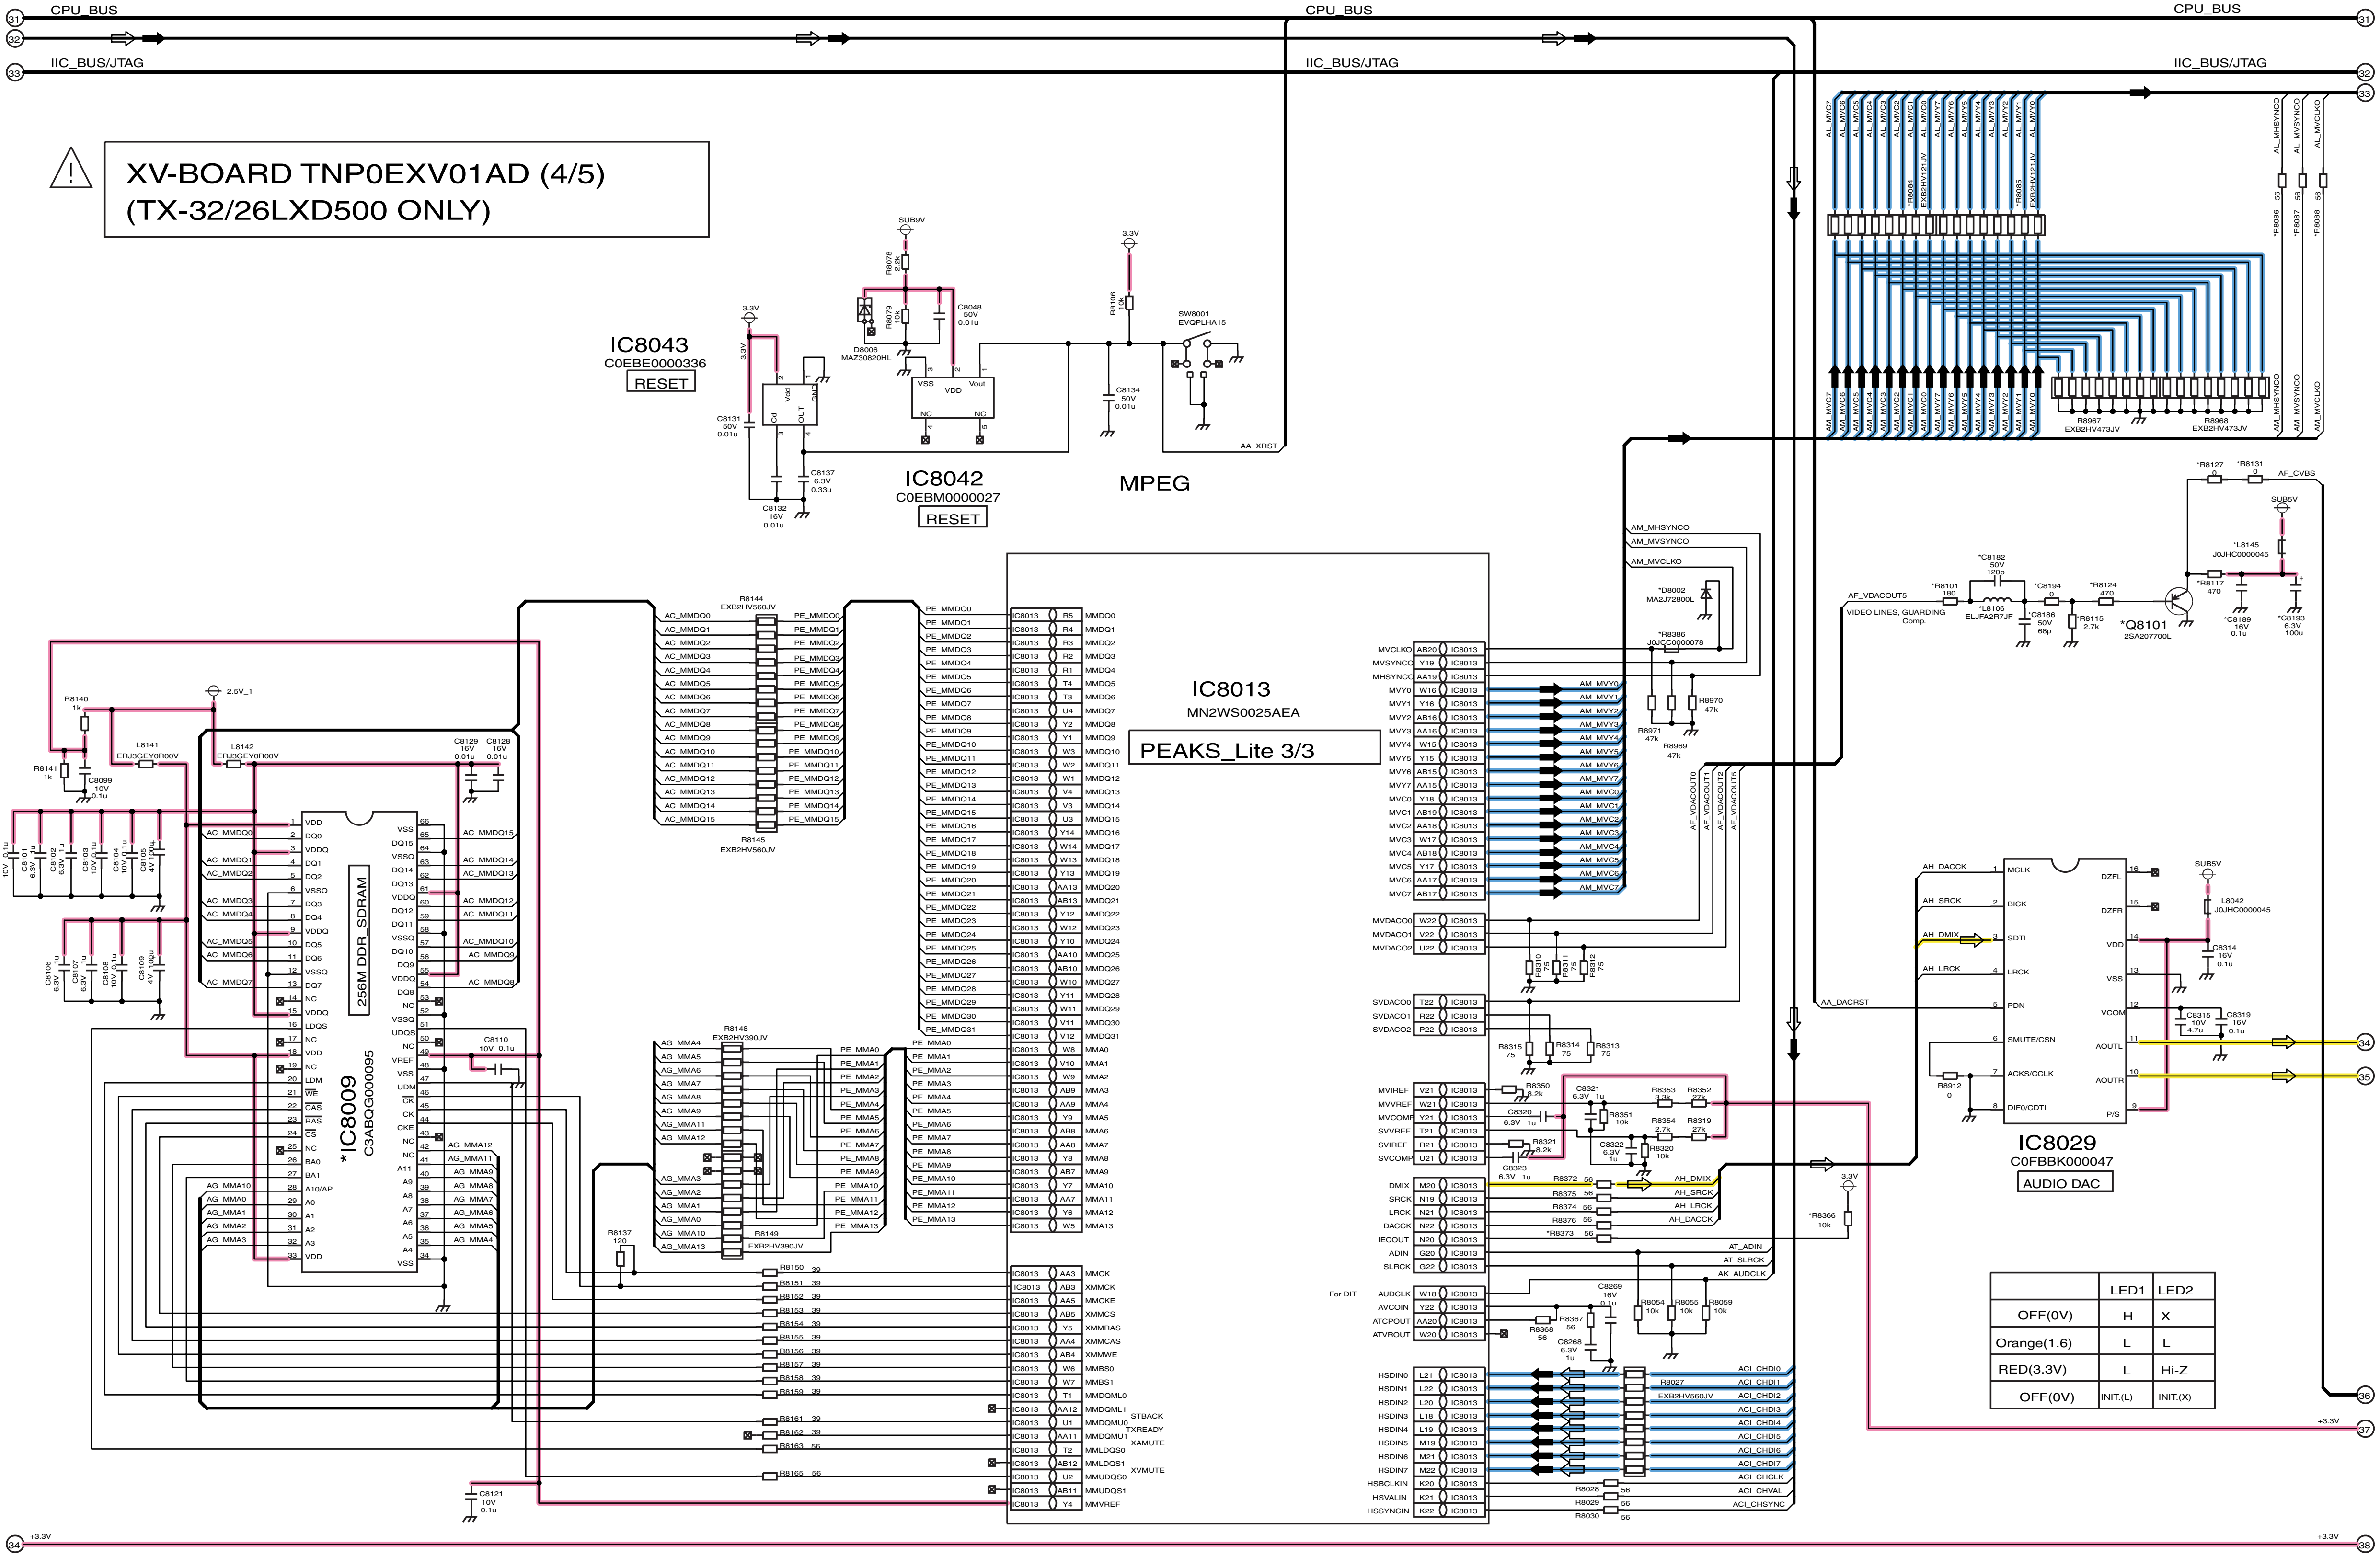
CPU_BUS
IIC_BUS/JTAG
IC8043
C0EBE0000336
RESET
IC8042
C0EBM0000027
RESET
MPEG
SW8001
EVQPLHA15
D8006
MAZ30820HL
SUB9V
3.3V
2.5V_1
AA_XRST
IC8013
MN2WS0025AEA
PEAKS_Lite 3/3
*IC8009
C3ABQG000095
256M DDR_SDRAM
R8144
EXB2HV560JV
R8145
EXB2HV560JV
R8148
EXB2HV390JV
R8149
EXB2HV390JV
L8141
ERJ3GEY0R00V
L8142
ERJ3GEY0R00V
AC_MMDQ0 … AC_MMDQ15
PE_MMDQ0 … PE_MMDQ31
AG_MMA0 … AG_MMA13
PE_MMA0 … PE_MMA13
MMCK
XMMCK
XMMCKE
XMMCS
XMMRAS
XMMCAS
XMMWE
MMBS0
MMBS1
MMDQML0
MMDQML1
MMUDQMU0
MMDQMU1
MMLDQS0
MMLDQS1
MMUDQS0
MMUDQS1
MMVREF
STBACK
TXREADY
XAMUTE
XVMUTE
AM_MVY0 … AM_MVY7
AM_MVC0 … AM_MVC7
AL_MVY0 … AL_MVY7
AL_MVC0 … AL_MVC7
AM_MHSYNCO
AM_MVSYNCO
AM_MVCLKO
AL_MHSYNCO
AL_MVSYNCO
AL_MVCLKO
R8084
EXB2HV121JV
R8085
EXB2HV121JV
R8967
EXB2HV473JV
R8968
EXB2HV473JV
AF_VDACOUT0
AF_VDACOUT1
AF_VDACOUT2
AF_VDACOUT5
AF_CVBS
SUB5V
*Q8101
2SA207700L
*L8106
ELJFA2R7JF
*L8145
J0JHC0000045
VIDEO LINES, GUARDING Comp.
*D8002
MA2J72800L
*R8386
J0JCC0000078
AH_DACCK
AH_SRCK
AH_DMIX
AH_LRCK
AA_DACRST
IC8029
C0FBBK000047
AUDIO DAC
MCLK
BICK
SDTI
LRCK
PDN
SMUTE/CSN
ACKS/CCLK
DIF0/CDTI
DZFL
DZFR
VDD
VSS
VCOM
AOUTL
AOUTR
P/S
L8042
J0JHC0000045
AT_ADIN
AT_SLRCK
AK_AUDCLK
For DIT
ACI_CHDI0 … ACI_CHDI7
ACI_CHCLK
ACI_CHVAL
ACI_CHSYNC
R8027
EXB2HV560JV
+3.3V
31
32
33
34
35
36
37
38

	LED1	LED2
OFF(0V)	H	X
Orange(1.6)	L	L
RED(3.3V)	L	Hi-Z
OFF(0V)	INIT.(L)	INIT.(X)

TX-32/26LXD500
XV-Board (4 of 5) Schematic Diagram

TX-32/26LXD500
XV-Board (4 of 5) Schematic Diagram

XV-BOARD TNP0EXV01AD (5/5)
(TX-32/26LXD500 ONLY)

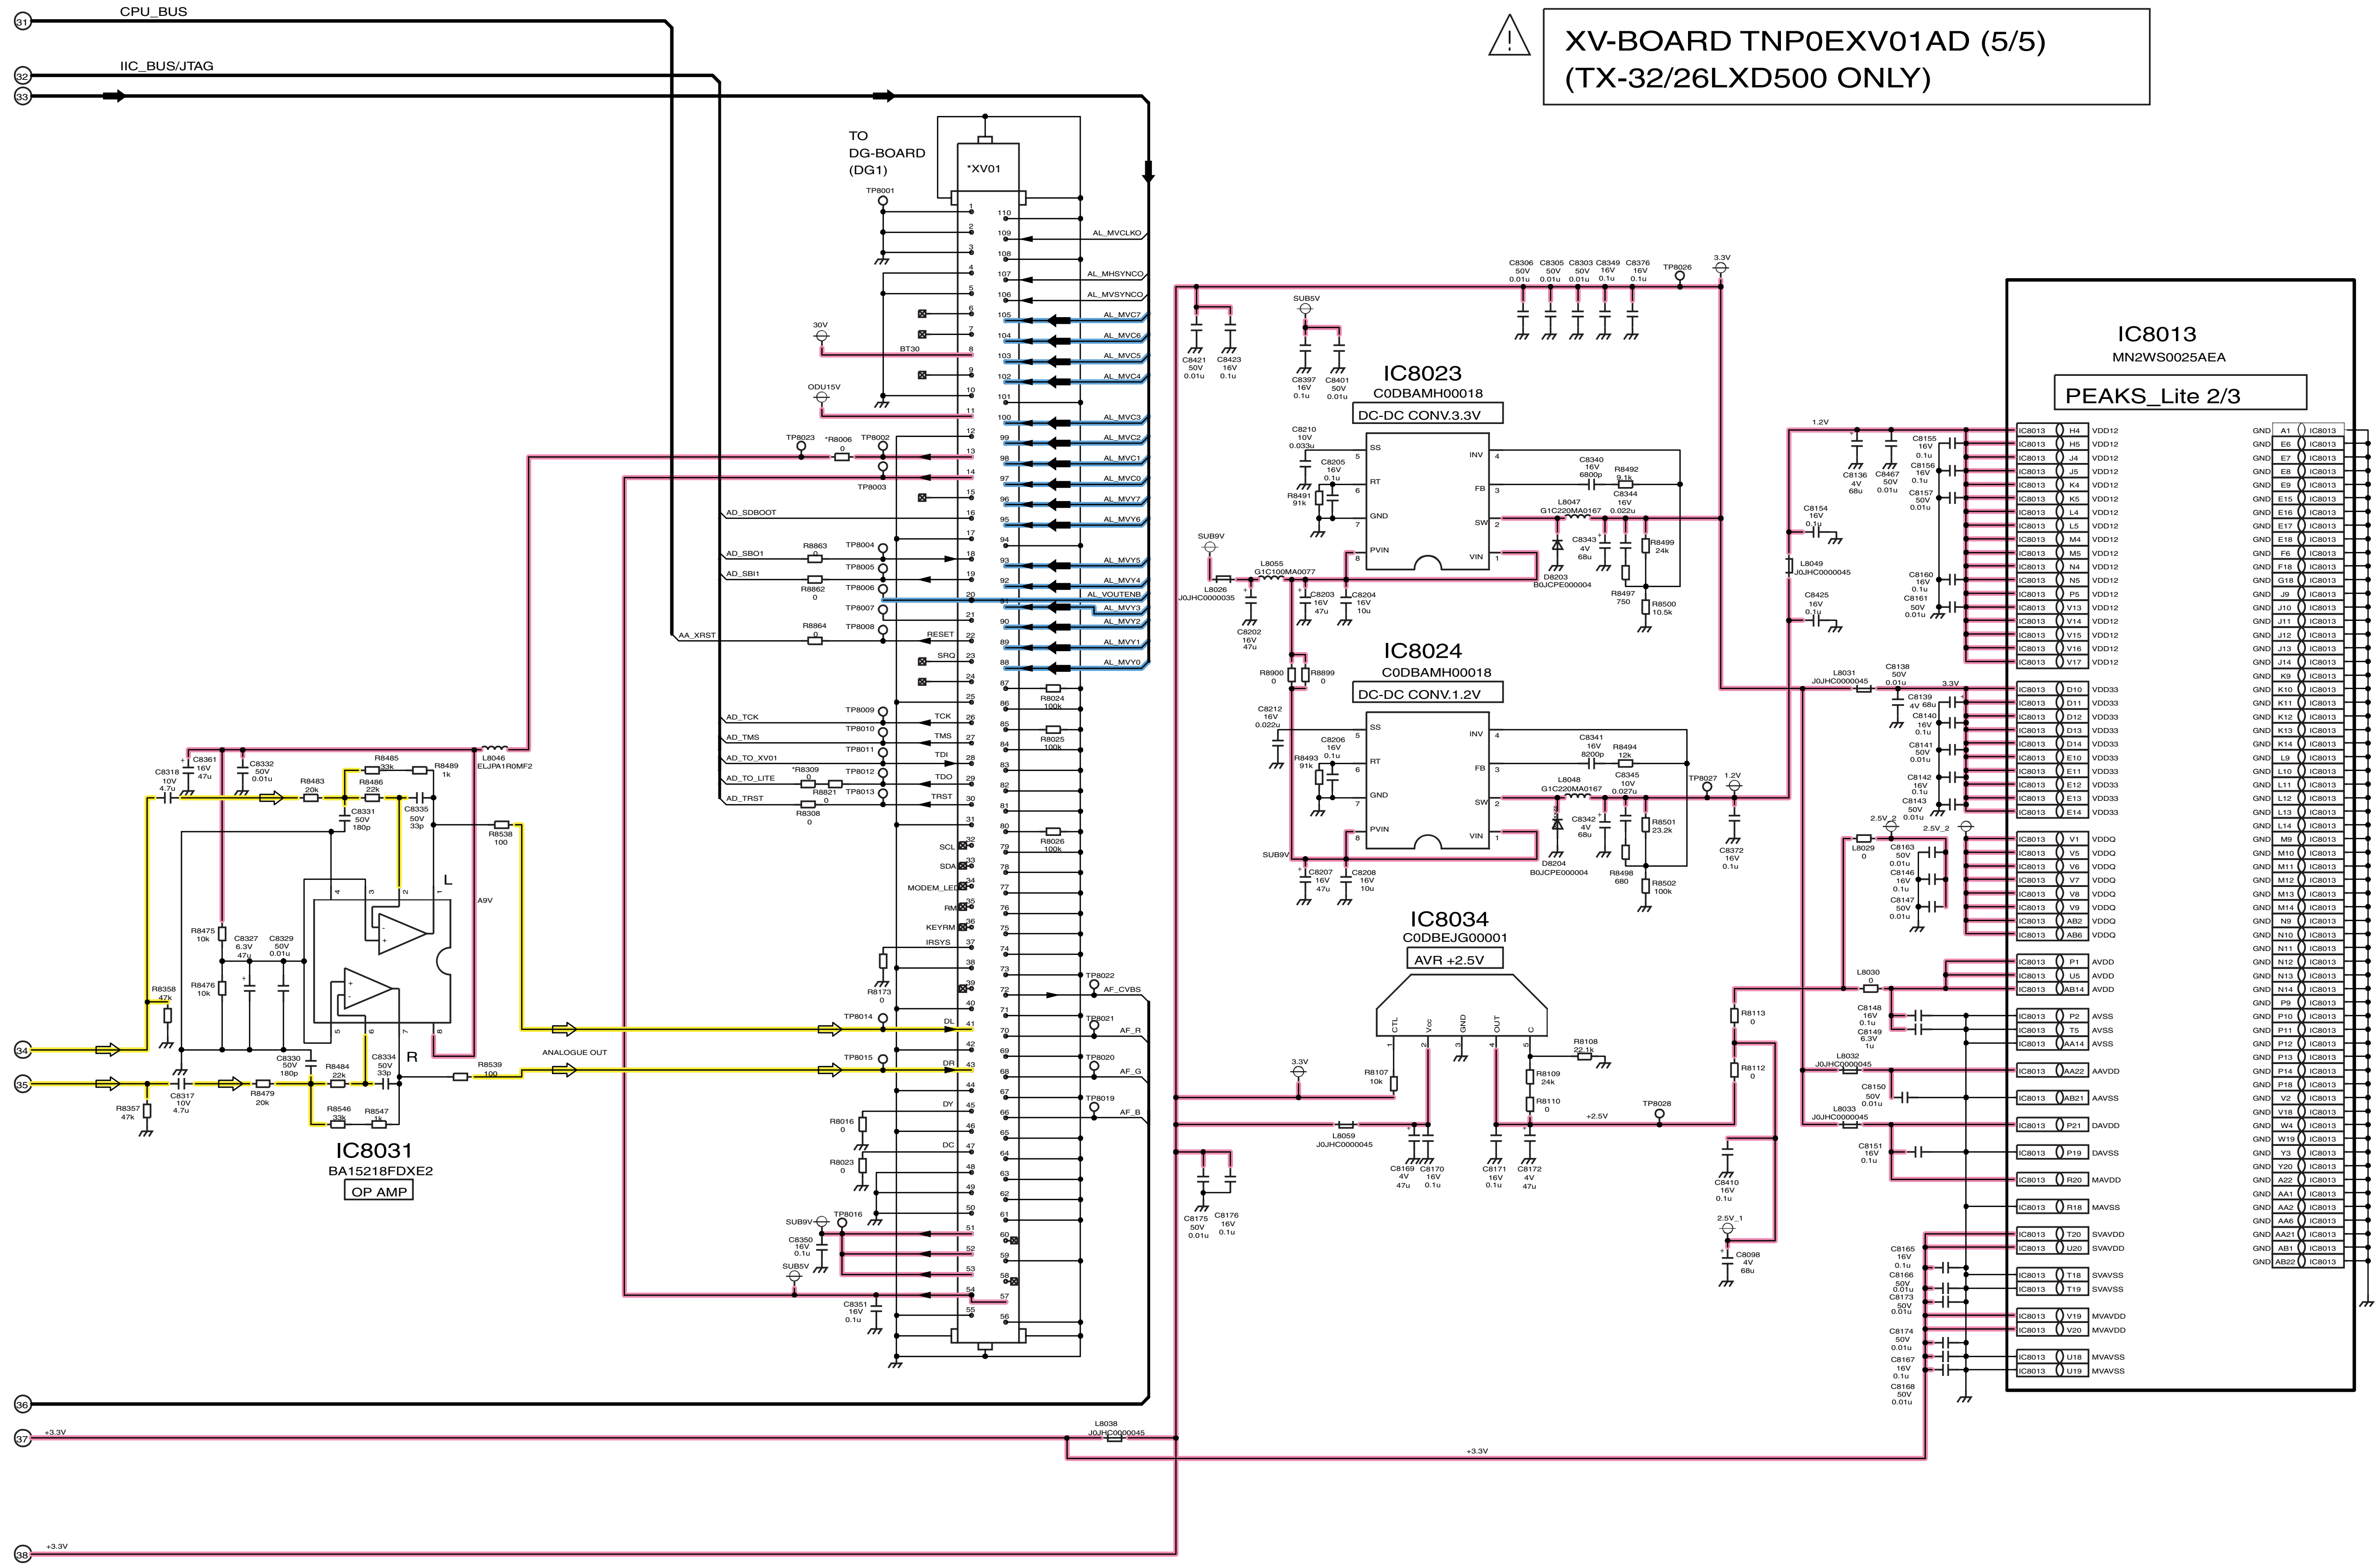

CPU_BUS
IIC_BUS/JTAG
TO DG-BOARD (DG1)
*XV01
IC8023
C0DBAMH00018
DC-DC CONV.3.3V
IC8024
C0DBAMH00018
DC-DC CONV.1.2V
IC8034
C0DBEJG00001
AVR +2.5V
IC8031
BA15218FDXE2
OP AMP
IC8013
MN2WS0025AEA
PEAKS_Lite 2/3
ANALOGUE OUT
AL_MVCLKO
AL_MHSYNCO
AL_MVSYNCO
AL_MVC7
AL_MVC6
AL_MVC5
AL_MVC4
AL_MVC3
AL_MVC2
AL_MVC1
AL_MVC0
AL_MVY7
AL_MVY6
AL_MVY5
AL_MVY4
AL_VOUTENB
AL_MVY3
AL_MVY2
AL_MVY1
AL_MVY0
AD_SDBOOT
AD_SBO1
AD_SBI1
AA_XRST
AD_TCK
AD_TMS
AD_TO_XV01
AD_TO_LITE
AD_TRST
AF_CVBS
AF_R
AF_G
AF_B
SUB5V
SUB9V
3.3V
1.2V
2.5V
+3.3V
30V
ODU15V
VDD12
VDD33
VDDQ
AVDD
AVSS
AAVDD
AAVSS
DAVDD
DAVSS
MAVDD
MAVSS
SVAVDD
SVAVSS
MVAVDD
MVAVSS
GND
31
32
33
34
35
36
37
38

11 Schematic Diagram

11.1. Schematic Diagram Notes

Important Safety Notice

Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

Notes:

1. **Resistor**
   Unit of resistance is OHM [Ω] (K=1,000, M=1,000,000).
2. **Capacitor**
   Unit of capacitance is μF, unless otherwise noted.
3. Coil
   Unit of inductance is μF, unless otherwise noted.
4. Test Point
   ⚲ : Test Point position
5. Earth Symbol
   ⏚ : Chassis Earth (Cold) ▽ : Line Earth (Hot)
6. Voltage Measurement
   Voltage is measured by a DC voltmeter.
   Conditions of the measurement are the following:
   Power Source .... AC 220-240V, 50/60Hz
   Receiving Signal .... Colour Bar signal (RF)
   All customer's controls .... Maximum positions
7. Number in red circle indicates waveform nember.
   (See waveform pattern table.)
8. When arrow mark (↗) is found, connection is easily found from the direction of arrow

9. Indicates the major signal flow. : Video ➡ Audio ⇨
10. This schematic diagram is the latest at the time of printing and subject to change without notice.

Remarks:

1. The Power Circuit contains a circuit area which uses a separate power supply to isolate the earth connection.
   The circuit is defined by HOT and COLD indications in the schematic diagram. Take the follwing precautions.
   All circuits, except the Power Circuit, are cold.
   Precautions
   a. Do not touch the hot part or the hot and cold parts at the same time or you may be shocked.
   b. Do not short- circuit the hot and cold circuits or a fuse may blow and parts may break.
   c. Do not connect an instrument, such as an oscilloscope, to the hot and cold circuits simultaneously or a fuse may blow.
   Connect the earth of instruments to the earth connection of the circuit being measured.
   d. Make sure to disconnect the power plug before removing the chassis.

11.2. Interconnection (1 of 2) Schematic Diagram

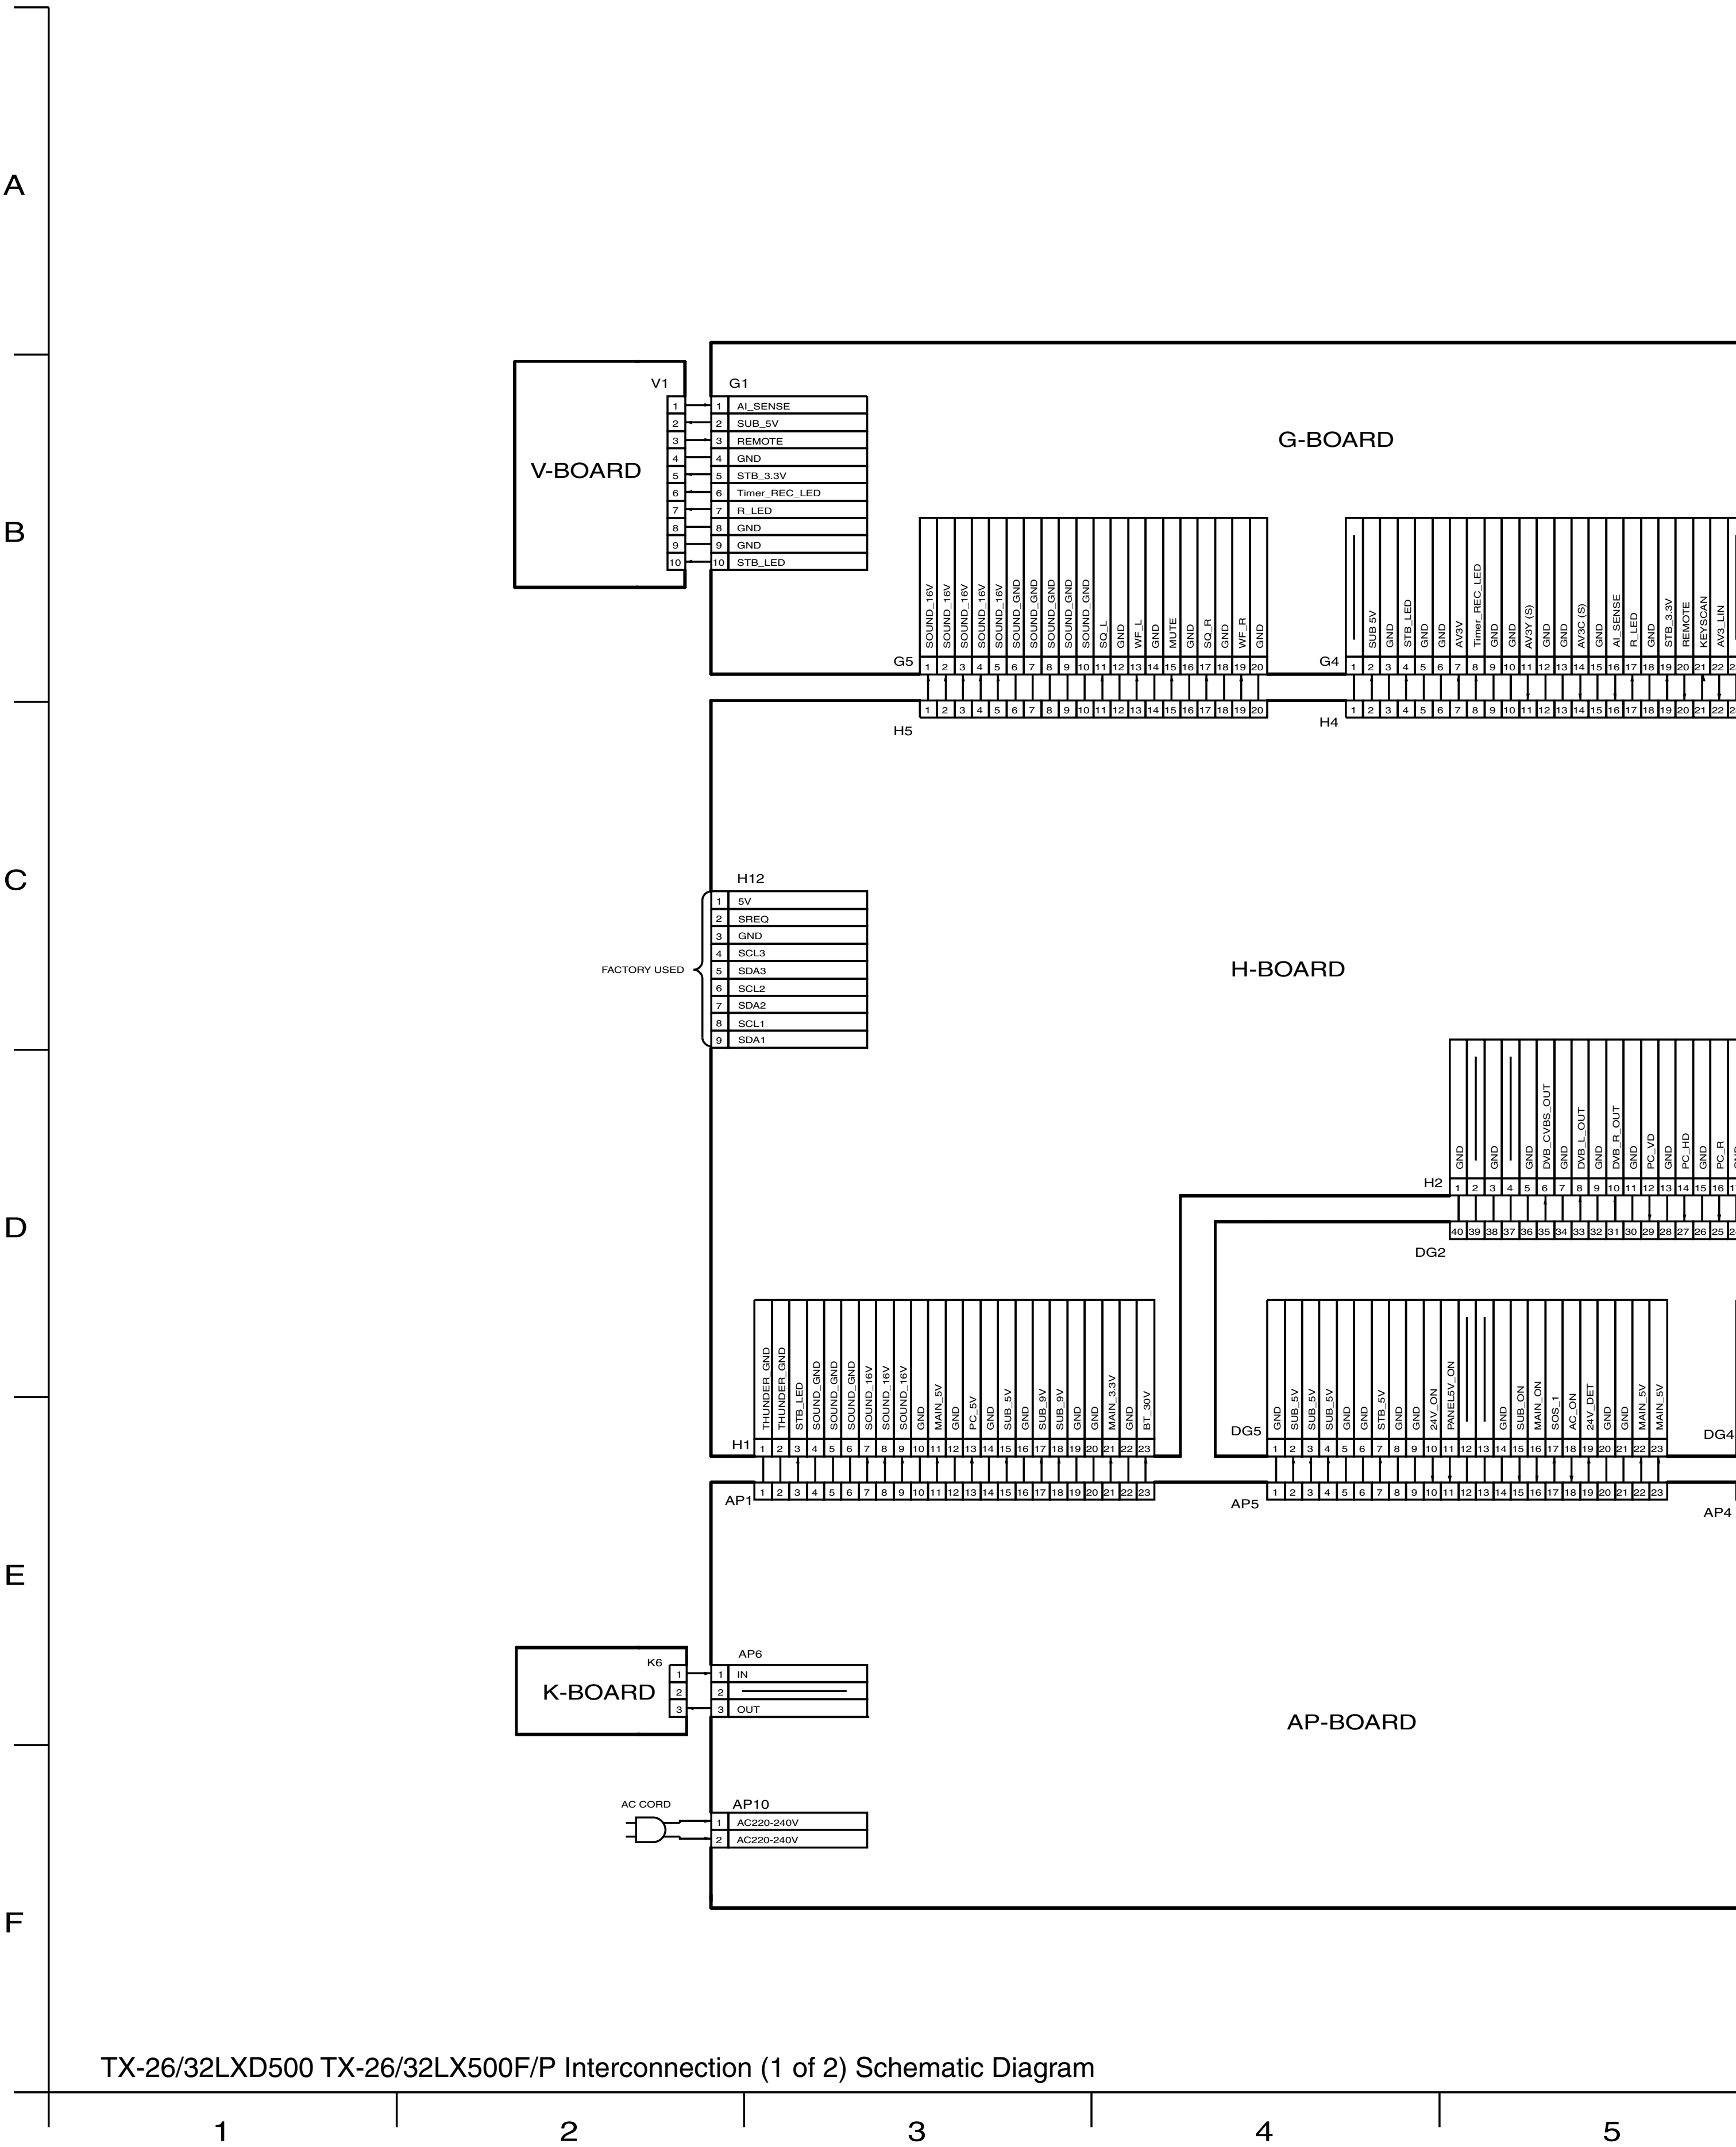
A
B
C
D
E
F
1
2
3
4
5
V-BOARD
V1
G1
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
GND
GND
STB_LED
G-BOARD
G5
SOUND_16V
SOUND_GND
SQ_L
GND
WF_L
MUTE
SQ_R
WF_R
H5
G4
SUB 5V
STB_LED
AV3V
Timer_REC_LED
AV3Y (S)
AV3C (S)
KEYSCAN
AV3_LIN
H4
H12
FACTORY USED
5V
SREQ
SCL3
SDA3
SCL2
SDA2
SCL1
SDA1
H-BOARD
H2
DVB_CVBS_OUT
DVB_L_OUT
DVB_R_OUT
PC_VD
PC_HD
PC_R
DG2
H1
THUNDER_GND
STB_LED
SOUND_16V
MAIN_5V
PC_5V
SUB_5V
SUB_9V
MAIN_3.3V
BT_30V
AP1
DG5
STB_5V
24V_ON
PANEL5V_ON
SUB_ON
MAIN_ON
SOS_1
AC_ON
24V_DET
DG4
AP5
AP4
K-BOARD
K6
AP6
IN
OUT
AP-BOARD
AC CORD
AP10
AC220-240V
AC220-240V

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (1 of 2) Schematic Diagram

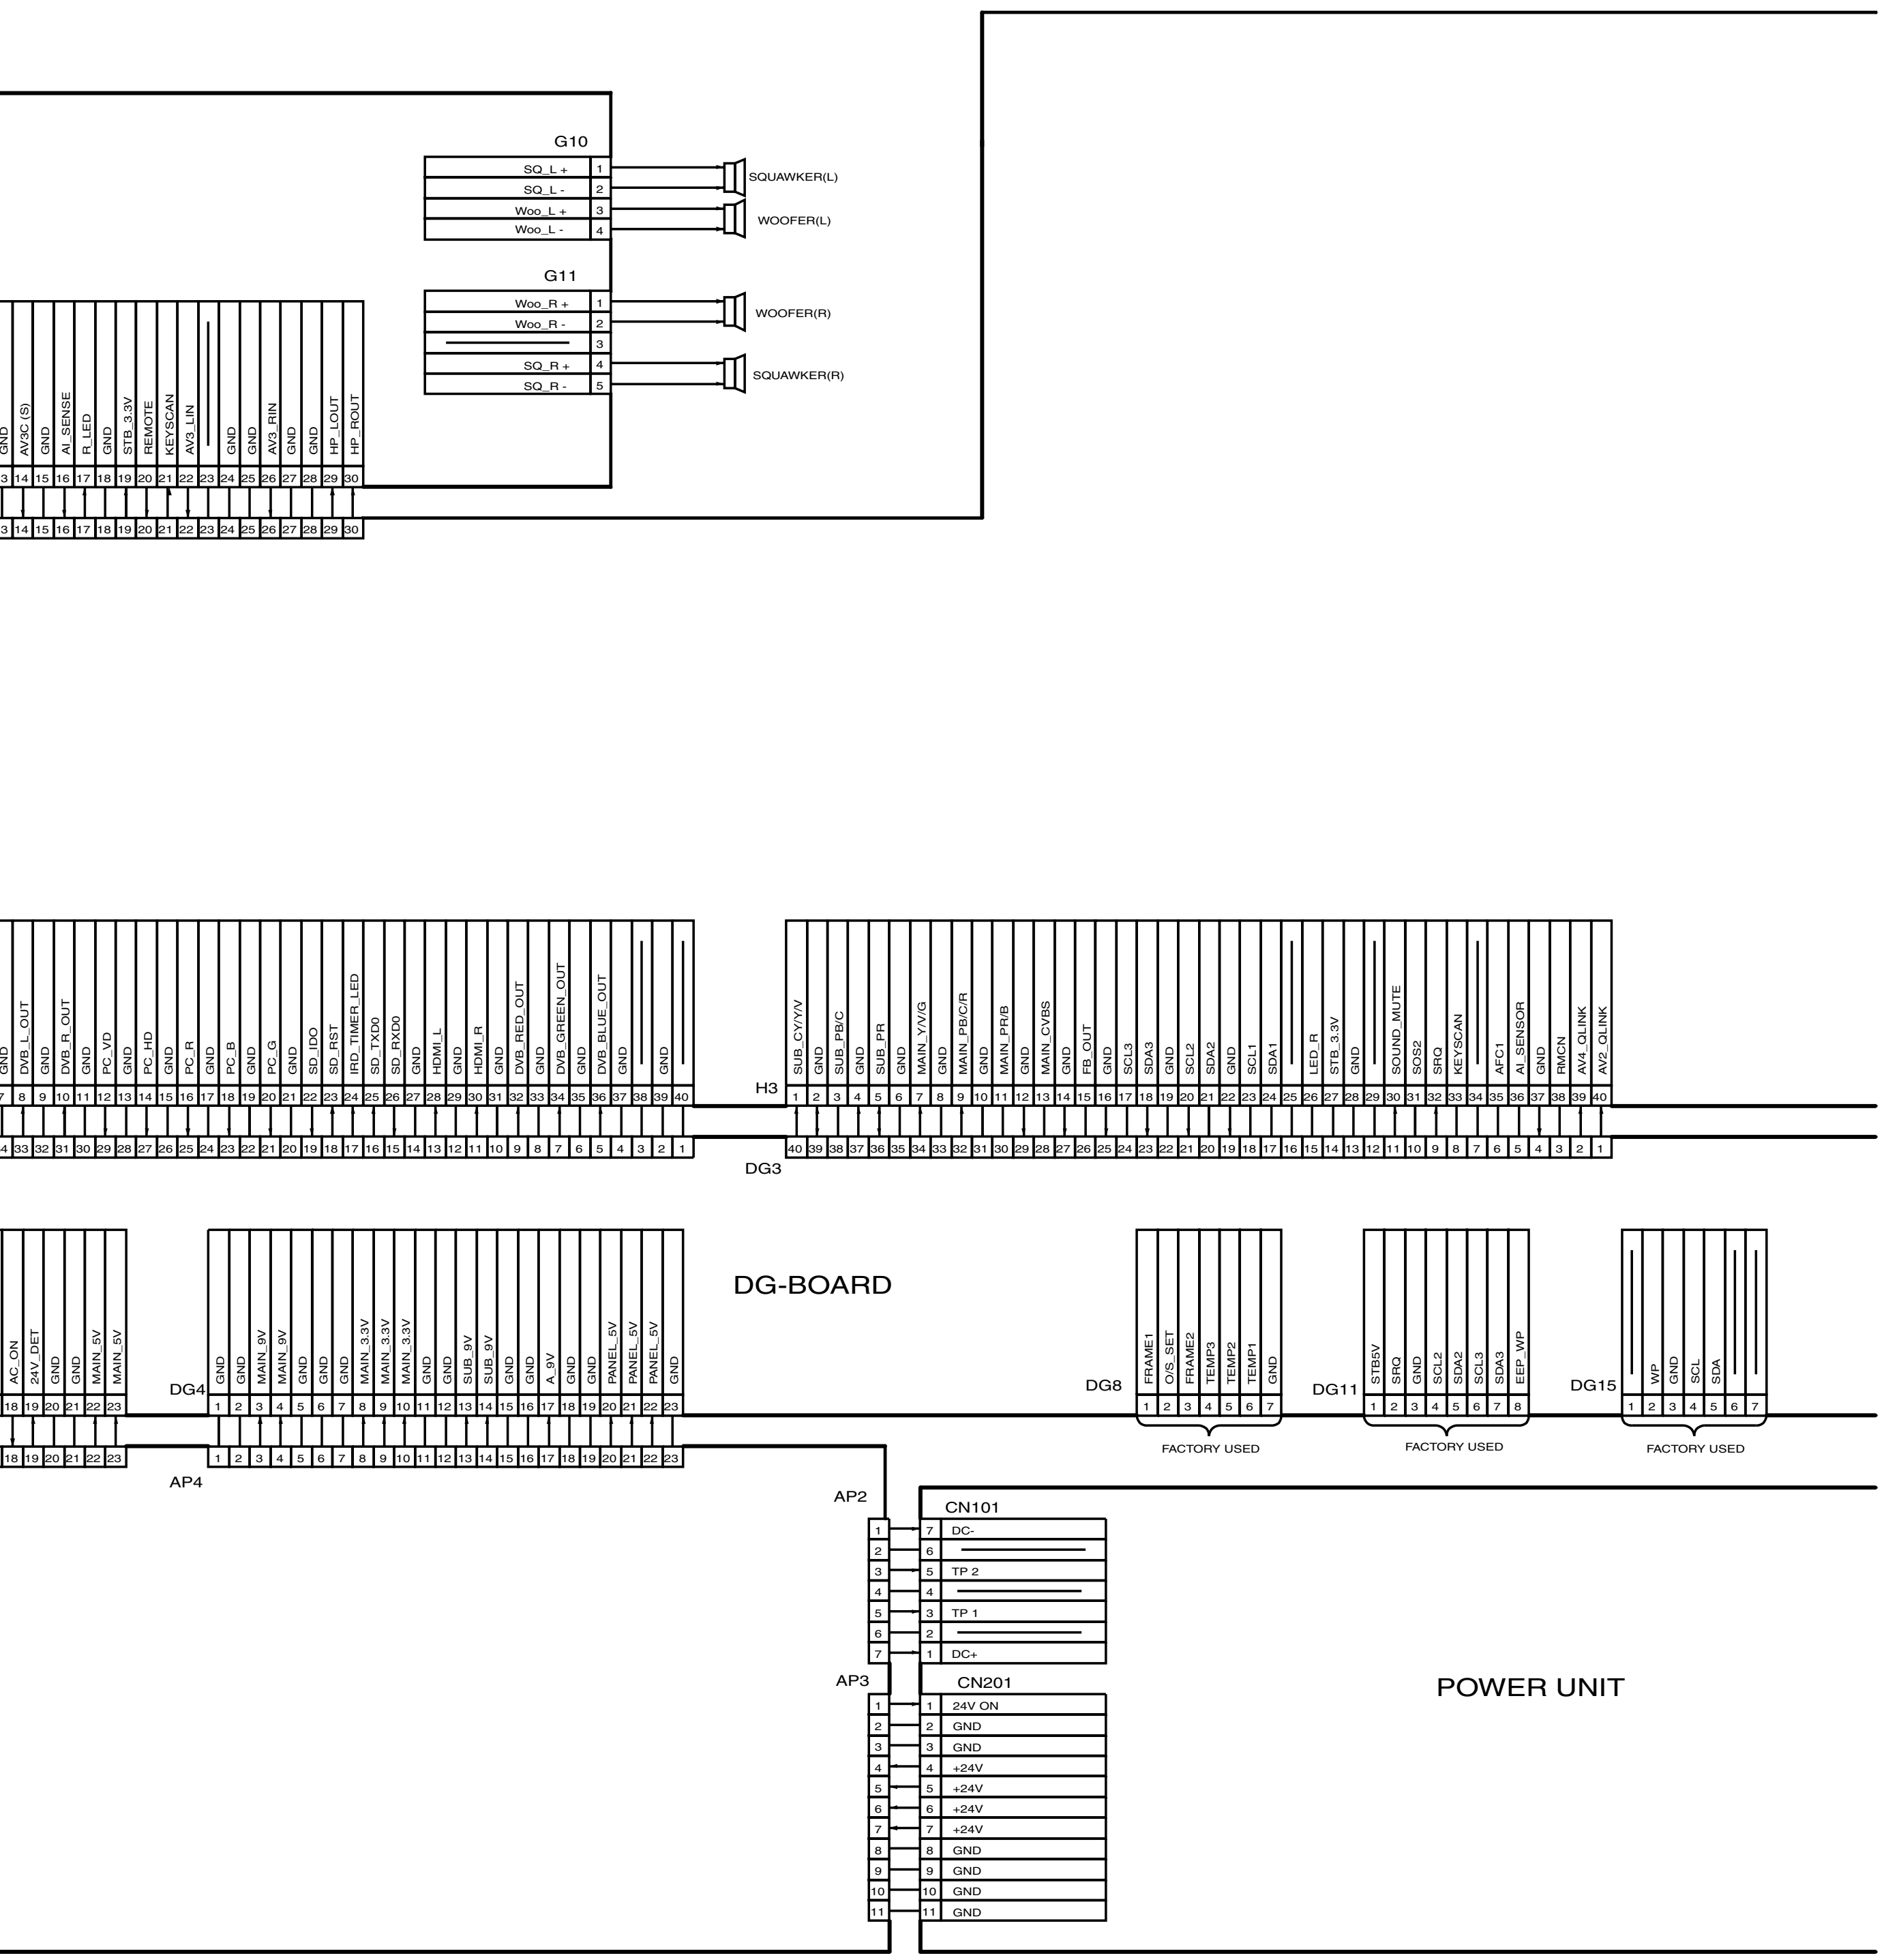
G10
SQ_L +
SQ_L -
Woo_L +
Woo_L -
SQUAWKER(L)
WOOFER(L)
G11
Woo_R +
Woo_R -
SQ_R +
SQ_R -
WOOFER(R)
SQUAWKER(R)
GND
AV3C (S)
GND
AI_SENSE
R_LED
GND
STB_3.3V
REMOTE
KEYSCAN
AV3_LIN
GND
GND
AV3_RIN
GND
HP_LOUT
HP_ROUT
GND
DVB_L_OUT
GND
DVB_R_OUT
GND
PC_VD
GND
PC_HD
GND
PC_R
GND
PC_B
GND
PC_G
GND
SD_IDO
SD_RST
IRD_TIMER_LED
SD_TXD0
SD_RXD0
GND
HDMI_L
GND
HDMI_R
GND
DVB_RED_OUT
GND
DVB_GREEN_OUT
GND
DVB_BLUE_OUT
GND
GND
H3
DG3
SUB_CY/Y/V
GND
SUB_PB/C
GND
SUB_PR
GND
MAIN_Y/V/G
GND
MAIN_PB/C/R
GND
MAIN_PR/B
GND
MAIN_CVBS
GND
FB_OUT
GND
SCL3
SDA3
GND
SCL2
SDA2
GND
SCL1
SDA1
LED_R
STB_3.3V
GND
SOUND_MUTE
SOS2
SRQ
KEYSCAN
AFC1
AI_SENSOR
GND
RMCN
AV4_QLINK
AV2_QLINK
AC_ON
24V_DET
GND
GND
MAIN_5V
MAIN_5V
DG4
AP4
GND
GND
MAIN_9V
MAIN_9V
GND
GND
GND
MAIN_3.3V
MAIN_3.3V
GND
SUB_9V
SUB_9V
GND
GND
A_9V
GND
PANEL_5V
PANEL_5V
PANEL_5V
GND
DG-BOARD
DG8
FRAME1
O/S_SET
FRAME2
TEMP3
TEMP2
TEMP1
GND
FACTORY USED
DG11
STB5V
SRQ
GND
SCL2
SDA2
SCL3
SDA3
EEP_WP
FACTORY USED
DG15
WP
GND
SCL
SDA
FACTORY USED
AP2
CN101
DC-
TP 2
TP 1
DC+
AP3
CN201
24V ON
GND
GND
+24V
+24V
+24V
+24V
GND
GND
GND
GND
POWER UNIT

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (1 of 2) Schematic Diagram

11.3. Interconnection (2 of 2) Schematic Diagram

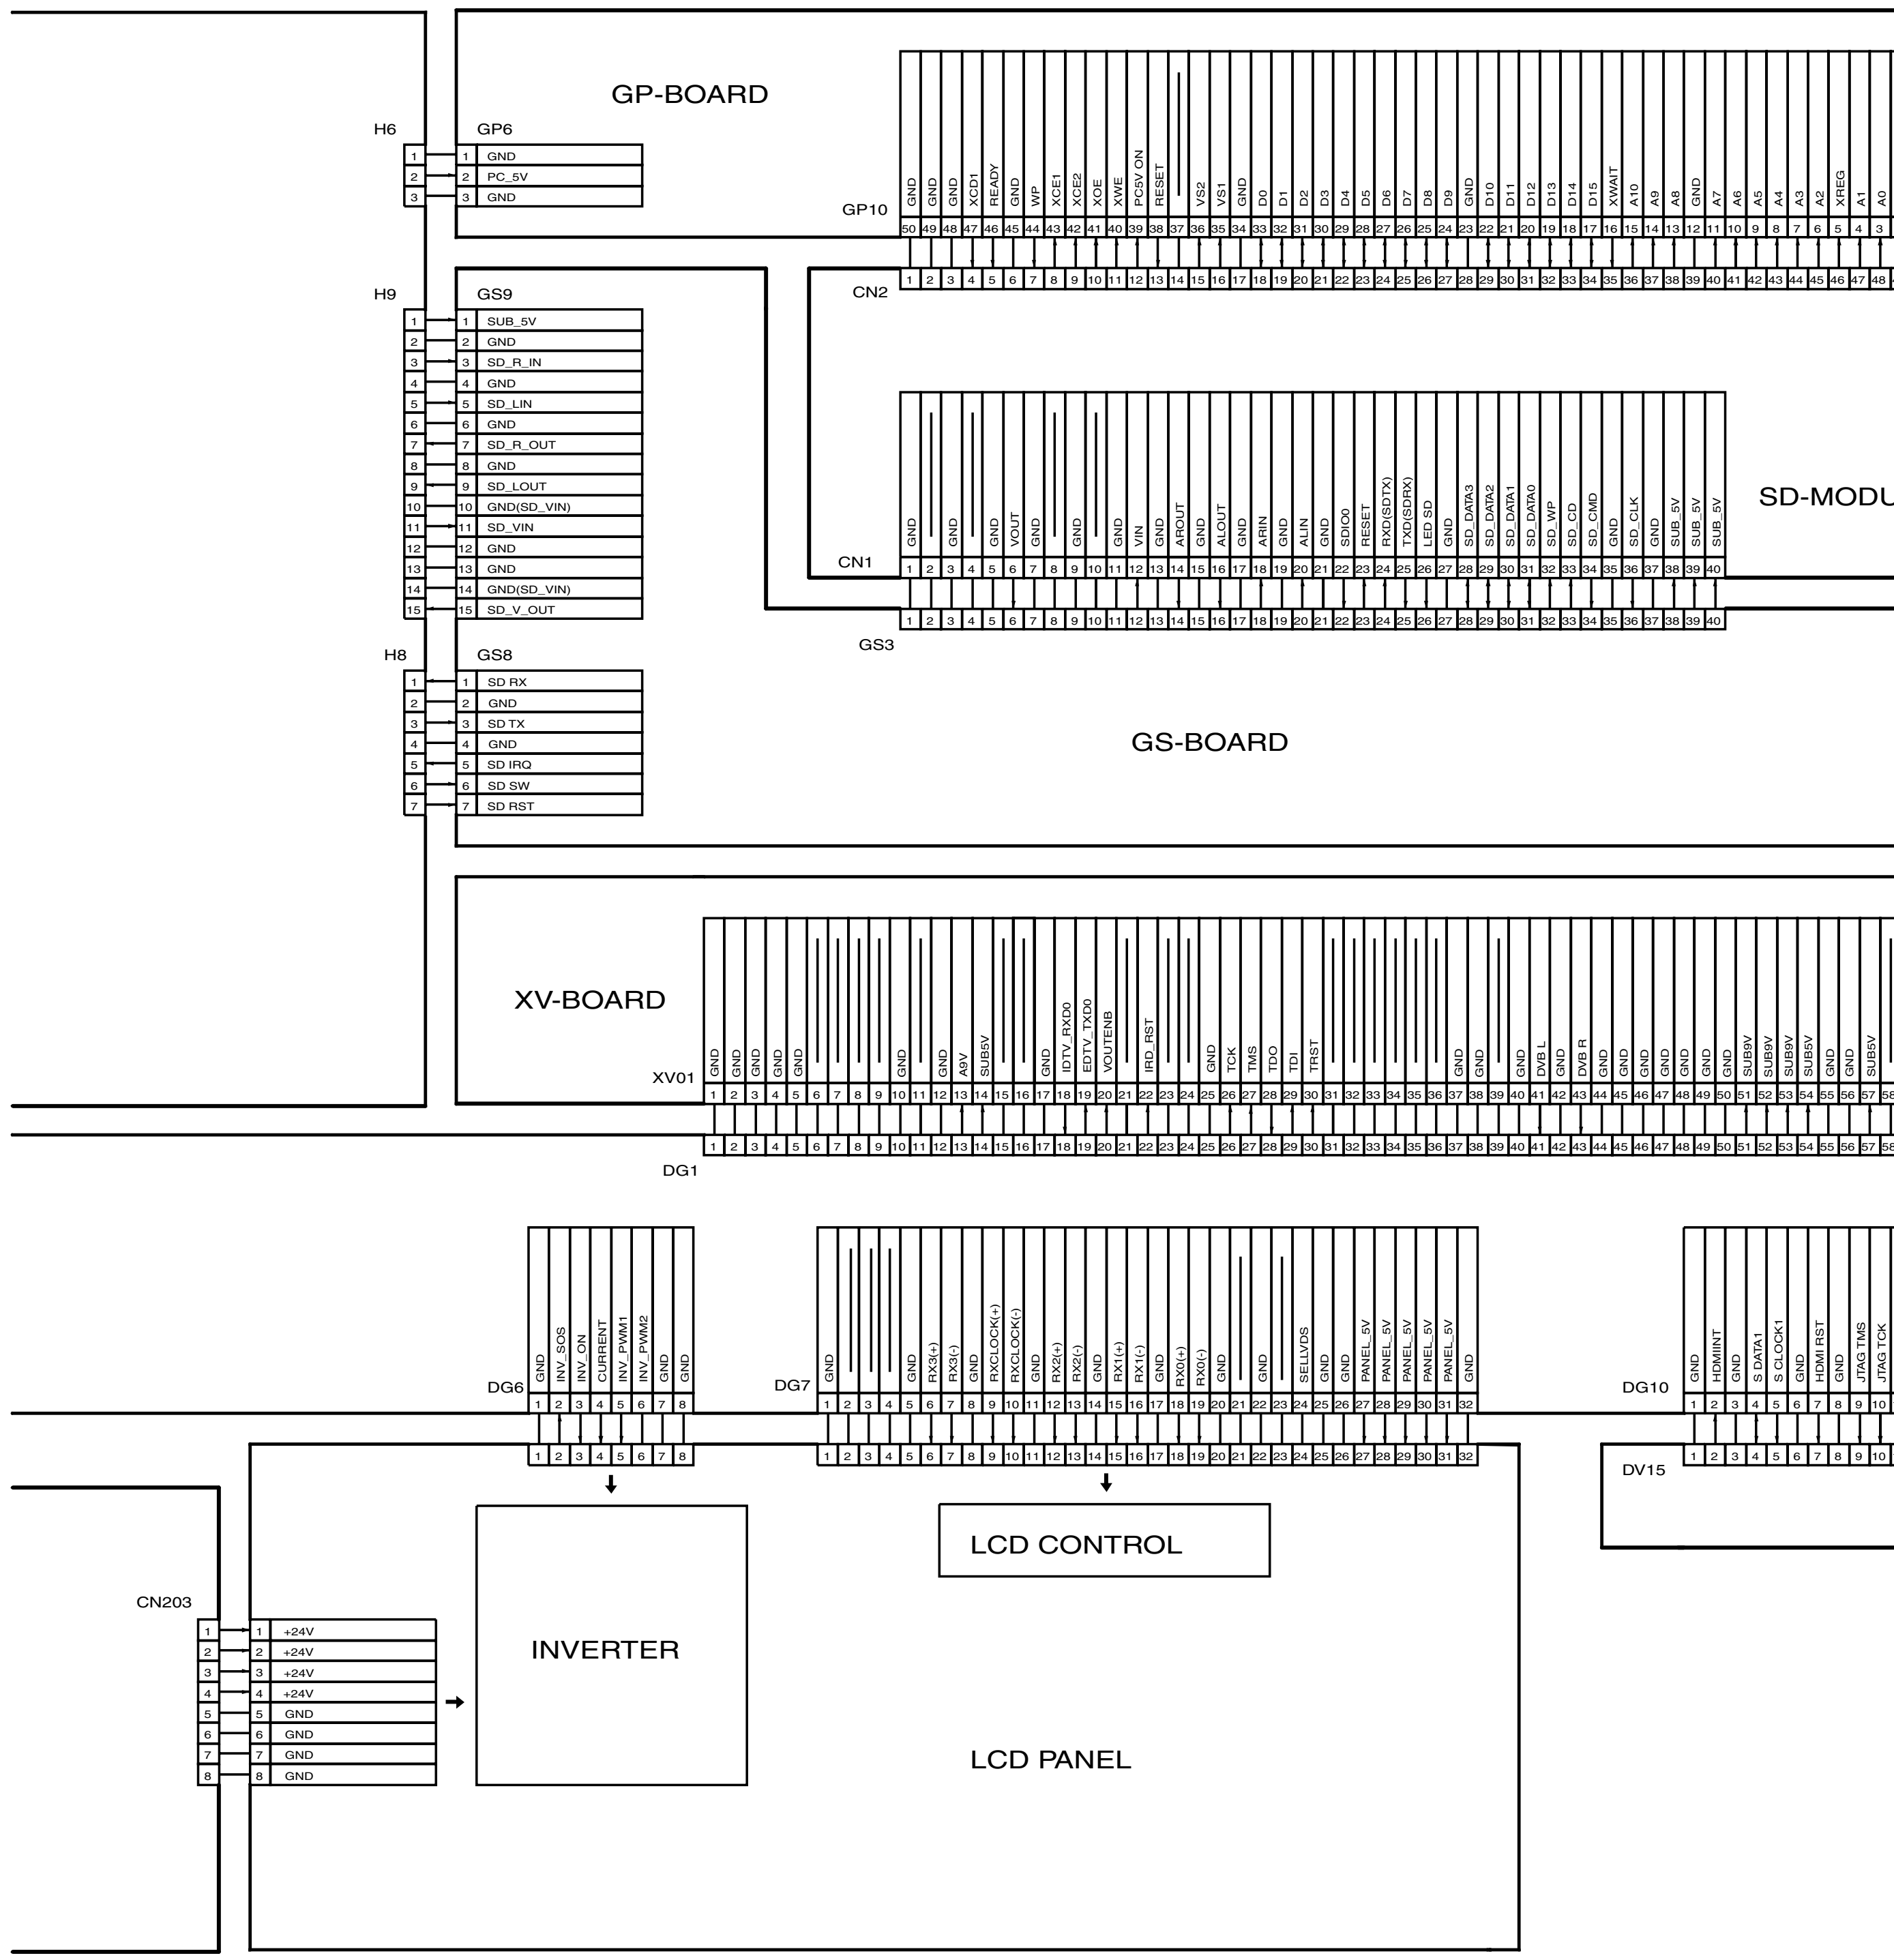
GP-BOARD
H6
GP6
1 GND
2 PC_5V
3 GND
GP10
GND GND GND XCD1 READY GND WP XCE1 XCE2 XOE XWE PC5V ON RESET VS2 VS1 GND D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 GND D10 D11 D12 D13 D14 D15 XWAIT A10 A9 A8 GND A7 A6 A5 A4 A3 A2 XREG A1 A0
CN2
H9
GS9
1 SUB_5V
2 GND
3 SD_R_IN
4 GND
5 SD_LIN
6 GND
7 SD_R_OUT
8 GND
9 SD_LOUT
10 GND(SD_VIN)
11 SD_VIN
12 GND
13 GND
14 GND(SD_VIN)
15 SD_V_OUT
CN1
GND GND GND VOUT GND GND GND VIN GND AROUT GND ALOUT GND ARIN GND ALIN GND SDIO0 RESET RXD(SDTX) TXD(SDRX) LED SD GND SD_DATA3 SD_DATA2 SD_DATA1 SD_DATA0 SD_WP SD_CD SD_CMD GND SD_CLK GND SUB_5V SUB_5V SUB_5V
SD-MODU
GS3
H8
GS8
1 SD RX
2 GND
3 SD TX
4 GND
5 SD IRQ
6 SD SW
7 SD RST
GS-BOARD
XV-BOARD
XV01
GND GND GND GND GND GND A9V SUB5V GND IDTV_RXD0 EDTV_TXD0 VOUTENB IRD_RST GND TCK TMS TDO TDI TRST GND GND GND DVB L GND DVB R GND GND GND GND GND SUB9V SUB9V SUB9V SUB5V GND SUB5V
DG1
DG6
GND INV_SOS INV_ON CURRENT INV_PWM1 INV_PWM2 GND GND
DG7
GND GND RX3(+) RX3(-) GND RXCLOCK(+) RXCLOCK(-) GND RX2(+) RX2(-) GND RX1(+) RX1(-) GND RX0(+) RX0(-) GND GND SELLVDS GND GND PANEL_5V PANEL_5V PANEL_5V PANEL_5V GND
DG10
GND HDMIINT GND S DATA1 S CLOCK1 GND HDMI RST GND JTAG TMS JTAG TCK
DV15
LCD CONTROL
INVERTER
CN203
1 +24V
2 +24V
3 +24V
4 +24V
5 GND
6 GND
7 GND
8 GND
LCD PANEL

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (2 of 2) Schematic Diagram

10 11 12 13 14

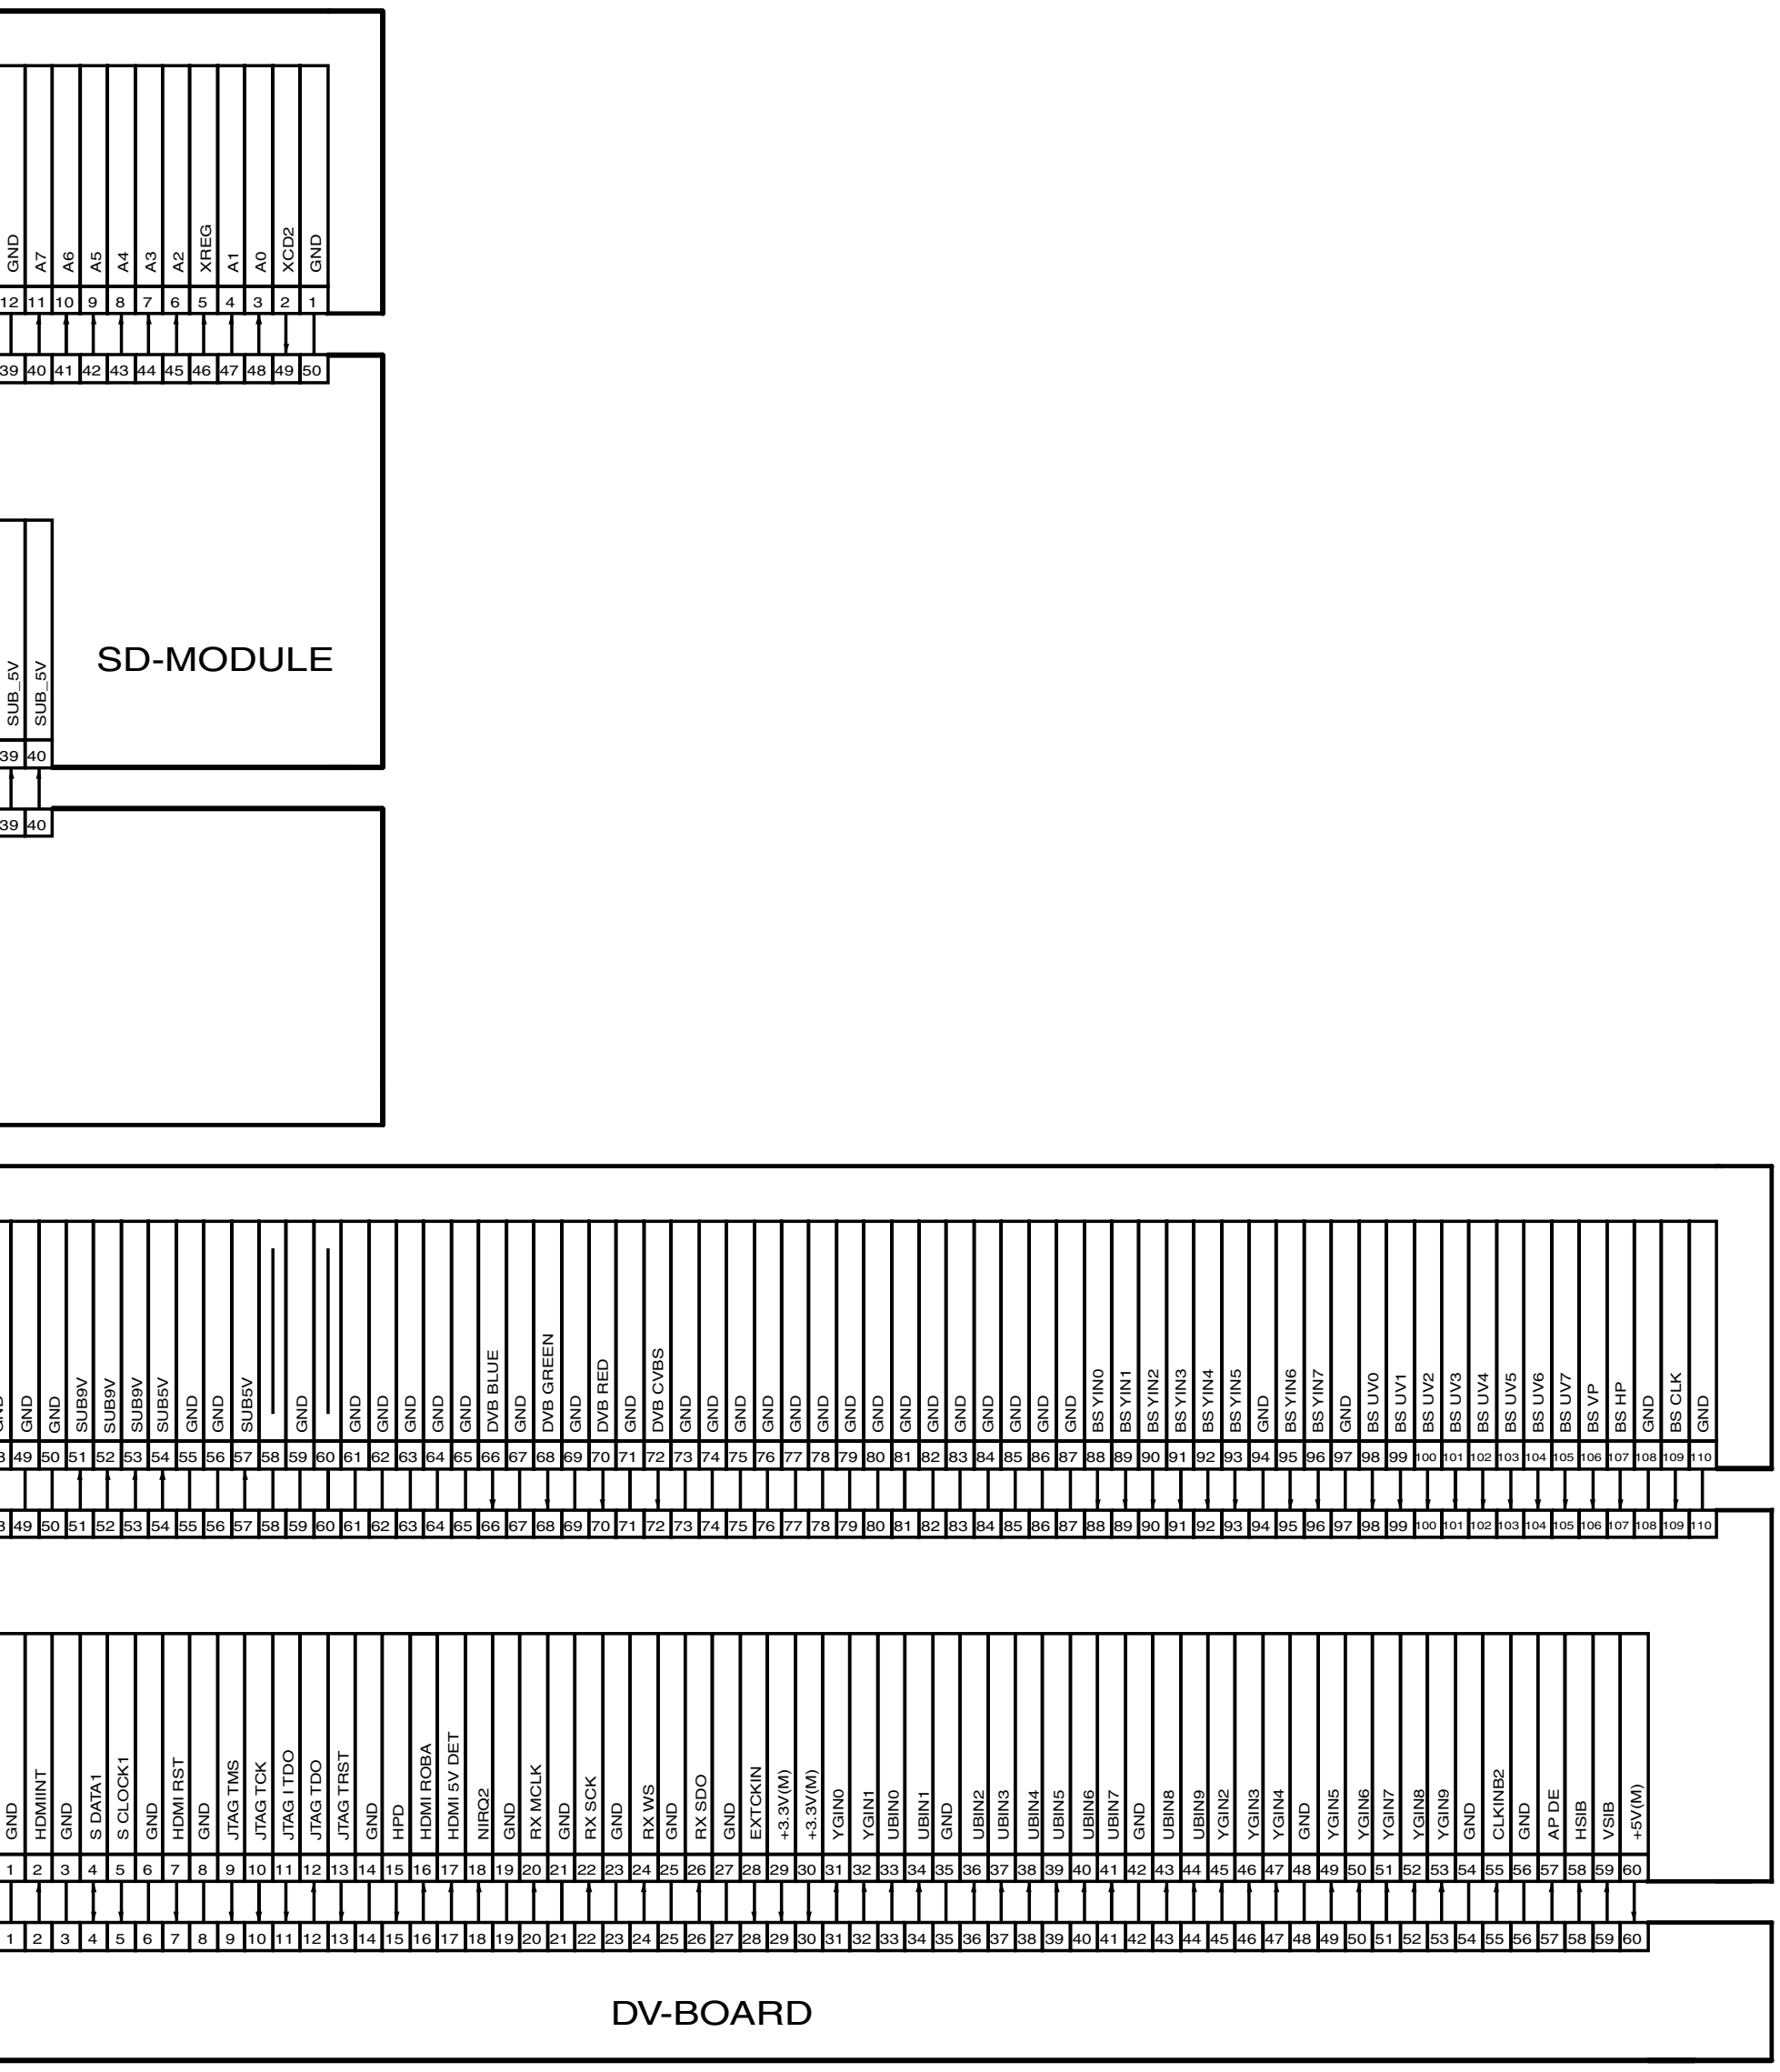
GND
A7
A6
A5
A4
A3
A2
XREG
A1
A0
XCD2
GND
SD-MODULE
SUB_5V
SUB_5V
SUB9V
SUB5V
DVB BLUE
DVB GREEN
DVB RED
DVB CVBS
BS YIN0
BS YIN1
BS YIN2
BS YIN3
BS YIN4
BS YIN5
BS YIN6
BS YIN7
BS UV0
BS UV1
BS UV2
BS UV3
BS UV4
BS UV5
BS UV6
BS UV7
BS VP
BS HP
BS CLK
HDMIINT
S DATA1
S CLOCK1
HDMI RST
JTAG TMS
JTAG TCK
JTAG I TDO
JTAG TDO
JTAG TRST
HPD
HDMI ROBA
HDMI 5V DET
NIRQ2
RX MCLK
RX SCK
RX WS
RX SDO
EXTCKIN
+3.3V(M)
YGIN0
YGIN1
UBIN0
UBIN1
UBIN2
UBIN3
UBIN4
UBIN5
UBIN6
UBIN7
UBIN8
UBIN9
YGIN2
YGIN3
YGIN4
YGIN5
YGIN6
YGIN7
YGIN8
YGIN9
CLKINB2
AP DE
HSIB
VSIB
+5V(M)
DV-BOARD

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (2 of 2) Schematic Diagram

14 15 16 17 18

11.4. AP-Board (1 of 2) Schematic Diagram

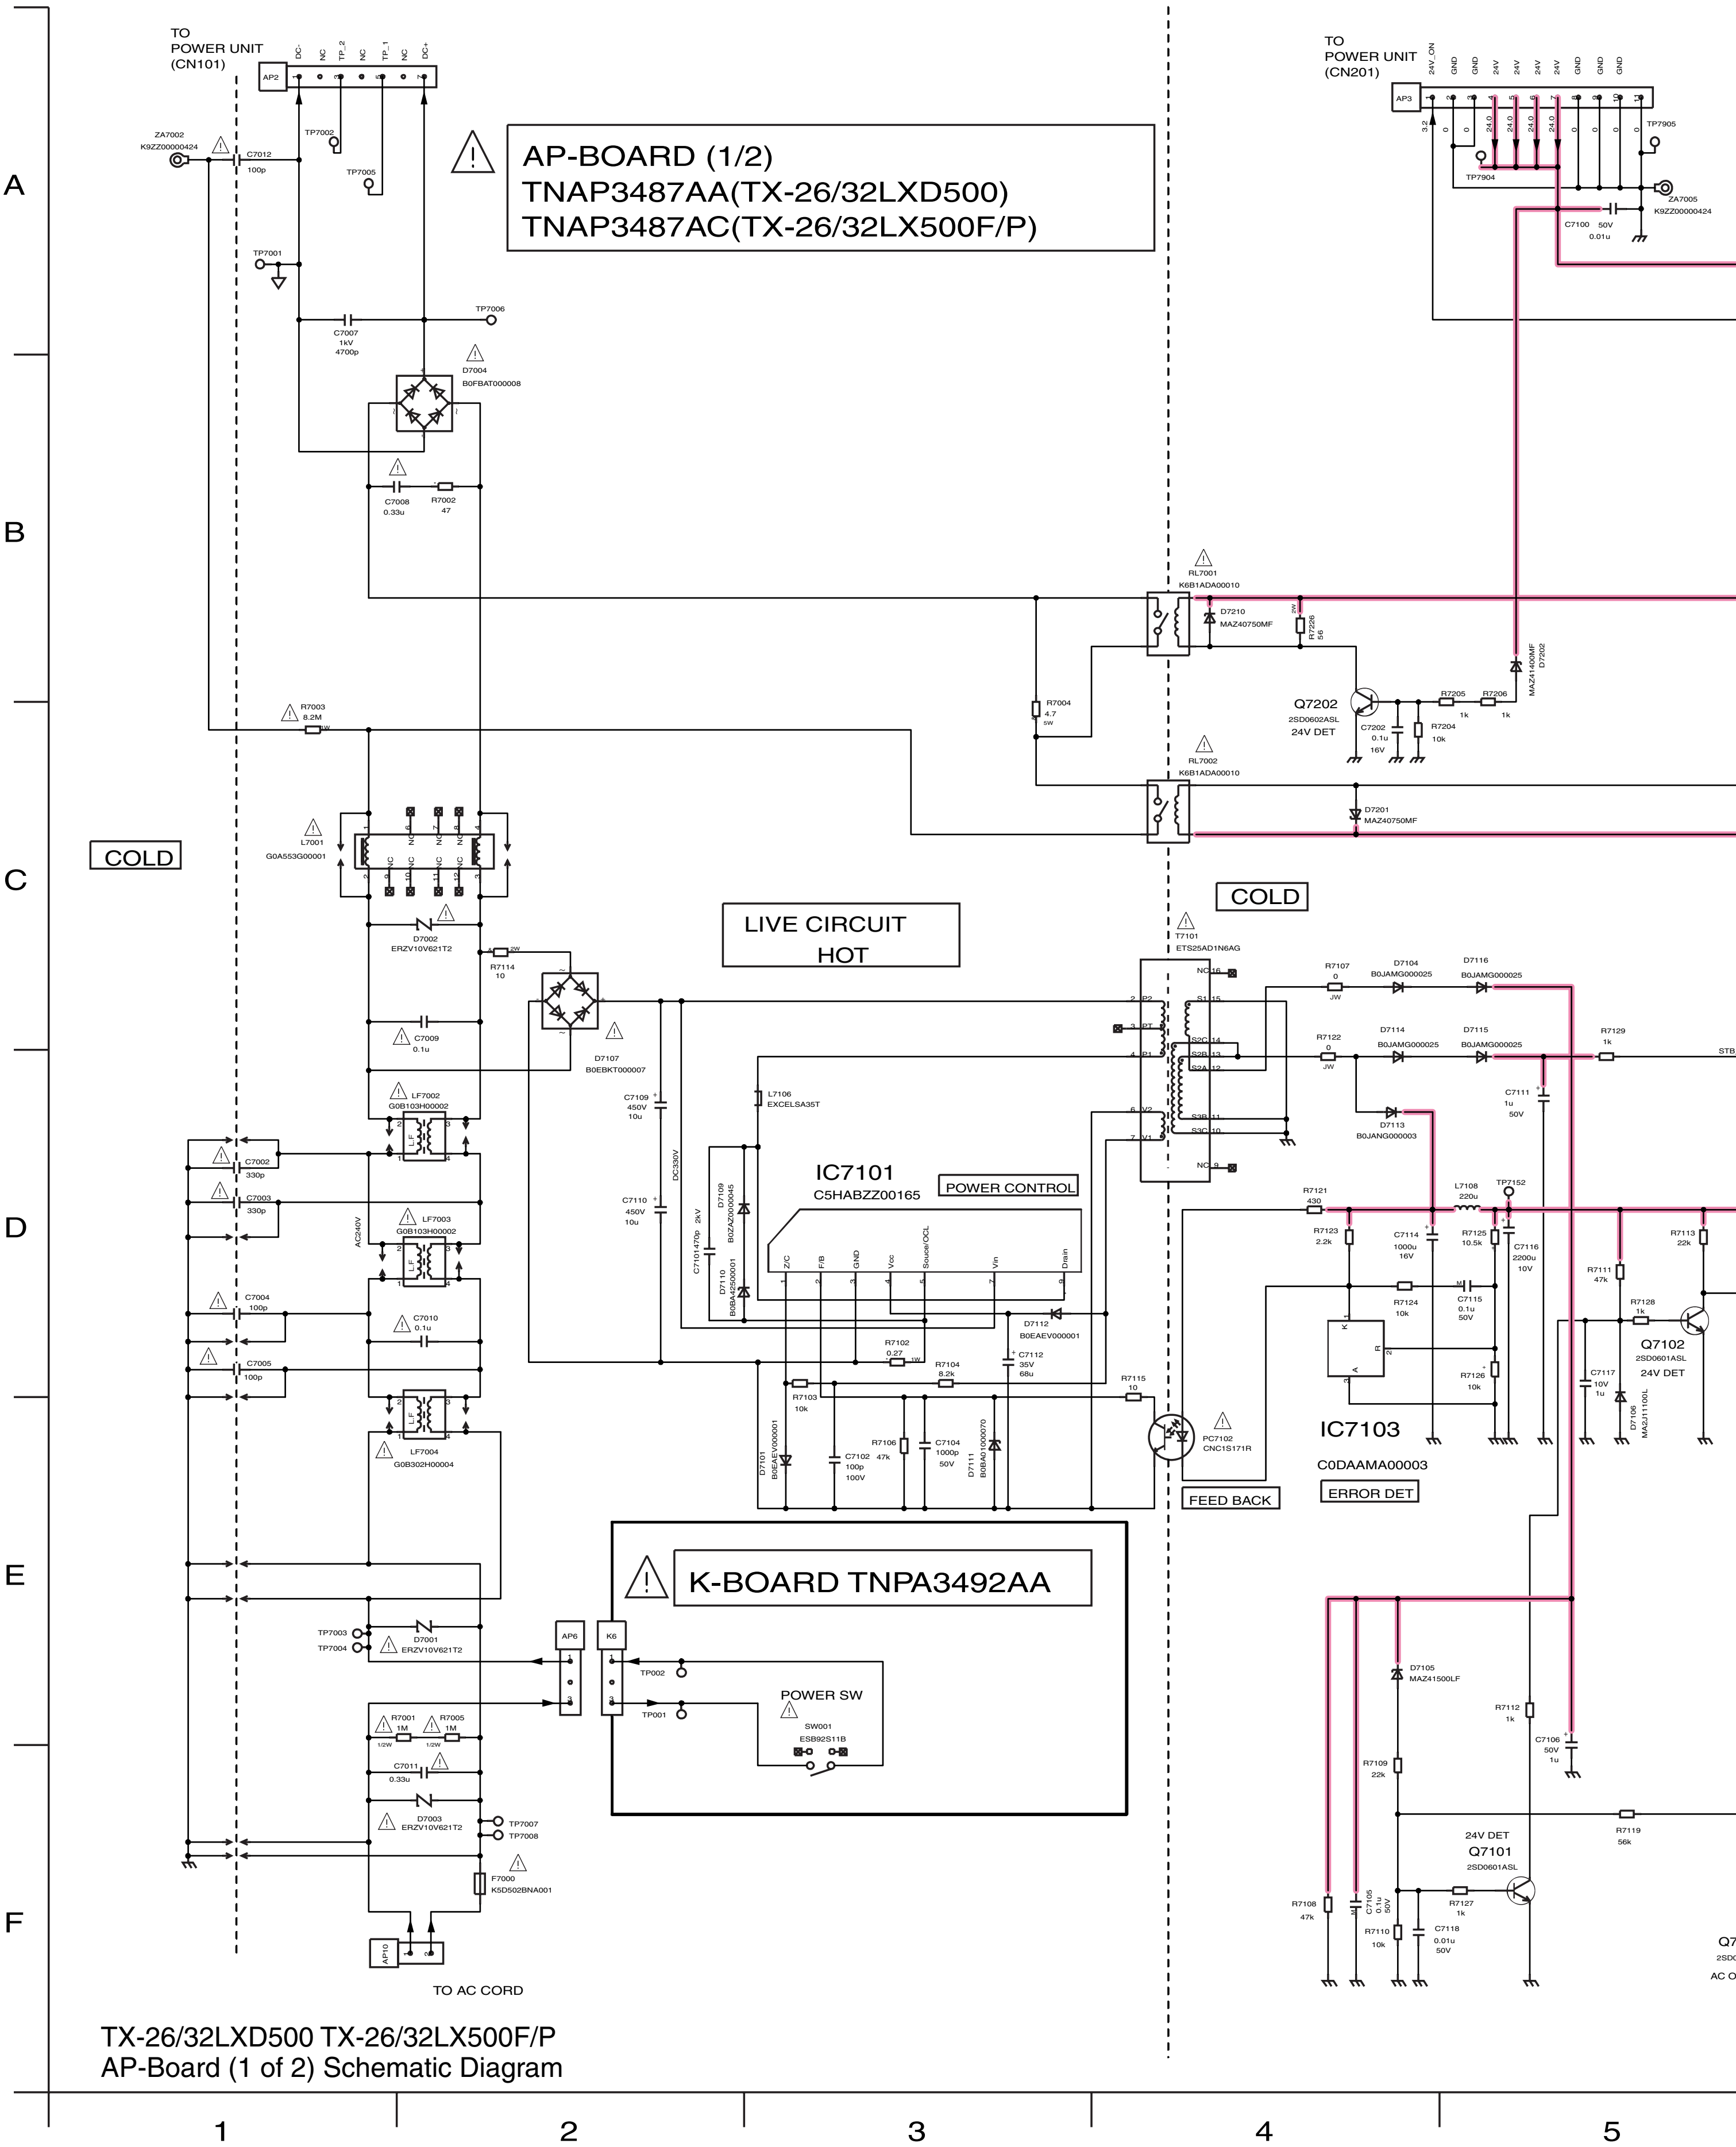

A
B
C
D
E
F
1
2
3
4
5
TO POWER UNIT (CN101)
AP2
DC-
NC
TP_2
NC
TP_1
NC
DC+
ZA7002
K9ZZ00000424
C7012
100p
TP7002
TP7005
TP7001
C7007
1kV
4700p
TP7006
D7004
B0FBAT000008
C7008
0.33u
R7002
47
AP-BOARD (1/2)
TNAP3487AA(TX-26/32LXD500)
TNAP3487AC(TX-26/32LX500F/P)
TO POWER UNIT (CN201)
AP3
24V_ON
GND
GND
24V
24V
24V
24V
GND
GND
GND
TP7905
TP7904
ZA7005
K9ZZ00000424
C7100
50V
0.01u
RL7001
K6B1ADA00010
D7210
MAZ40750MF
R7226
56
D7202
MAZ41000MF
Q7202
2SD0602ASL
24V DET
C7202
0.1u
16V
R7205
1k
R7206
1k
R7204
10k
R7004
4.7
R7003
8.2M
RL7002
K6B1ADA00010
D7201
MAZ40750MF
COLD
L7001
G0A553G00001
D7002
ERZV10V621T2
R7114
10
LIVE CIRCUIT
HOT
COLD
T7101
ETS25AD1N6AG
C7009
0.1u
D7107
B0EBKT000007
LF7002
G0B103H00002
C7109
450V
10u
L7106
EXCELSA35T
C7110
450V
10u
DC330V
C7101 470p 2kV
D7109
B0ZA2R000045
D7110
B0BA42500001
IC7101
C5HABZZ00165
POWER CONTROL
Z/C
F/B
GND
Vcc
Souce/OCL
Vin
Drain
C7002
330p
C7003
330p
AC240V
LF7003
G0B103H00002
C7004
100p
C7010
0.1u
C7005
100p
LF7004
G0B302H00004
D7112
B0EAEV000001
R7102
0.27
R7104
8.2k
C7112
35V
68u
R7103
10k
R7115
10
D7101
B0EAEV000001
C7102
100p
100V
R7106
47k
C7104
1000p
50V
D7111
B0BA01000070
PC7102
CNC1S171R
FEED BACK
R7107
0
D7104
B0JAMG000025
D7116
B0JAMG000025
R7122
0
D7114
B0JAMG000025
D7115
B0JAMG000025
R7129
1k
STB
C7111
1u
50V
D7113
B0JANG000003
R7121
430
L7108
220u
TP7152
R7123
2.2k
C7114
1000u
16V
R7125
10.5k
C7116
2200u
10V
R7113
22k
R7111
47k
R7124
10k
C7115
0.1u
50V
R7128
1k
Q7102
2SD0601ASL
24V DET
R7126
10k
C7117
10V
1u
D7106
MA2J1110OL
IC7103
C0DAAMA00003
ERROR DET
K-BOARD TNPA3492AA
TP7003
TP7004
D7001
ERZV10V621T2
AP6
K6
TP002
TP001
POWER SW
SW001
ESB92S11B
R7001
1M
R7005
1M
C7011
0.33u
D7003
ERZV10V621T2
TP7007
TP7008
F7000
K5D502BNA001
AP10
TO AC CORD
D7105
MAZ41500LF
R7112
1k
C7106
50V
1u
R7109
22k
R7119
56k
24V DET
Q7101
2SD0601ASL
R7108
47k
C7105
0.1u
50V
R7127
1k
R7110
10k
C7118
0.01u
50V

TX-26/32LXD500 TX-26/32LX500F/P
AP-Board (1 of 2) Schematic Diagram

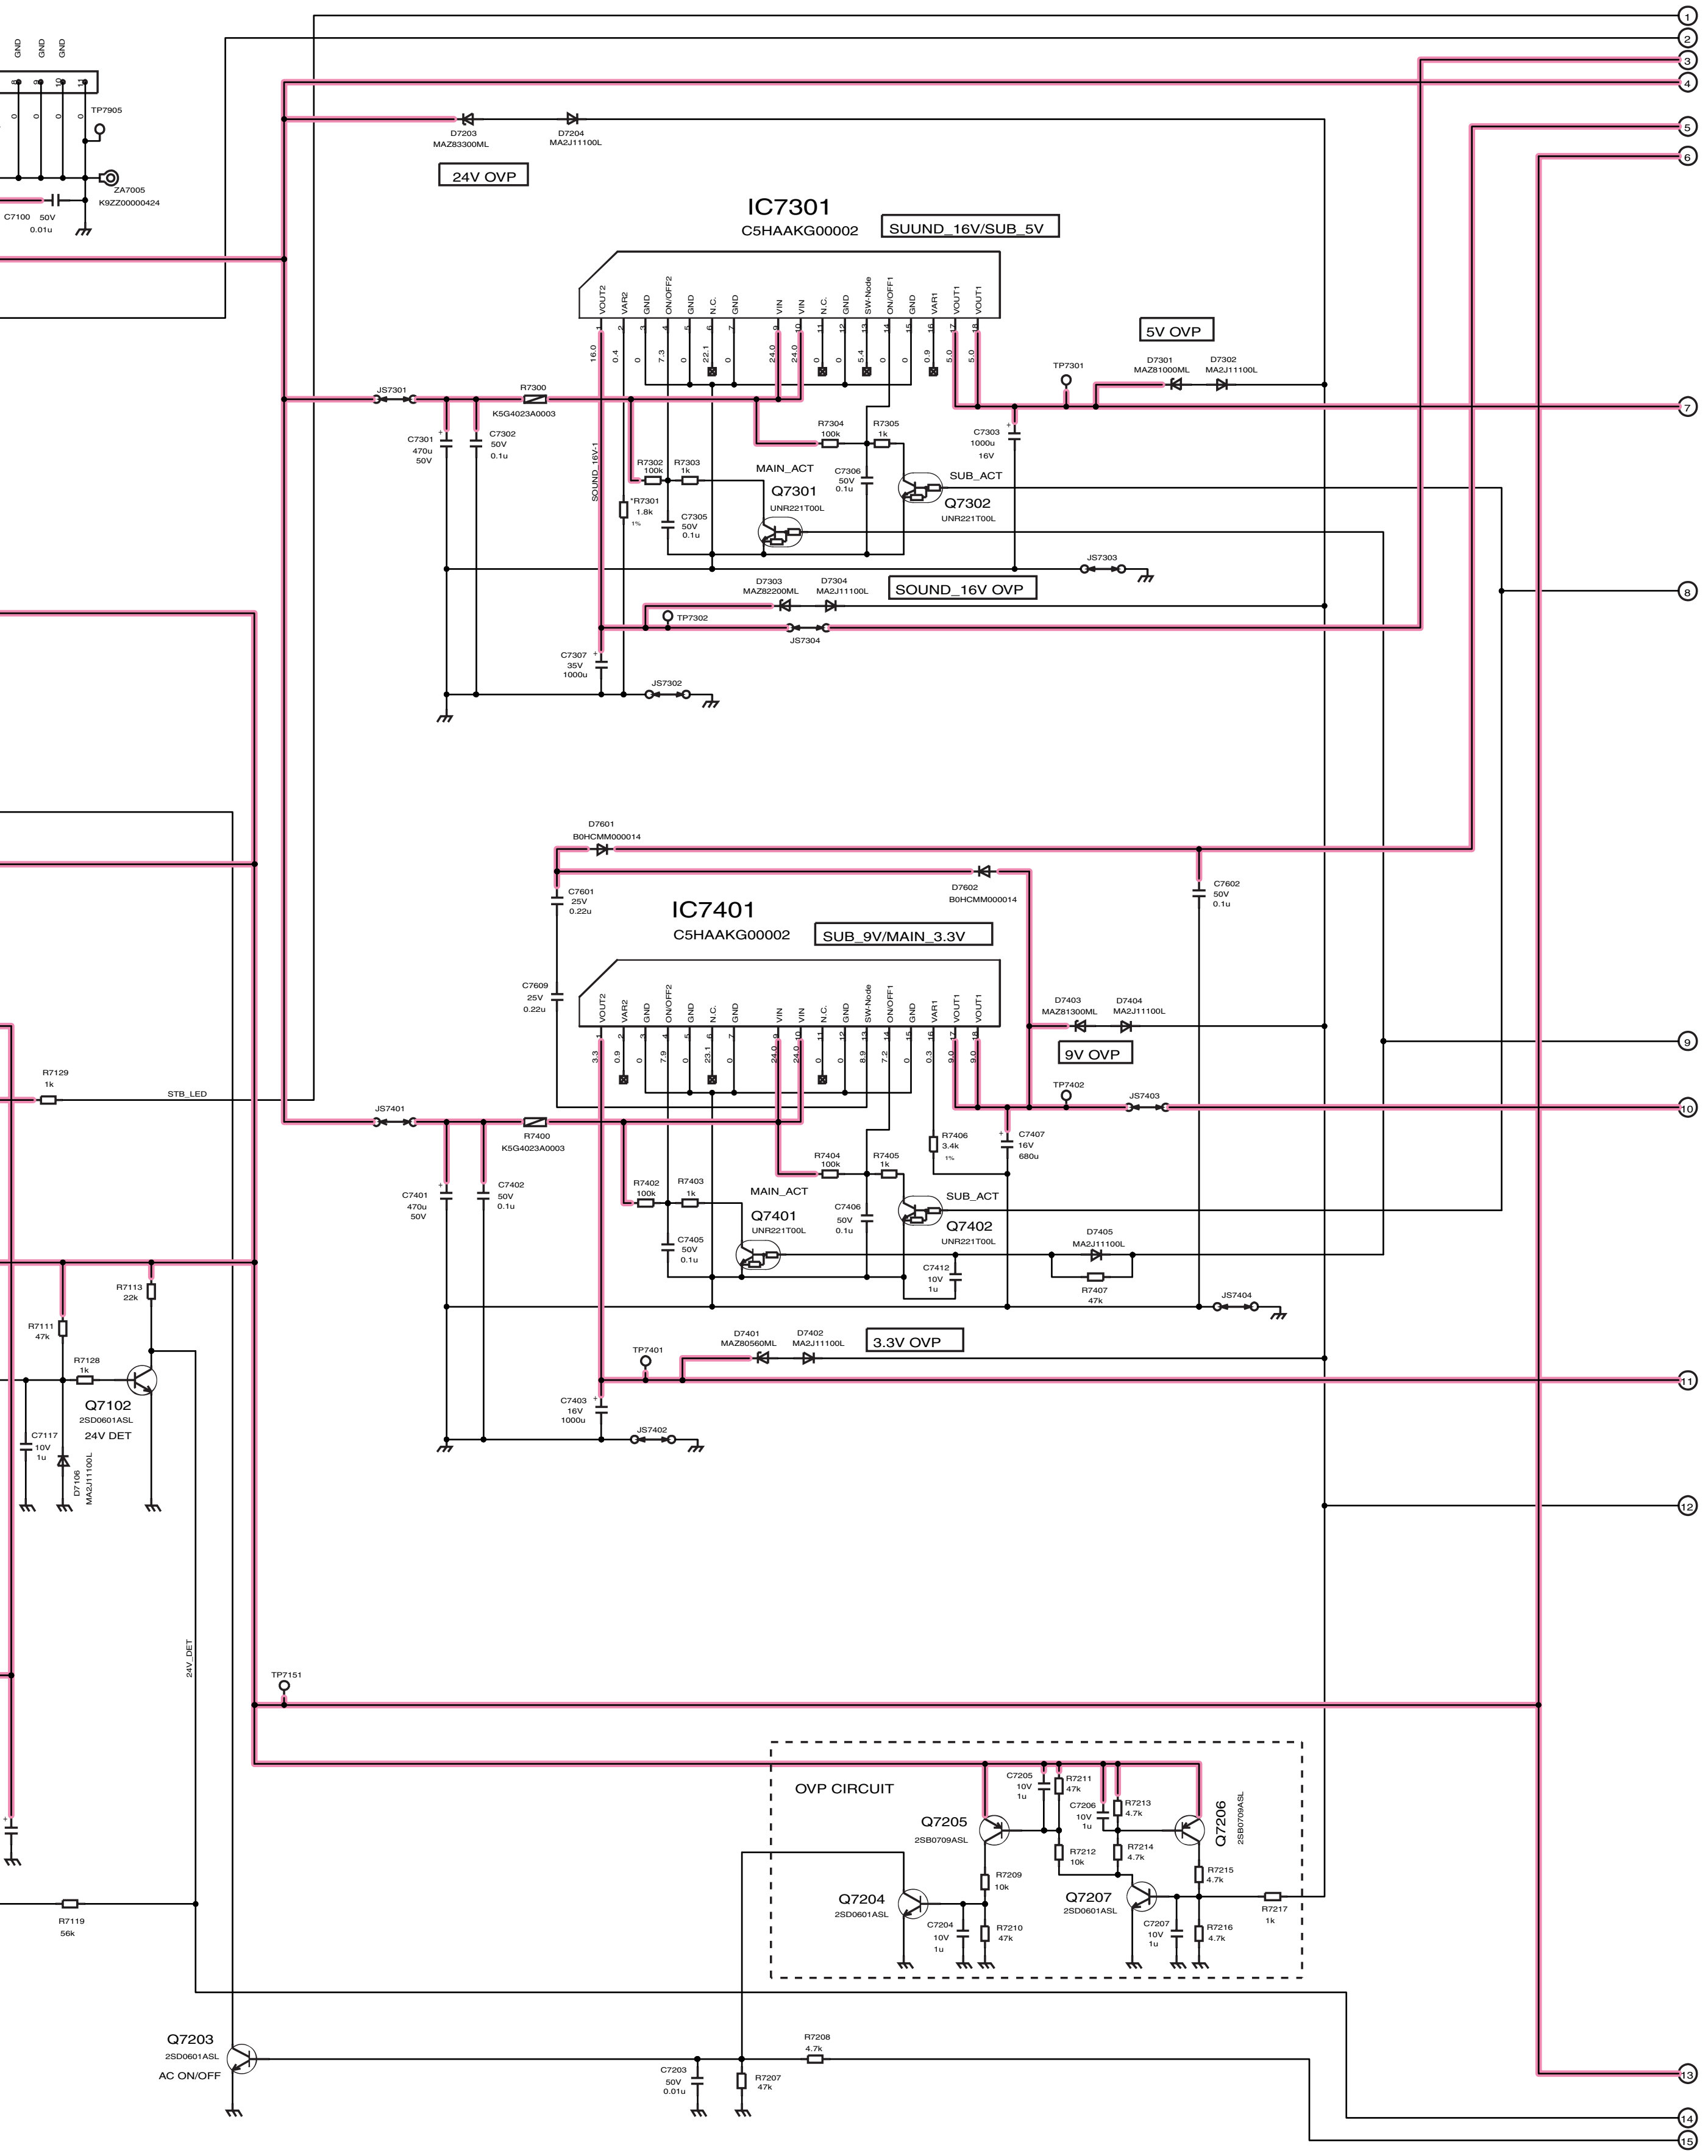

IC7301
C5HAAKG00002
SUUND_16V/SUB_5V
VOUT2
VAR2
GND
ON/OFF2
N.C.
VIN
SW-Node
ON/OFF1
VAR1
VOUT1
24V OVP
D7203
MAZ83300ML
D7204
MA2J11100L
5V OVP
D7301
MAZ81000ML
D7302
MA2J11100L
TP7301
JS7301
R7300
K5G4023A0003
C7301
470u
50V
C7302
50V
0.1u
R7302
100k
R7303
1k
*R7301
1.8k
1%
C7305
50V
0.1u
R7304
100k
R7305
1k
C7306
50V
0.1u
C7303
1000u
16V
MAIN_ACT
SUB_ACT
Q7301
UNR221T00L
Q7302
UNR221T00L
SOUND_16V-1
JS7303
D7303
MAZ82200ML
D7304
MA2J11100L
SOUND_16V OVP
TP7302
JS7304
C7307
35V
1000u
JS7302
IC7401
C5HAAKG00002
SUB_9V/MAIN_3.3V
D7601
B0HCMM000014
D7602
B0HCMM000014
C7601
25V
0.22u
C7602
50V
0.1u
C7609
25V
0.22u
D7403
MAZ81300ML
D7404
MA2J11100L
9V OVP
TP7402
JS7403
JS7401
R7400
K5G4023A0003
C7401
470u
50V
C7402
50V
0.1u
R7402
100k
R7403
1k
C7405
50V
0.1u
R7404
100k
R7405
1k
C7406
50V
0.1u
R7406
3.4k
1%
C7407
16V
680u
Q7401
UNR221T00L
Q7402
UNR221T00L
D7405
MA2J11100L
C7412
10V
1u
R7407
47k
JS7404
D7401
MAZ80560ML
D7402
MA2J11100L
3.3V OVP
TP7401
C7403
16V
1000u
JS7402
GND
TP7905
ZA7005
K9ZZ00000424
C7100
50V
0.01u
R7129
1k
STB_LED
R7113
22k
R7111
47k
R7128
1k
Q7102
2SD0601ASL
24V DET
C7117
10V
1u
D7106
MA2J11100L
24V_DET
TP7151
R7119
56k
OVP CIRCUIT
Q7205
2SB0709ASL
Q7206
2SB0709ASL
C7205
10V
1u
R7211
47k
C7206
10V
1u
R7213
4.7k
R7212
10k
R7214
4.7k
R7209
10k
Q7204
2SD0601ASL
Q7207
2SD0601ASL
R7215
4.7k
R7217
1k
C7204
10V
1u
R7210
47k
C7207
10V
1u
R7216
4.7k
Q7203
2SD0601ASL
AC ON/OFF
R7208
4.7k
C7203
50V
0.01u
R7207
47k
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (1 of 2) Schematic Diagram

5 6 7 8 9

11.5. AP-Board (2 of 2) Schematic Diagram

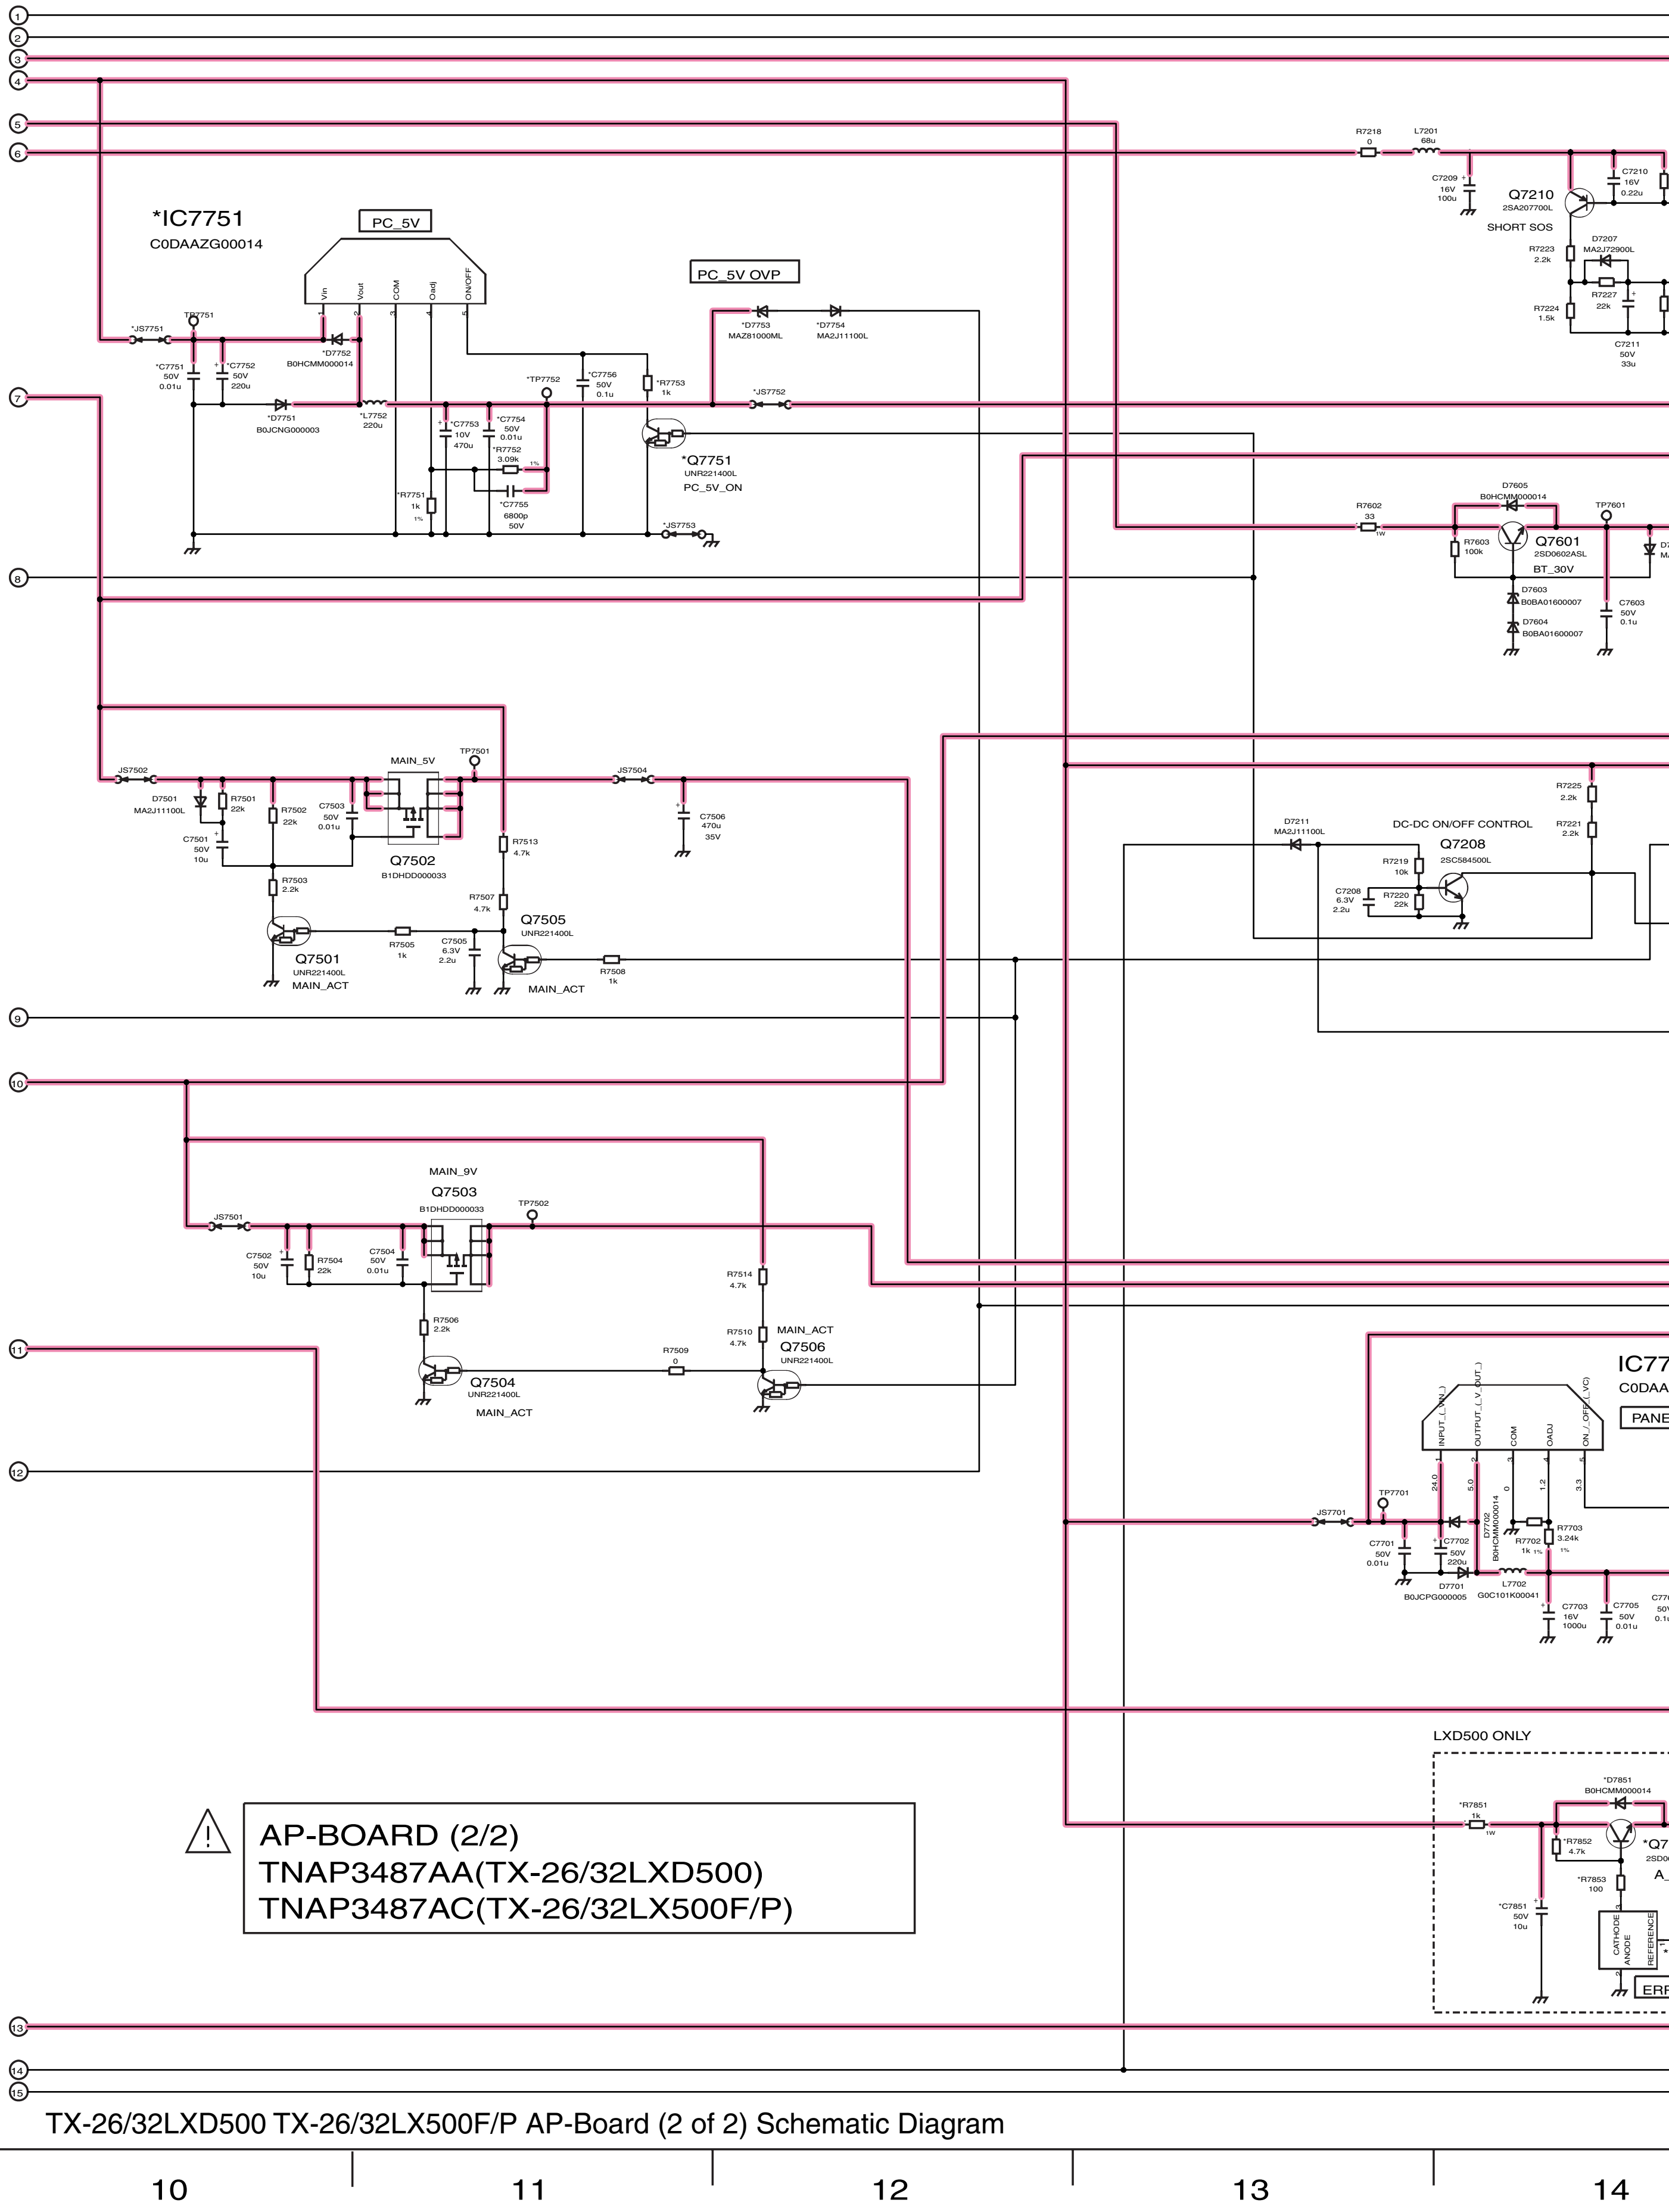
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
*IC7751
C0DAAZG00014
PC_5V
Vin
Vout
COM
Oadj
ON/OFF
PC_5V OVP
*JS7751
TP7751
*C7751 50V 0.01u
*C7752 50V 220u
*D7752 B0HCMM000014
*D7751 B0JCNG000003
*L7752 220u
*C7753 10V 470u
*C7754 50V 0.01u
*R7752 3.09k
*R7751 1k
*C7755 6800p 50V
*TP7752
*C7756 50V 0.1u
*R7753 1k
*D7753 MAZ81000ML
*D7754 MA2J11100L
*JS7752
*Q7751 UNR221400L PC_5V_ON
*JS7753
R7218 0
L7201 68u
C7209 16V 100u
Q7210 2SA2077OOL
C7210 16V 0.22u
SHORT SOS
R7223 2.2k
D7207 MA2J72900L
R7227 22k
R7224 1.5k
C7211 50V 33u
D7605 B0HCMM000014
R7602 33
TP7601
R7603 100k
Q7601 2SD0602ASL
BT_30V
D7603 B0BA01600007
D7604 B0BA01600007
C7603 50V 0.1u
JS7502
D7501 MA2J11100L
R7501 22k
C7501 50V 10u
R7502 22k
C7503 50V 0.01u
MAIN_5V
TP7501
Q7502 B1DHDD000033
R7513 4.7k
JS7504
C7506 470u 35V
R7503 2.2k
Q7501 UNR221400L MAIN_ACT
R7505 1k
C7505 6.3V 2.2u
R7507 4.7k
Q7505 UNR221400L
MAIN_ACT
R7508 1k
R7225 2.2k
R7221 2.2k
D7211 MA2J11100L
DC-DC ON/OFF CONTROL
Q7208 2SC584500L
R7219 10k
C7208 6.3V 2.2u
R7220 22k
MAIN_9V
Q7503 B1DHDD000033
TP7502
JS7501
C7502 50V 10u
R7504 22k
C7504 50V 0.01u
R7514 4.7k
R7506 2.2k
R7510 4.7k
MAIN_ACT
Q7506 UNR221400L
R7509 0
Q7504 UNR221400L
MAIN_ACT
IC77
C0DAA
PANE
INPUT_(_V_IN_)
OUTPUT_(_V_OUT_)
COM
OADJ
ON_/_OFF_(_V_C)
24.0
5.0
0
1.2
3.3
TP7701
JS7701
C7701 50V 0.01u
C7702 50V 220u
D7702 B0HCMM000014
R7702 1k
R7703 3.24k
D7701 B0JCPG000005
L7702 G0C101K00041
C7703 16V 1000u
C7705 50V 0.01u
LXD500 ONLY
*D7851 B0HCMM000014
*R7851 1k
*R7852 4.7k
*Q7
*R7853 100
*C7851 50V 10u
CATHODE
ANODE
REFERENCE
ERR
10
11
12
13
14

AP-BOARD (2/2)
TNAP3487AA(TX-26/32LXD500)
TNAP3487AC(TX-26/32LX500F/P)

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (2 of 2) Schematic Diagram

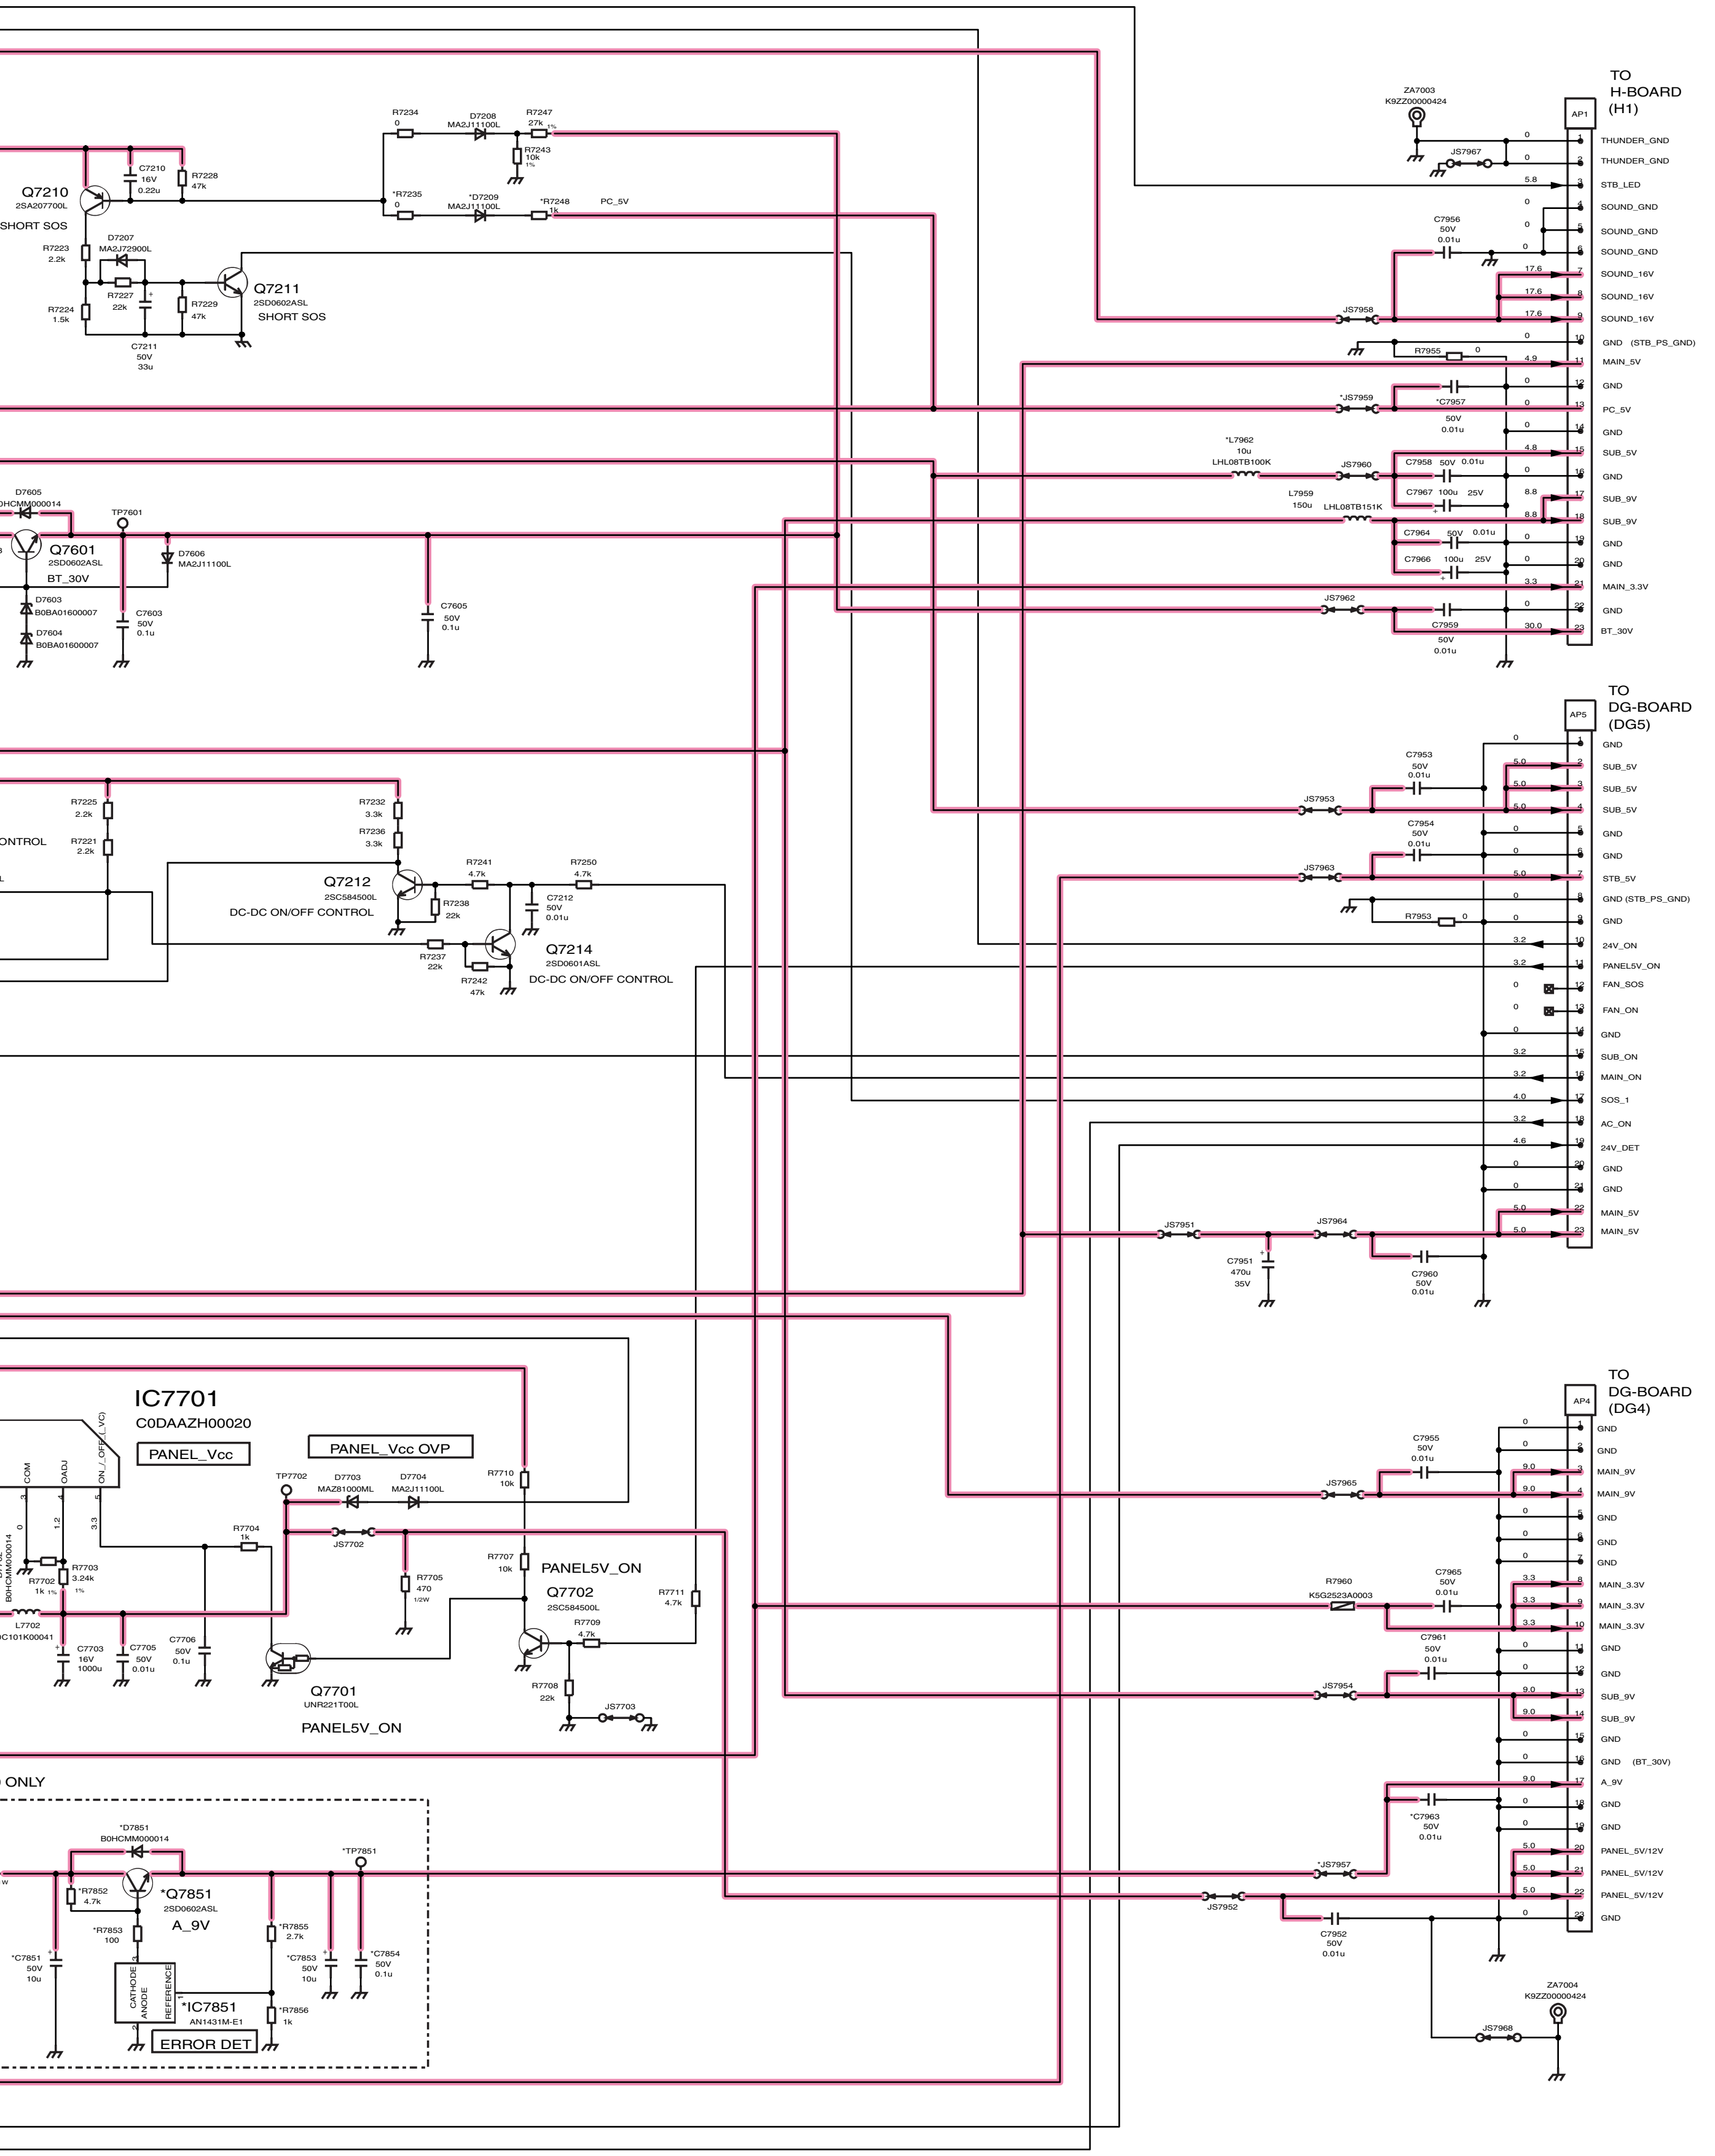
TO
H-BOARD
(H1)
AP1
ZA7003
K9ZZ00000424
JS7967
THUNDER_GND
THUNDER_GND
STB_LED
SOUND_GND
SOUND_GND
SOUND_GND
SOUND_16V
SOUND_16V
SOUND_16V
GND (STB_PS_GND)
MAIN_5V
GND
PC_5V
GND
SUB_5V
GND
SUB_9V
SUB_9V
GND
GND
MAIN_3.3V
GND
BT_30V
Q7210
2SA207700L
SHORT SOS
Q7211
2SD0602ASL
SHORT SOS
D7207
MA2J72900L
D7208
MA2J11100L
*D7209
MA2J11100L
R7234
*R7235
R7247
R7243
*R7248
PC_5V
C7210
R7228
R7223
R7227
R7224
R7229
C7211
JS7958
R7955
*JS7959
*C7957
*L7962
LHL08TB100K
JS7960
L7959
LHL08TB151K
C7958
C7967
C7964
C7966
JS7962
C7959
C7956
D7605
TP7601
Q7601
2SD0602ASL
BT_30V
D7606
MA2J11100L
D7603
B0BA01600007
D7604
B0BA01600007
C7603
C7605
TO
DG-BOARD
(DG5)
AP5
GND
SUB_5V
SUB_5V
SUB_5V
GND
GND
STB_5V
GND (STB_PS_GND)
GND
24V_ON
PANEL5V_ON
FAN_SOS
FAN_ON
GND
SUB_ON
MAIN_ON
SOS_1
AC_ON
24V_DET
GND
GND
MAIN_5V
MAIN_5V
C7953
JS7953
C7954
JS7963
R7953
JS7951
JS7964
C7951
470u
35V
C7960
R7225
R7221
R7232
R7236
Q7212
2SC584500L
DC-DC ON/OFF CONTROL
R7241
R7250
R7238
C7212
R7237
R7242
Q7214
2SD0601ASL
DC-DC ON/OFF CONTROL
IC7701
C0DAAZH00020
PANEL_Vcc
PANEL_Vcc OVP
COM
OADJ
ON_/_OFF_(_VC)
TP7702
D7703
MAZ81000ML
D7704
MA2J11100L
R7710
R7704
JS7702
R7707
PANEL5V_ON
Q7702
2SC584500L
R7705
R7711
R7709
R7708
JS7703
R7703
R7702
L7702
C7703
C7705
C7706
Q7701
UNR221T00L
PANEL5V_ON
ONLY
*D7851
B0HCMM000014
*TP7851
*R7852
*Q7851
2SD0602ASL
A_9V
*R7853
*R7855
*C7853
*C7854
*C7851
CATHODE
ANODE
REFERENCE
*IC7851
AN1431M-E1
*R7856
ERROR DET
TO
DG-BOARD
(DG4)
AP4
GND
GND
MAIN_9V
MAIN_9V
GND
GND
GND
MAIN_3.3V
MAIN_3.3V
MAIN_3.3V
GND
GND
SUB_9V
SUB_9V
GND
GND (BT_30V)
A_9V
GND
GND
PANEL_5V/12V
PANEL_5V/12V
PANEL_5V/12V
GND
C7955
JS7965
R7960
K5G2523A0003
C7965
C7961
JS7954
*C7963
*JS7957
JS7952
C7952
ZA7004
K9ZZ00000424
JS7968

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (2 of 2) Schematic Diagram

14 15 16 17 18

11.6. H-Board (1 of 4) Schematic DIagram

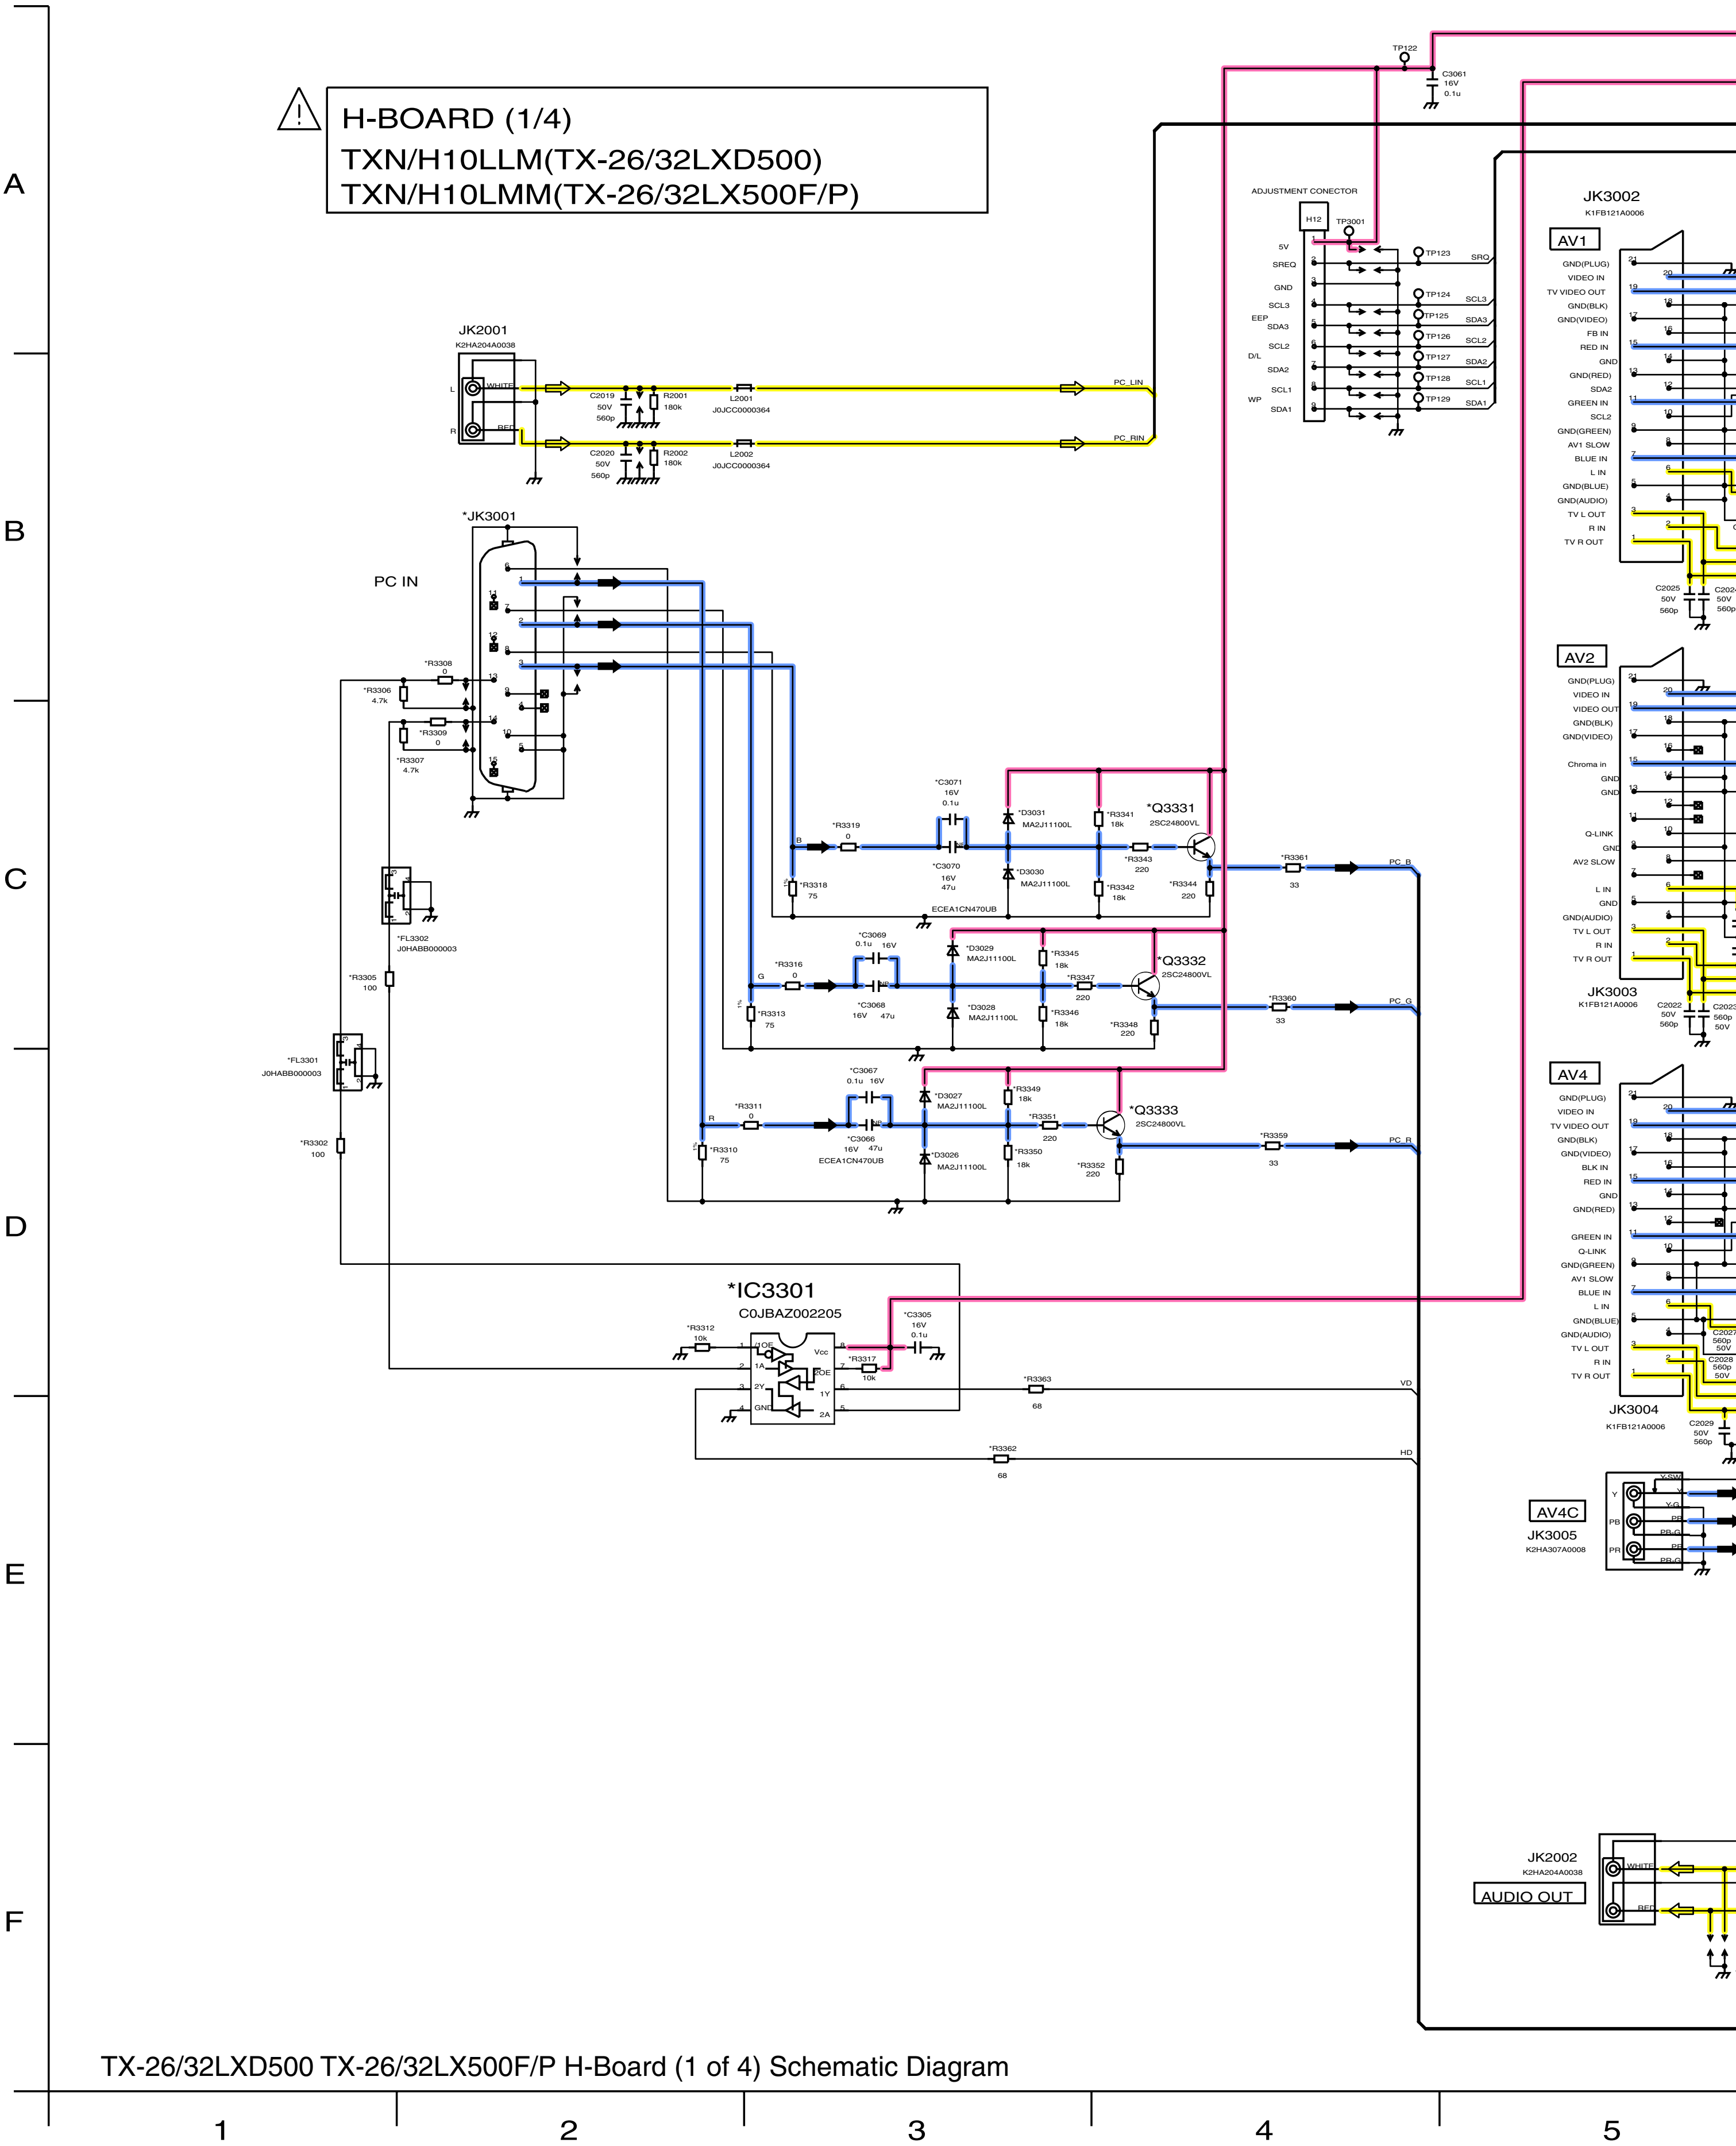
H-BOARD (1/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)
A
B
C
D
E
F
1
2
3
4
5
JK2001
K2HA204A0038
WHITE
RED
L
R
C2019 50V 560p
C2020 50V 560p
R2001 180k
R2002 180k
L2001 J0JCC0000364
L2002 J0JCC0000364
PC_LIN
PC_RIN
*JK3001
PC IN
*R3308 0
*R3306 4.7k
*R3309 0
*R3307 4.7k
*FL3302 J0HABB000003
*R3305 100
*FL3301 J0HABB000003
*R3302 100
*R3319 0
*R3318 75
*C3071 16V 0.1u
*C3070 16V 47u
ECEA1CN470UB
*D3031 MA2J11100L
*D3030 MA2J11100L
*R3341 18k
*R3342 18k
*R3343 220
*R3344 220
*Q3331 2SC24800VL
*R3361 33
PC_B
*R3316 0
*R3313 75
*C3069 0.1u 16V
*C3068 16V 47u
*D3029 MA2J11100L
*D3028 MA2J11100L
*R3345 18k
*R3346 18k
*R3347 220
*R3348 220
*Q3332 2SC24800VL
*R3360 33
PC_G
*R3311 0
*R3310 75
*C3067 0.1u 16V
*C3066 16V 47u
ECEA1CN470UB
*D3027 MA2J11100L
*D3026 MA2J11100L
*R3349 18k
*R3350 18k
*R3351 220
*R3352 220
*Q3333 2SC24800VL
*R3359 33
PC_R
B
G
R
*IC3301
C0JBAZ002205
*R3312 10k
*C3305 16V 0.1u
*R3317 10k
1OE
1A
2Y
GND
Vcc
2OE
1Y
2A
*R3363 68
*R3362 68
VD
HD
TP122
C3061 16V 0.1u
ADJUSTMENT CONECTOR
H12
TP3001
5V
SREQ
GND
SCL3
EEP
SDA3
SCL2
D/L
SDA2
SCL1
WP
SDA1
TP123
TP124
TP125
TP126
TP127
TP128
TP129
SRQ
SCL3
SDA3
SCL2
SDA2
SCL1
SDA1
JK3002
K1FB121A0006
AV1
GND(PLUG)
VIDEO IN
TV VIDEO OUT
GND(BLK)
GND(VIDEO)
FB IN
RED IN
GND
GND(RED)
SDA2
GREEN IN
SCL2
GND(GREEN)
AV1 SLOW
BLUE IN
L IN
GND(BLUE)
GND(AUDIO)
TV L OUT
R IN
TV R OUT
C2025 50V 560p
AV2
GND(PLUG)
VIDEO IN
VIDEO OUT
GND(BLK)
GND(VIDEO)
Chroma in
GND
GND
Q-LINK
GND
AV2 SLOW
L IN
GND
GND(AUDIO)
TV L OUT
R IN
TV R OUT
JK3003
K1FB121A0006
C2022 50V 560p
AV4
GND(PLUG)
VIDEO IN
TV VIDEO OUT
GND(BLK)
GND(VIDEO)
BLK IN
RED IN
GND
GND(RED)
GREEN IN
Q-LINK
GND(GREEN)
AV1 SLOW
BLUE IN
L IN
GND(BLUE)
GND(AUDIO)
TV L OUT
R IN
TV R OUT
JK3004
K1FB121A0006
C2029 50V 560p
AV4C
JK3005
K2HA307A0008
Y
PB
PR
JK2002
K2HA204A0038
AUDIO OUT
WHITE
RED

TX-26/32LXD500 TX-26/32LX500F/P H-Board (1 of 4) Schematic Diagram

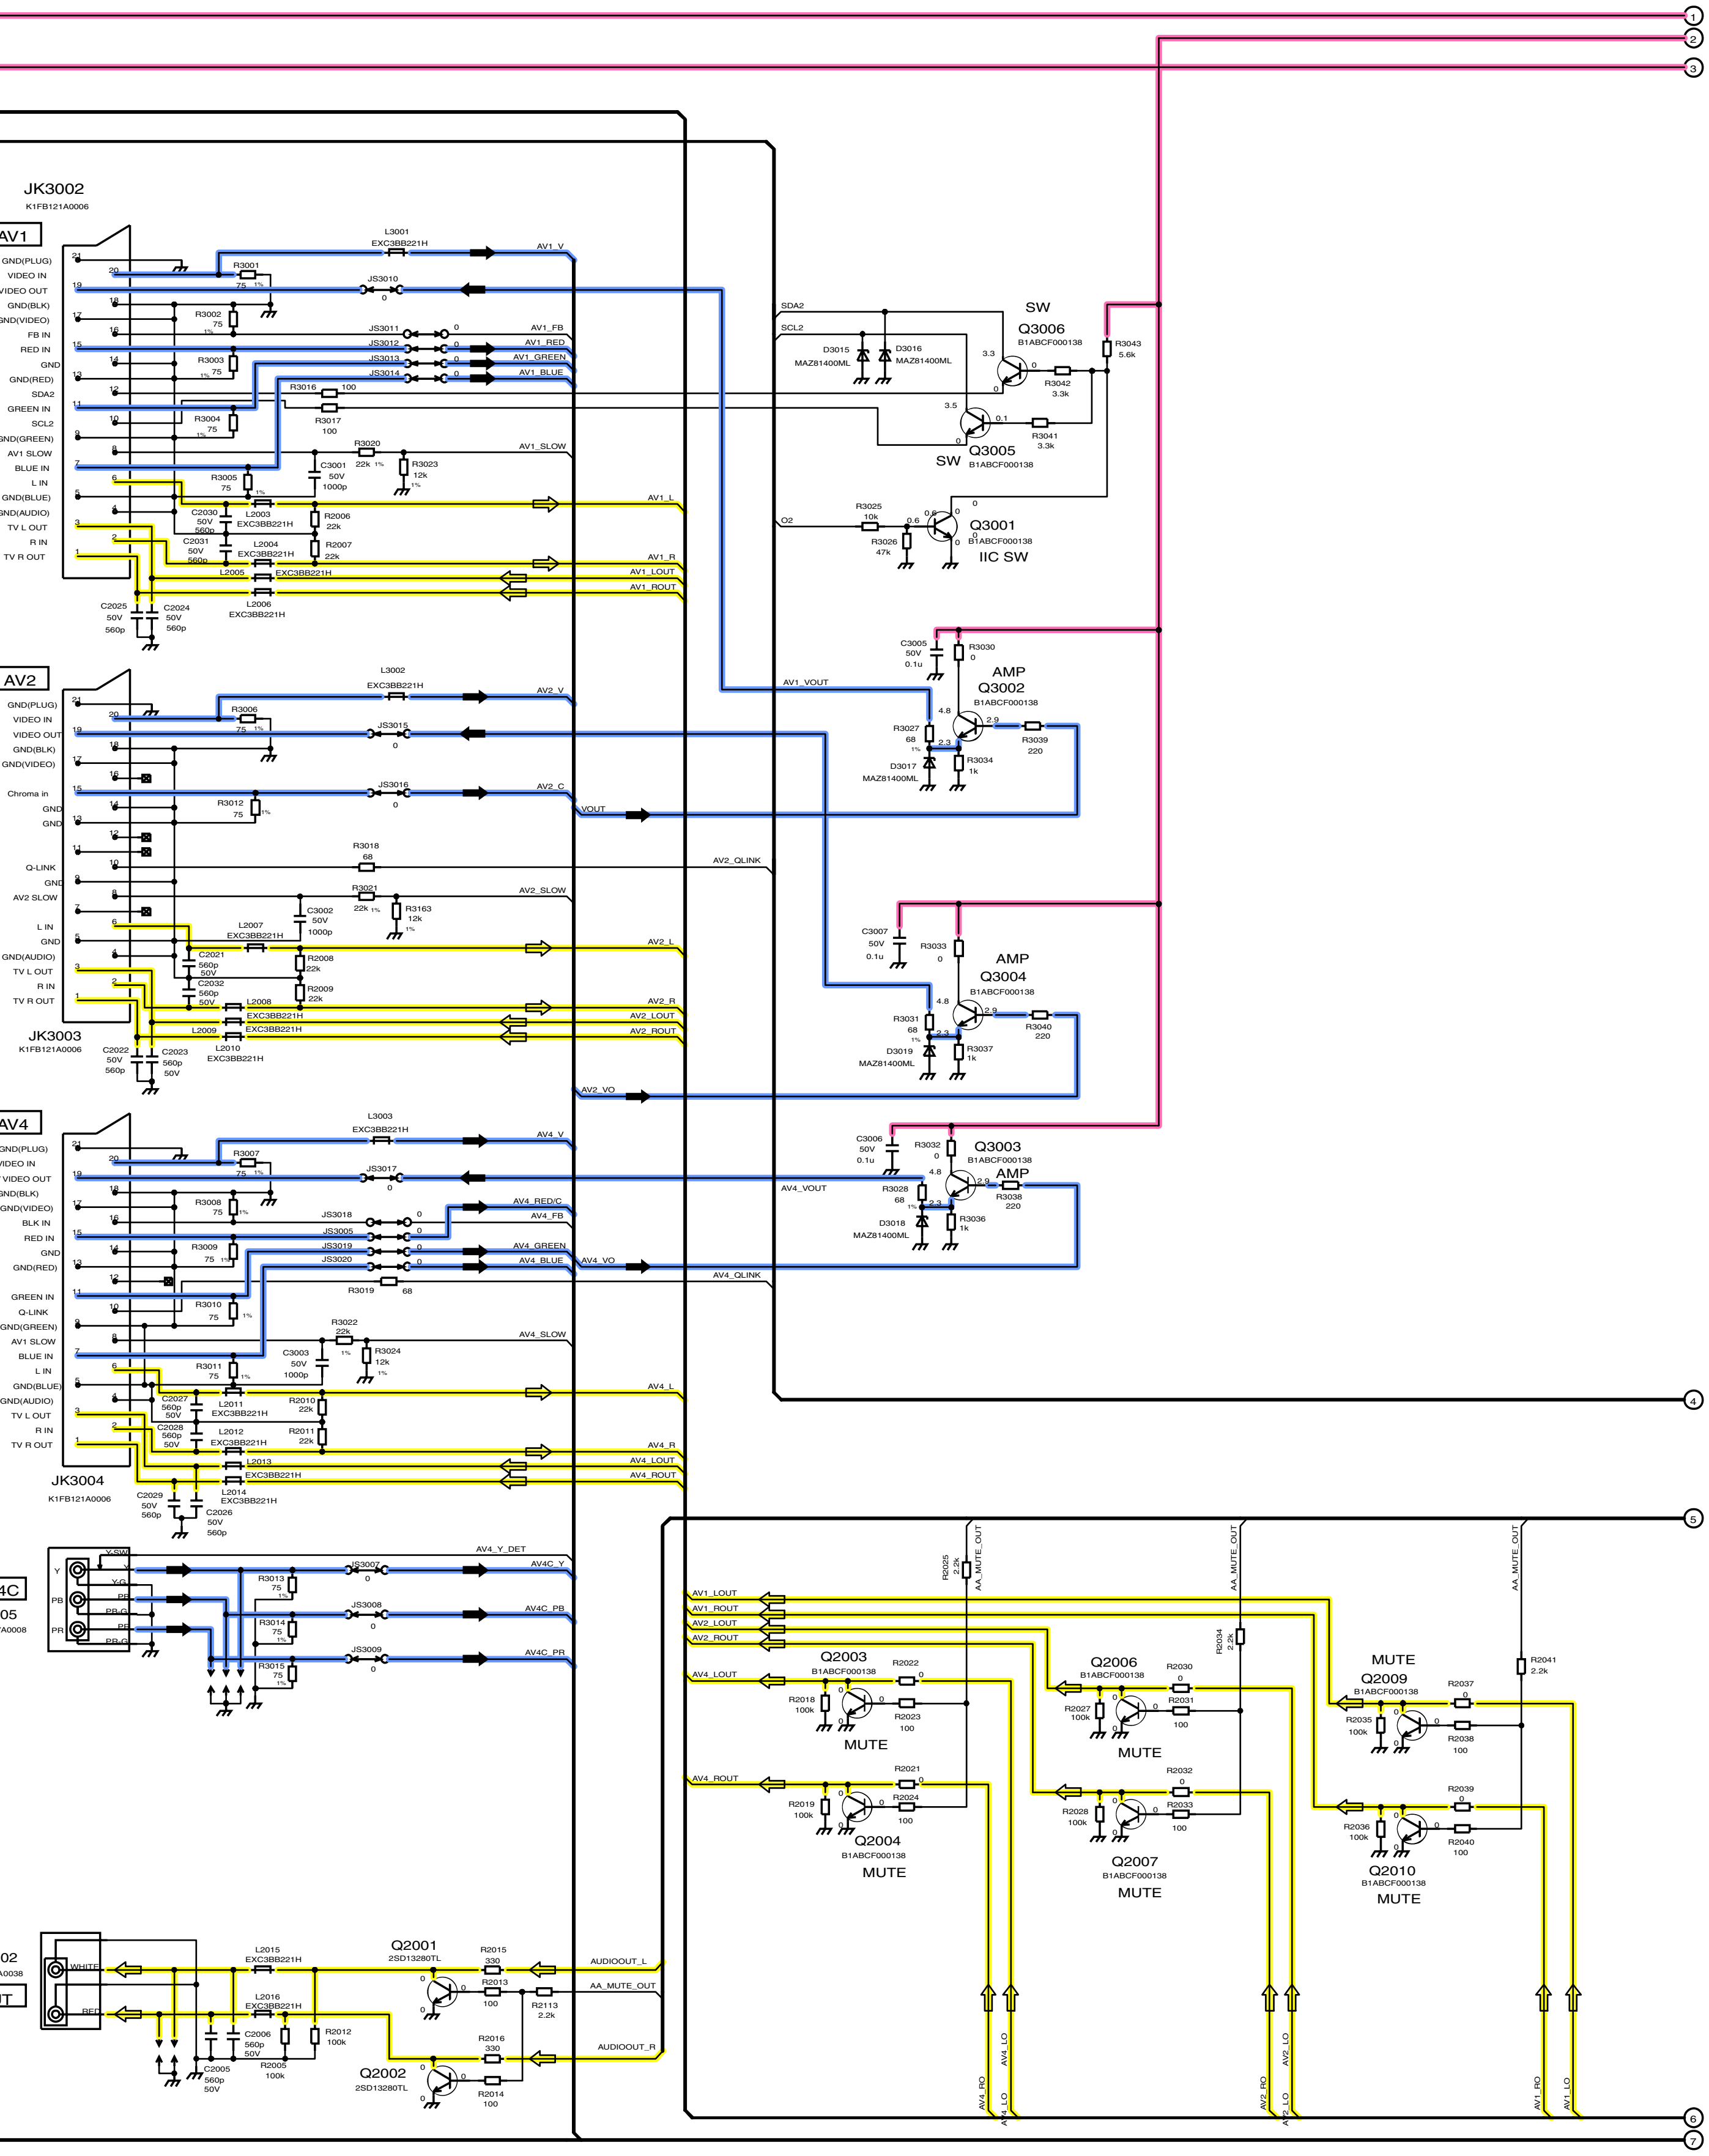
JK3002
K1FB121A0006
AV1
AV2
AV4
JK3003
K1FB121A0006
JK3004
K1FB121A0006
GND(PLUG)
VIDEO IN
VIDEO OUT
GND(BLK)
GND(VIDEO)
FB IN
RED IN
GND
GND(RED)
SDA2
GREEN IN
SCL2
GND(GREEN)
AV1 SLOW
BLUE IN
L IN
GND(BLUE)
GND(AUDIO)
TV L OUT
R IN
TV R OUT
Chroma in
Q-LINK
AV2 SLOW
BLK IN
AV1_V
AV1_FB
AV1_RED
AV1_GREEN
AV1_BLUE
AV1_SLOW
AV1_L
AV1_R
AV1_LOUT
AV1_ROUT
AV2_V
AV2_C
VOUT
AV2_QLINK
AV2_SLOW
AV2_L
AV2_R
AV2_LOUT
AV2_ROUT
AV2_VO
AV4_V
AV4_RED/C
AV4_FB
AV4_GREEN
AV4_BLUE
AV4_VO
AV4_QLINK
AV4_SLOW
AV4_L
AV4_R
AV4_LOUT
AV4_ROUT
AV4_Y_DET
AV4C_Y
AV4C_PB
AV4C_PR
AV1_VOUT
AV4_VOUT
SDA2
SCL2
O2
SW
Q3006
B1ABCF000138
SW
Q3005
B1ABCF000138
Q3001
B1ABCF000138
IIC SW
AMP
Q3002
B1ABCF000138
AMP
Q3004
B1ABCF000138
Q3003
B1ABCF000138
AMP
D3015
MAZ81400ML
D3016
MAZ81400ML
D3017
MAZ81400ML
D3019
MAZ81400ML
D3018
MAZ81400ML
L3001
EXC3BB221H
L3002
EXC3BB221H
L3003
EXC3BB221H
Q2003
B1ABCF000138
MUTE
Q2004
B1ABCF000138
MUTE
Q2006
B1ABCF000138
MUTE
Q2007
B1ABCF000138
MUTE
MUTE
Q2009
B1ABCF000138
Q2010
B1ABCF000138
MUTE
AA_MUTE_OUT
AV4_RO
AV4_LO
AV2_RO
AV2_LO
AV1_RO
AV1_LO
Q2001
2SD13280TL
Q2002
2SD13280TL
AUDIOOUT_L
AA_MUTE_OUT
AUDIOOUT_R
WHITE
RED
Y
PB
PR
1
2
3
4
5
6
7

TX-26/32LXD500 TX-26/32LX500F/P H-Board (1 of 4) Schematic Diagram

5 6 7 8 9

11.7. H-Board (2 of 4) Schematic Diagram

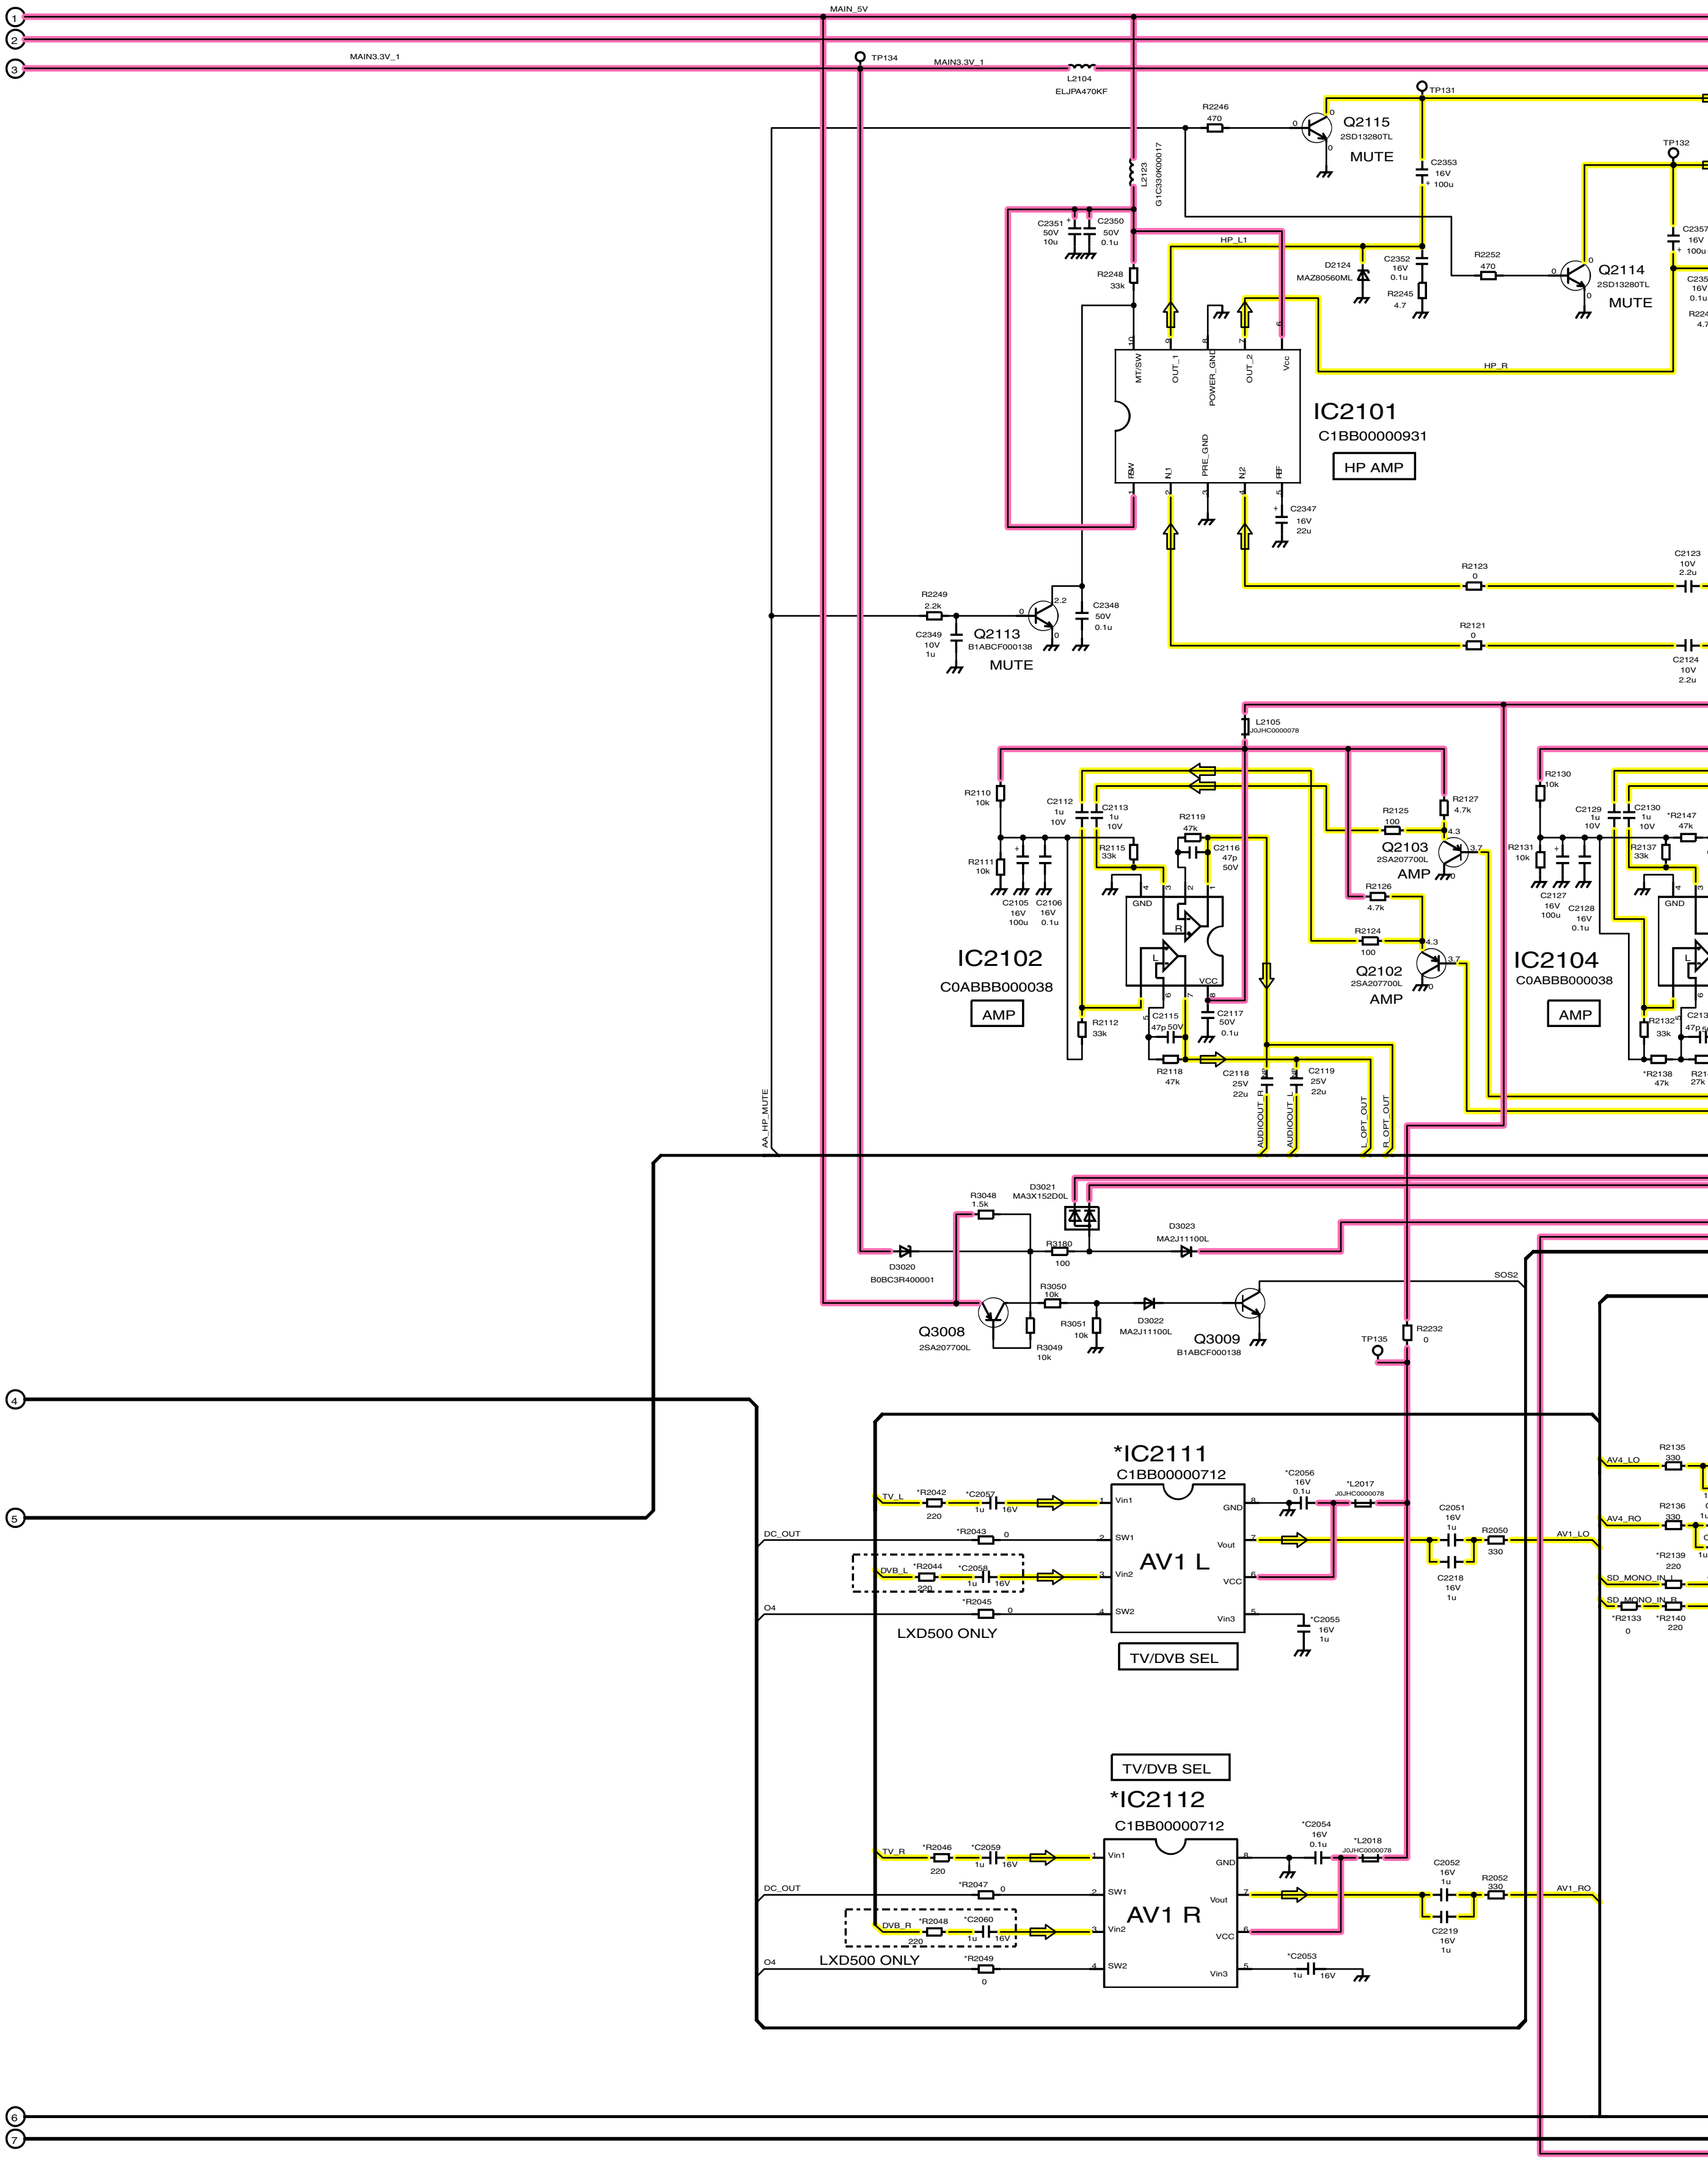

MAIN_5V
MAIN3.3V_1
TP134
L2104
ELJPA470KF
R2246
470
Q2115
2SD1328OTL
MUTE
TP131
C2353
16V
100u
TP132
L2123
G1C330K00017
C2351
50V
10u
C2350
50V
0.1u
HP_L1
D2124
MAZ80560ML
C2352
16V
0.1u
R2245
4.7
R2252
470
Q2114
2SD1328OTL
MUTE
C2357
16V
100u
R2248
33k
MT/SW
OUT_1
POWER_GND
OUT_2
Vcc
IC2101
C1BB00000931
HP AMP
RBW
IN1
PRE_GND
IN2
REF
HP_R
C2347
16V
22u
R2123
0
C2123
10V
2.2u
R2121
0
C2124
10V
2.2u
R2249
2.2k
C2349
10V
1u
Q2113
B1ABCF000138
MUTE
C2348
50V
0.1u
L2105
J0JHC0000078
R2110
10k
R2111
10k
C2112
1u
10V
C2113
1u
10V
C2105
16V
100u
C2106
16V
0.1u
R2119
47k
R2115
33k
C2116
47p
50V
GND
IC2102
C0ABBB000038
AMP
R2125
100
R2127
4.7k
Q2103
2SA207700L
AMP
R2126
4.7k
R2124
100
Q2102
2SA207700L
AMP
VCC
R2112
33k
C2115
47p
50V
C2117
50V
0.1u
R2118
47k
C2118
25V
22u
C2119
25V
22u
AUDIOOUT_R
AUDIOOUT_L
L_OPT_OUT
R_OPT_OUT
R2130
10k
R2131
10k
C2129
1u
10V
C2130
1u
10V
C2127
16V
100u
C2128
16V
0.1u
*R2147
47k
R2137
33k
IC2104
C0ABBB000038
AMP
R2132
33k
*R2138
47k
AA_HP_MUTE
D3021
MA3X152D0L
R3048
1.5k
D3023
MA2J11100L
R3180
100
D3020
B0BC3R400001
SOS2
R3050
10k
R3051
10k
D3022
MA2J11100L
Q3008
2SA207700L
R3049
10k
Q3009
B1ABCF000138
TP135
R2232
0
*IC2111
C1BB00000712
TV_L
*R2042
220
*C2057
1u
16V
Vin1
GND
*C2056
16V
0.1u
*L2017
J0JHC0000078
DC_OUT
*R2043
0
SW1
AV1 L
Vout
C2051
16V
1u
R2050
330
AV1_LO
DVB_L
*R2044
220
*C2058
1u
16V
Vin2
VCC
C2218
16V
1u
O4
*R2045
0
SW2
Vin3
*C2055
16V
1u
LXD500 ONLY
TV/DVB SEL
AV4_LO
R2135
330
AV4_RO
R2136
330
*R2139
220
SD_MONO_IN_L
SD_MONO_IN_R
*R2133
0
*R2140
220
TV/DVB SEL
*IC2112
C1BB00000712
TV_R
*R2046
220
*C2059
1u
16V
*C2054
16V
0.1u
*L2018
J0JHC0000078
*R2047
0
AV1 R
C2052
16V
1u
R2052
330
AV1_RO
DVB_R
*R2048
220
*C2060
1u
16V
C2219
16V
1u
*R2049
0
*C2053
1u
16V
1
2
3
4
5
6
7

TX-26/32LXD500 TX-26/32LX500F/P H-Board (2 of 4) Schematic Diagram

10 11 12 13 14

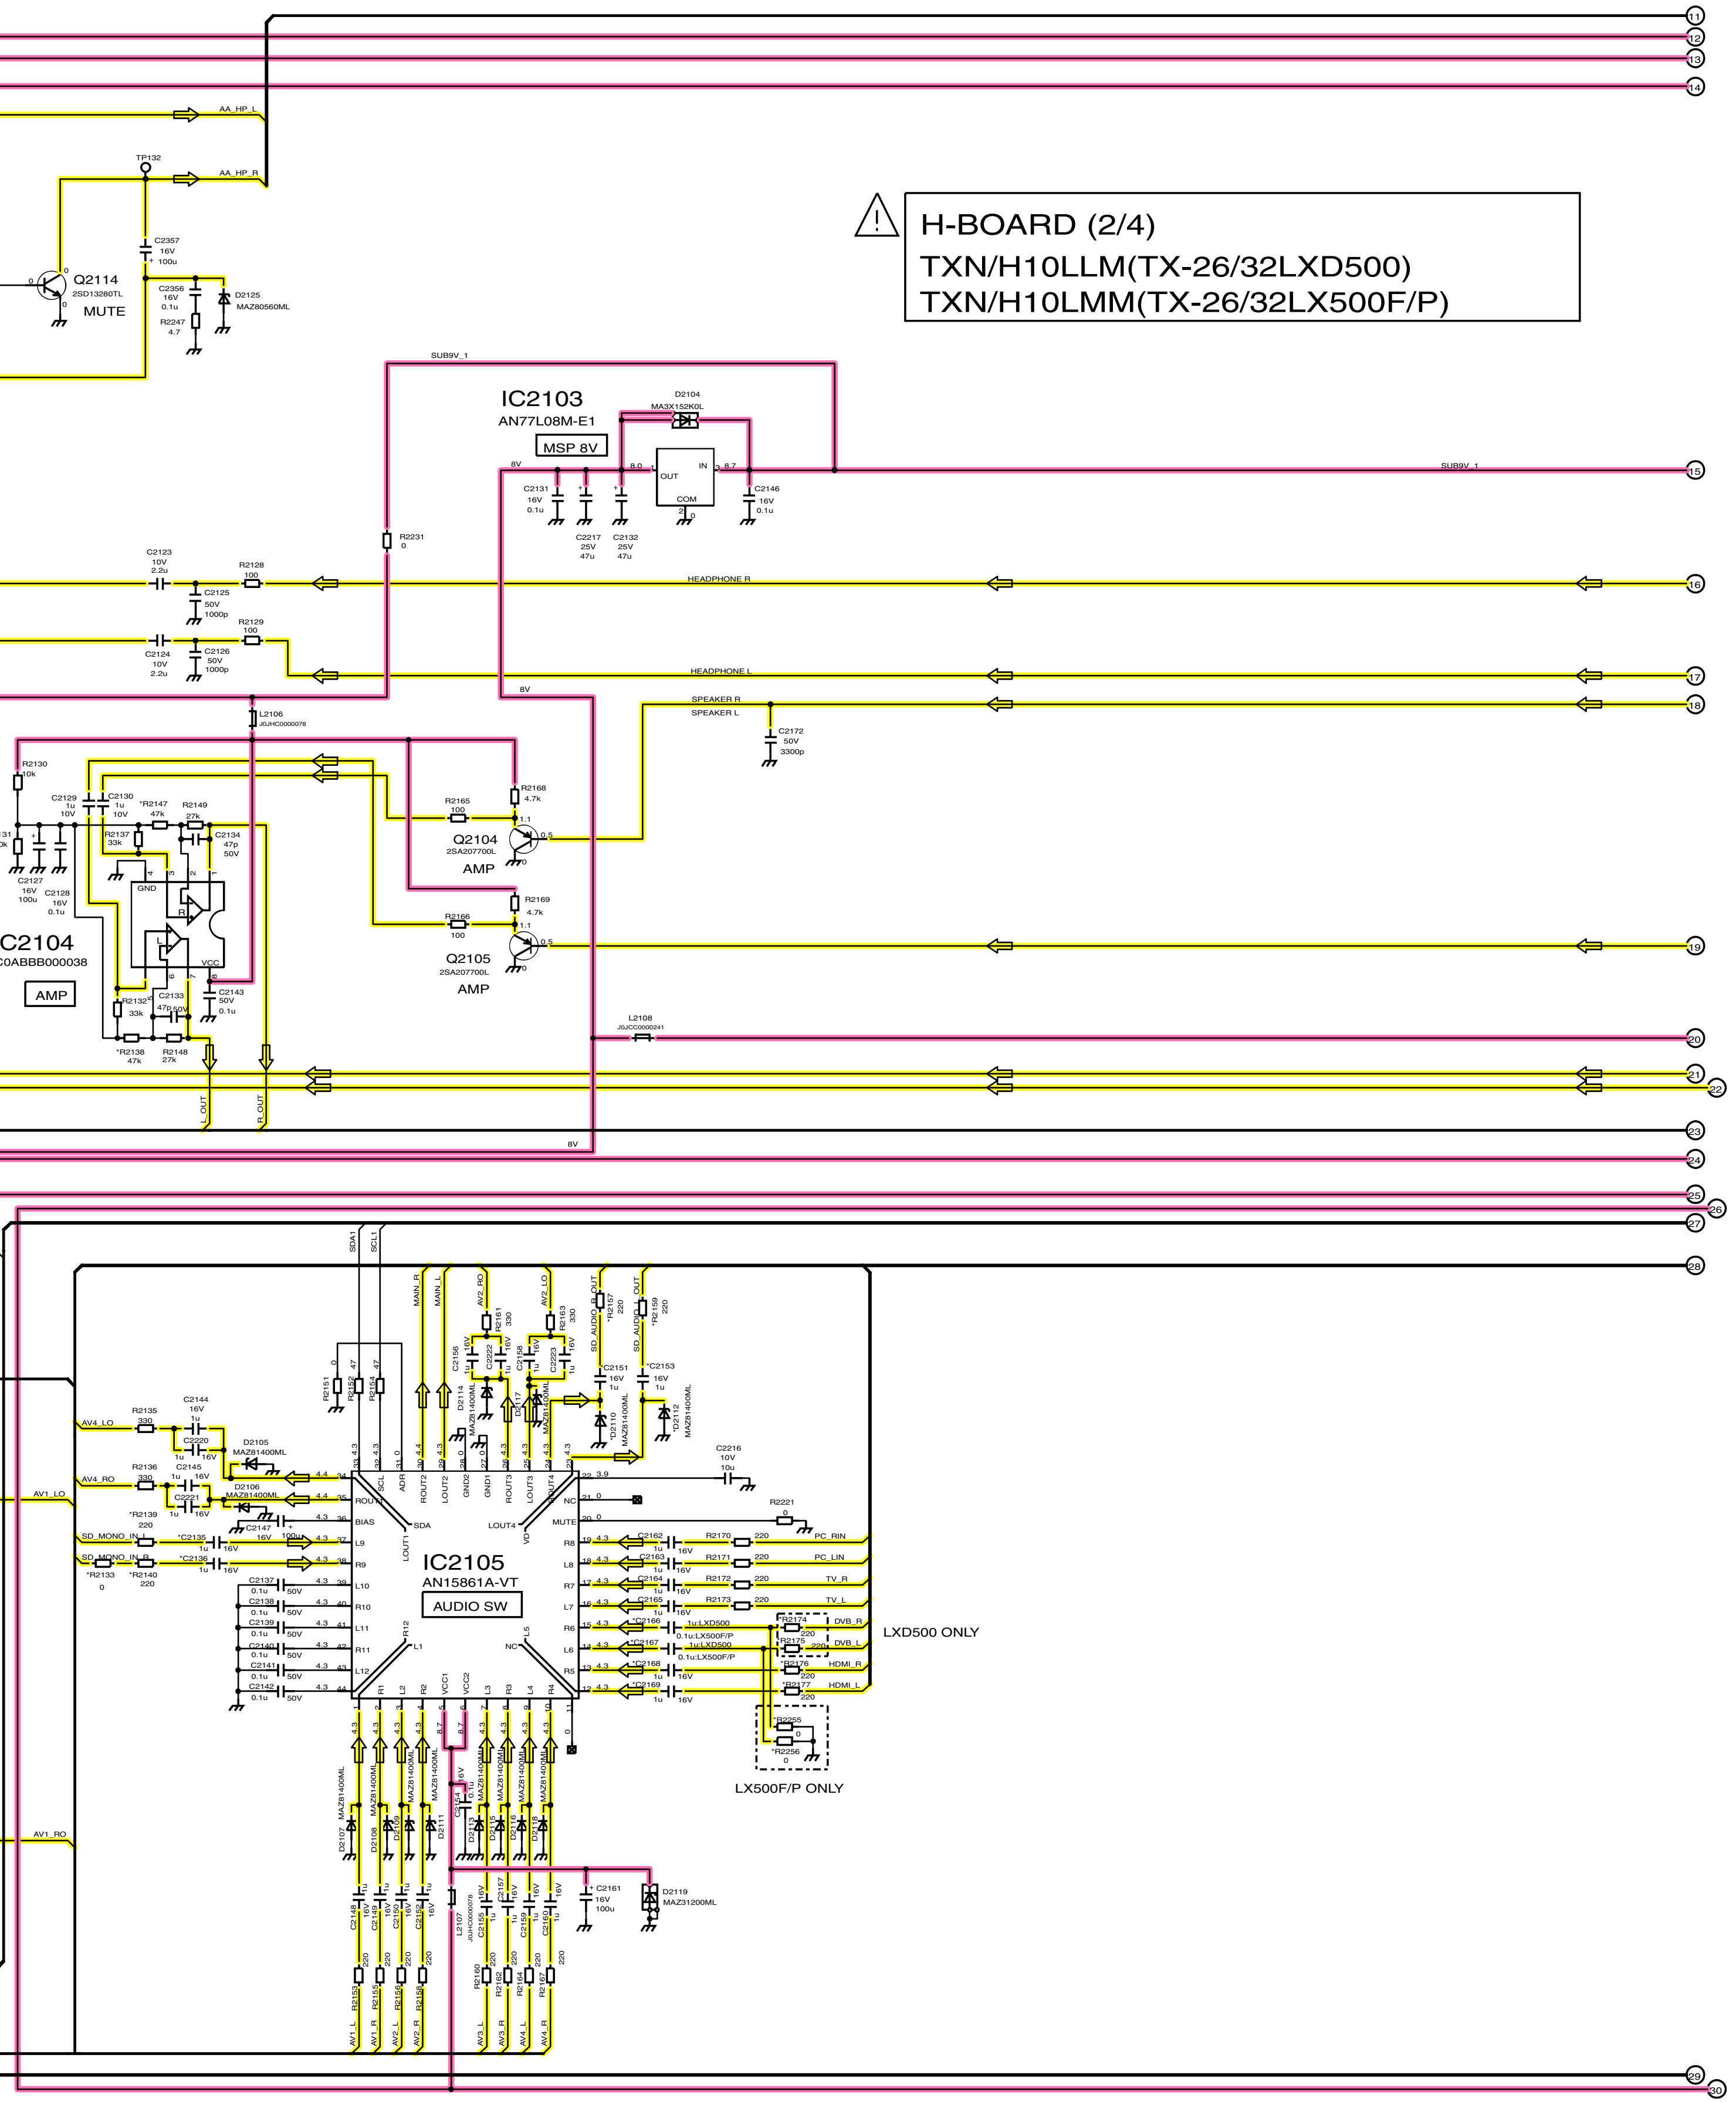
H-BOARD (2/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)
IC2103
AN77L08M-E1
MSP 8V
D2104
MA3X152K0L
SUB9V_1
8V
C2131
C2217
C2132
C2146
R2231
Q2114
2SD1328
0TL
MUTE
TP132
AA_HP_L
AA_HP_R
C2357
C2356
D2125
MAZ80560ML
R2247
C2123
C2124
C2125
C2126
R2128
R2129
HEADPHONE R
HEADPHONE L
SPEAKER R
SPEAKER L
C2172
L2106
R2130
C2129
C2130
R2147
R2149
R2137
C2134
C2127
C2128
IC2104
C0ABBB000038
AMP
C2133
C2143
R2132
R2138
R2148
L_OUT
R_OUT
R2165
R2168
Q2104
2SA2077
00L
AMP
R2166
R2169
Q2105
2SA2077
00L
AMP
L2108
IC2105
AN15861A-VT
AUDIO SW
AV4_LO
AV4_RO
AV1_LO
SD_MONO_IN_L
SD_MONO_IN_R
AV1_RO
MAIN_R
MAIN_L
AV2_RO
AV2_LO
SD_AUDIO_R_OUT
SD_AUDIO_L_OUT
SDA1
SCL1
PC_RIN
PC_LIN
TV_R
TV_L
DVB_R
DVB_L
HDMI_R
HDMI_L
LXD500 ONLY
LX500F/P ONLY
D2119
MAZ31200ML
C2161
L2107
AV1_L
AV1_R
AV2_L
AV2_R
AV3_L
AV3_R
AV4_L
AV4_R
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

TX-26/32LXD500 TX-26/32LX500F/P H-Board (2 of 4) Schematic Diagram

11.8. H-Board (3 of 4) Schematic Diagram

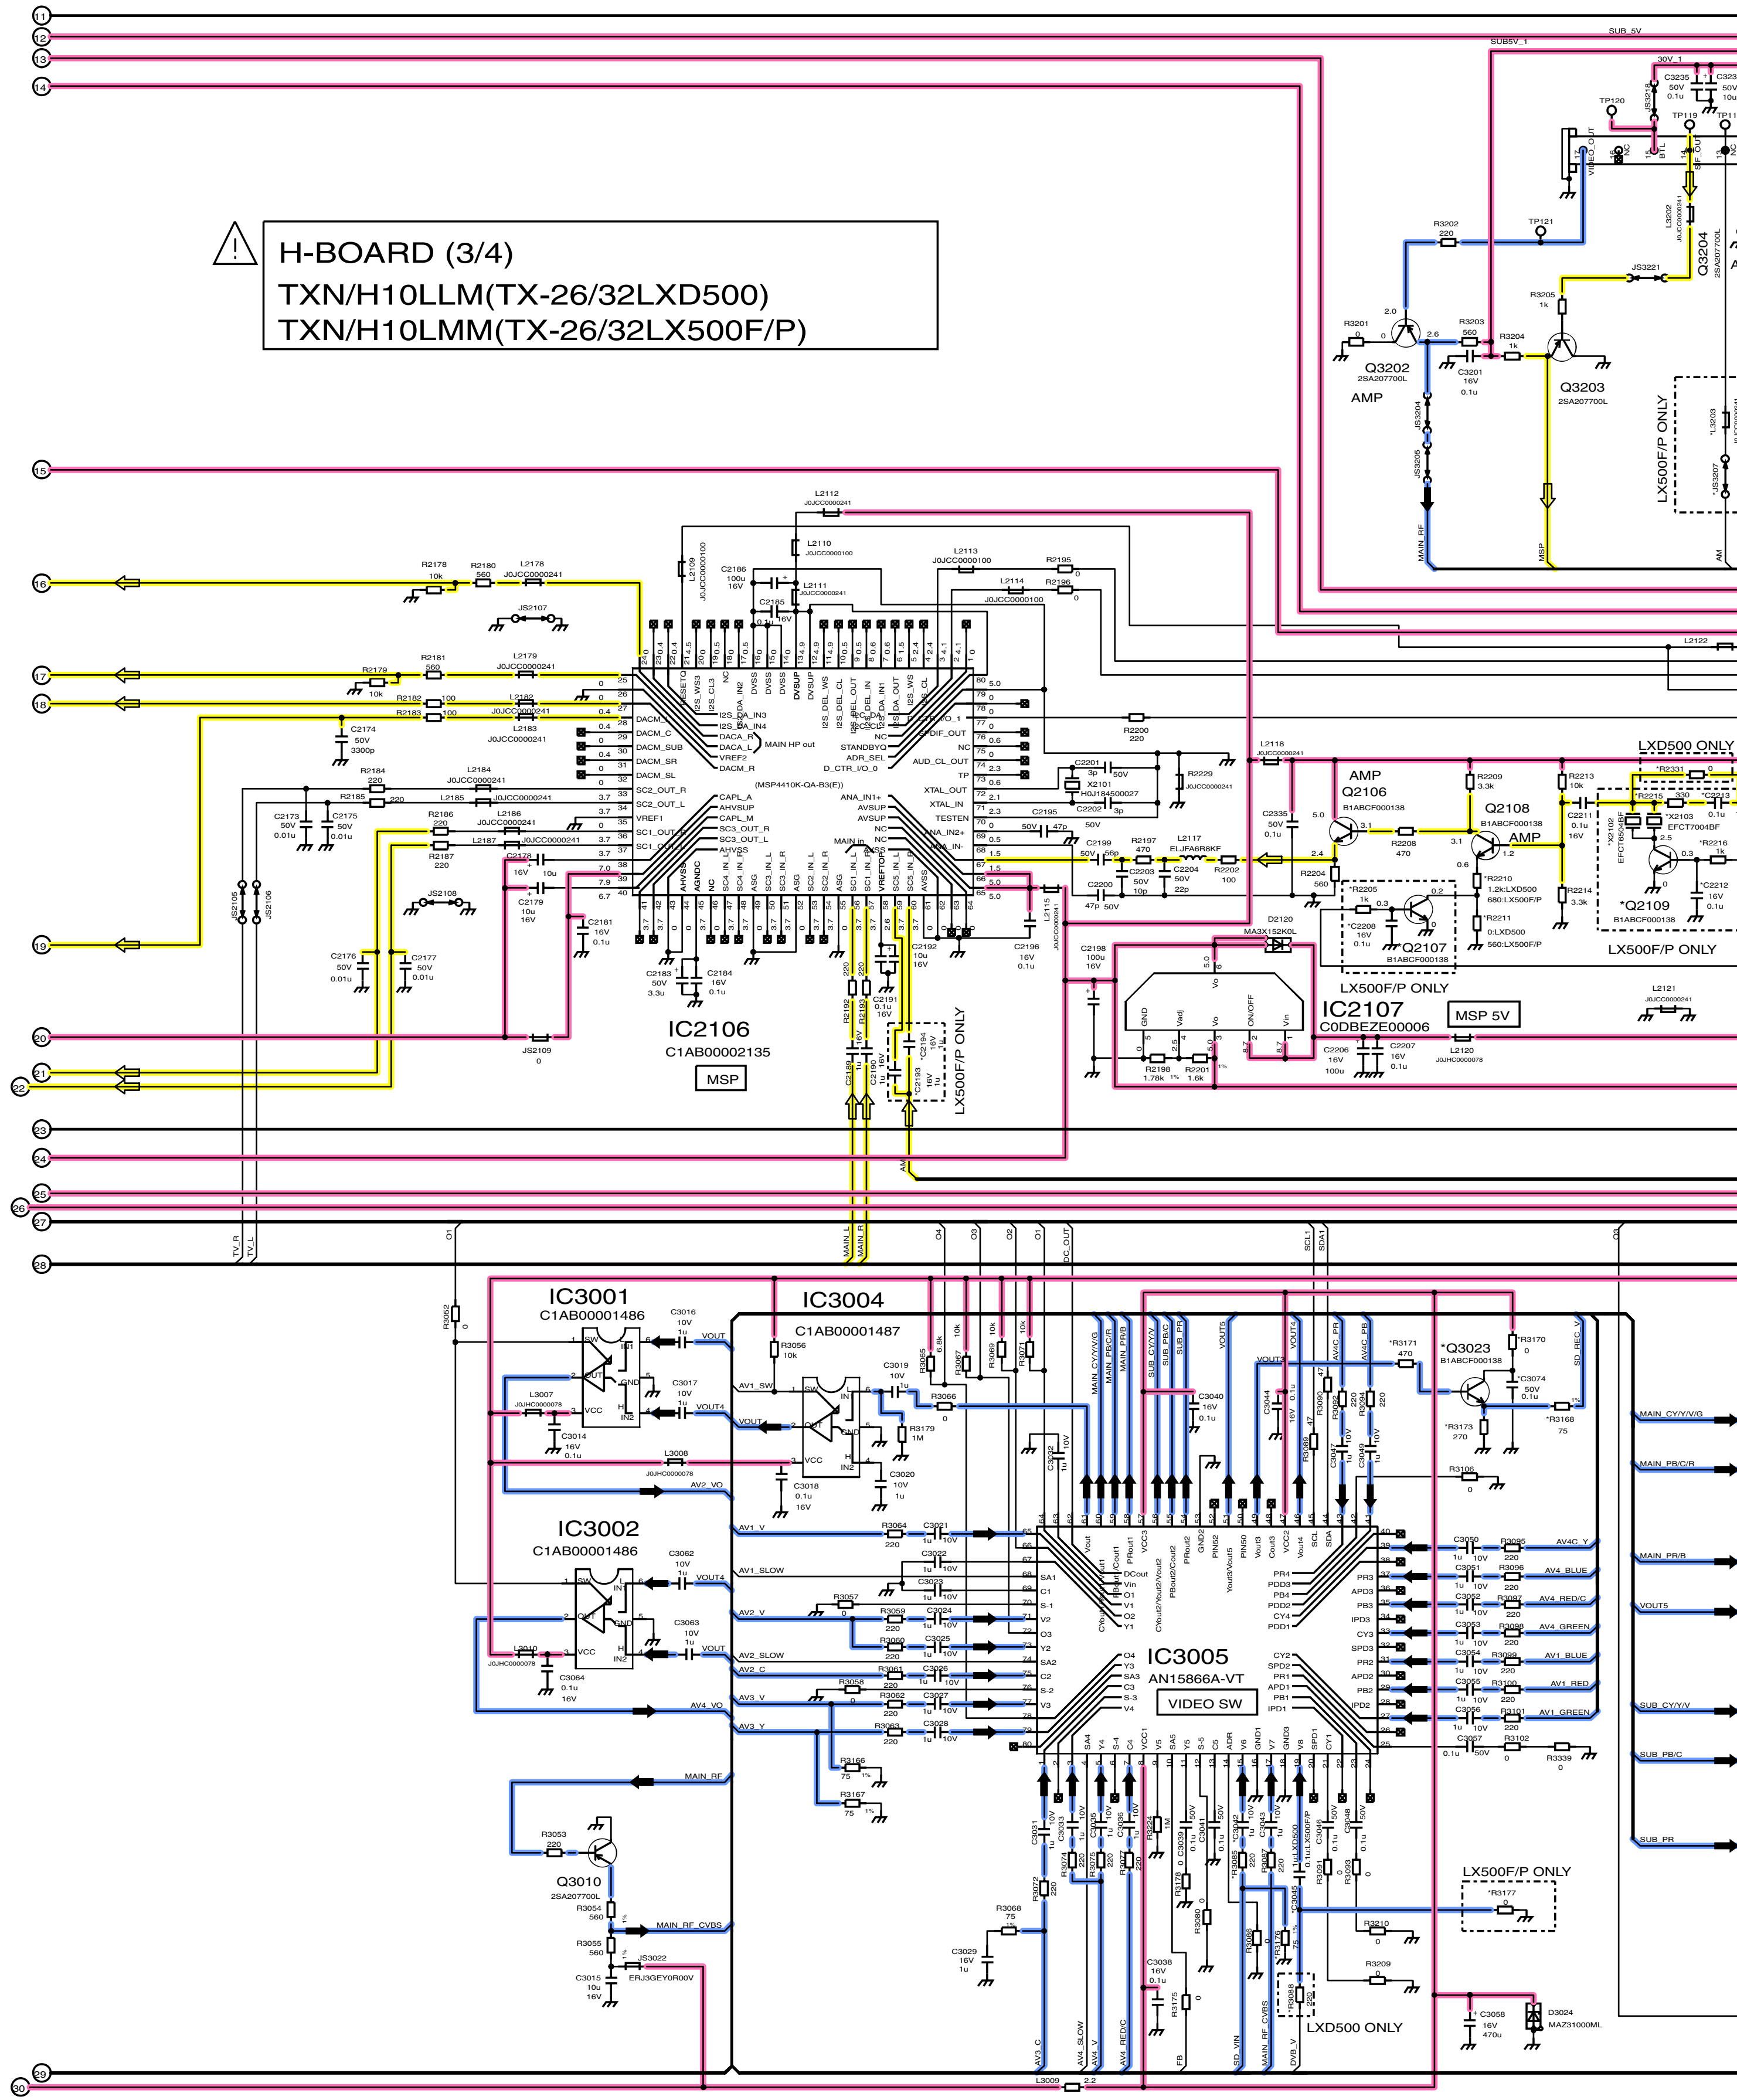

H-BOARD (3/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)
IC2106
C1AB00002135
MSP
(MSP4410K-QA-B3(E))
IC2107
C0DBEZE00006
MSP 5V
Q2106
AMP
Q2107
Q2108
AMP
*Q2109
LXD500 ONLY
LX500F/P ONLY
Q3202
AMP
Q3203
Q3204
IC3001
C1AB00001486
IC3002
C1AB00001486
IC3004
C1AB00001487
IC3005
AN15866A-VT
VIDEO SW
*Q3023
B1ABCF000138
Q3010
2SA2070OL
LXD500 ONLY
LX500F/P ONLY
MAIN_RF
MAIN_RF_CVBS
MAIN_CY/Y/V/G
MAIN_PB/C/R
MAIN_PR/B
VOUT5
SUB_CY/Y/V
SUB_PB/C
SUB_PR
SUB_5V
SUB5V_1
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
19
20
21
22
23

TX-26/32LXD500 TX-26/32LX500F/P H-Board (3 of 4) Schematic Diagram

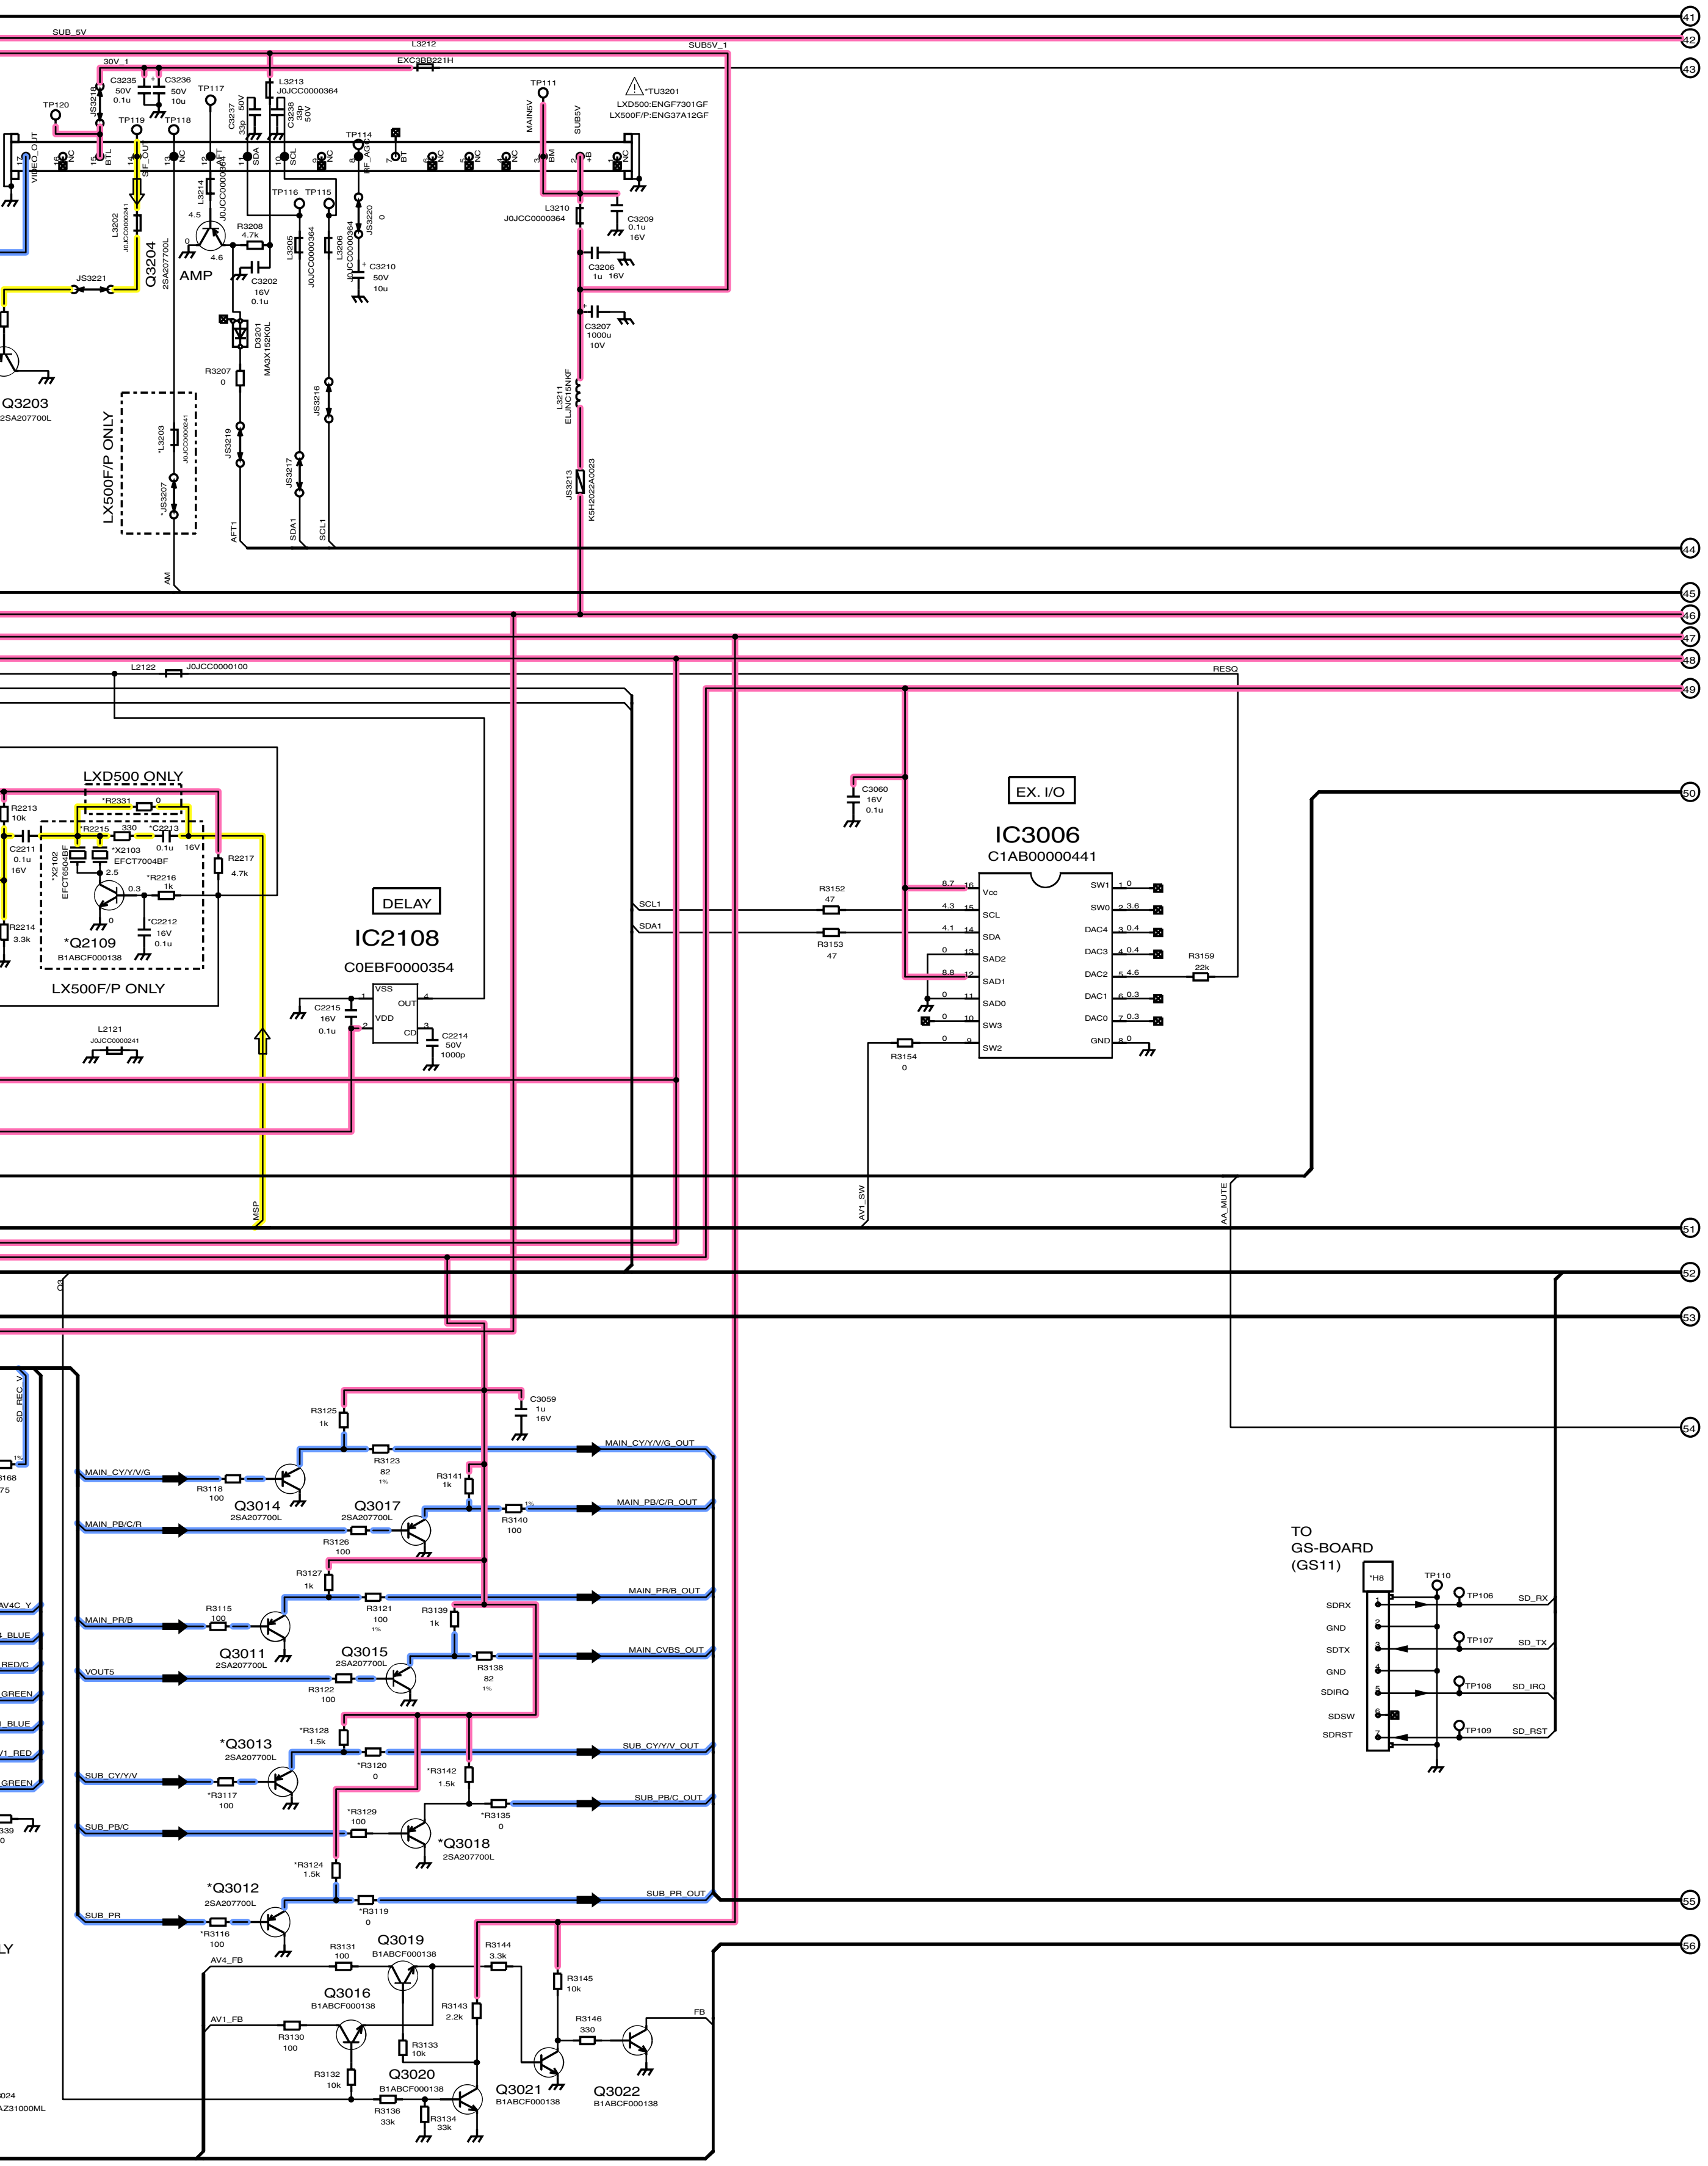
SUB_5V
L3212
EXC3BB221H
SUB5V_1
30V_1
C3235 50V 0.1u
C3236 50V 10u
TP117
L3213 J0JCC0000364
TP111
*TU3201
LXD500:ENGF7301GF
LX500F/P:ENG37A12GF
TP120
TP119
TP118
TP114
VIDEO_OUT
BTL
SIF_OUT
AFT
SDA
SCL
SIF_AGC
BT
MAIN5V
SUB5V
BM
+B
NC
L3202
Q3204
2SA207700L
AMP
L3214
J0JCC0000364
R3208 4.7k
TP116
TP115
L3205
L3206
JS3220
C3202 16V 0.1u
L3210 J0JCC0000364
C3209 0.1u 16V
C3206 1u 16V
C3210 50V 10u
C3207 1000u 10V
JS3221
D3201 MA3X152K0L
R3207 0
Q3203
2SA207700L
LX500F/P ONLY
*L3203
*JS3207
JS3219
JS3216
JS3217
L3211 ELJNC1R5KF
JS3213 K5H2022A0023
AFT1
SDA1
SCL1
AM
L2122
J0JCC0000100
RESO
LXD500 ONLY
*R2331
R2213 10k
*R2215 330
*C2213 0.1u 16V
*X2103 EFCT7004BF
*X2102 EFCT7004BF
C2211 0.1u 16V
*R2216 1k
R2217 4.7k
*C2212 16V 0.1u
R2214 3.3k
*Q2109
B1ABCF000138
LX500F/P ONLY
L2121
J0JCC0000241
DELAY
IC2108
C0EBF0000354
VSS
VDD
OUT
CD
C2215 16V 0.1u
C2214 50V 1000p
MSP
C3060 16V 0.1u
EX. I/O
IC3006
C1AB00000441
R3152 47
R3153 47
SCL1
SDA1
Vcc
SCL
SDA
SAD2
SAD1
SAD0
SW3
SW2
SW1
SW0
DAC4
DAC3
DAC2
DAC1
DAC0
GND
R3159 22k
R3154 0
AV1_SW
AA_MUTE
C3059 1u 16V
R3125 1k
R3123 82
MAIN_CY/Y/V/G_OUT
MAIN_CY/Y/V/G
R3118 100
Q3014
2SA207700L
Q3017
2SA207700L
R3141 1k
R3140 100
MAIN_PB/C/R_OUT
MAIN_PB/C/R
R3126 100
R3127 1k
R3121 100
MAIN_PR/B_OUT
MAIN_PR/B
R3115 100
R3139 1k
Q3011
2SA207700L
Q3015
2SA207700L
MAIN_CVBS_OUT
VOUT5
R3122 100
R3138 82
*Q3013
2SA207700L
*R3128 1.5k
*R3120 0
*R3142 1.5k
SUB_CY/Y/V_OUT
SUB_CY/Y/V
*R3117 100
*R3129 100
*R3135 0
SUB_PB/C_OUT
SUB_PB/C
*Q3018
2SA207700L
*R3124 1.5k
*Q3012
2SA207700L
*R3119 0
SUB_PR_OUT
SUB_PR
*R3116 100
R3131 100
Q3019
B1ABCF000138
R3144 3.3k
R3145 10k
AV4_FB
Q3016
B1ABCF000138
R3143 2.2k
R3146 330
FB
AV1_FB
R3130 100
R3133 10k
R3132 10k
Q3020
B1ABCF000138
Q3021
B1ABCF000138
Q3022
B1ABCF000138
R3136 33k
R3134 33k
TO
GS-BOARD
(GS11)
*H8
TP110
SDRX
GND
SDTX
GND
SDIRQ
SDSW
SDRST
TP106
TP107
TP108
TP109
SD_RX
SD_TX
SD_IRQ
SD_RST
SD_REC_V
AV4C_Y
BLUE
RED/C
GREEN
BLUE
V1_RED
GREEN
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56

TX-26/32LXD500 TX-26/32LX500F/P H-Board (3 of 4) Schematic Diagram

23	24	25	26	27

11.9. H-Board (4 of 4) Schematic Diagram

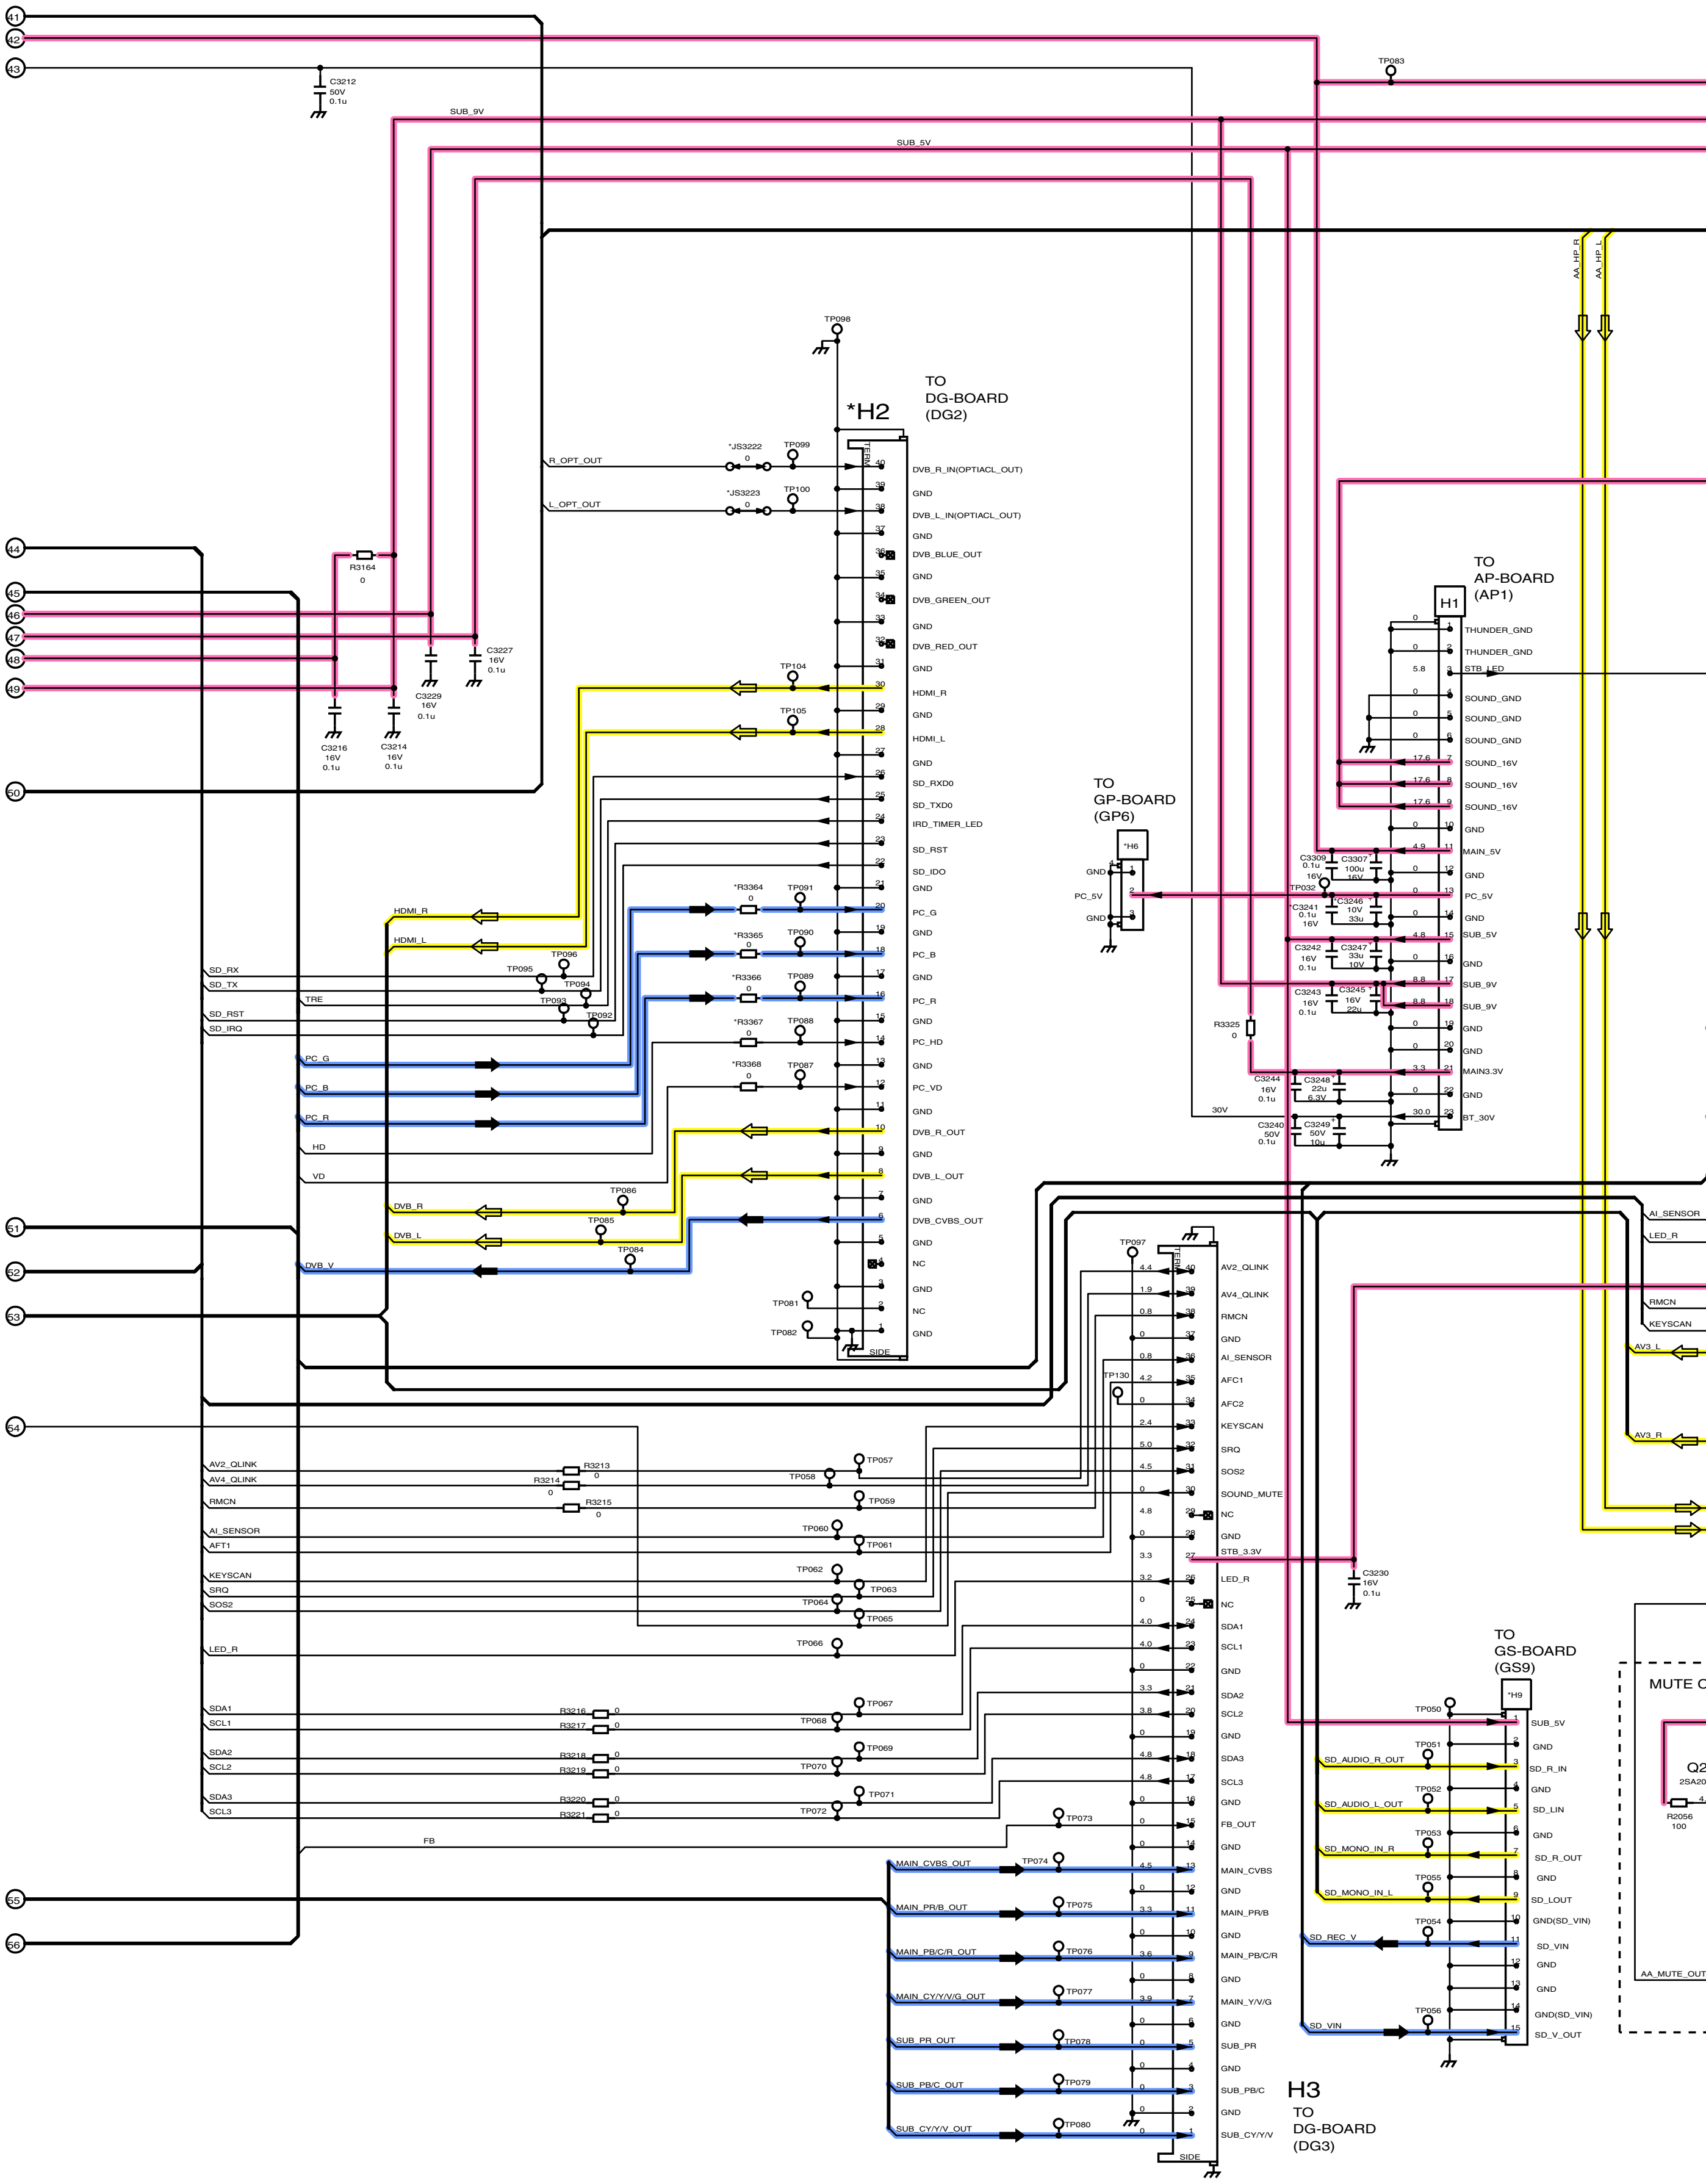

41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
SUB_9V
SUB_5V
C3212 50V 0.1u
TP083
AA_HP_R
AA_HP_L
TP098
*H2
TO DG-BOARD (DG2)
*JS3222 0
*JS3223 0
TP099
TP100
R_OPT_OUT
L_OPT_OUT
DVB_R_IN(OPTIACL_OUT)
GND
DVB_L_IN(OPTIACL_OUT)
DVB_BLUE_OUT
DVB_GREEN_OUT
DVB_RED_OUT
HDMI_R
HDMI_L
SD_RXD0
SD_TXD0
IRD_TIMER_LED
SD_RST
SD_IDO
PC_G
PC_B
PC_R
PC_HD
PC_VD
DVB_R_OUT
DVB_L_OUT
DVB_CVBS_OUT
NC
TERM
SIDE
R3164 0
C3227 16V 0.1u
C3229 16V 0.1u
C3216 16V 0.1u
C3214 16V 0.1u
TP104
TP105
*R3364 0
*R3365 0
*R3366 0
*R3367 0
*R3368 0
TP091
TP090
TP089
TP088
TP087
TP096
TP095
TP094
TP093
TP092
SD_RX
SD_TX
TRE
SD_RST
SD_IRQ
PC_G
PC_B
PC_R
HD
VD
DVB_R
DVB_L
DVB_V
TP086
TP085
TP084
TP081
TP082
TO AP-BOARD (AP1)
H1
THUNDER_GND
STB_LED
SOUND_GND
SOUND_16V
MAIN_5V
PC_5V
SUB_5V
SUB_9V
MAIN3.3V
BT_30V
TO GP-BOARD (GP6)
*H6
GND
PC_5V
C3309 0.1u 16V
C3307 100u 16V
TP032
C3246 10V 33u
C3241 0.1u 16V
C3242 16V 0.1u
C3247 33u 10V
C3243 16V 0.1u
C3245 16V 22u
R3325 0
C3244 16V 0.1u
C3248 22u 6.3V
C3240 50V 0.1u
C3249 50V 10u
30V
AI_SENSOR
LED_R
RMCN
KEYSCAN
AV3_L
AV3_R
TP097
TP130
AV2_QLINK
AV4_QLINK
RMCN
AI_SENSOR
AFC1
AFC2
KEYSCAN
SRQ
SOS2
SOUND_MUTE
STB_3.3V
LED_R
SDA1
SCL1
SDA2
SCL2
SDA3
SCL3
FB_OUT
MAIN_CVBS
MAIN_PR/B
MAIN_PB/C/R
MAIN_Y/V/G
SUB_PR
SUB_PB/C
SUB_CY/Y/V
C3230 16V 0.1u
R3213 0
R3214 0
R3215 0
R3216 0
R3217 0
R3218 0
R3219 0
R3220 0
R3221 0
TP057
TP058
TP059
TP060
TP061
TP062
TP063
TP064
TP065
TP066
TP067
TP068
TP069
TP070
TP071
TP072
TP073
TP074
TP075
TP076
TP077
TP078
TP079
TP080
AV2_QLINK
AV4_QLINK
RMCN
AI_SENSOR
AFT1
KEYSCAN
SRQ
SOS2
LED_R
SDA1
SCL1
SDA2
SCL2
SDA3
SCL3
FB
MAIN_CVBS_OUT
MAIN_PR/B_OUT
MAIN_PB/C/R_OUT
MAIN_CY/Y/V/G_OUT
SUB_PR_OUT
SUB_PB/C_OUT
SUB_CY/Y/V_OUT
H3
TO DG-BOARD (DG3)
TO GS-BOARD (GS9)
*H9
SUB_5V
SD_R_IN
SD_LIN
SD_R_OUT
SD_LOUT
GND(SD_VIN)
SD_VIN
SD_V_OUT
SD_AUDIO_R_OUT
SD_AUDIO_L_OUT
SD_MONO_IN_R
SD_MONO_IN_L
SD_REC_V
SD_VIN
TP050
TP051
TP052
TP053
TP055
TP054
TP056
MUTE C
Q2
2SA20
R2056 100
AA_MUTE_OUT
28
29
30
31
32

TX-26/32LXD500 TX-26/32LX500F/P H-Board (4 of 4) Schematic Diagram

H-BOARD (4/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)

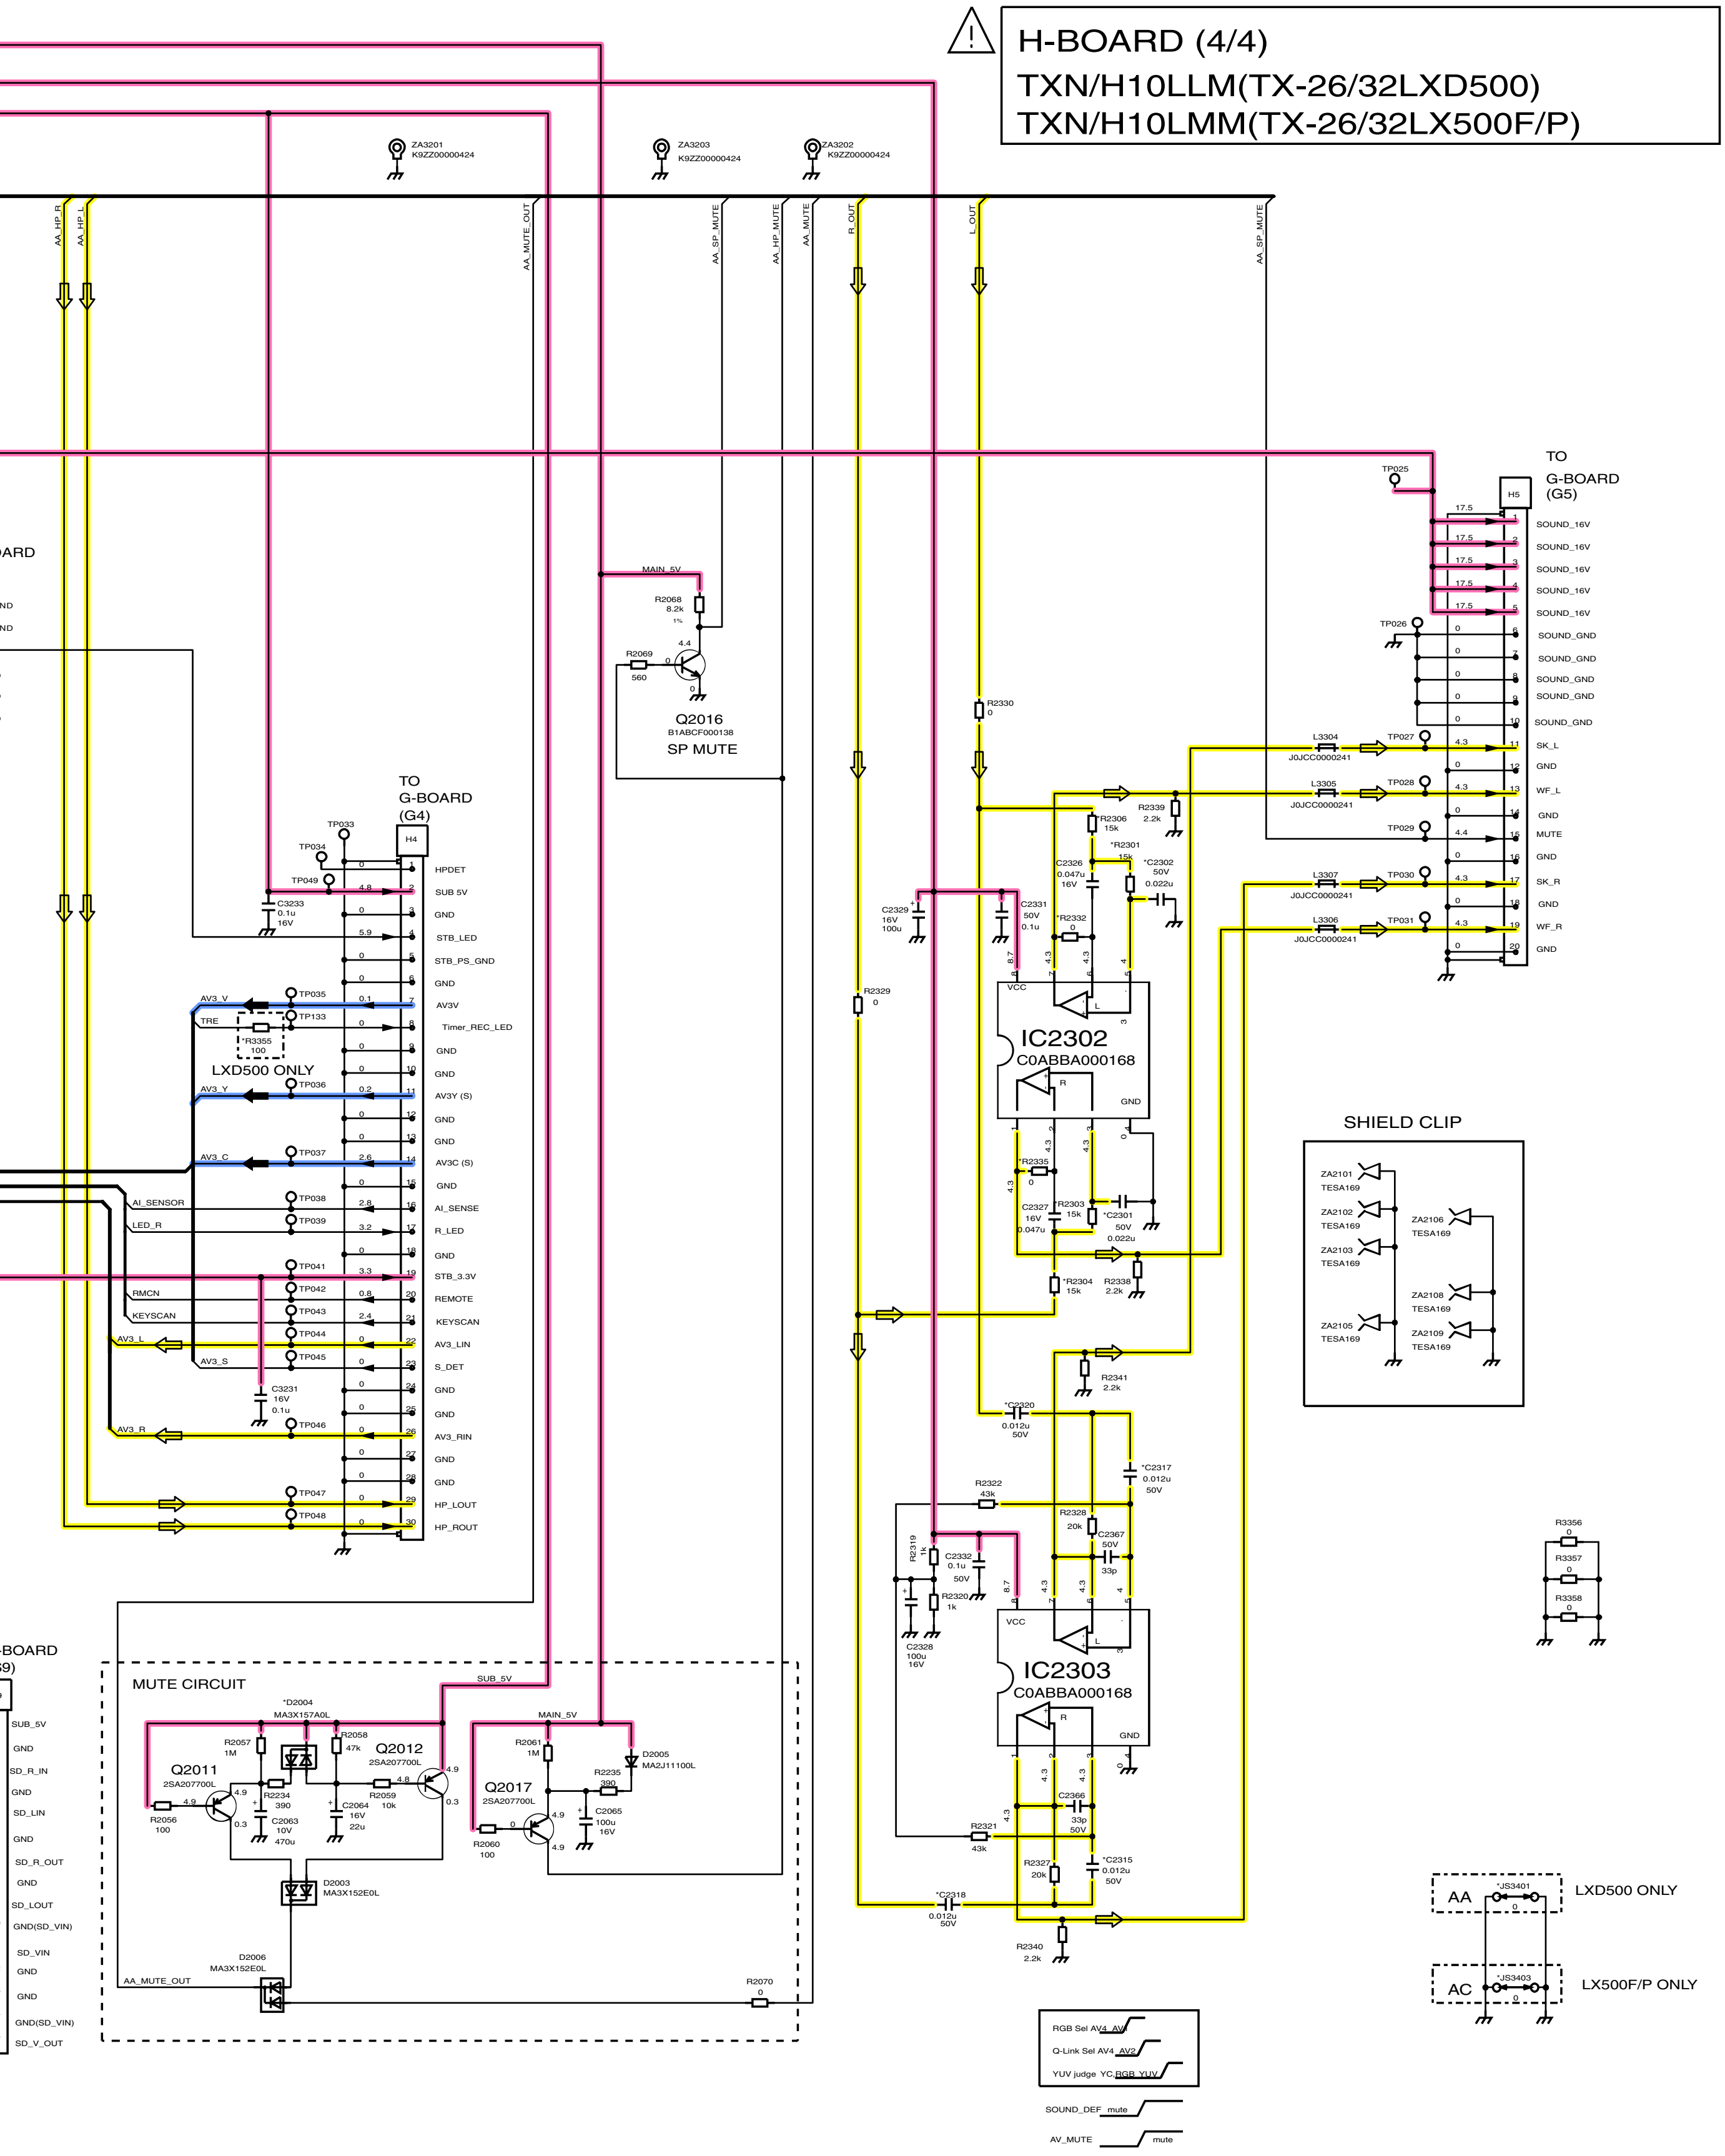
ZA3201 K9ZZ00000424
ZA3203 K9ZZ00000424
ZA3202 K9ZZ00000424
AA_HP_R
AA_HP_L
AA_MUTE_OUT
AA_SP_MUTE
AA_HP_MUTE
AA_MUTE
R_OUT
L_OUT
MAIN_5V
R2068 8.2k 1%
R2069 560
Q2016 B1ABCF000138
SP MUTE
TO G-BOARD (G4)
H4
HPDET
SUB 5V
GND
STB_LED
STB_PS_GND
AV3V
Timer_REC_LED
AV3Y (S)
AV3C (S)
AI_SENSE
R_LED
STB_3.3V
REMOTE
KEYSCAN
AV3_LIN
S_DET
AV3_RIN
HP_LOUT
HP_ROUT
AV3_V
TRE
*R3355 100
LXD500 ONLY
AV3_Y
AV3_C
AI_SENSOR
LED_R
RMCN
KEYSCAN
AV3_L
AV3_S
AV3_R
C3233 0.1u 16V
C3231 16V 0.1u
TO G-BOARD (G5)
H5
SOUND_16V
SOUND_GND
SK_L
WF_L
MUTE
SK_R
WF_R
L3304 J0JCC0000241
L3305 J0JCC0000241
L3307 J0JCC0000241
L3306 J0JCC0000241
TP025
TP026
TP027
TP028
TP029
TP030
TP031
IC2302 C0ABBA000168
IC2303 C0ABBA000168
VCC
GND
SHIELD CLIP
ZA2101 TESA169
ZA2102 TESA169
ZA2103 TESA169
ZA2105 TESA169
ZA2106 TESA169
ZA2108 TESA169
ZA2109 TESA169
R3356 0
R3357 0
R3358 0
MUTE CIRCUIT
SUB_5V
*D2004 MA3X157A0L
Q2011 2SA207700L
Q2012 2SA207700L
Q2017 2SA207700L
D2005 MA2J11100L
D2003 MA3X152E0L
D2006 MA3X152E0L
AA_MUTE_OUT
R2070 0
-BOARD
SUB_5V
SD_R_IN
SD_LIN
SD_R_OUT
SD_LOUT
GND(SD_VIN)
SD_VIN
GND(SD_VIN)
SD_V_OUT
AA
*JS3401
LXD500 ONLY
AC
*JS3403
LX500F/P ONLY
RGB Sel AV4 AV
Q-Link Sel AV4 AV2
YUV judge YC RGB YUV
SOUND_DEF mute
AV_MUTE mute

TX-26/32LXD500 TX-26/32LX500F/P H-Board (4 of 4) Schematic Diagram

32 33 34 35 36

11.10. XV-Board (1 of 5) Schematic Diagram

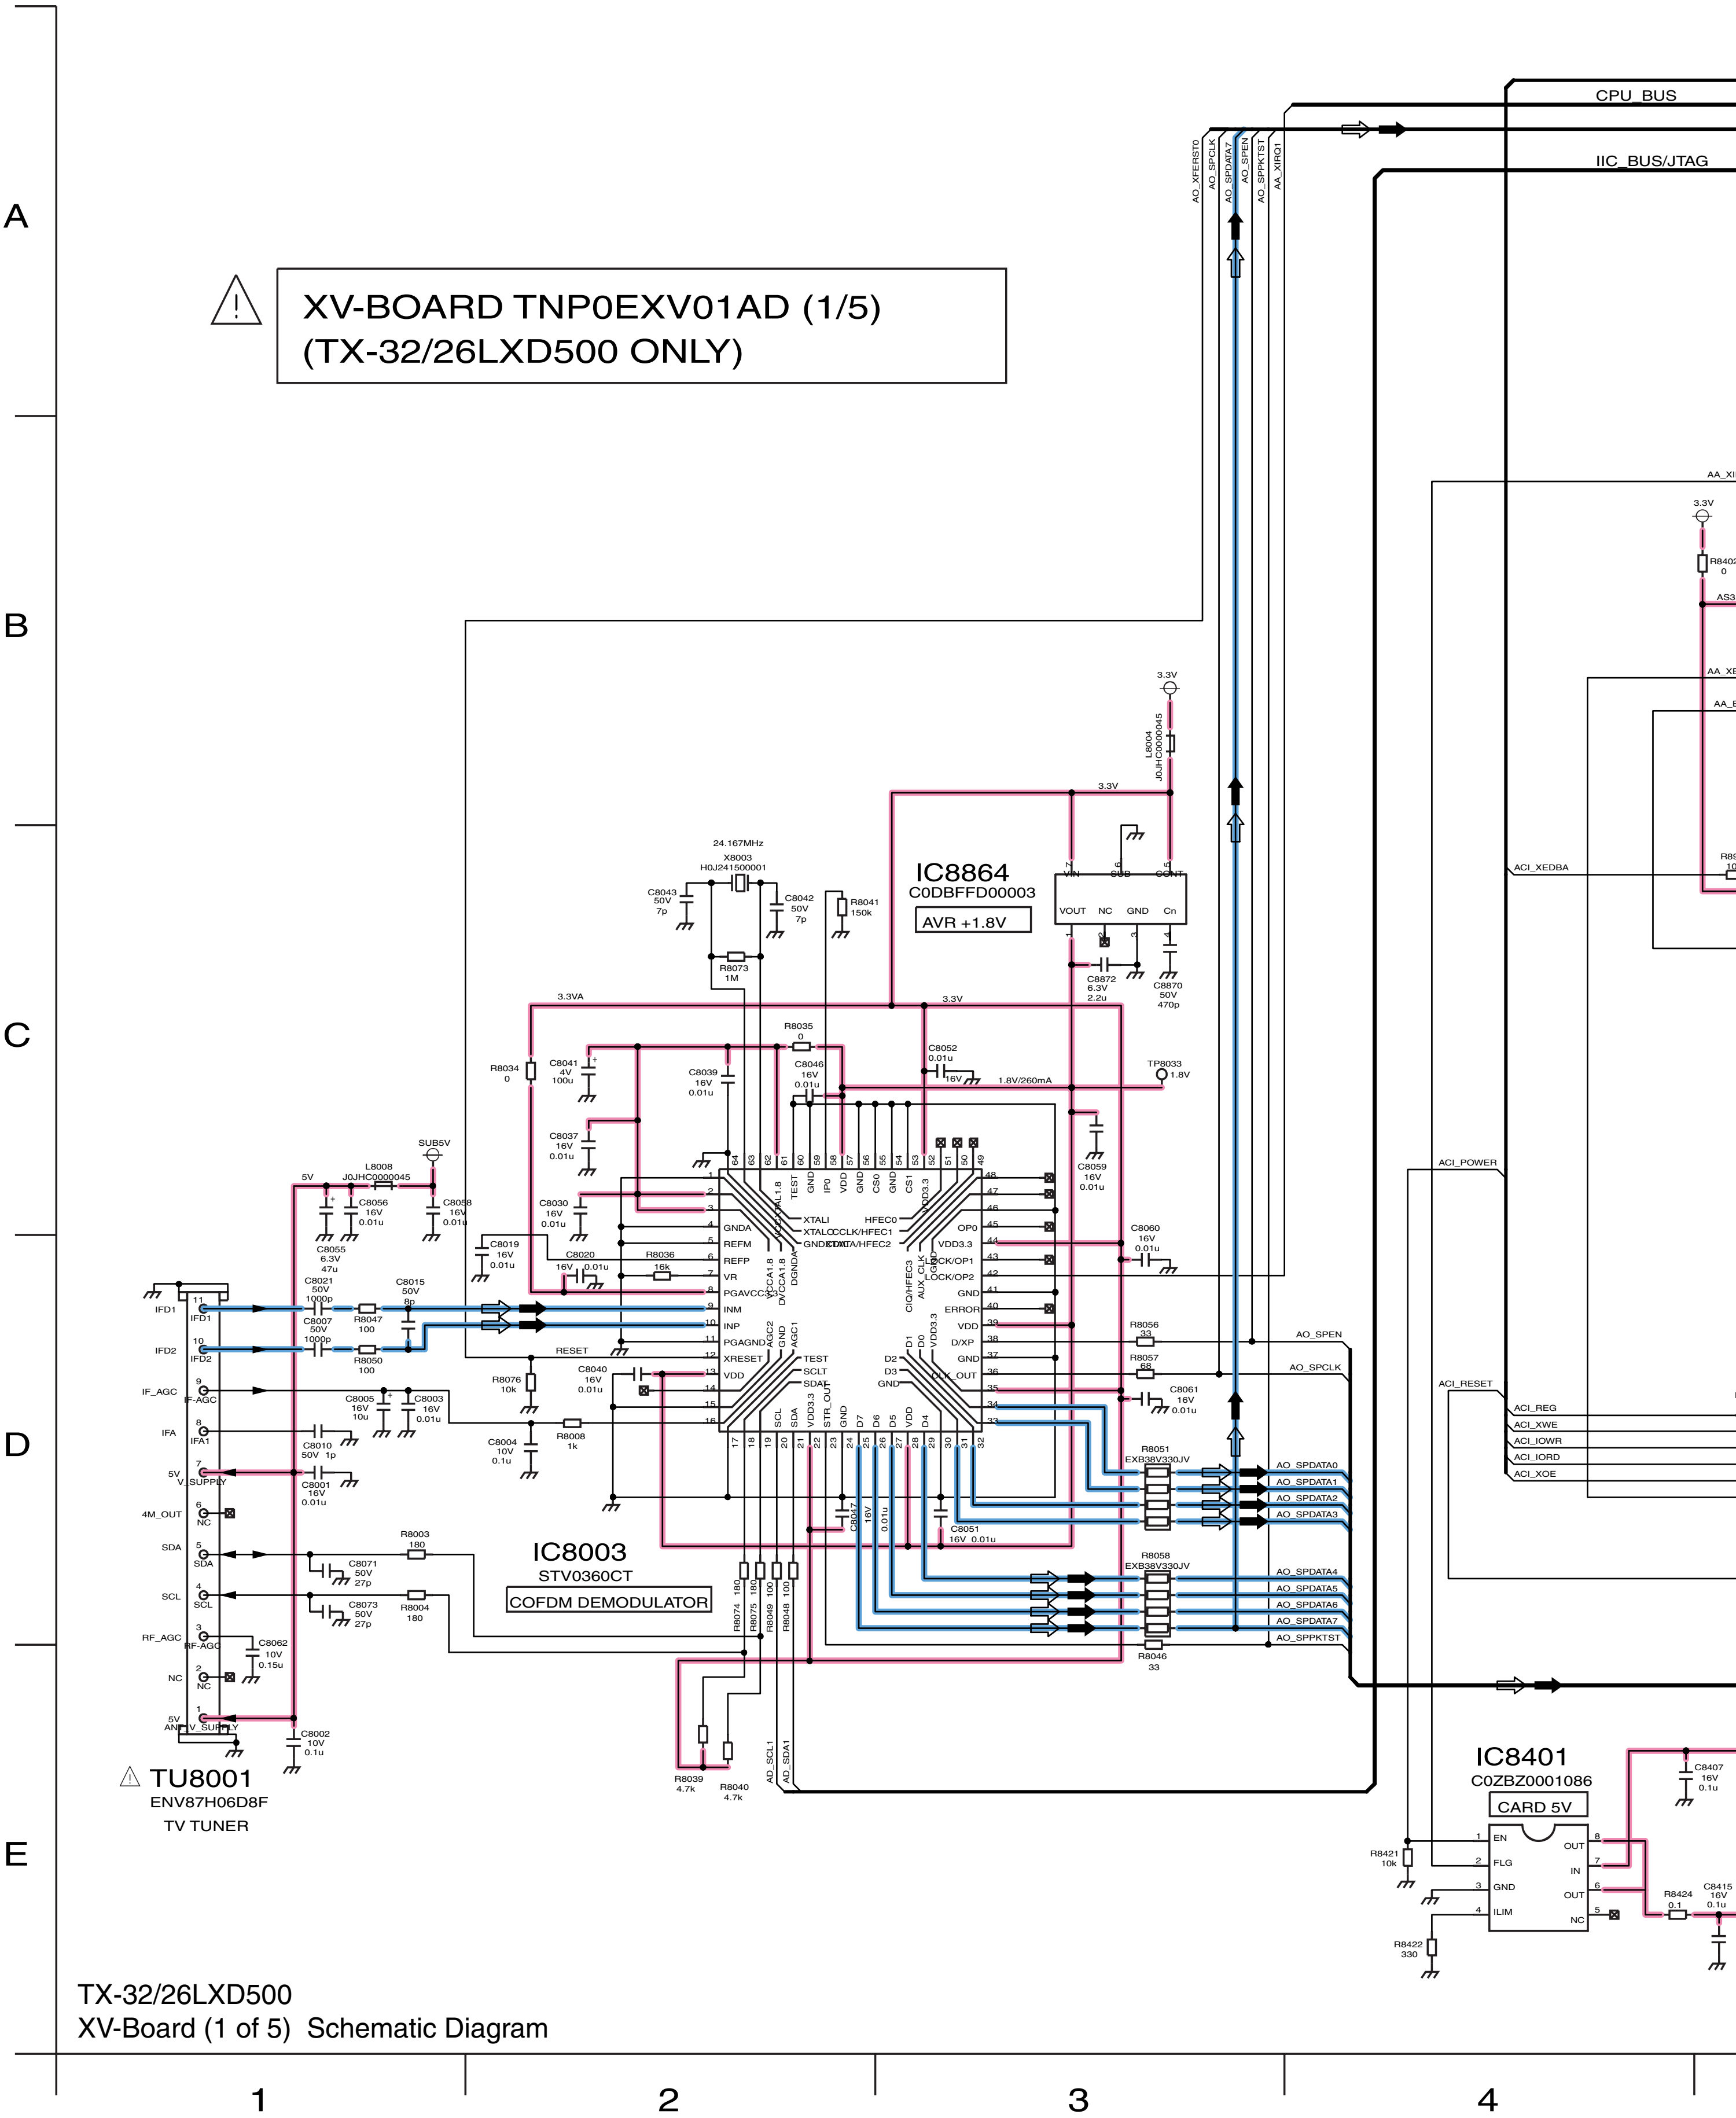
XV-BOARD TNP0EXV01AD (1/5)
(TX-32/26LXD500 ONLY)
A
B
C
D
E
1
2
3
4
CPU_BUS
IIC_BUS/JTAG
AO_XFERST0
AO_SPCLK
AO_SPDATA7
AO_SPEN
AO_SPPKTST
AA_XIRQ1
IC8864
C0DBFFD00003
AVR +1.8V
VIN
SUB
CONT
VOUT
NC
GND
Cn
L8004
J0JHC0000045
3.3V
C8872
6.3V
2.2u
C8870
50V
470p
24.167MHz
X8003
H0J241500001
C8043
50V
7p
C8042
50V
7p
R8041
150k
R8073
1M
3.3VA
R8035
0
C8052
0.01u
16V
1.8V/260mA
TP8033
1.8V
R8034
0
C8041
4V
100u
C8039
16V
0.01u
C8046
16V
0.01u
C8037
16V
0.01u
C8059
16V
0.01u
SUB5V
5V
L8008
J0JHC0000045
C8056
16V
0.01u
C8058
16V
0.01u
C8030
16V
0.01u
C8060
16V
0.01u
C8019
16V
0.01u
C8020
16V 0.01u
R8036
16k
C8055
6.3V
47u
C8021
50V
1000p
C8015
50V
8p
R8047
100
C8007
50V
1000p
R8050
100
R8056
33
R8057
68
AO_SPEN
AO_SPCLK
RESET
C8040
16V
0.01u
R8076
10k
C8061
16V
0.01u
C8005
16V
10u
C8003
16V
0.01u
C8004
10V
0.1u
R8008
1k
C8010
50V 1p
C8001
16V
0.01u
R8051
EXB38V330JV
AO_SPDATA0
AO_SPDATA1
AO_SPDATA2
AO_SPDATA3
C8047
16V
0.01u
C8051
16V 0.01u
R8058
EXB38V330JV
AO_SPDATA4
AO_SPDATA5
AO_SPDATA6
AO_SPDATA7
AO_SPPKTST
R8046
33
IC8003
STV0360CT
COFDM DEMODULATOR
GNDA
REFM
REFP
VR
PGAVCC3
INM
INP
PGAGND
XRESET
VDD
TEST
GND
IP0
CS0
CS1
VDD3.3
XTALI
XTALO
GNDXTAL
HFEC0
CCLK/HFEC1
CDATA/HFEC2
OP0
VDD3.3
CLOCK/OP1
LOCK/OP2
GND
ERROR
D/XP
CLK_OUT
SCLT
SDAT
STR_OUT
SCL
SDA
VDDA1.8
DVCCA1.8
DGNDA
AGC1
AGC2
CIQ/HFEC3
AUX_CLK
D0
D1
D2
D3
D4
D5
D6
D7
R8003
180
C8071
50V
27p
R8004
180
C8073
50V
27p
C8062
10V
0.15u
C8002
10V
0.1u
R8074 180
R8075 180
R8049 100
R8048 100
R8039
4.7k
R8040
4.7k
AD_SCL1
AD_SDA1
IFD1
IFD2
IF_AGC
IFA
5V
V_SUPPLY
4M_OUT
NC
SDA
SCL
RF_AGC
AN_V_SUPPLY
TU8001
ENV87H06D8F
TV TUNER
ACI_XEDBA
ACI_POWER
ACI_RESET
ACI_REG
ACI_XWE
ACI_IOWR
ACI_IORD
ACI_XOE
AA_XI
R8402
0
AS3
AA_XE
AA_E
IC8401
C0ZBZ0001086
CARD 5V
EN
FLG
GND
ILIM
OUT
IN
NC
R8421
10k
R8422
330
R8424
0.1
C8407
16V
0.1u
C8415
16V
0.1u

TX-32/26LXD500
XV-Board (1 of 5) Schematic Diagram

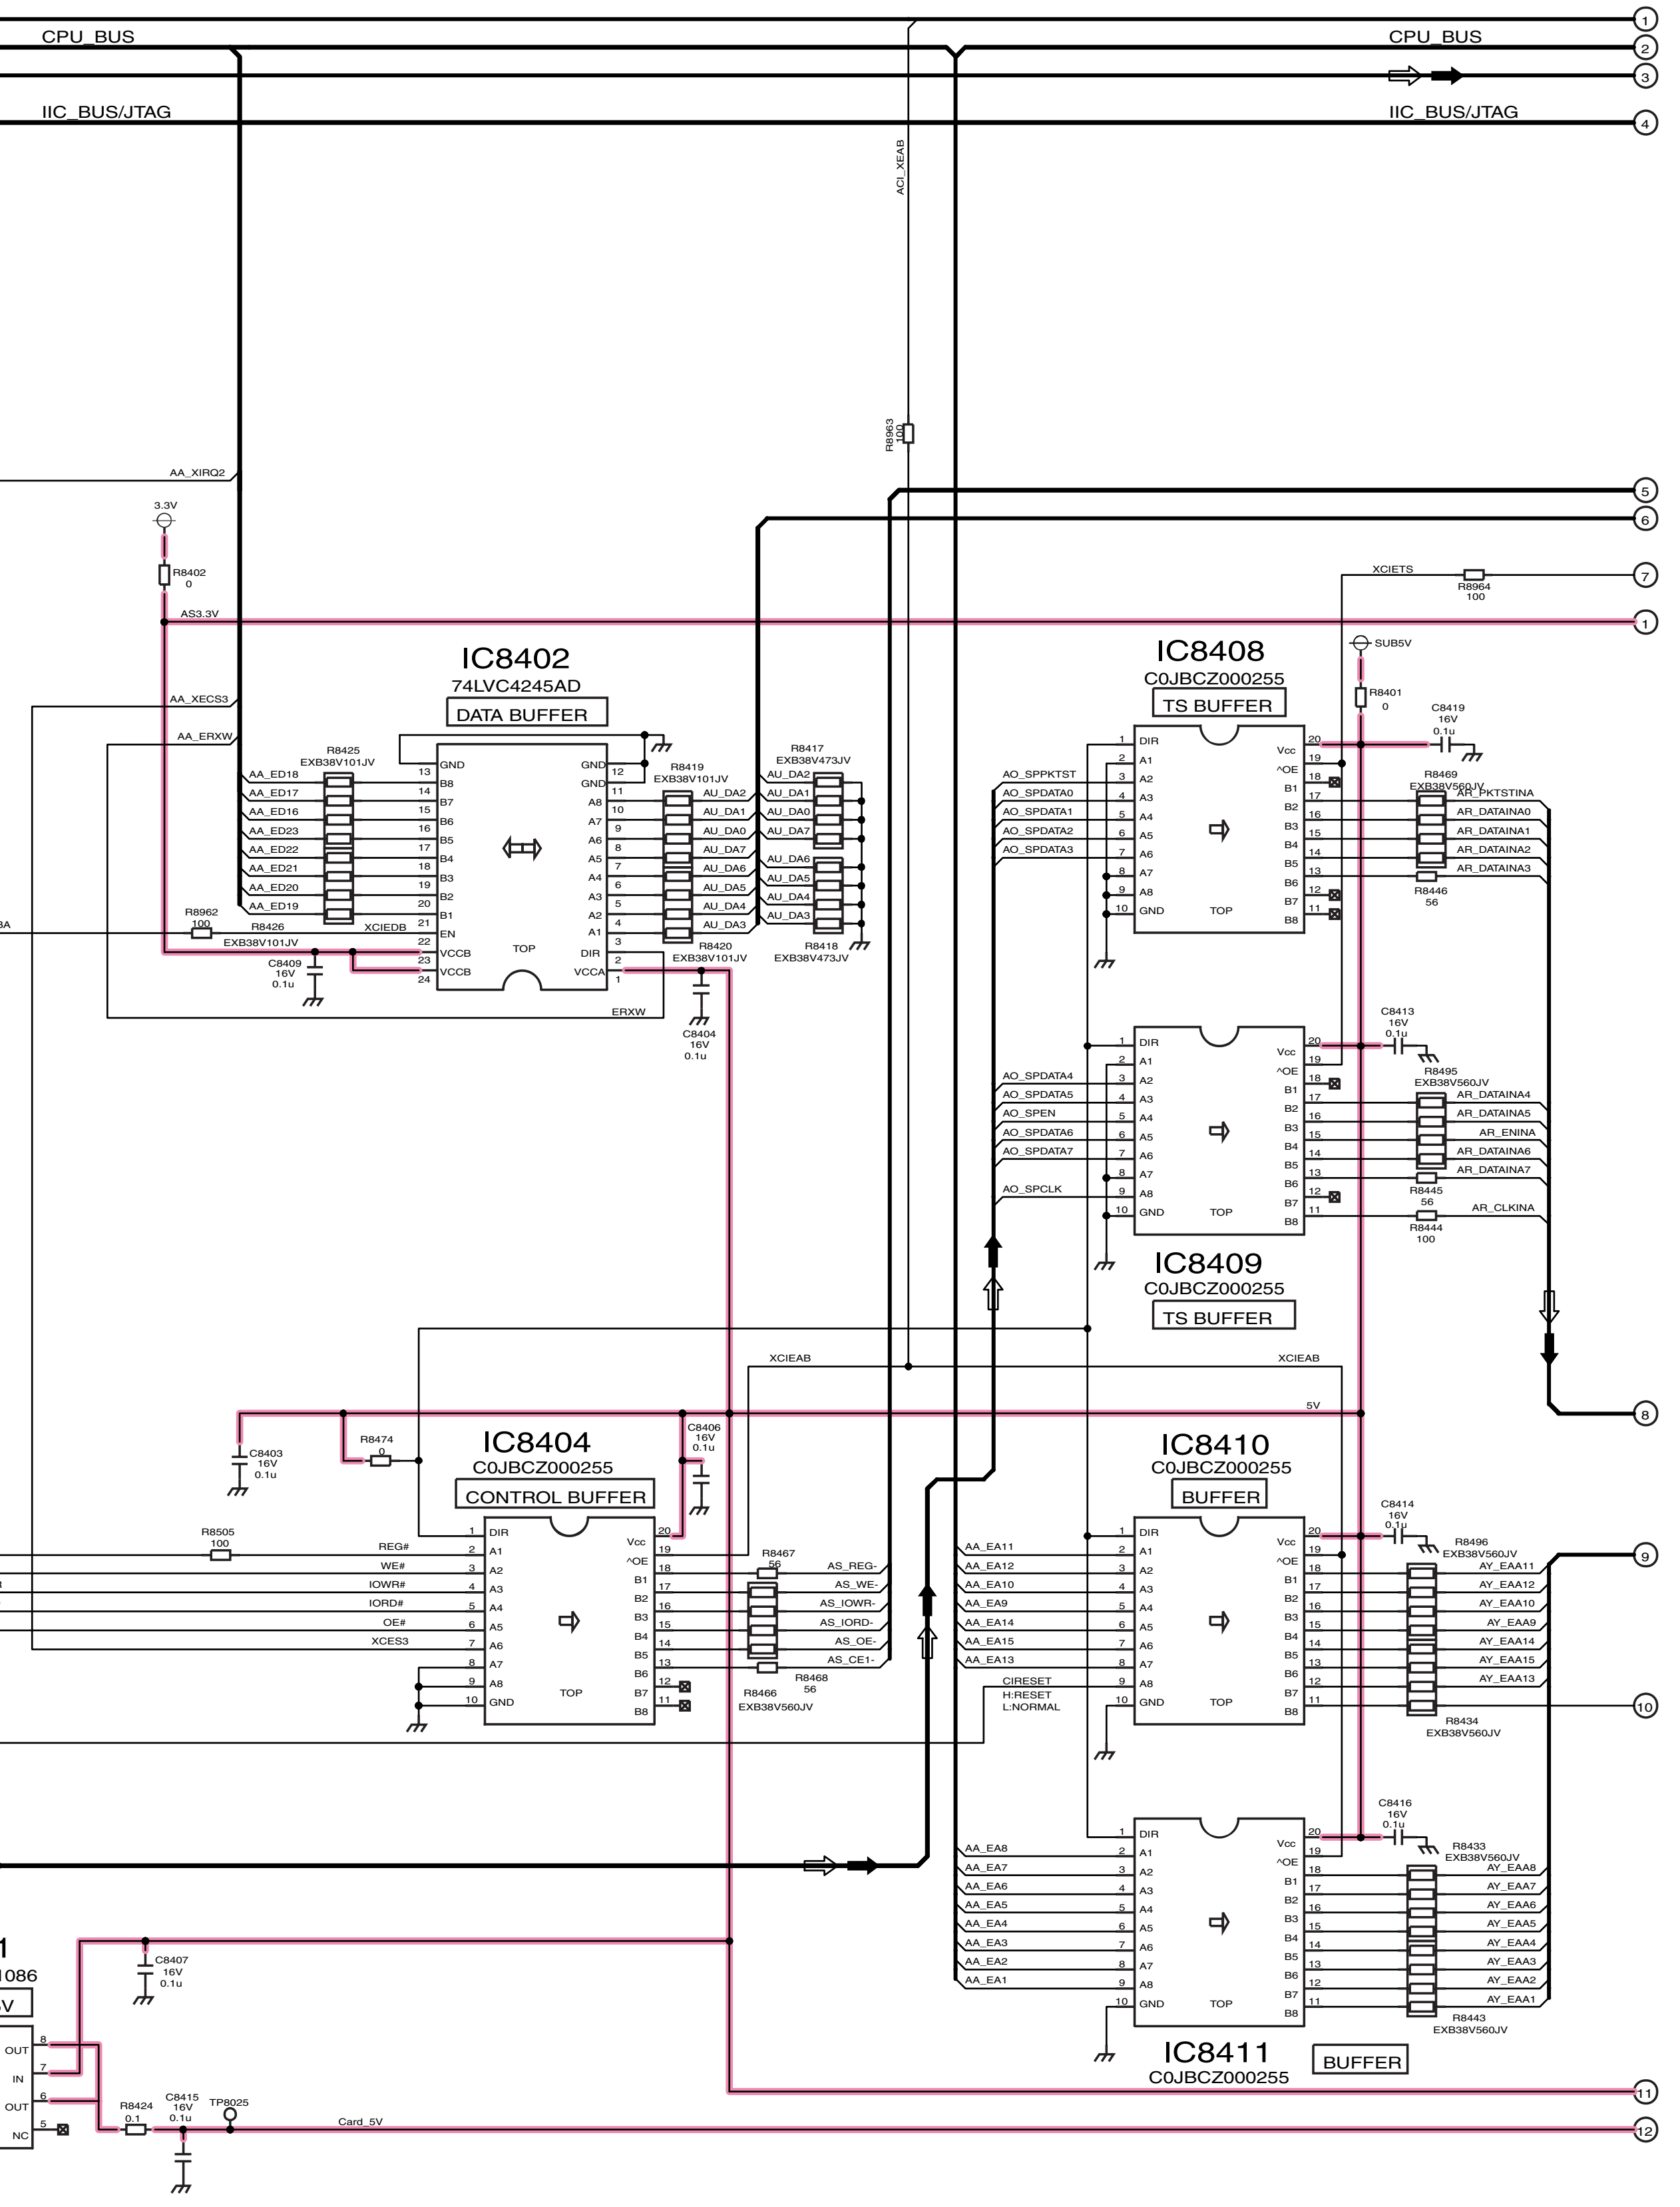
CPU_BUS
IIC_BUS/JTAG
CPU_BUS
IIC_BUS/JTAG
ACI_XEAB
R8963
100
AA_XIRQ2
3.3V
R8402
0
AS3.3V
AA_XECS3
AA_ERXW
IC8402
74LVC4245AD
DATA BUFFER
R8425
EXB38V101JV
AA_ED18
AA_ED17
AA_ED16
AA_ED23
AA_ED22
AA_ED21
AA_ED20
AA_ED19
R8962
100
R8426
EXB38V101JV
XCIEDB
C8409
16V
0.1u
R8419
EXB38V101JV
AU_DA2
AU_DA1
AU_DA0
AU_DA7
AU_DA6
AU_DA5
AU_DA4
AU_DA3
R8420
EXB38V101JV
R8417
EXB38V473JV
R8418
EXB38V473JV
ERXW
C8404
16V
0.1u
XCIETS
R8964
100
SUB5V
R8401
0
C8419
16V
0.1u
IC8408
C0JBCZ000255
TS BUFFER
AO_SPPKTST
AO_SPDATA0
AO_SPDATA1
AO_SPDATA2
AO_SPDATA3
R8469
EXB38V560JV
AR_PKTSTINA
AR_DATAINA0
AR_DATAINA1
AR_DATAINA2
AR_DATAINA3
R8446
56
C8413
16V
0.1u
R8495
EXB38V560JV
AO_SPDATA4
AO_SPDATA5
AO_SPEN
AO_SPDATA6
AO_SPDATA7
AO_SPCLK
AR_DATAINA4
AR_DATAINA5
AR_ENINA
AR_DATAINA6
AR_DATAINA7
R8445
56
AR_CLKINA
R8444
100
IC8409
C0JBCZ000255
TS BUFFER
XCIEAB
XCIEAB
5V
C8403
16V
0.1u
R8474
0
IC8404
C0JBCZ000255
CONTROL BUFFER
C8406
16V
0.1u
R8505
100
REG#
WE#
IOWR#
IORD#
OE#
XCES3
R8467
56
AS_REG-
AS_WE-
AS_IOWR-
AS_IORD-
AS_OE-
AS_CE1-
R8466
EXB38V560JV
R8468
56
IC8410
C0JBCZ000255
BUFFER
C8414
16V
0.1u
R8496
EXB38V560JV
AA_EA11
AA_EA12
AA_EA10
AA_EA9
AA_EA14
AA_EA15
AA_EA13
CIRESET
H:RESET
L:NORMAL
AY_EAA11
AY_EAA12
AY_EAA10
AY_EAA9
AY_EAA14
AY_EAA15
AY_EAA13
R8434
EXB38V560JV
C8416
16V
0.1u
R8433
EXB38V560JV
AA_EA8
AA_EA7
AA_EA6
AA_EA5
AA_EA4
AA_EA3
AA_EA2
AA_EA1
AY_EAA8
AY_EAA7
AY_EAA6
AY_EAA5
AY_EAA4
AY_EAA3
AY_EAA2
AY_EAA1
R8443
EXB38V560JV
IC8411
C0JBCZ000255
BUFFER
C8407
16V
0.1u
OUT
IN
OUT
NC
R8424
0.1
C8415
16V
0.1u
TP8025
Card_5V
DIR
GND
Vcc
^OE
TOP

TX-32/26LXD500
XV-Board (1 of 5) Schematic Diagram

5 6 7 8

11.11. XV-Board (2 of 5) Schematic Diagram

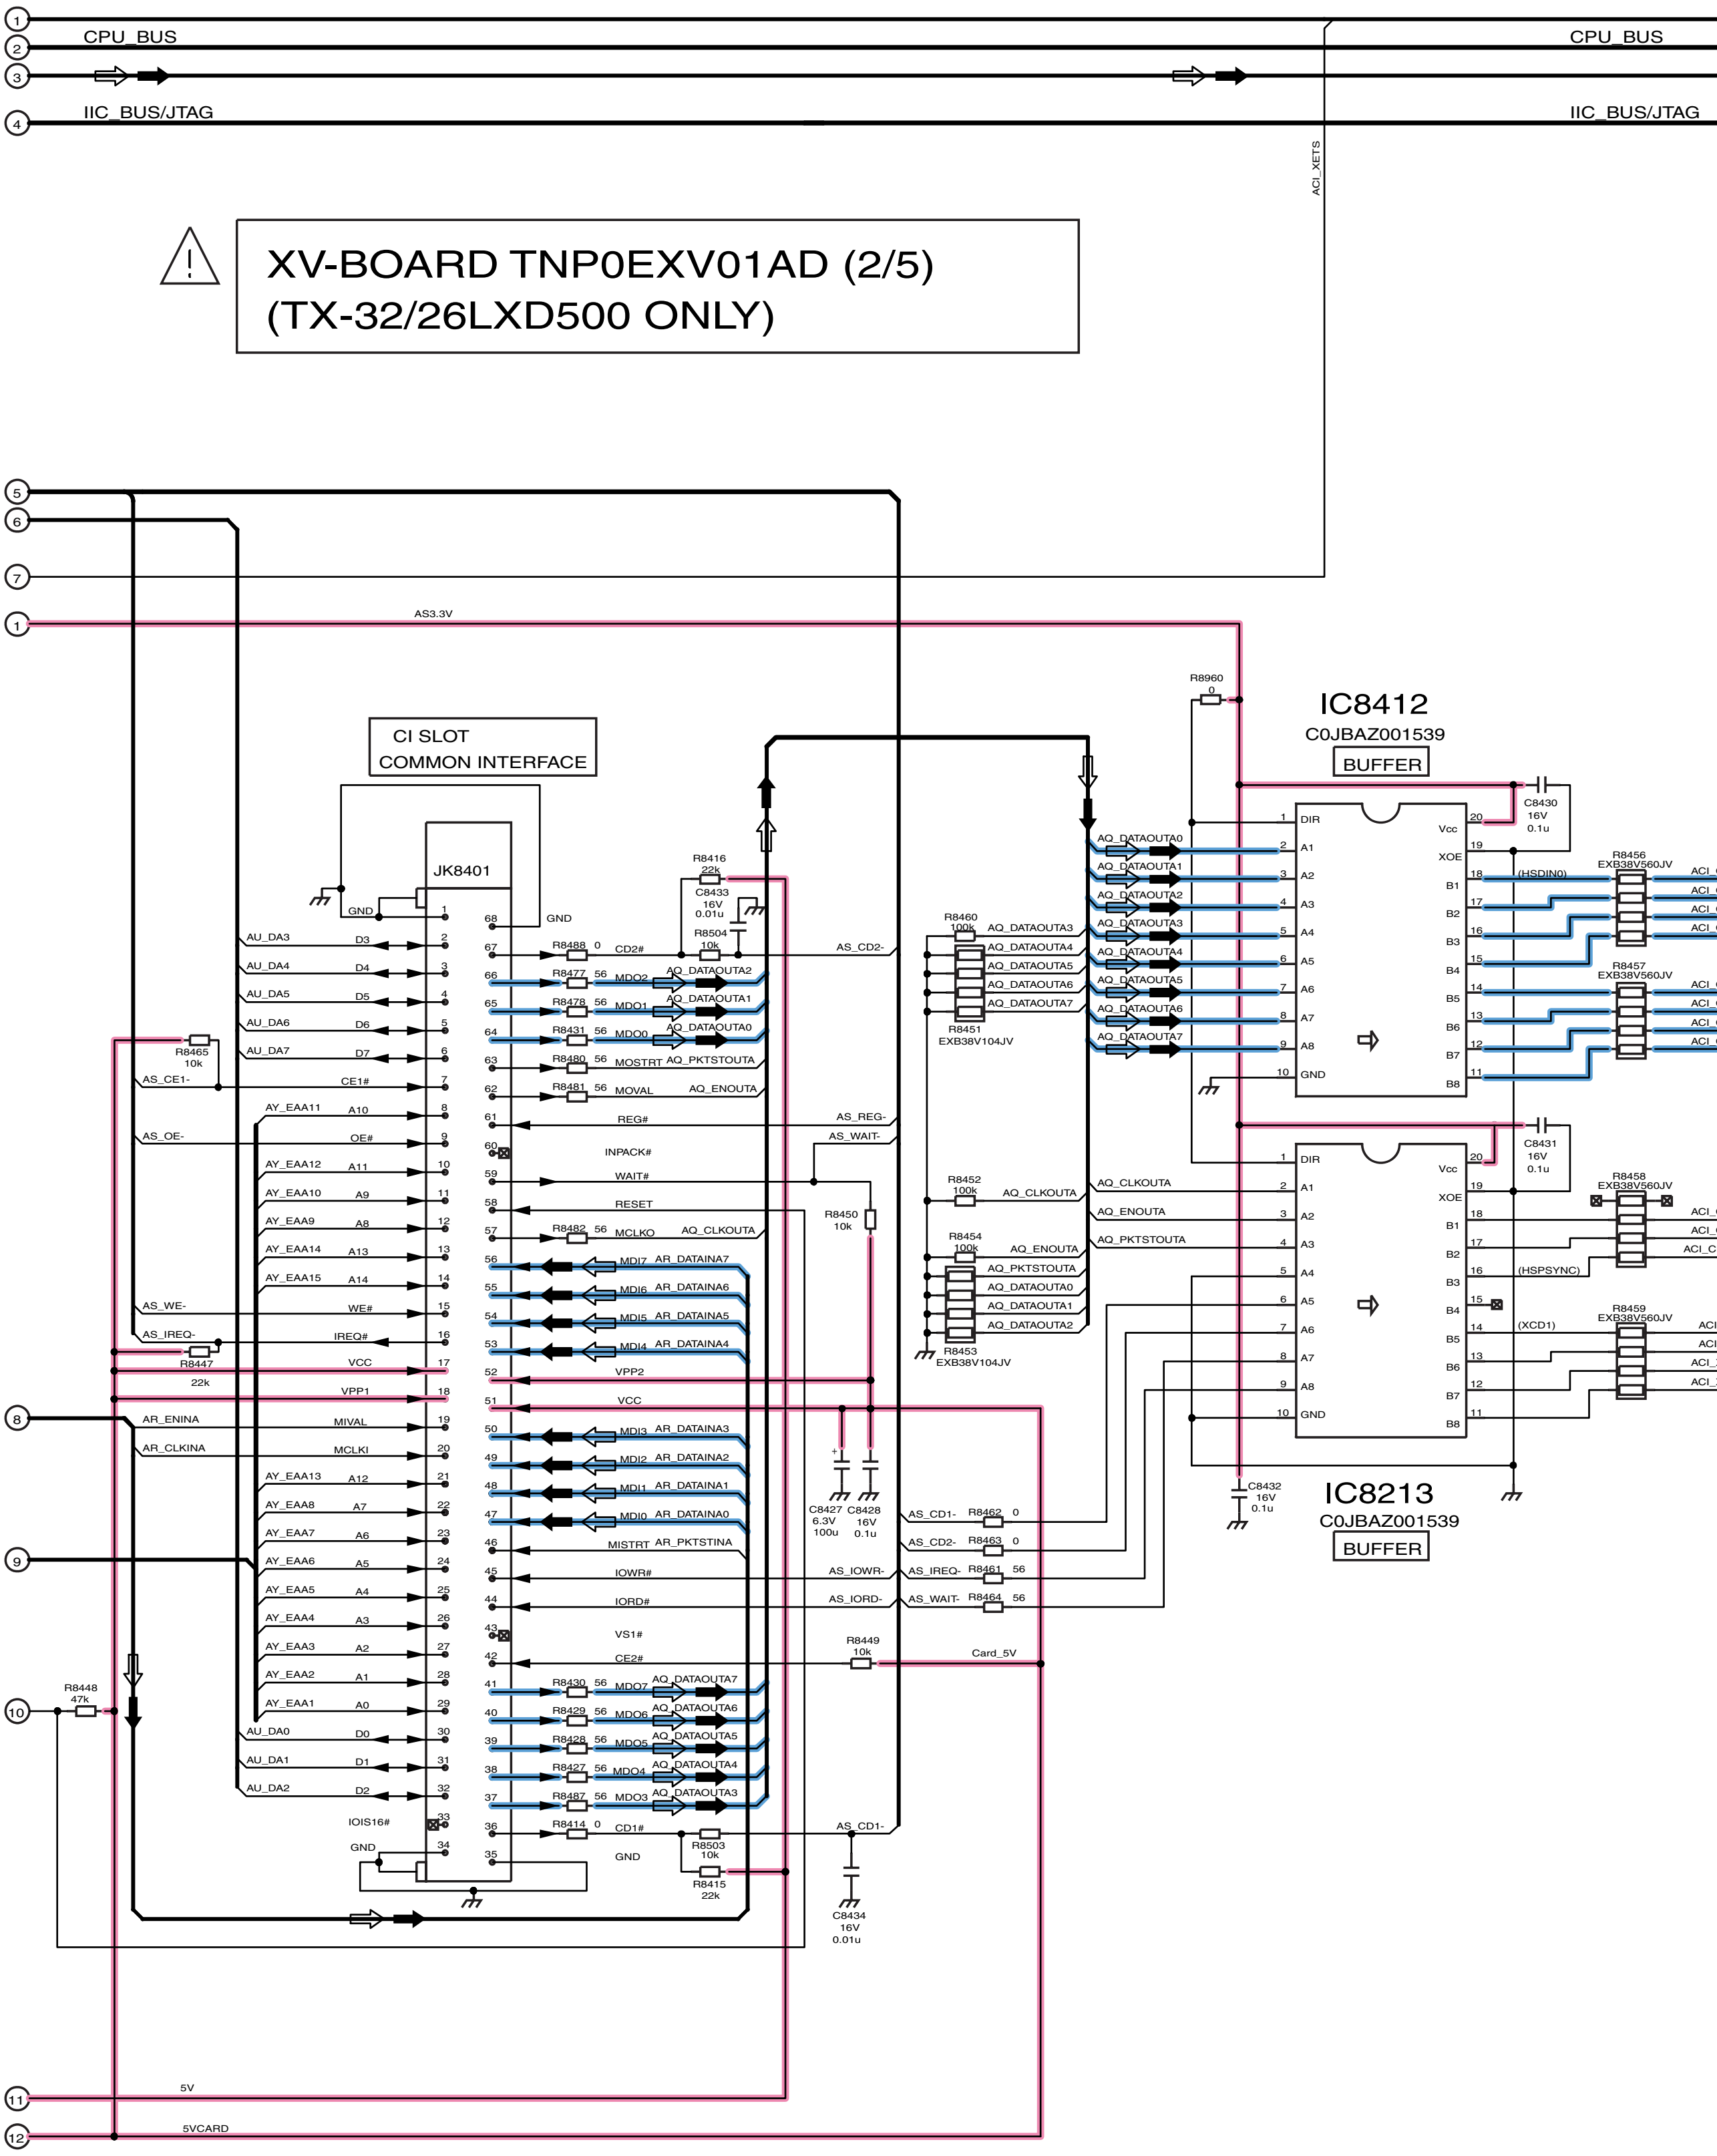

CPU_BUS
IIC_BUS/JTAG
ACI_XETS
XV-BOARD TNP0EXV01AD (2/5)
(TX-32/26LXD500 ONLY)
AS3.3V
CI SLOT
COMMON INTERFACE
JK8401
IC8412
C0JBAZ001539
BUFFER
IC8213
C0JBAZ001539
BUFFER
R8960
0
C8430
16V
0.1u
C8431
16V
0.1u
C8432
16V
0.1u
R8456
EXB38V560JV
R8457
EXB38V560JV
R8458
EXB38V560JV
R8459
EXB38V560JV
(HSDIN0)
(HSPSYNC)
(XCD1)
DIR
A1
A2
A3
A4
A5
A6
A7
A8
GND
Vcc
XOE
B1
B2
B3
B4
B5
B6
B7
B8
AQ_DATAOUTA0
AQ_DATAOUTA1
AQ_DATAOUTA2
AQ_DATAOUTA3
AQ_DATAOUTA4
AQ_DATAOUTA5
AQ_DATAOUTA6
AQ_DATAOUTA7
AQ_CLKOUTA
AQ_ENOUTA
AQ_PKTSTOUTA
R8460
100k
R8451
EXB38V104JV
R8452
100k
R8454
100k
R8453
EXB38V104JV
R8416
22k
C8433
16V
0.01u
R8504
10k
R8450
10k
R8449
10k
R8448
47k
R8465
10k
R8447
22k
R8503
10k
R8415
22k
C8434
16V
0.01u
C8427
6.3V
100u
C8428
16V
0.1u
R8462 0
R8463 0
R8461 56
R8464 56
R8488 0
R8477 56
R8478 56
R8431 56
R8480 56
R8481 56
R8482 56
R8430 56
R8429 56
R8428 56
R8427 56
R8487 56
R8414 0
AU_DA0
AU_DA1
AU_DA2
AU_DA3
AU_DA4
AU_DA5
AU_DA6
AU_DA7
AY_EAA1
AY_EAA2
AY_EAA3
AY_EAA4
AY_EAA5
AY_EAA6
AY_EAA7
AY_EAA8
AY_EAA9
AY_EAA10
AY_EAA11
AY_EAA12
AY_EAA13
AY_EAA14
AY_EAA15
AS_CE1-
AS_OE-
AS_WE-
AS_IREQ-
AR_ENINA
AR_CLKINA
AS_CD1-
AS_CD2-
AS_REG-
AS_WAIT-
AS_IOWR-
AS_IORD-
AS_IREQ-
AS_WAIT-
Card_5V
GND
D0
D1
D2
D3
D4
D5
D6
D7
CE1#
A0
A1
A2
A3
A4
A5
A6
A7
A8
A9
A10
A11
A12
A13
A14
OE#
WE#
IREQ#
VCC
VPP1
MIVAL
MCLKI
IOIS16#
CD2#
MDO0
MDO1
MDO2
MDO3
MDO4
MDO5
MDO6
MDO7
MOSTRT
MOVAL
REG#
INPACK#
WAIT#
RESET
MCLKO
MDI0
MDI1
MDI2
MDI3
MDI4
MDI5
MDI6
MDI7
VPP2
MISTRT
IOWR#
IORD#
VS1#
CE2#
CD1#
AR_DATAINA0
AR_DATAINA1
AR_DATAINA2
AR_DATAINA3
AR_DATAINA4
AR_DATAINA5
AR_DATAINA6
AR_DATAINA7
AR_PKTSTINA
AQ_PKTSTOUTA
AQ_ENOUTA
AQ_CLKOUTA
5V
5VCARD
1
2
3
4
5
6
7
8
9
10
11
12

TX-32/26LXD500
XV-Board (2 of 5) Schematic Diagram

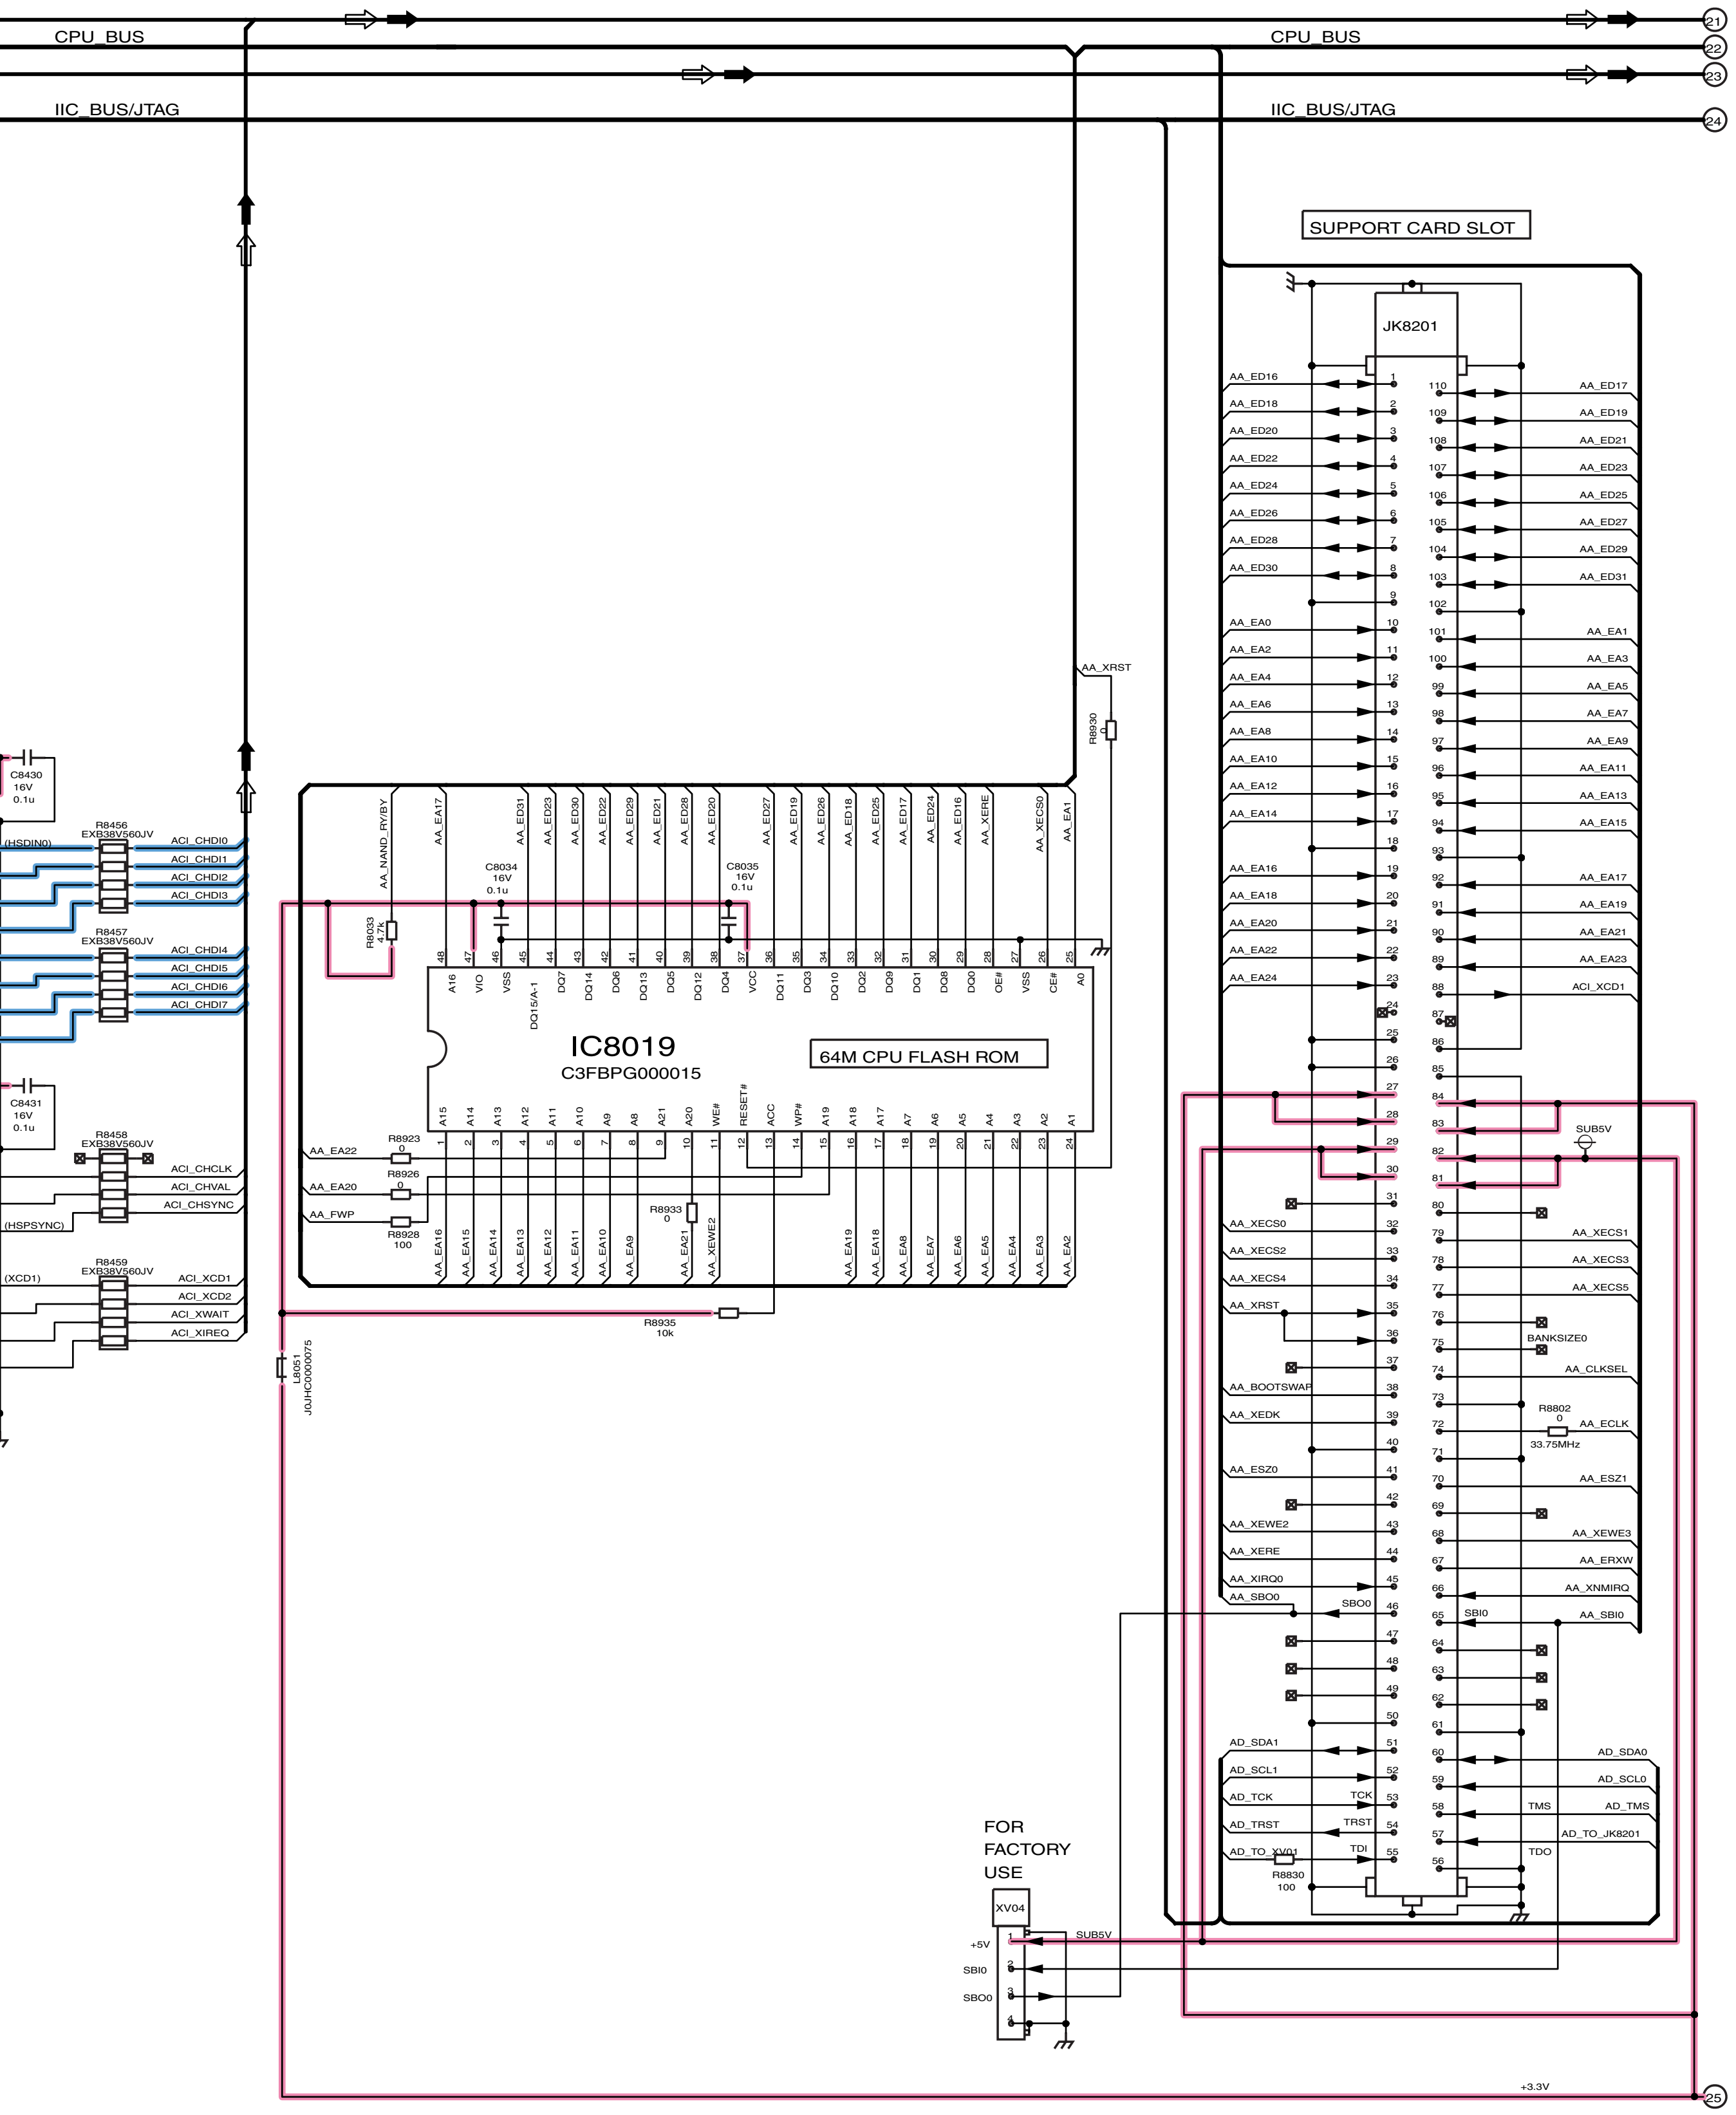

CPU_BUS
IIC_BUS/JTAG
SUPPORT CARD SLOT
JK8201
IC8019
C3FBPG000015
64M CPU FLASH ROM
FOR FACTORY USE
XV04
+5V
SBI0
SBO0
SUB5V
+3.3V
C8430 16V 0.1u
C8431 16V 0.1u
C8034 16V 0.1u
C8035 16V 0.1u
R8456 EXB38V560JV
R8457 EXB38V560JV
R8458 EXB38V560JV
R8459 EXB38V560JV
R8033 4.7k
R8923 0
R8926 0
R8928 100
R8933 0
R8935 10k
R8930
R8802 0
R8830 100
L8051 J0JHC0000075
33.75MHz
BANKSIZE0
AA_XRST
AA_NAND_RY/BY
ACI_CHDI0
ACI_CHDI1
ACI_CHDI2
ACI_CHDI3
ACI_CHDI4
ACI_CHDI5
ACI_CHDI6
ACI_CHDI7
ACI_CHCLK
ACI_CHVAL
ACI_CHSYNC
ACI_XCD1
ACI_XCD2
ACI_XWAIT
ACI_XIREQ
(HSDIN0)
(HSPSYNC)
(XCD1)
AD_SDA1
AD_SCL1
AD_TCK
AD_TRST
AD_TO_XV01
AD_SDA0
AD_SCL0
AD_TMS
AD_TO_JK8201
TCK
TRST
TDI
TMS
TDO
21
22
23
24
25

TX-32/26LXD500
XV-Board (2 of 5) Schematic Diagram

12 13 14 15

11.12. XV-Board (3 of 5) Schematic Diagram

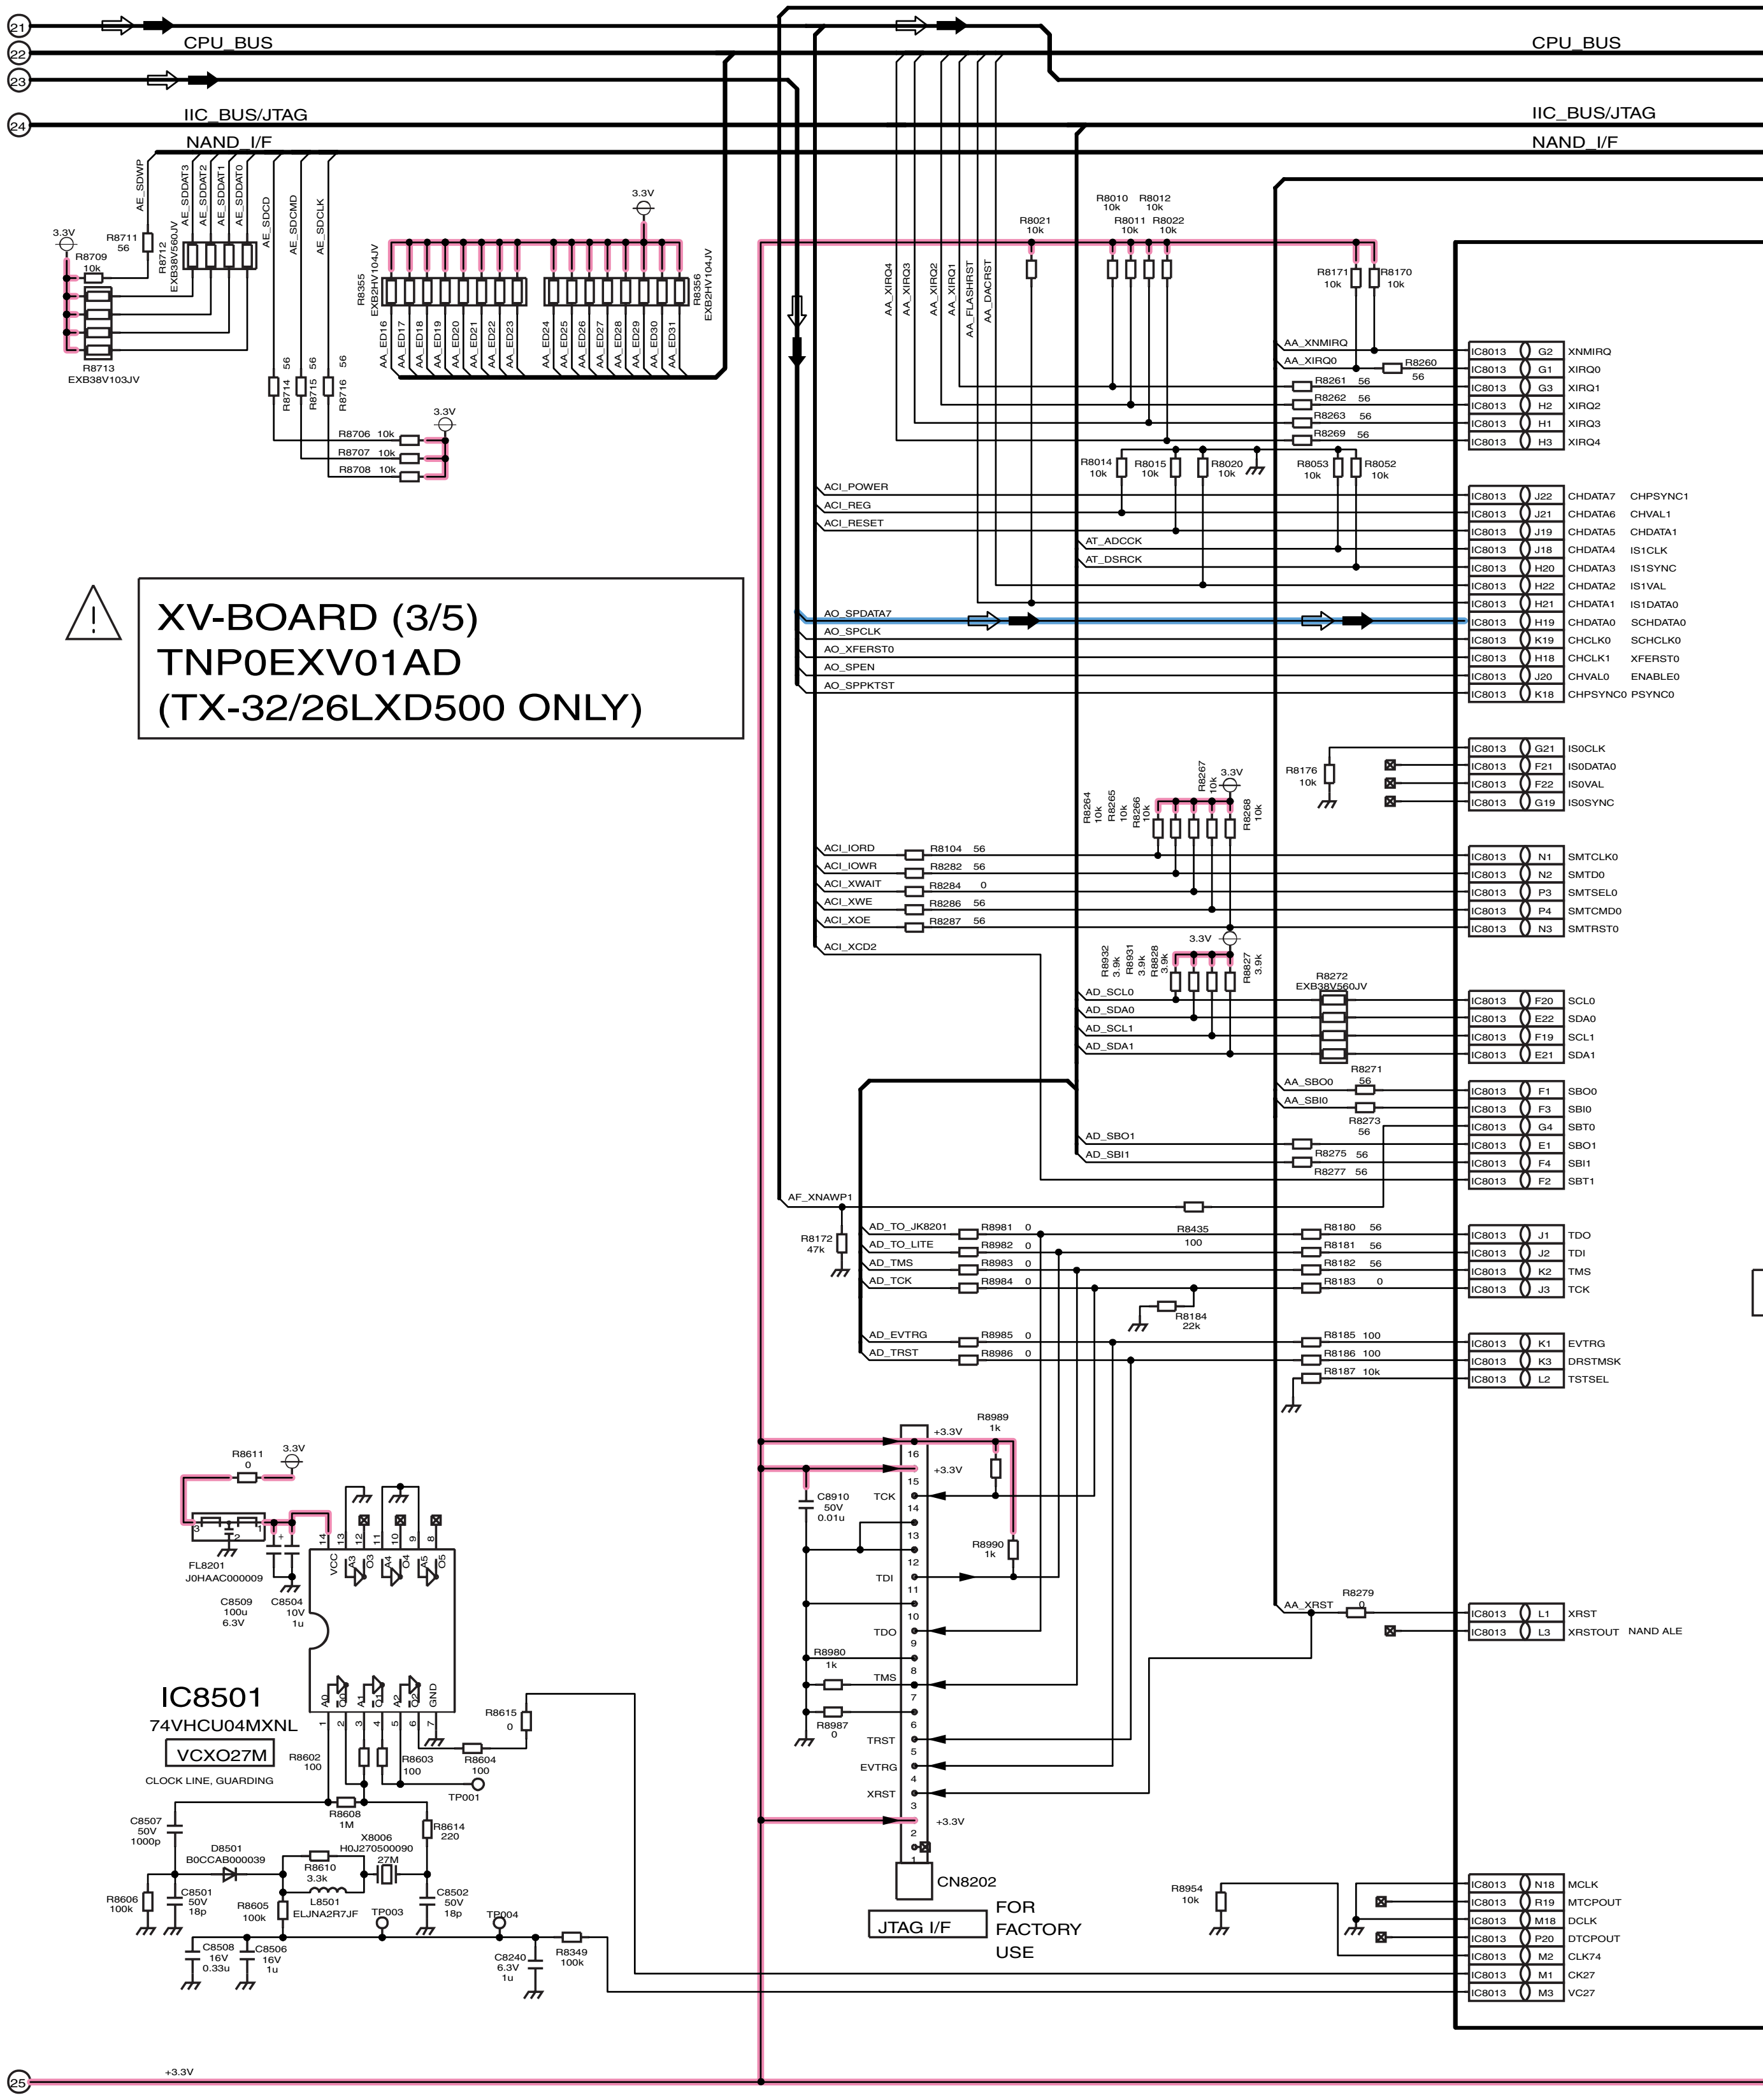
CPU_BUS
IIC_BUS/JTAG
NAND_I/F
XV-BOARD (3/5)
TNP0EXV01AD
(TX-32/26LXD500 ONLY)
IC8501
74VHCU04MXNL
VCXO27M
CLOCK LINE, GUARDING
CN8202
JTAG I/F
FOR FACTORY USE
FL8201
J0HAAC000009
X8006
H0J270500090
27M
D8501
B0CCAB000039
L8501
ELJNA2R7JF
R8713
EXB38V103JV
R8712
EXB38V560JV
R8355
EXB2HV104JV
R8356
EXB2HV104JV
R8272
EXB38V560JV
AE_SDWP
AE_SDDAT3
AE_SDDAT2
AE_SDDAT1
AE_SDDAT0
AE_SDCD
AE_SDCMD
AE_SDCLK
AA_XIRQ4
AA_XIRQ3
AA_XIRQ2
AA_XIRQ1
AA_FLASHRST
AA_DACRST
AA_XNMIRQ
AA_XIRQ0
ACI_POWER
ACI_REG
ACI_RESET
AT_ADCCK
AT_DSRCK
AO_SPDATA7
AO_SPCLK
AO_XFERST0
AO_SPEN
AO_SPPKTST
ACI_IORD
ACI_IOWR
ACI_XWAIT
ACI_XWE
ACI_XOE
ACI_XCD2
AD_SCL0
AD_SDA0
AD_SCL1
AD_SDA1
AA_SBO0
AA_SBI0
AD_SBO1
AD_SBI1
AF_XNAWP1
AD_TO_JK8201
AD_TO_LITE
AD_TMS
AD_TCK
AD_EVTRG
AD_TRST
AA_XRST
TCK
TDI
TDO
TMS
TRST
EVTRG
XRST
+3.3V
3.3V
IC8013
XNMIRQ
XIRQ0
XIRQ1
XIRQ2
XIRQ3
XIRQ4
CHDATA7 CHPSYNC1
CHDATA6 CHVAL1
CHDATA5 CHDATA1
CHDATA4 IS1CLK
CHDATA3 IS1SYNC
CHDATA2 IS1VAL
CHDATA1 IS1DATA0
CHDATA0 SCHDATA0
CHCLK0 SCHCLK0
CHCLK1 XFERST0
CHVAL0 ENABLE0
CHPSYNC0 PSYNC0
IS0CLK
IS0DATA0
IS0VAL
IS0SYNC
SMTCLK0
SMTDO0
SMTSEL0
SMTCMD0
SMTRST0
SCL0
SDA0
SCL1
SDA1
SBO0
SBI0
SBT0
SBO1
SBI1
SBT1
TDO
TDI
TMS
TCK
EVTRG
DRSTMSK
TSTSEL
XRST
XRSTOUT NAND ALE
MCLK
MTCPOUT
DCLK
DTCPOUT
CLK74
CK27
VC27
TP001
TP003
TP004

TX-32/26LXD500
XV-Board (3 of 5) Schematic Diagram

16 17 18 19

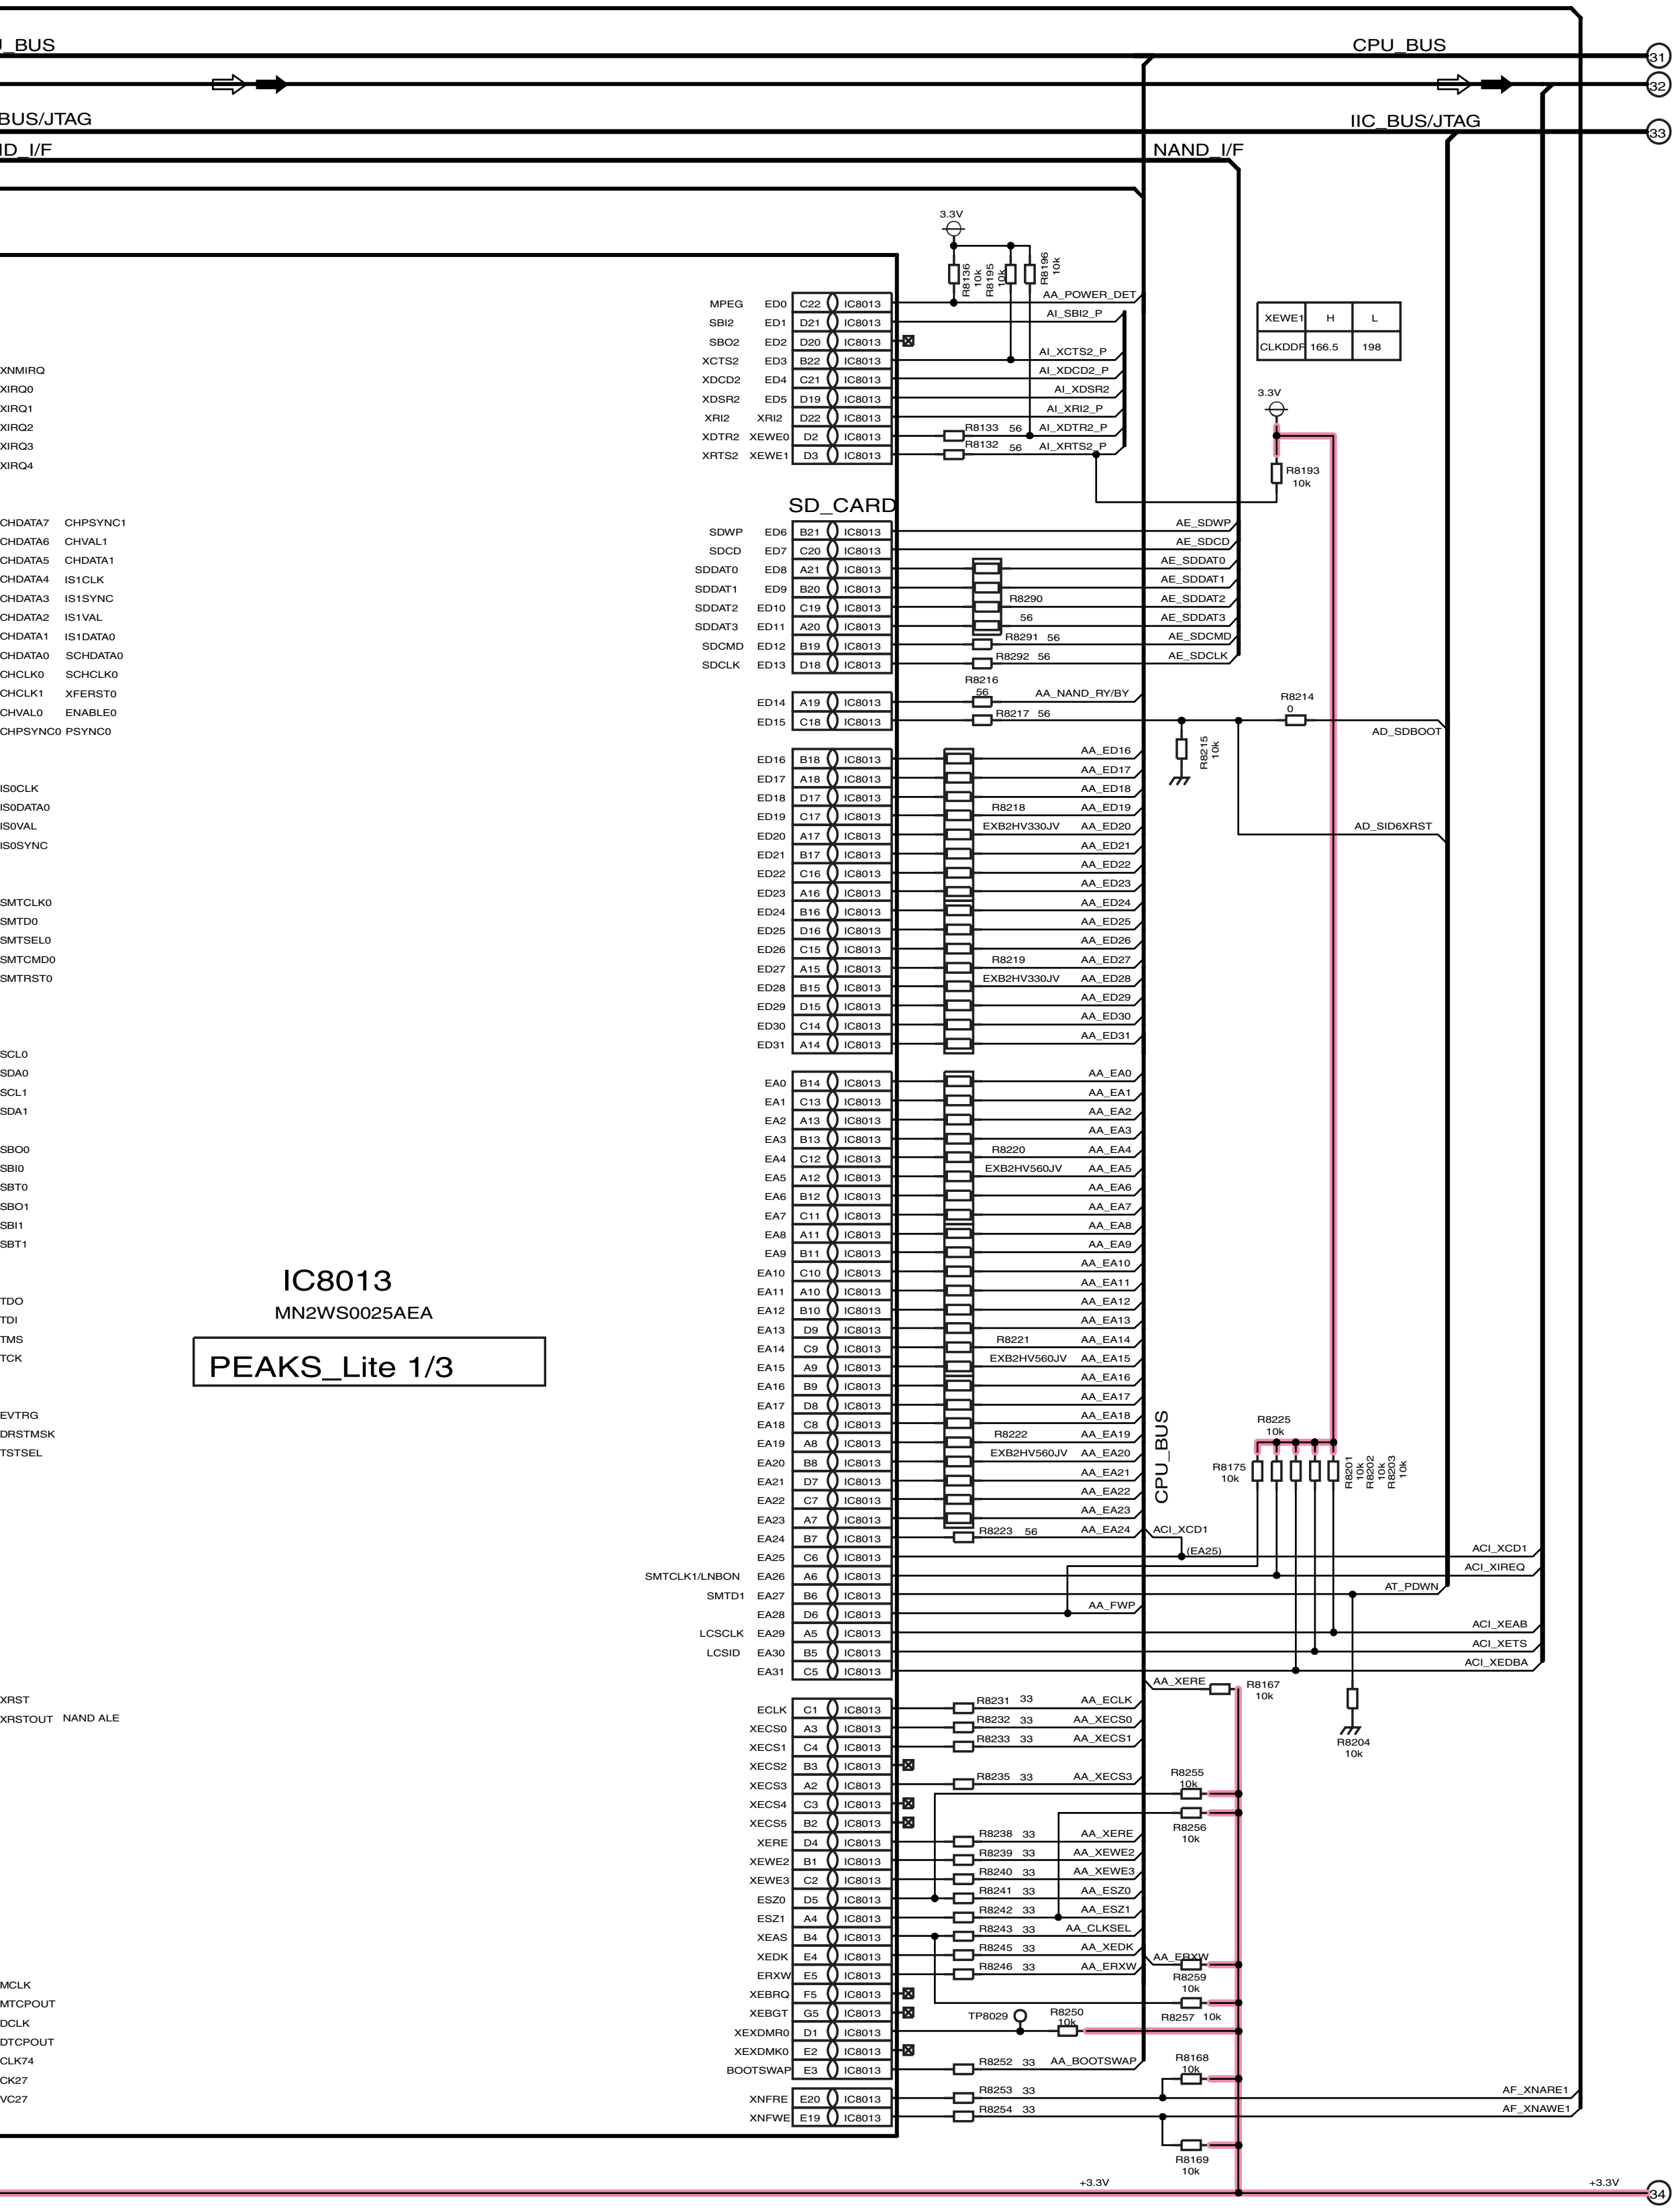
CPU_BUS
IIC_BUS/JTAG
NAND_I/F
31
32
33
34
IC8013
MN2WS0025AEA
PEAKS_Lite 1/3
SD_CARD
CPU_BUS
XEWE1 H L
CLKDDR 166.5 198
3.3V
+3.3V
R8136 10k
R8195 10k
R8196 10k
R8193 10k
R8214 0
R8215 10k
R8225 10k
R8175 10k
R8204 10k
R8167 10k
R8255 10k
R8256 10k
R8259 10k
R8257 10k
R8250 10k
R8168 10k
R8169 10k
TP8029
R8218 EXB2HV330JV
R8219 EXB2HV330JV
R8220 EXB2HV560JV
R8221 EXB2HV560JV
R8222 EXB2HV560JV
AA_POWER_DET
AI_SBI2_P
AI_XCTS2_P
AI_XDCD2_P
AI_XDSR2
AI_XRI2_P
AI_XDTR2_P
AI_XRTS2_P
AE_SDWP
AE_SDCD
AE_SDDAT0
AE_SDDAT1
AE_SDDAT2
AE_SDDAT3
AE_SDCMD
AE_SDCLK
AA_NAND_RY/BY
AD_SDBOOT
AD_SID6XRST
ACI_XCD1
ACI_XIREQ
AT_PDWN
ACI_XEAB
ACI_XETS
ACI_XEDBA
AA_FWP
AA_XERE
AA_ECLK
AA_XECS0
AA_XECS1
AA_XECS3
AA_XEWE2
AA_XEWE3
AA_ESZ0
AA_ESZ1
AA_CLKSEL
AA_XEDK
AA_ERXW
AA_BOOTSWAP
AF_XNARE1
AF_XNAWE1

TX-32/26LXD500
XV-Board (3 of 5) Schematic Diagram

20 21 22 23

11.13. XV-Board (4 of 5) Schematic Diagram

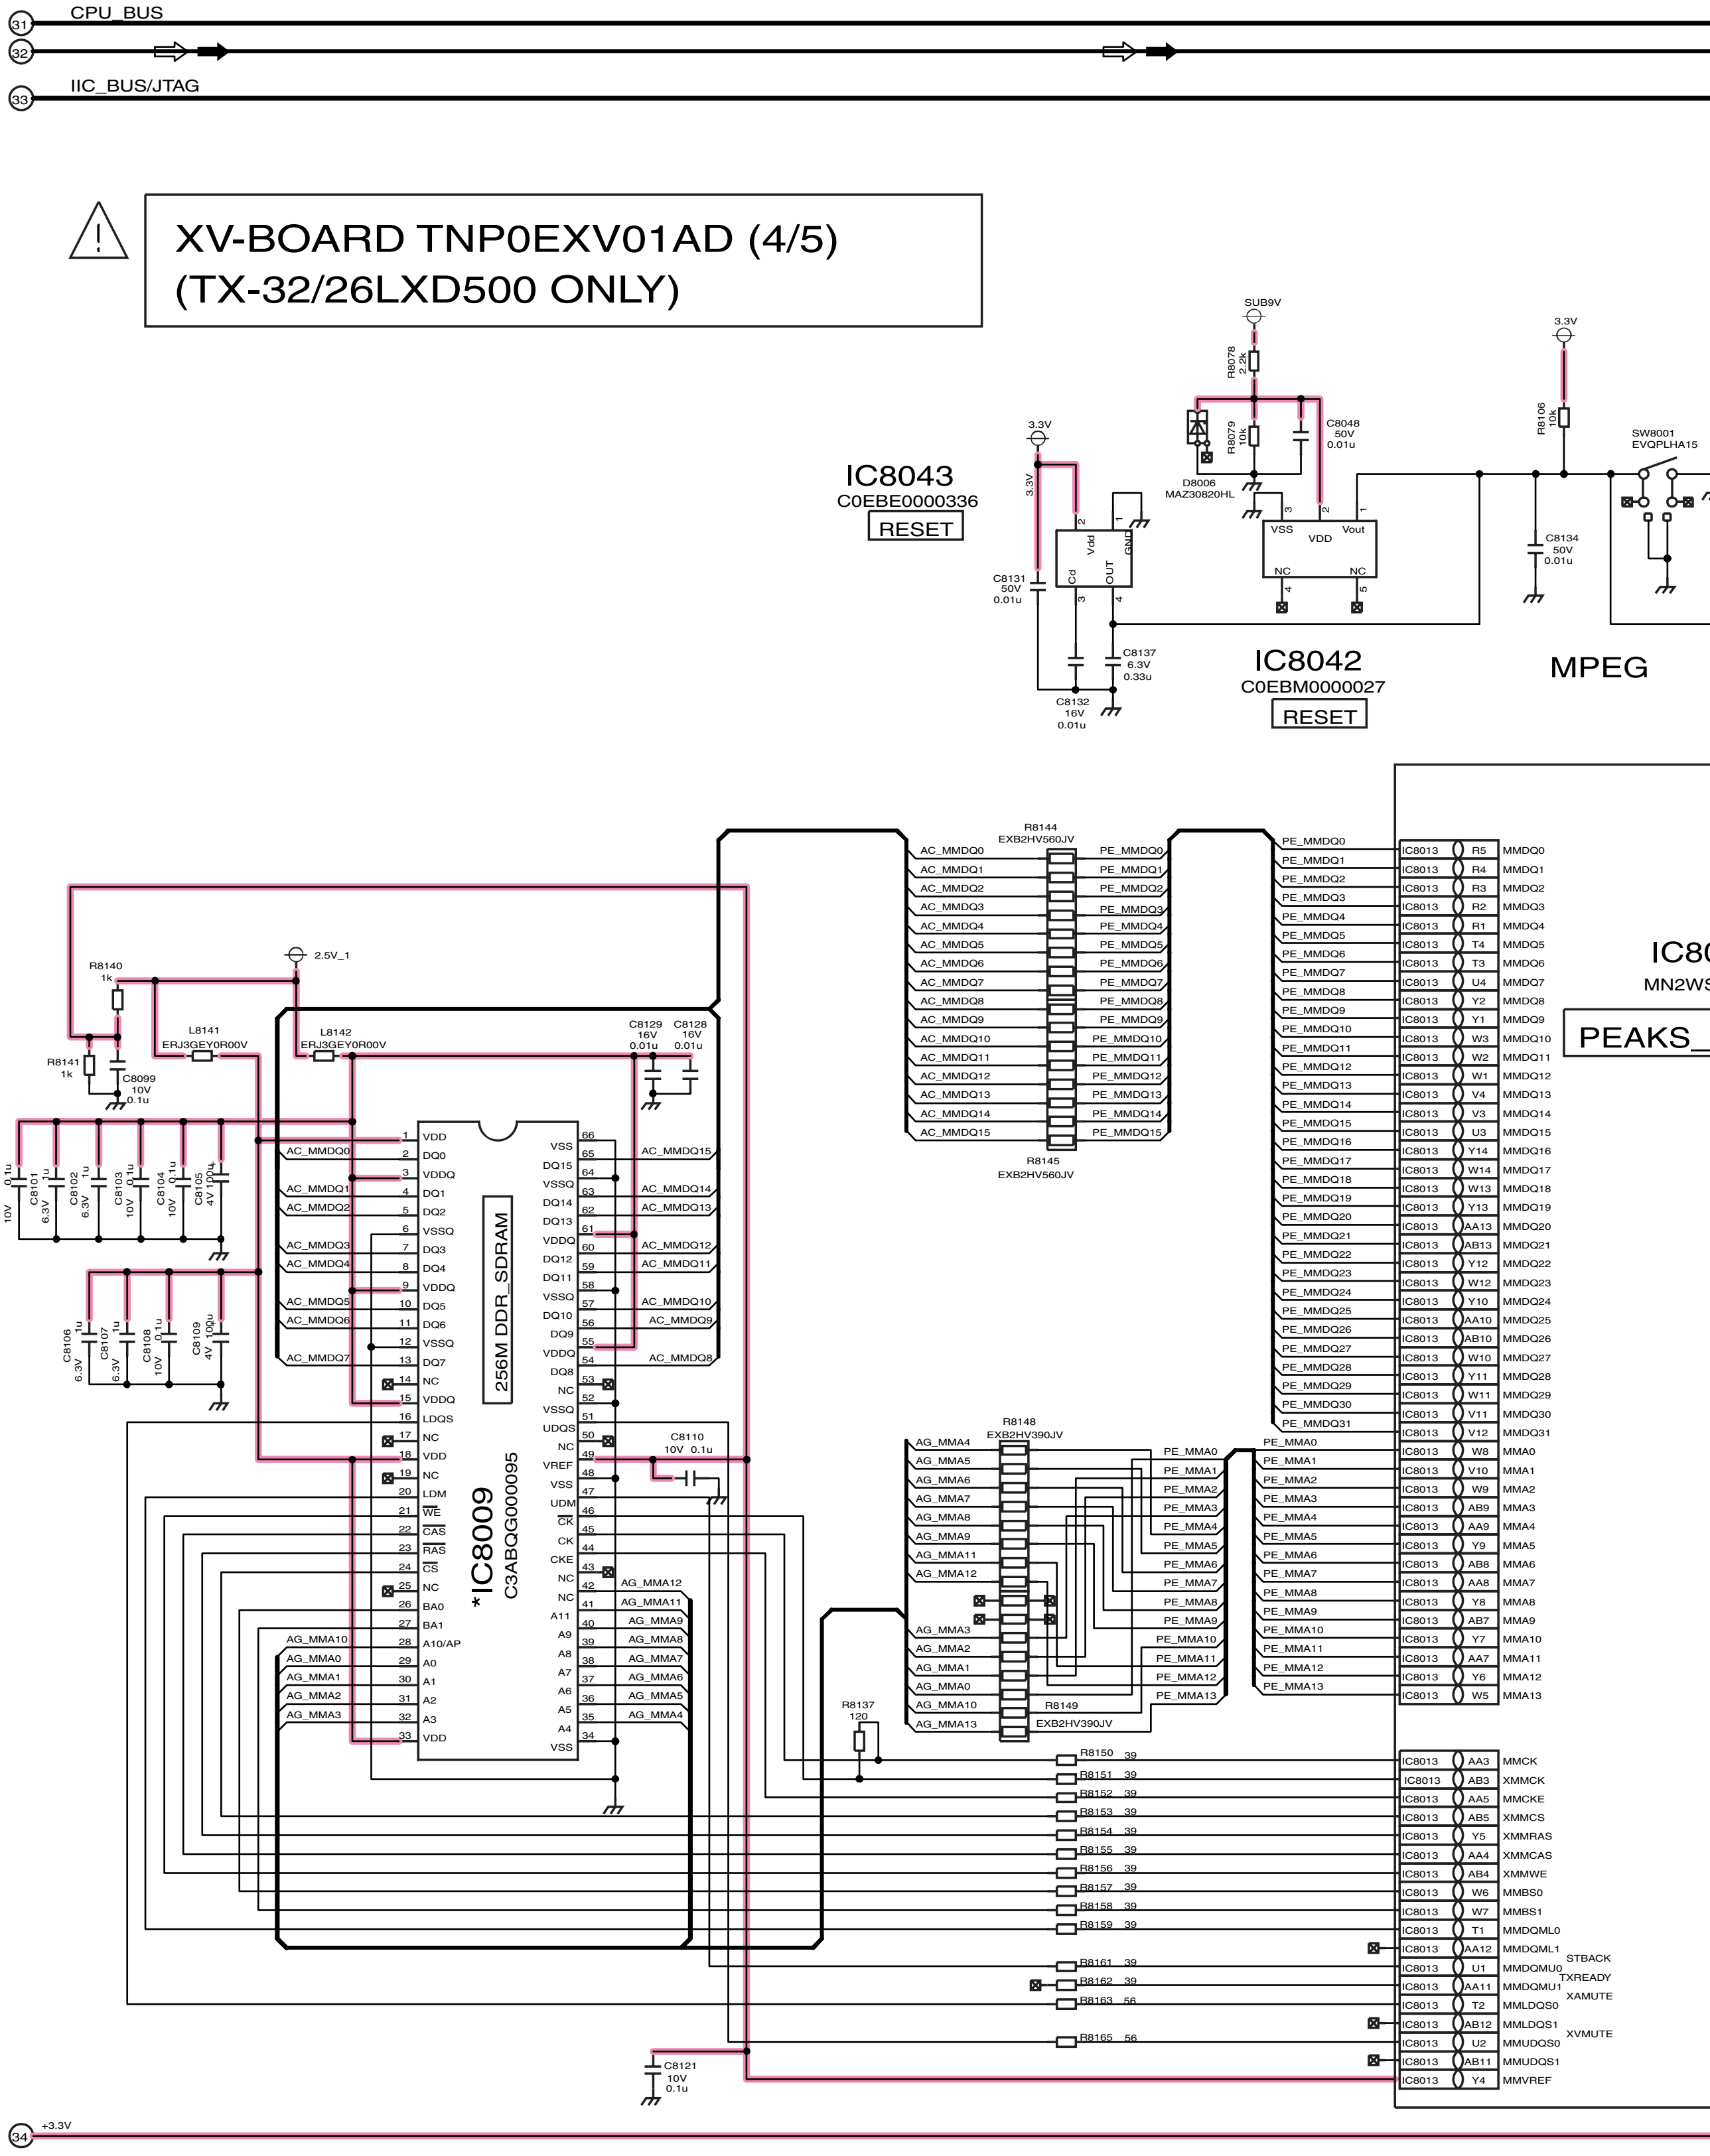
CPU_BUS
IIC_BUS/JTAG
XV-BOARD TNP0EXV01AD (4/5)
(TX-32/26LXD500 ONLY)
IC8043
C0EBE0000336
RESET
IC8042
C0EBM0000027
RESET
MPEG
SUB9V
3.3V
D8006
MAZ30820HL
SW8001
EVQPLHA15
R8144
EXB2HV560JV
R8145
EXB2HV560JV
R8148
EXB2HV390JV
R8149
EXB2HV390JV
PEAKS_
MN2WS
IC80
*IC8009
C3ABQG000095
256M DDR_SDRAM
2.5V_1
L8141
ERJ3GEY0R00V
L8142
ERJ3GEY0R00V
R8140
R8141
R8137
C8110
C8121
+3.3V
IC8013

TX-32/26LXD500
XV-Board (4 of 5) Schematic Diagram

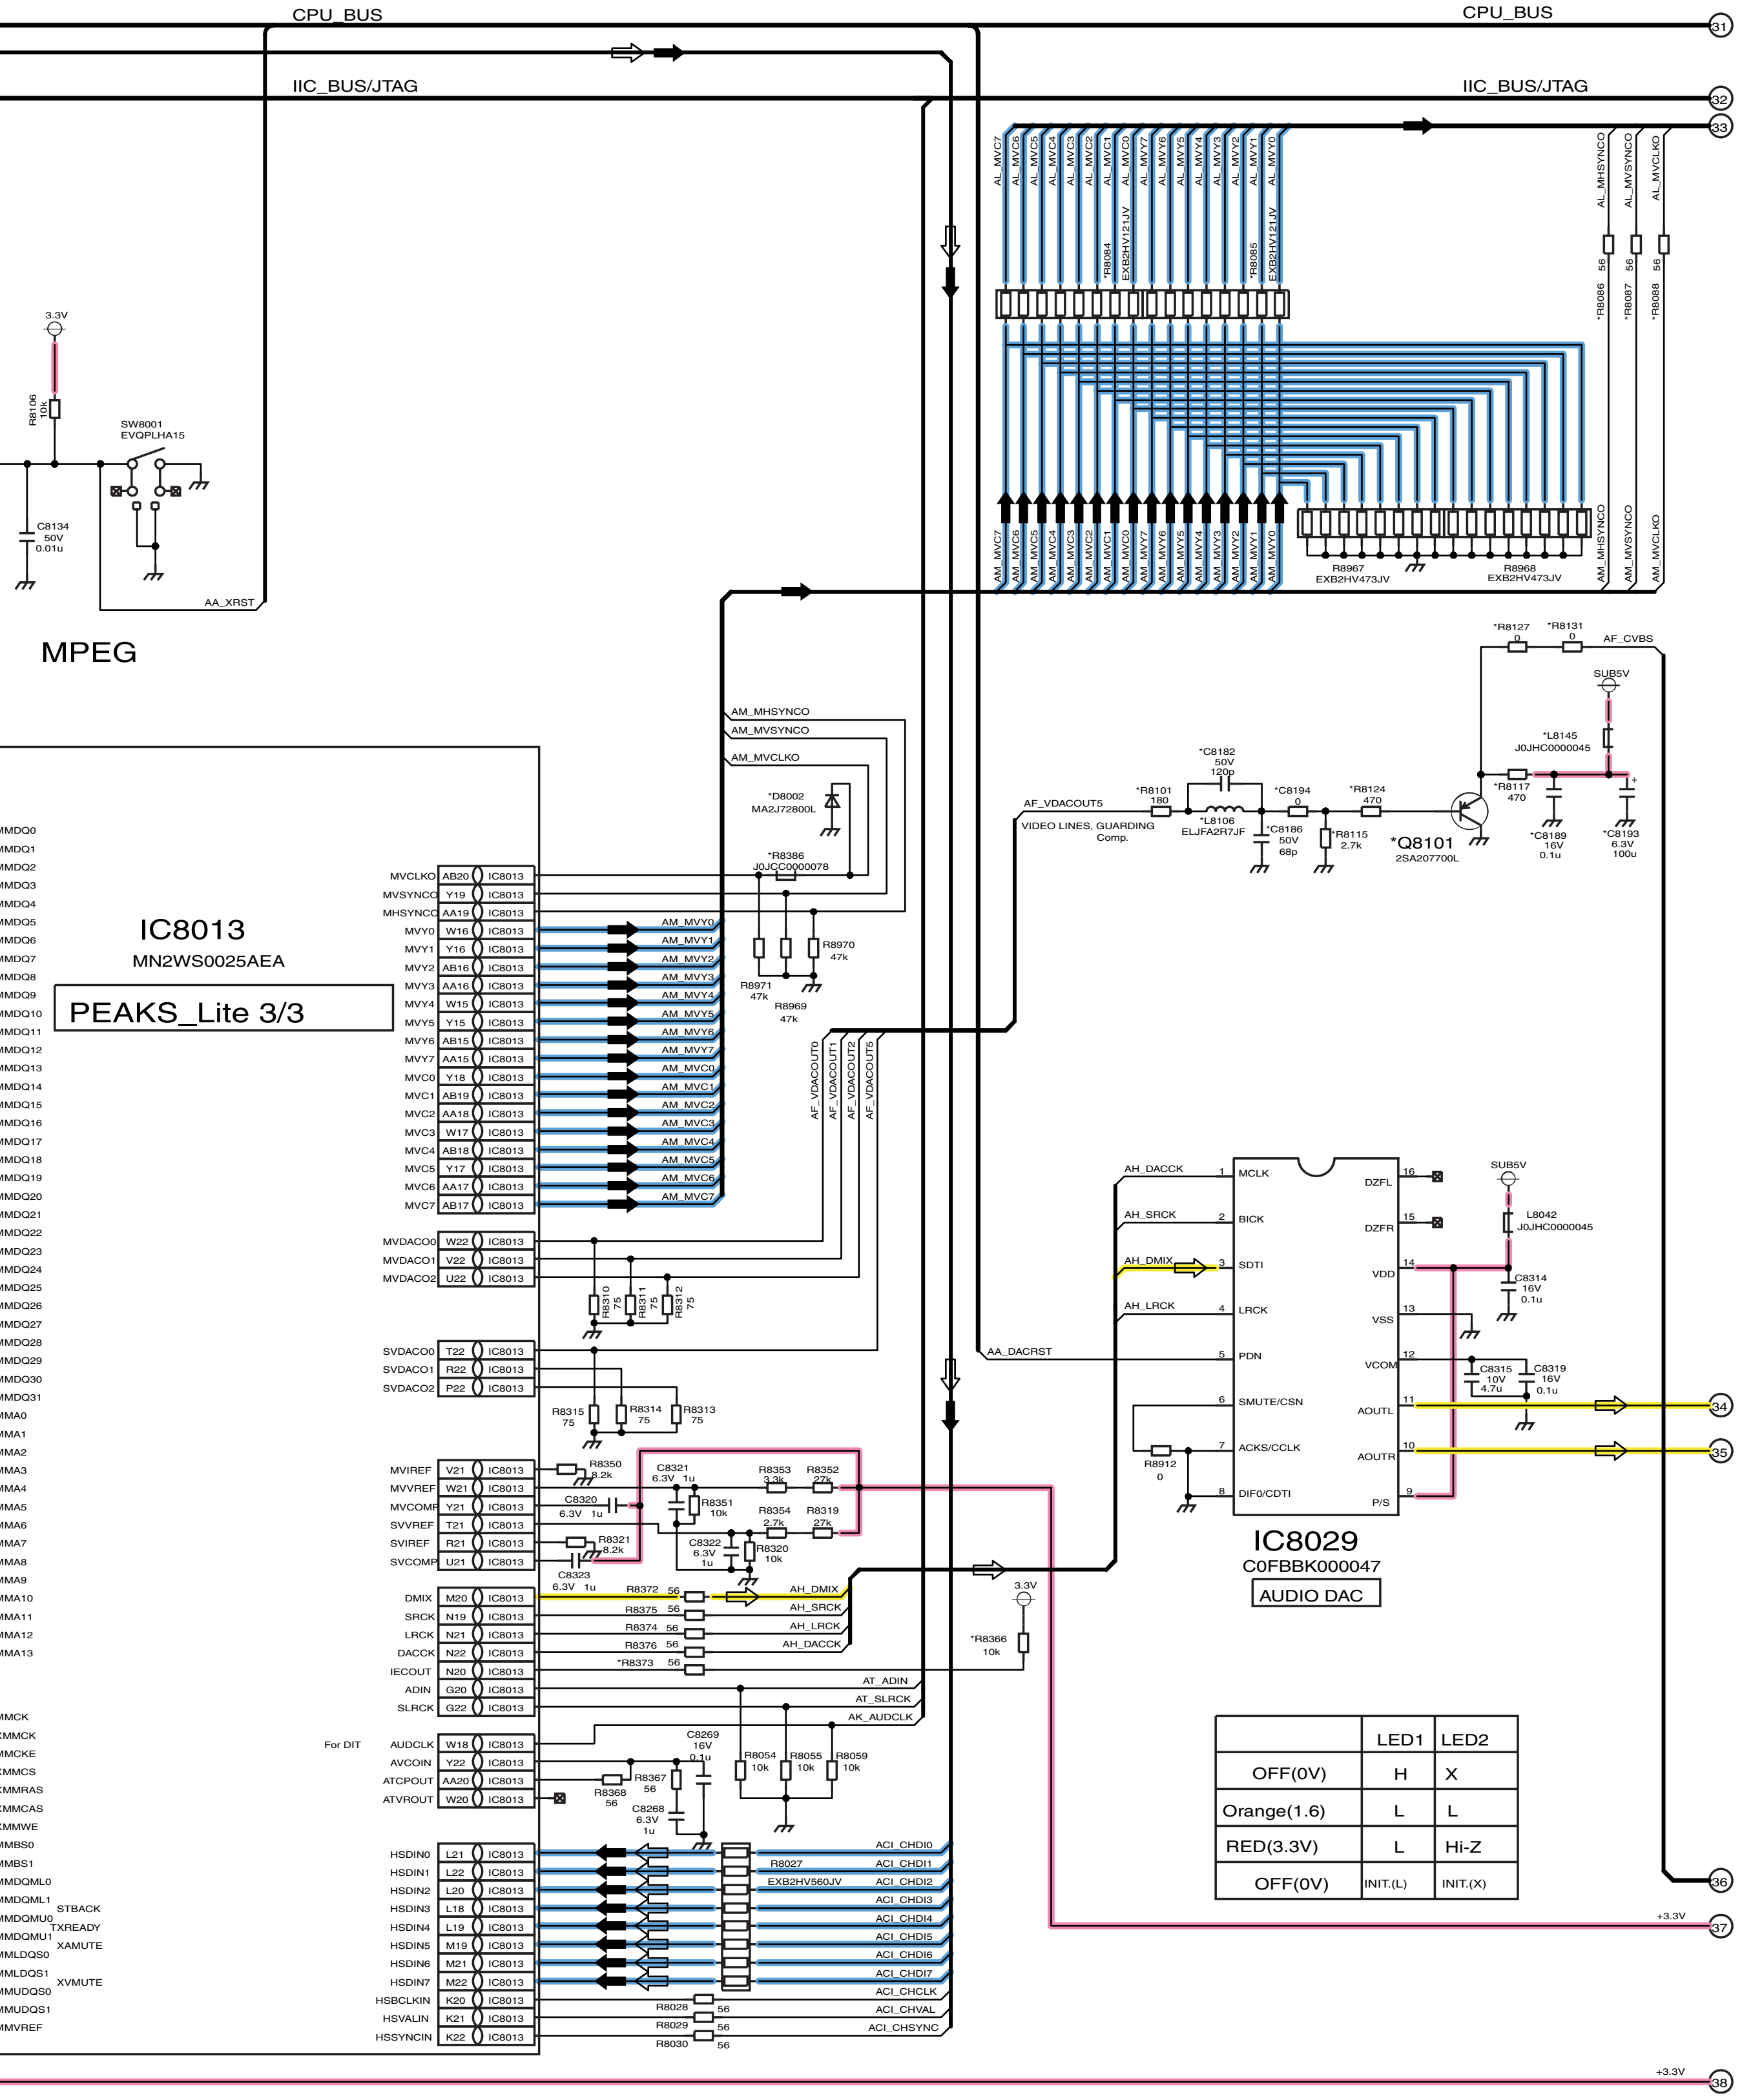
CPU_BUS
IIC_BUS/JTAG
MPEG
SW8001
EVQPLHA15
AA_XRST
IC8013
MN2WS0025AEA
PEAKS_Lite 3/3
IC8029
C0FBBK000047
AUDIO DAC
*Q8101
2SA207700L
AF_VDACOUT5
VIDEO LINES, GUARDING Comp.
AF_CVBS
SUB5V
AA_DACRST
For DIT
R8967
EXB2HV473JV
R8968
EXB2HV473JV
+3.3V

	LED1	LED2
OFF(0V)	H	X
Orange(1.6)	L	L
RED(3.3V)	L	Hi-Z
OFF(0V)	INIT.(L)	INIT.(X)

TX-32/26LXD500
XV-Board (4 of 5) Schematic Diagram

27 28 29 30

11.14. XV-Board (5 of 5) Schematic Diagram

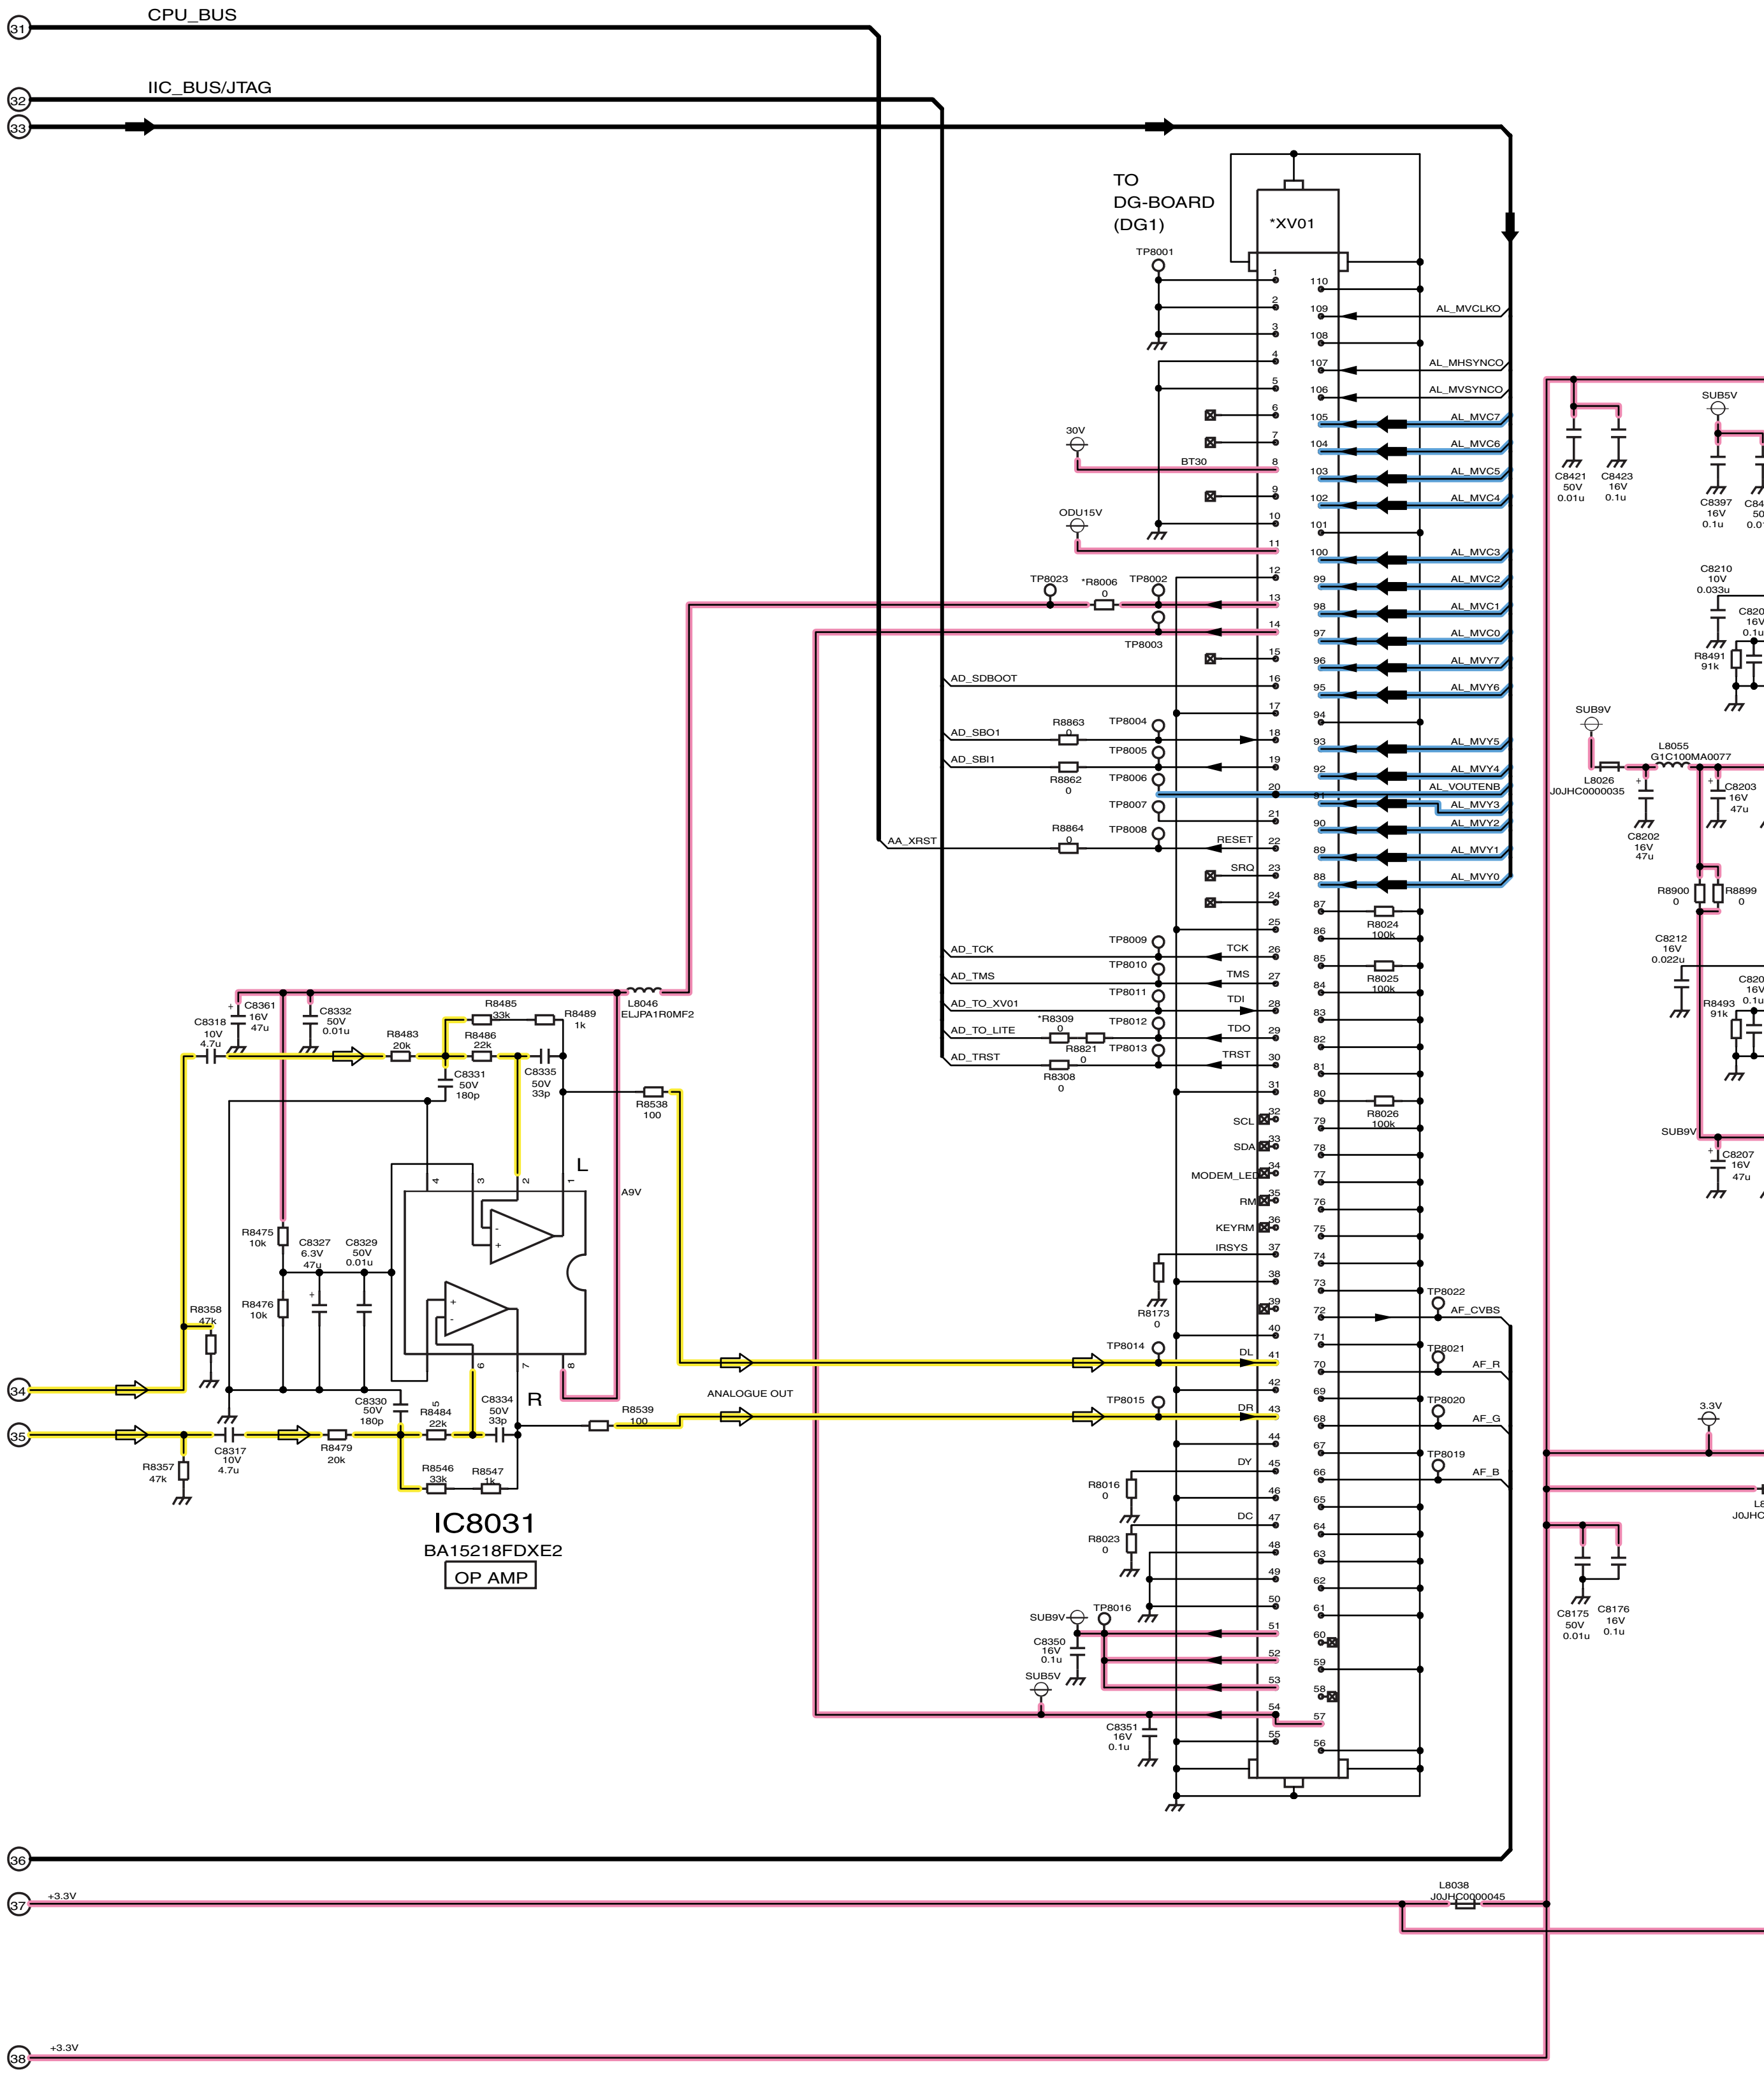
31
CPU_BUS
32
IIC_BUS/JTAG
33
TO DG-BOARD (DG1)
*XV01
TP8001
30V
BT30
ODU15V
AL_MVCLKO
AL_MHSYNCO
AL_MVSYNCO
AL_MVC7
AL_MVC6
AL_MVC5
AL_MVC4
AL_MVC3
AL_MVC2
AL_MVC1
AL_MVC0
AL_MVY7
AL_MVY6
AL_MVY5
AL_MVY4
AL_VOUTENB
AL_MVY3
AL_MVY2
AL_MVY1
AL_MVY0
TP8023
*R8006 0
TP8002
TP8003
AD_SDBOOT
AD_SBO1
AD_SBI1
R8863
R8862 0
R8864 0
TP8004
TP8005
TP8006
TP8007
TP8008
AA_XRST
RESET
SRQ
AD_TCK
AD_TMS
AD_TO_XV01
AD_TO_LITE
AD_TRST
TP8009
TP8010
TP8011
TP8012
TP8013
*R8309 0
R8821 0
R8308 0
TCK
TMS
TDI
TDO
TRST
SCL
SDA
MODEM_LED
RM
KEYRM
IRSYS
R8173 0
TP8014
TP8015
DL
DR
DY
DC
R8016 0
R8023 0
TP8016
SUB9V
C8350 16V 0.1u
SUB5V
C8351 16V 0.1u
R8024 100k
R8025 100k
R8026 100k
TP8022
AF_CVBS
TP8021
AF_R
TP8020
AF_G
TP8019
AF_B
C8421 50V 0.01u
C8423 16V 0.1u
SUB5V
C8397 16V 0.1u
C8210 10V 0.033u
R8491 91k
SUB9V
L8026 J0JHC0000035
L8055 G1C100MA0077
C8203 16V 47u
C8202 16V 47u
R8900 0
R8899 0
C8212 16V 0.022u
R8493 91k
SUB9V
C8207 16V 47u
3.3V
C8175 50V 0.01u
C8176 16V 0.1u
L8038 J0JHC0000045
C8318 10V 4.7u
C8361 16V 47u
C8332 50V 0.01u
R8485 33k
R8489 1k
R8483 20k
R8486 22k
L8046 ELJPA1R0MF2
C8331 50V 180p
C8335 50V 33p
R8538 100
L
A9V
R8475 10k
C8327 6.3V 47u
C8329 50V 0.01u
R8358 47k
R8476 10k
34
35
C8317 10V 4.7u
R8357 47k
C8330 50V 180p
R8484 22k
C8334 50V 33p
R
R8479 20k
R8546 33k
R8547 1k
R8539 100
ANALOGUE OUT
IC8031
BA15218FDXE2
OP AMP
36
37
+3.3V
38
+3.3V

XV-BOARD TNP0EXV01AD (5/5)
(TX-32/26LXD500 ONLY)

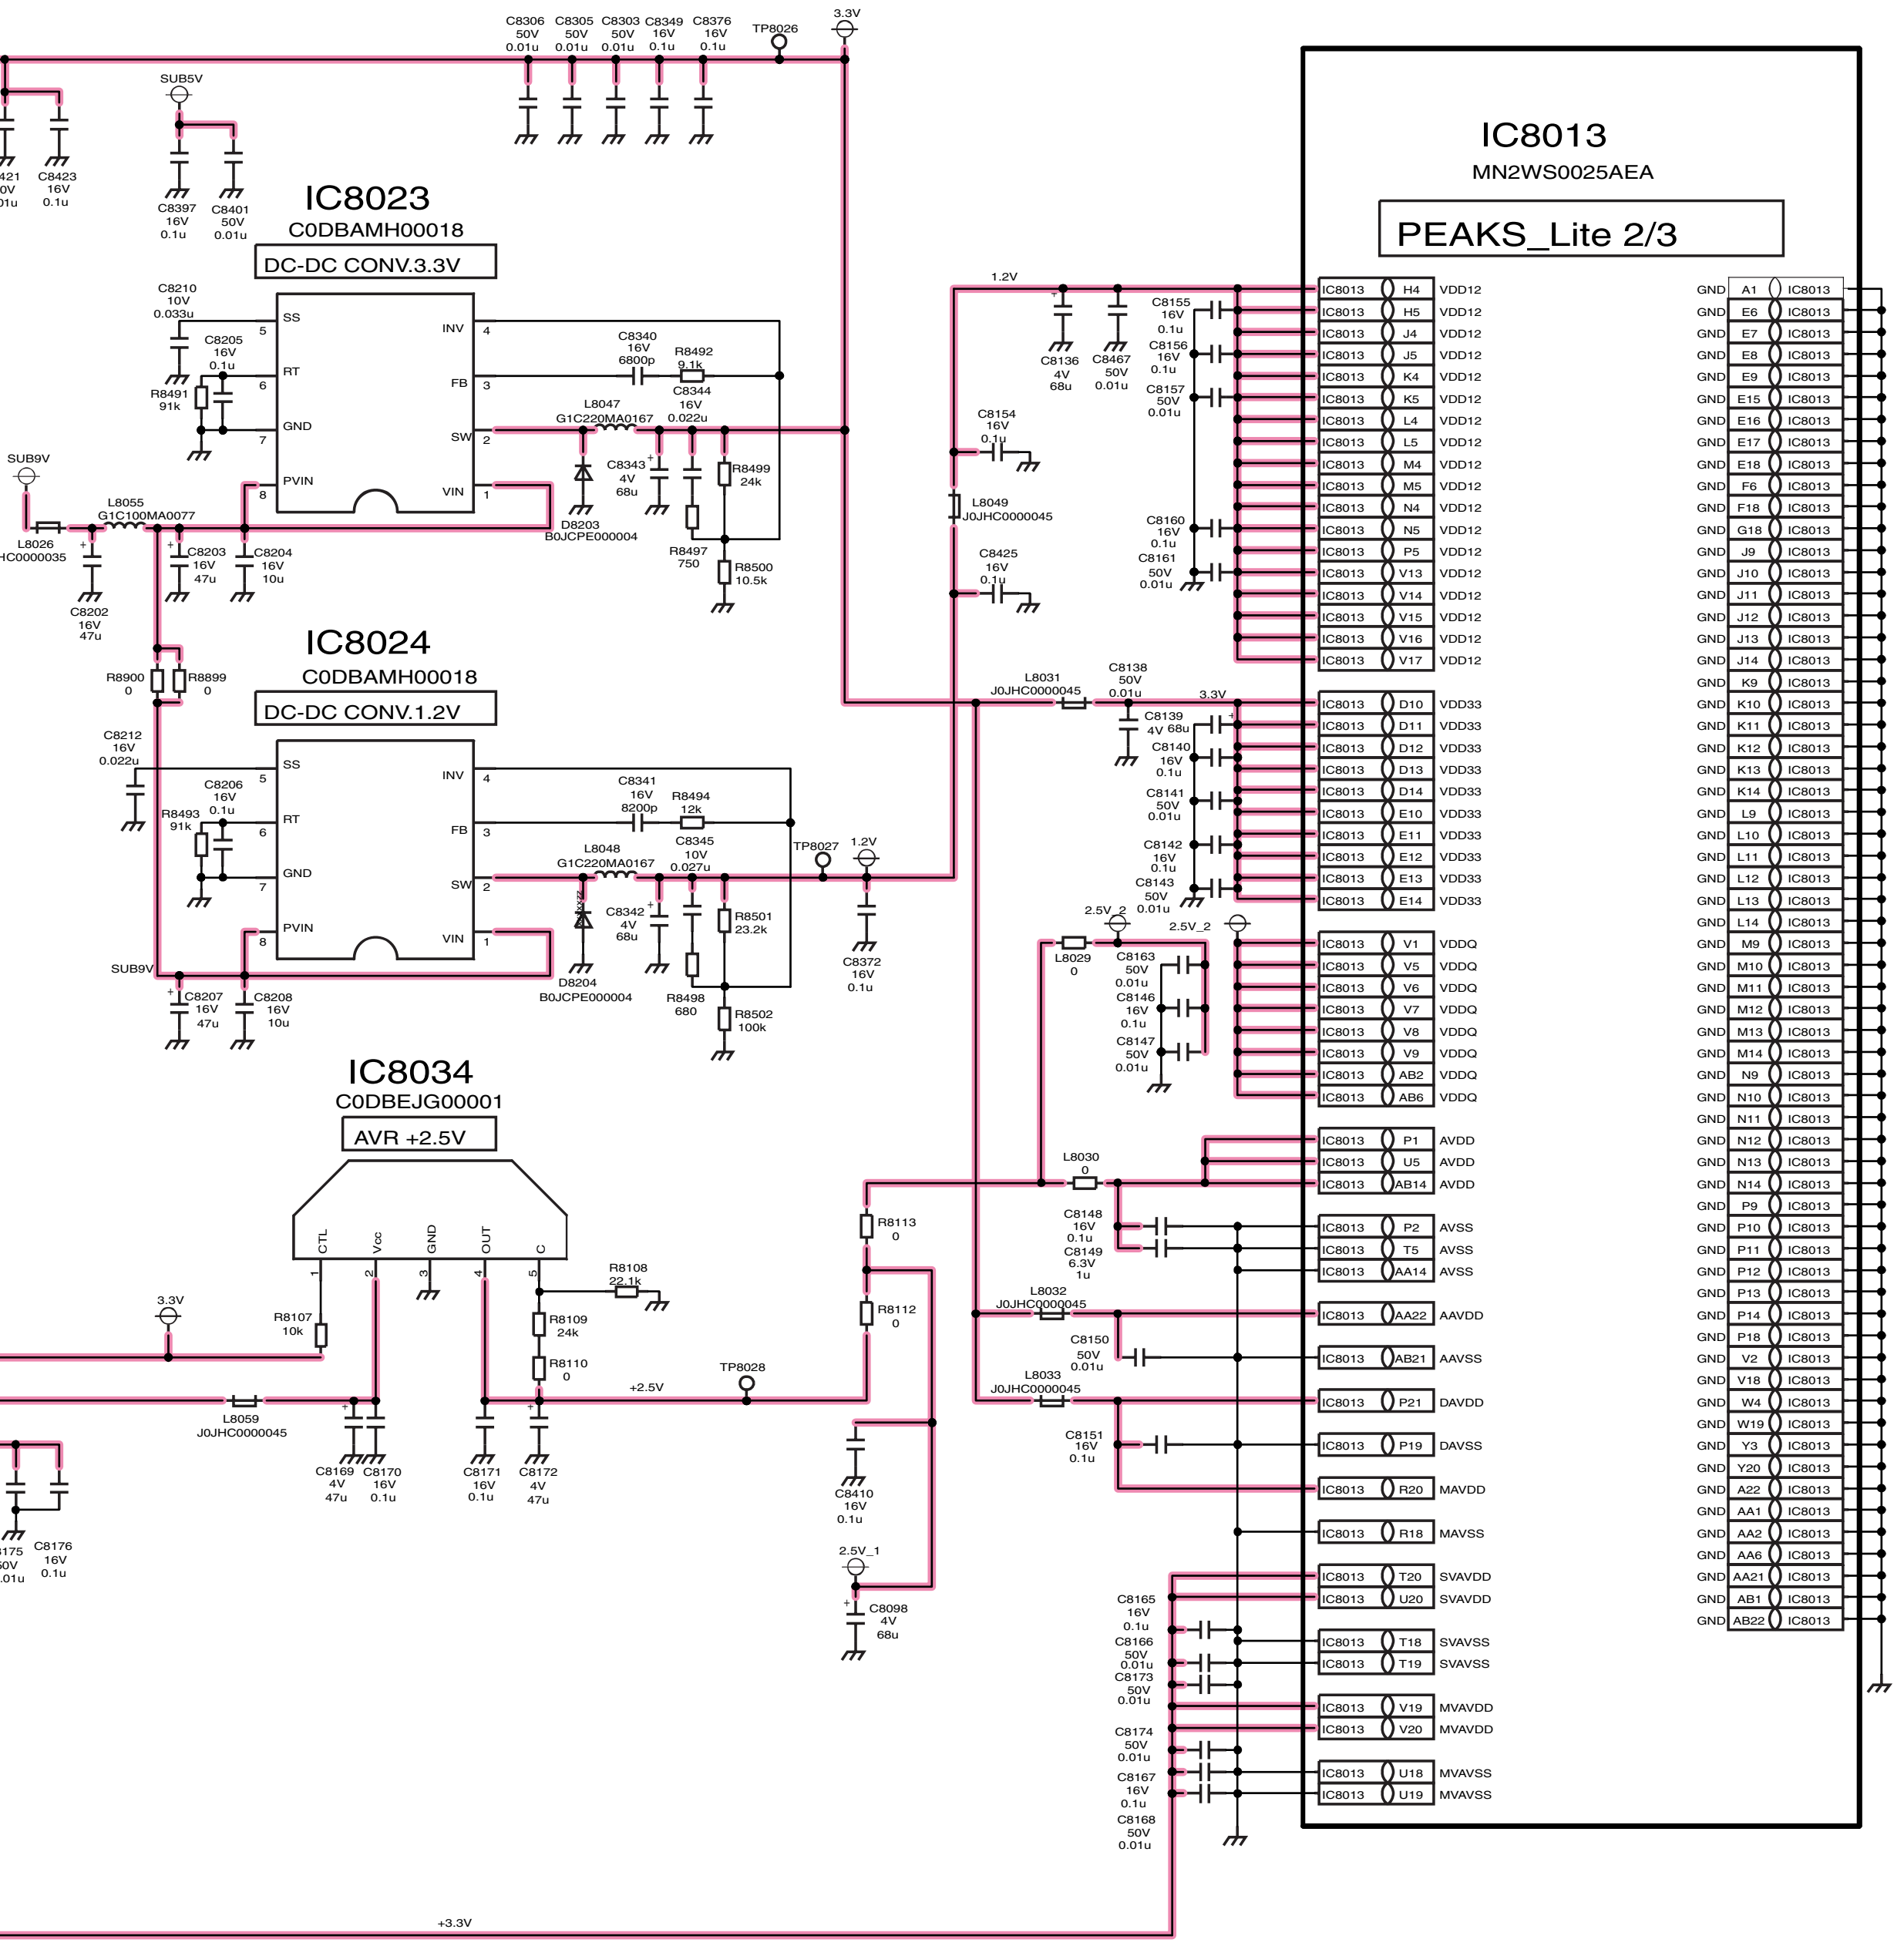

IC8023
C0DBAMH00018
DC-DC CONV.3.3V
IC8024
C0DBAMH00018
DC-DC CONV.1.2V
IC8034
C0DBEJG00001
AVR +2.5V
IC8013
MN2WS0025AEA
PEAKS_Lite 2/3
SS
RT
GND
PVIN
INV
FB
SW
VIN
CTL
Vcc
GND
OUT
C
SUB5V
SUB9V
3.3V
1.2V
2.5V_1
2.5V_2
+2.5V
+3.3V
TP8026
TP8027
TP8028
L8055
G1C100MA0077
L8026
L8047
G1C220MA0167
L8048
G1C220MA0167
L8049
J0JHC0000045
L8031
J0JHC0000045
L8029
L8030
L8032
J0JHC0000045
L8033
J0JHC0000045
L8059
J0JHC0000045
D8203
B0JCPE000004
D8204
B0JCPE000004
R8491 91k
R8492 9.1k
R8493 91k
R8494 12k
R8497 750
R8498 680
R8499 24k
R8500 10.5k
R8501 23.2k
R8502 100k
R8900 0
R8899 0
R8107 10k
R8108 22.1k
R8109 24k
R8110 0
R8112 0
R8113 0
C8306 50V 0.01u
C8305 50V 0.01u
C8303 50V 0.01u
C8349 16V 0.1u
C8376 16V 0.1u
C8423 16V 0.1u
C8397 16V 0.1u
C8401 50V 0.01u
C8210 10V 0.033u
C8205 16V 0.1u
C8340 16V 6800p
C8344 16V 0.022u
C8343 4V 68u
C8203 16V 47u
C8204 16V 10u
C8202 16V 47u
C8212 16V 0.022u
C8206 16V 0.1u
C8341 16V 8200p
C8345 10V 0.027u
C8342 4V 68u
C8207 16V 47u
C8208 16V 10u
C8372 16V 0.1u
C8169 4V 47u
C8170 16V 0.1u
C8171 16V 0.1u
C8172 4V 47u
C8176 16V 0.1u
C8410 16V 0.1u
C8098 4V 68u
C8136 4V 68u
C8467 50V 0.01u
C8155 16V 0.1u
C8156 16V 0.1u
C8157 50V 0.01u
C8154 16V 0.1u
C8425 16V 0.1u
C8160 16V 0.1u
C8161 50V 0.01u
C8138 50V 0.01u
C8139 4V 68u
C8140 16V 0.1u
C8141 50V 0.01u
C8142 16V 0.1u
C8143 50V 0.01u
C8163 50V 0.01u
C8146 16V 0.1u
C8147 50V 0.01u
C8148 16V 0.1u
C8149 6.3V 1u
C8150 50V 0.01u
C8151 16V 0.1u
C8165 16V 0.1u
C8166 50V 0.01u
C8173 50V 0.01u
C8174 50V 0.01u
C8167 16V 0.1u
C8168 50V 0.01u
H4 H5 J4 J5 K4 K5 L4 L5 M4 M5 N4 N5 P5 V13 V14 V15 V16 V17 VDD12
D10 D11 D12 D13 D14 E10 E11 E12 E13 E14 VDD33
V1 V5 V6 V7 V8 V9 AB2 AB6 VDDQ
P1 U5 AB14 AVDD
P2 T5 AA14 AVSS
AA22 AAVDD
AB21 AAVSS
P21 DAVDD
P19 DAVSS
R20 MAVDD
R18 MAVSS
T20 U20 SVAVDD
T18 T19 SVAVSS
V19 V20 MVAVDD
U18 U19 MVAVSS
GND A1 E6 E7 E8 E9 E15 E16 E17 E18 F6 F18 G18 J9 J10 J11 J12 J13 J14 K9 K10 K11 K12 K13 K14 L9 L10 L11 L12 L13 L14 M9 M10 M11 M12 M13 M14 N9 N10 N11 N12 N13 N14 P9 P10 P11 P12 P13 P14 P18 V2 V18 W4 W19 Y3 Y20 A22 AA1 AA2 AA6 AA21 AB1 AB22

TX-32/26LXD500
XV-Board (5 of 5) Schematic Diagram

11.15. DV-Board Schematic Diagram

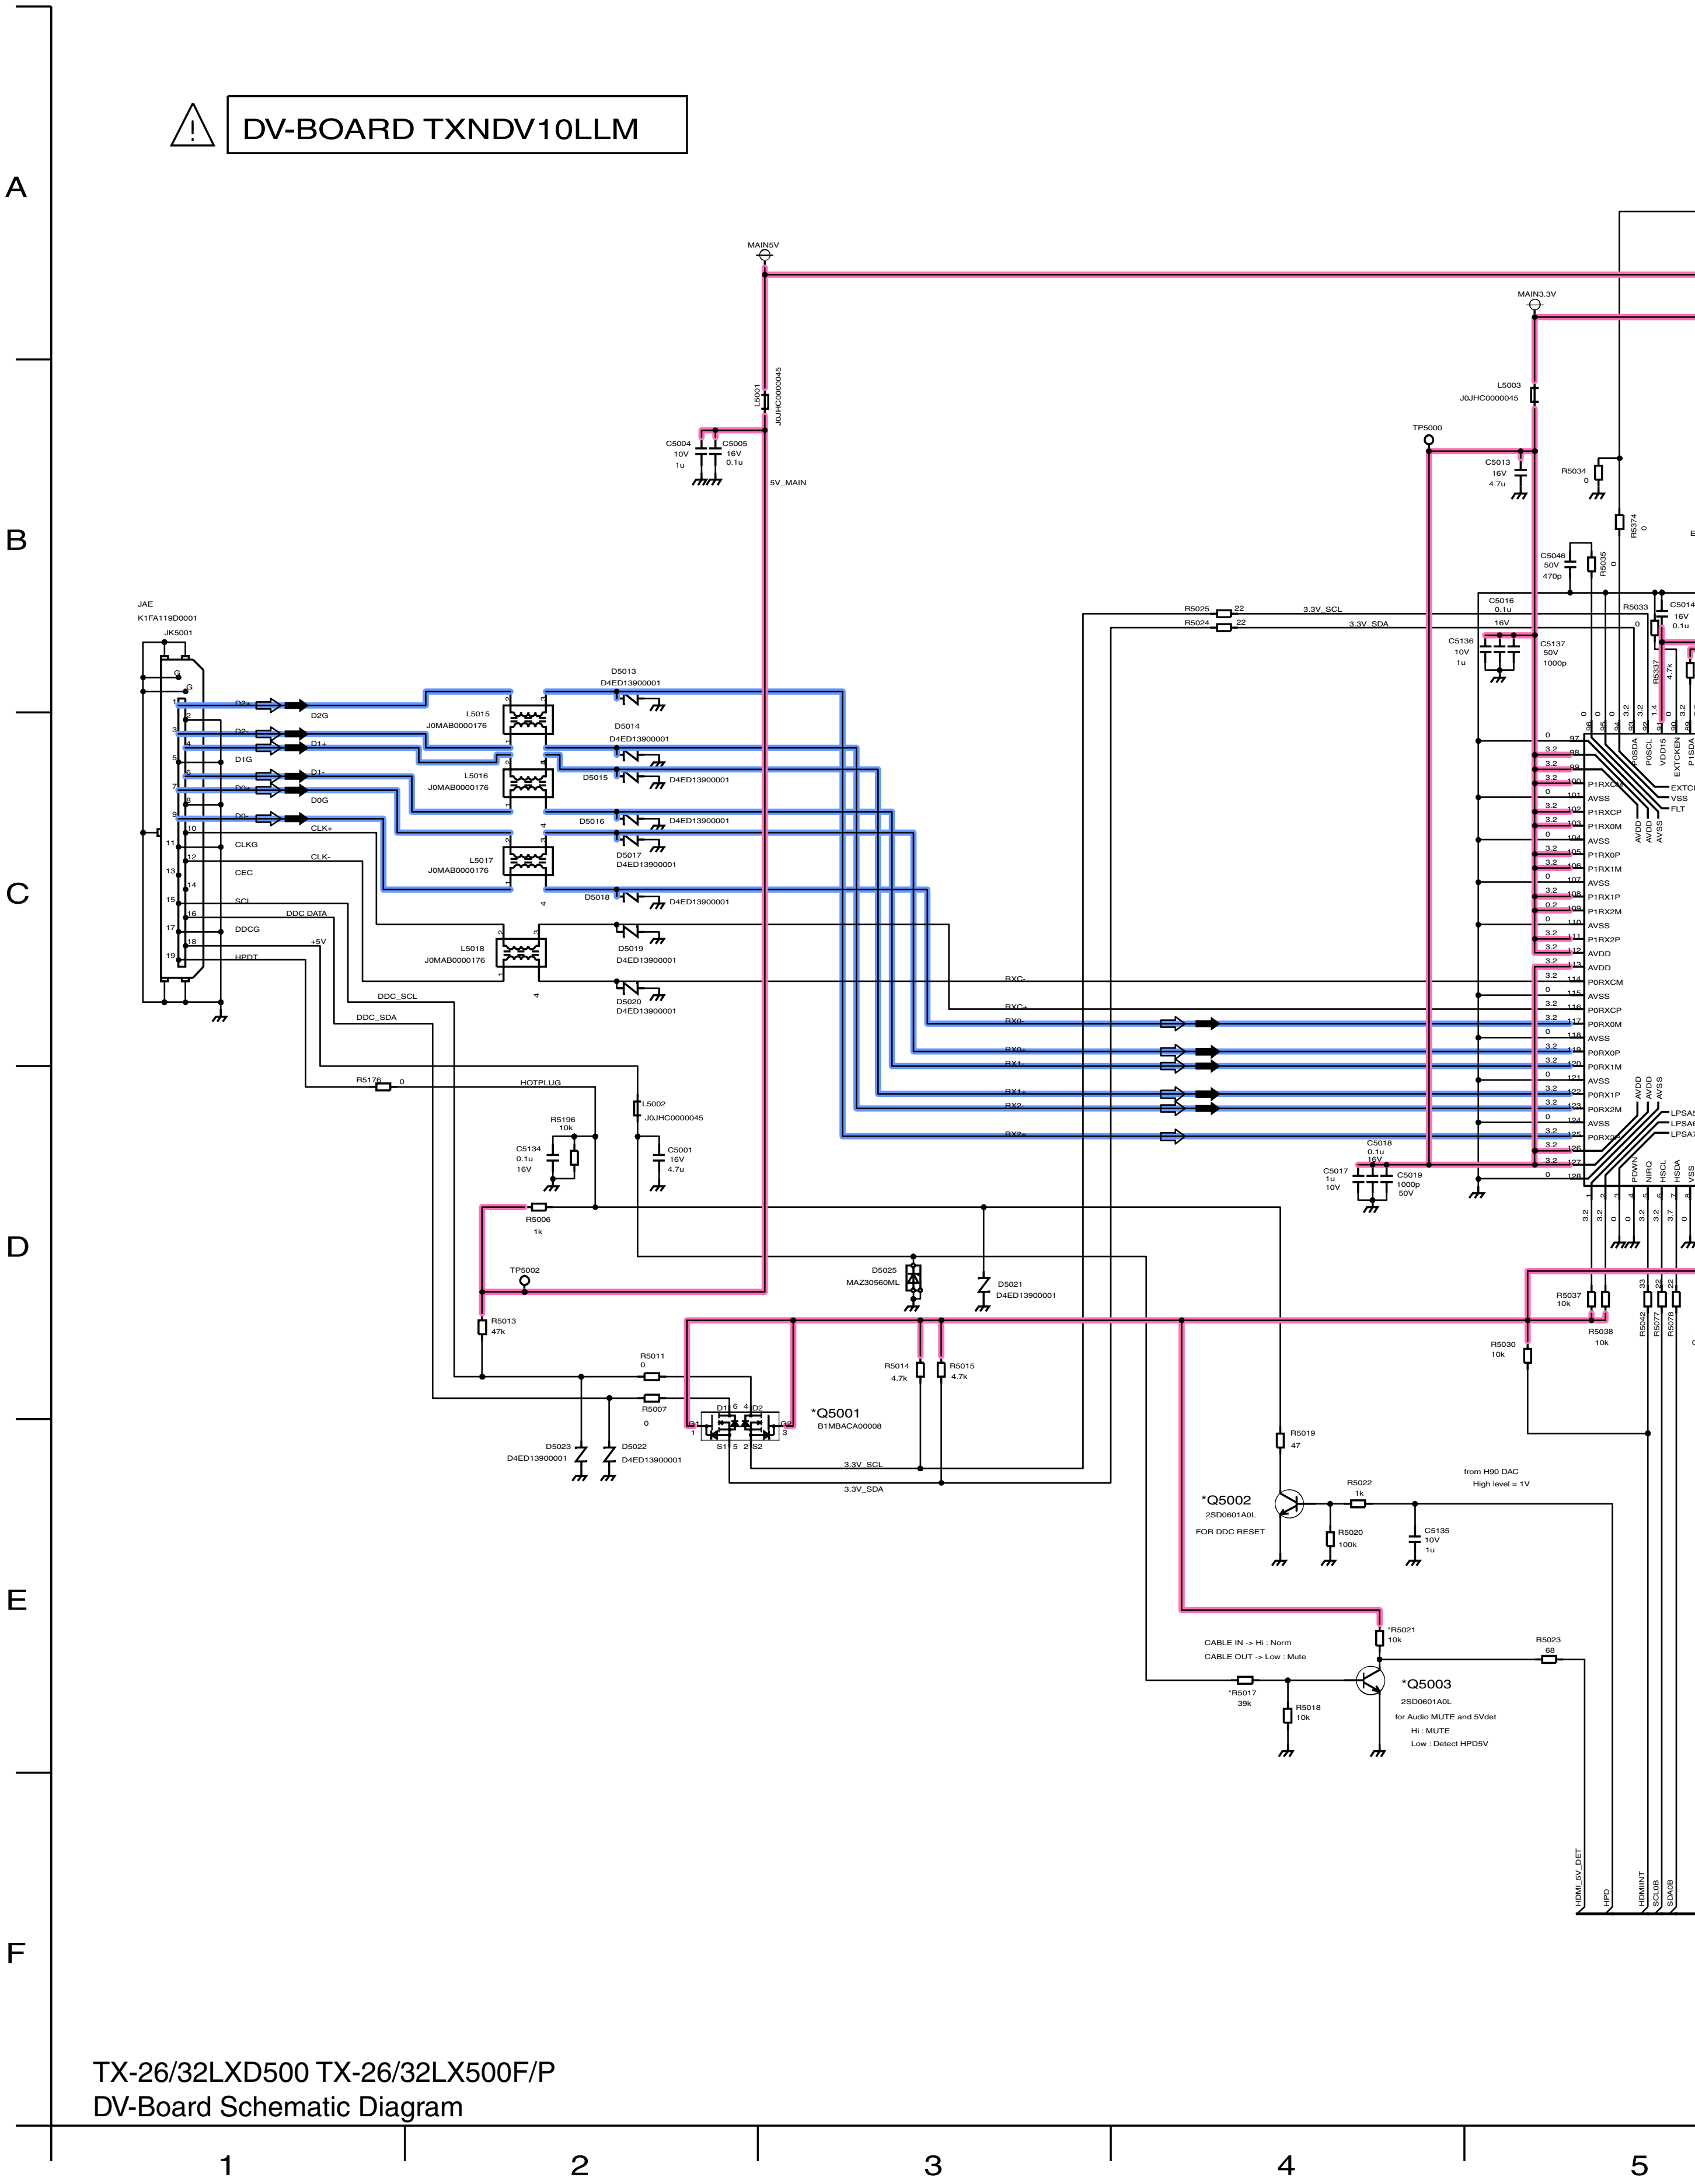
DV-BOARD TXNDV10LLM
A
B
C
D
E
F
1
2
3
4
5
MAIN5V
MAIN3.3V
L5001
J0JHC0000045
C5004
10V
1u
C5005
16V
0.1u
5V_MAIN
L5003
J0JHC0000045
TP5000
C5013
16V
4.7u
R5034
0
R5374
0
C5046
50V
470p
R5035
0
R5033
0
C5016
0.1u
16V
C5014
16V
0.1u
C5136
10V
1u
C5137
50V
1000p
R5037
4.7k
R5025
22
R5024
22
3.3V_SCL
3.3V_SDA
JAE
K1FA119D0001
JK5001
D2+
D2G
D2-
D1+
D1G
D1-
D0+
D0G
D0-
CLK+
CLKG
CLK-
CEC
SCL
DDC DATA
DDCG
+5V
HPDT
L5015
J0MAB0000176
L5016
J0MAB0000176
L5017
J0MAB0000176
L5018
J0MAB0000176
D5013
D4ED13900001
D5014
D4ED13900001
D5015
D4ED13900001
D5016
D4ED13900001
D5017
D4ED13900001
D5018
D4ED13900001
D5019
D4ED13900001
D5020
D4ED13900001
DDC_SCL
DDC_SDA
RXC-
RXC+
RX0-
RX0+
RX1-
RX1+
RX2-
RX2+
P1RXC
AVSS
P1RXCP
P1RXCM
P1RX0P
P1RX1M
P1RX1P
P1RX2M
P1RX2P
AVDD
P0RXCM
P0RXCP
P0RX0M
P0RX0P
P0RX1M
P0RX1P
P0RX2M
P0RX2P
P0SDA
P0SCL
VDD15
EXTCKEN
P1SDA
EXTC
VSS
FLT
LPSA
PDWN
INTRQ
HSCL
HSDA
R5176
0
HOTPLUG
L5002
J0JHC0000045
R5196
10k
C5134
0.1u
16V
C5001
16V
4.7u
R5006
1k
TP5002
R5013
47k
C5017
1u
10V
C5018
0.1u
16V
C5019
1000p
50V
D5025
MAZ30560ML
D5021
D4ED13900001
R5011
0
R5007
0
D5023
D4ED13900001
D5022
D4ED13900001
*Q5001
B1MBACA00008
R5014
4.7k
R5015
4.7k
3.3V_SCL
3.3V_SDA
R5019
47
*Q5002
2SD0601A0L
FOR DDC RESET
R5022
1k
R5020
100k
C5135
10V
1u
from H90 DAC
High level = 1V
R5037
10k
R5038
10k
R5030
10k
R5042
R5077
R5078
*R5021
10k
CABLE IN -> Hi : Norm
CABLE OUT -> Low : Mute
*R5017
39k
R5018
10k
*Q5003
2SD0601A0L
for Audio MUTE and 5Vdet
Hi : MUTE
Low : Detect HPD5V
R5023
68
HDMI_5V_DET
HPD
HDMINT
SCL0B
SDA0B

TX-26/32LXD500 TX-26/32LX500F/P
DV-Board Schematic Diagram

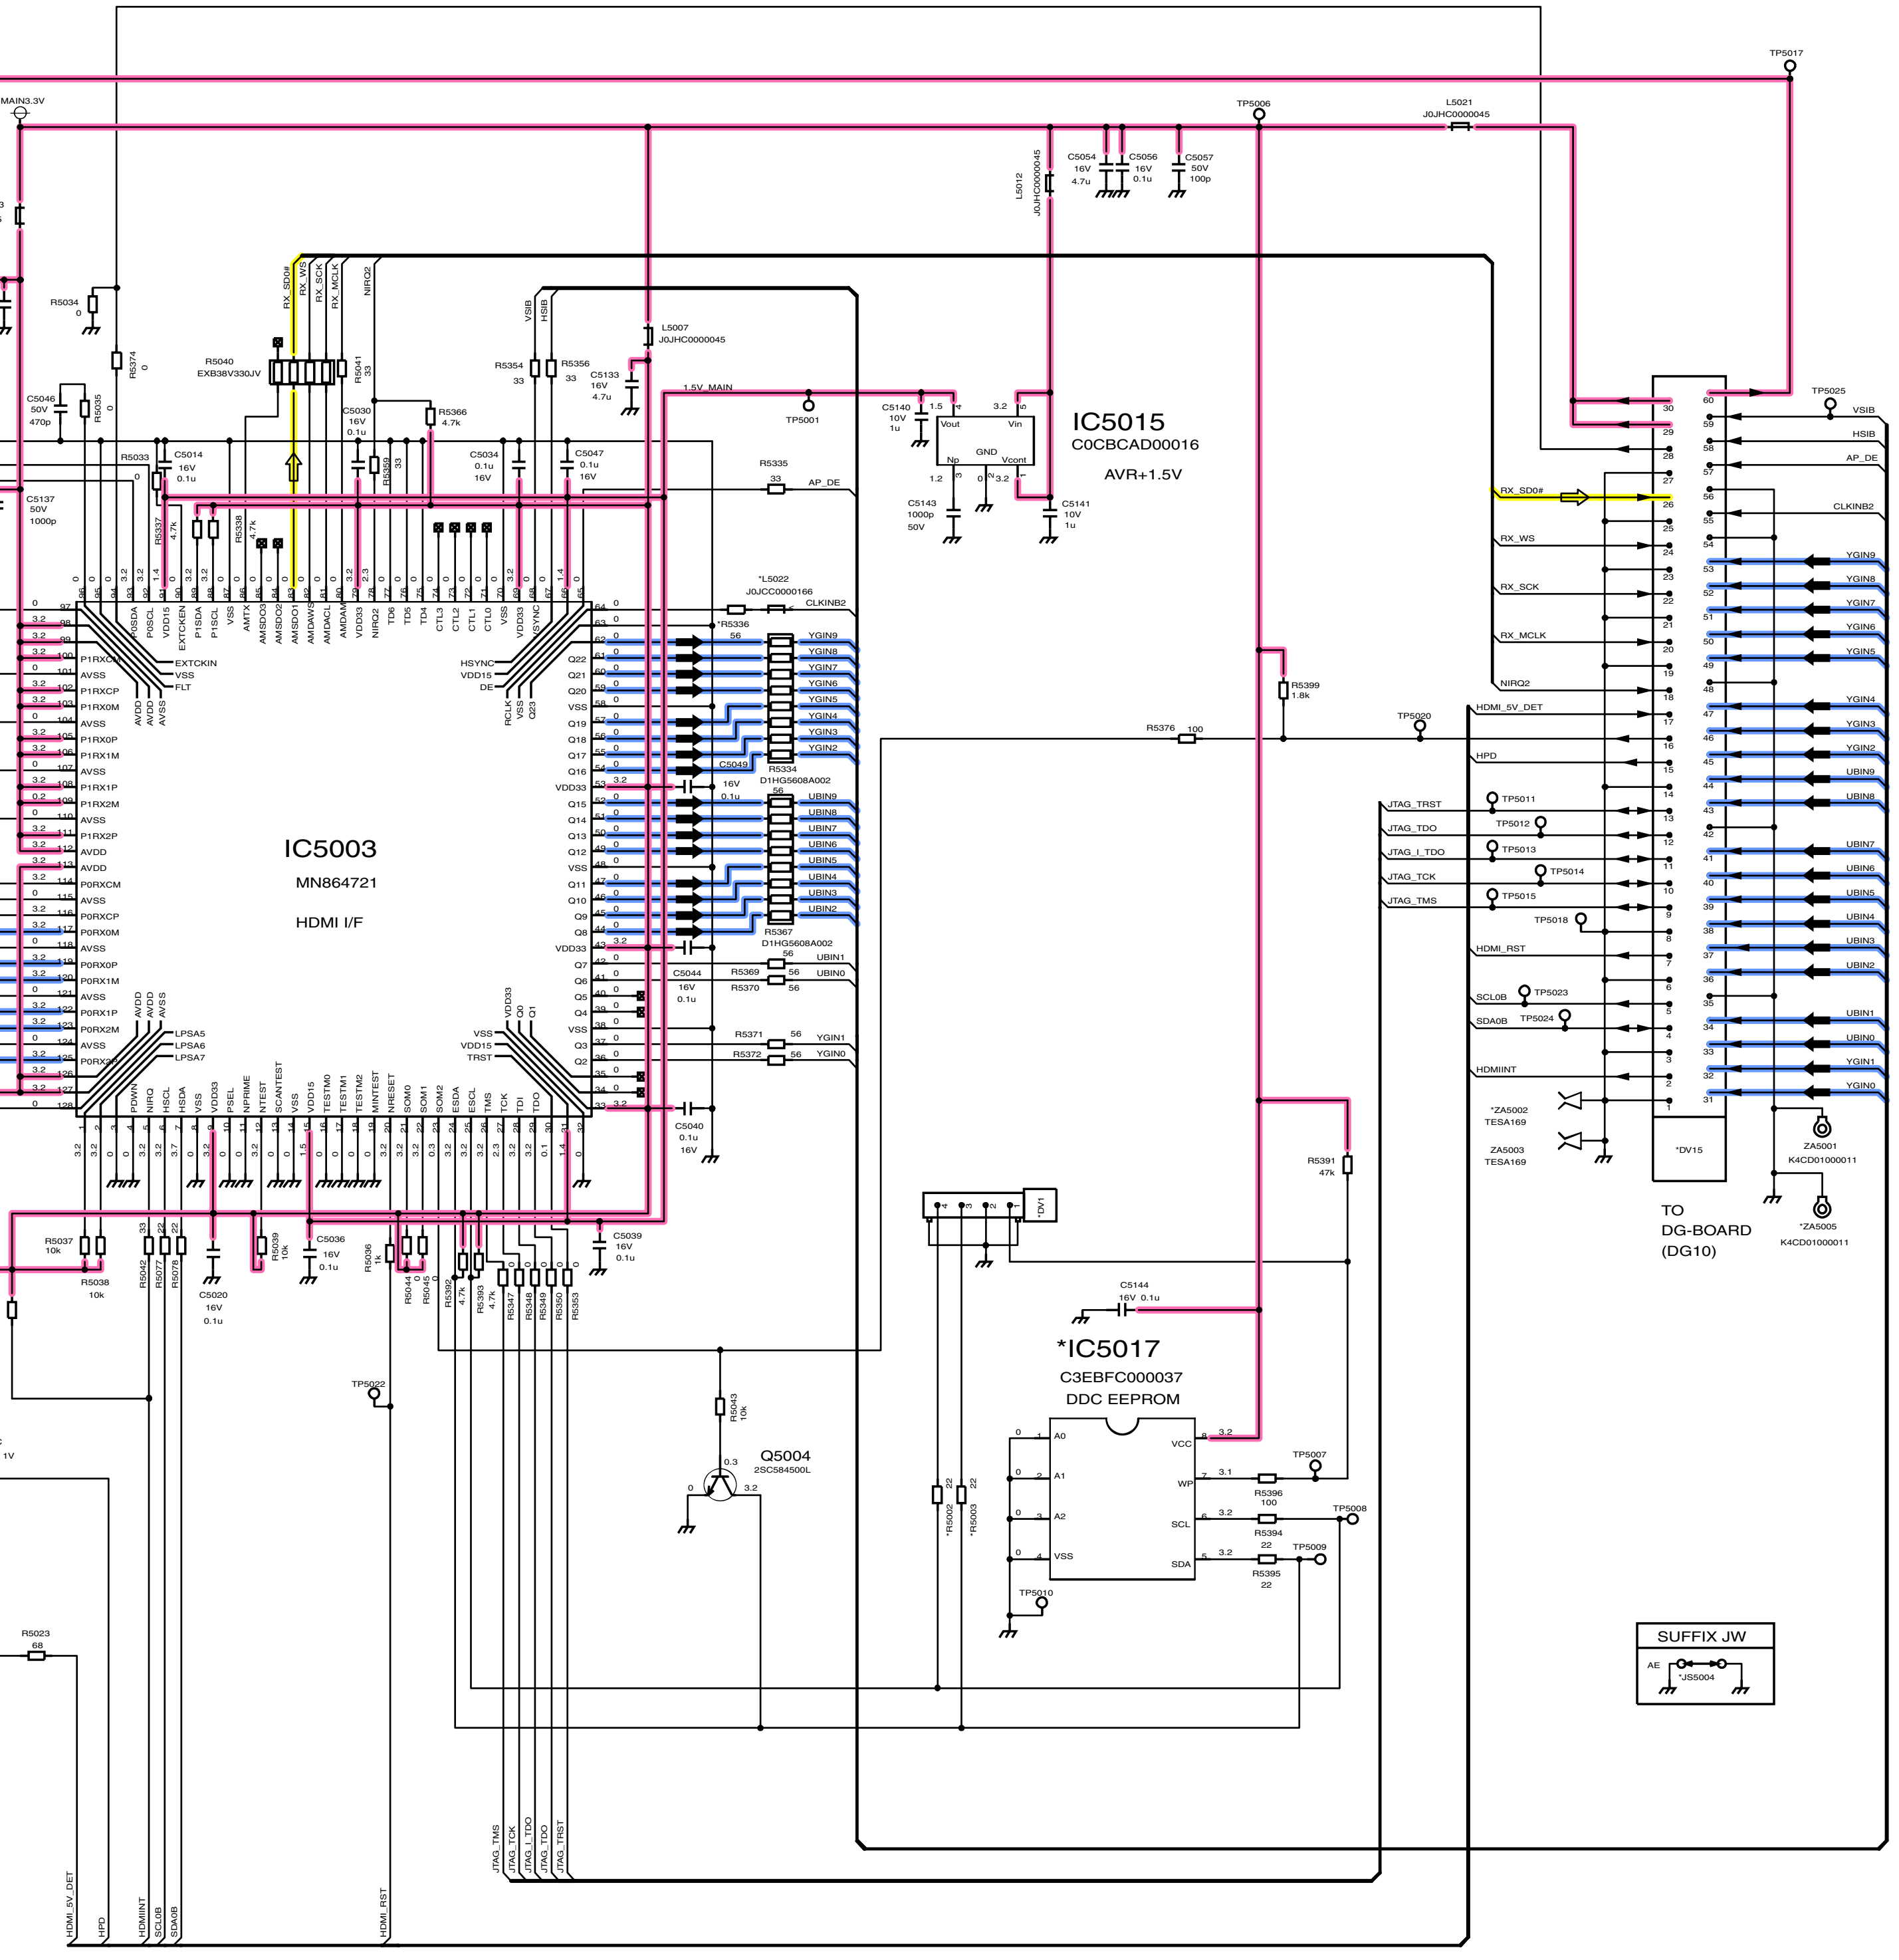
IC5003
MN864721
HDMI I/F
IC5015
C0CBCAD00016
AVR+1.5V
*IC5017
C3EBFC000037
DDC EEPROM
A0
A1
A2
VSS
VCC
WP
SCL
SDA
Q5004
2SC584500L
R5040
EXB38V330JV
R5334
D1HG5608A002
R5367
D1HG5608A002
L5007
J0JHC0000045
L5012
J0JHC0000045
L5021
J0JHC0000045
*L5022
J0JCC0000166
MAIN3.3V
1.5V_MAIN
RX_SD0#
RX_WS
RX_SCK
RX_MCLK
NIRQ2
VSIB
HSIB
AP_DE
CLKINB2
HDMI_5V_DET
HPD
JTAG_TRST
JTAG_TDO
JTAG_I_TDO
JTAG_TCK
JTAG_TMS
HDMI_RST
HDMIINT
SCL0B
SDA0B
YGIN9
YGIN8
YGIN7
YGIN6
YGIN5
YGIN4
YGIN3
YGIN2
UBIN9
UBIN8
UBIN7
UBIN6
UBIN5
UBIN4
UBIN3
UBIN2
UBIN1
UBIN0
YGIN1
YGIN0
TP5001
TP5006
TP5017
TP5020
TP5022
TP5025
*DV15
*DV1
TO
DG-BOARD
(DG10)
*ZA5002
TESA169
ZA5003
TESA169
ZA5001
K4CD01000011
*ZA5005
K4CD01000011
SUFFIX JW
AE
*JS5004

TX-26/32LXD500 TX-26/32LX500F/P
DV-Board Schematic Diagram

5 6 7 8 9

11.16. DG-Board (1 of 7) Schematic Diagram

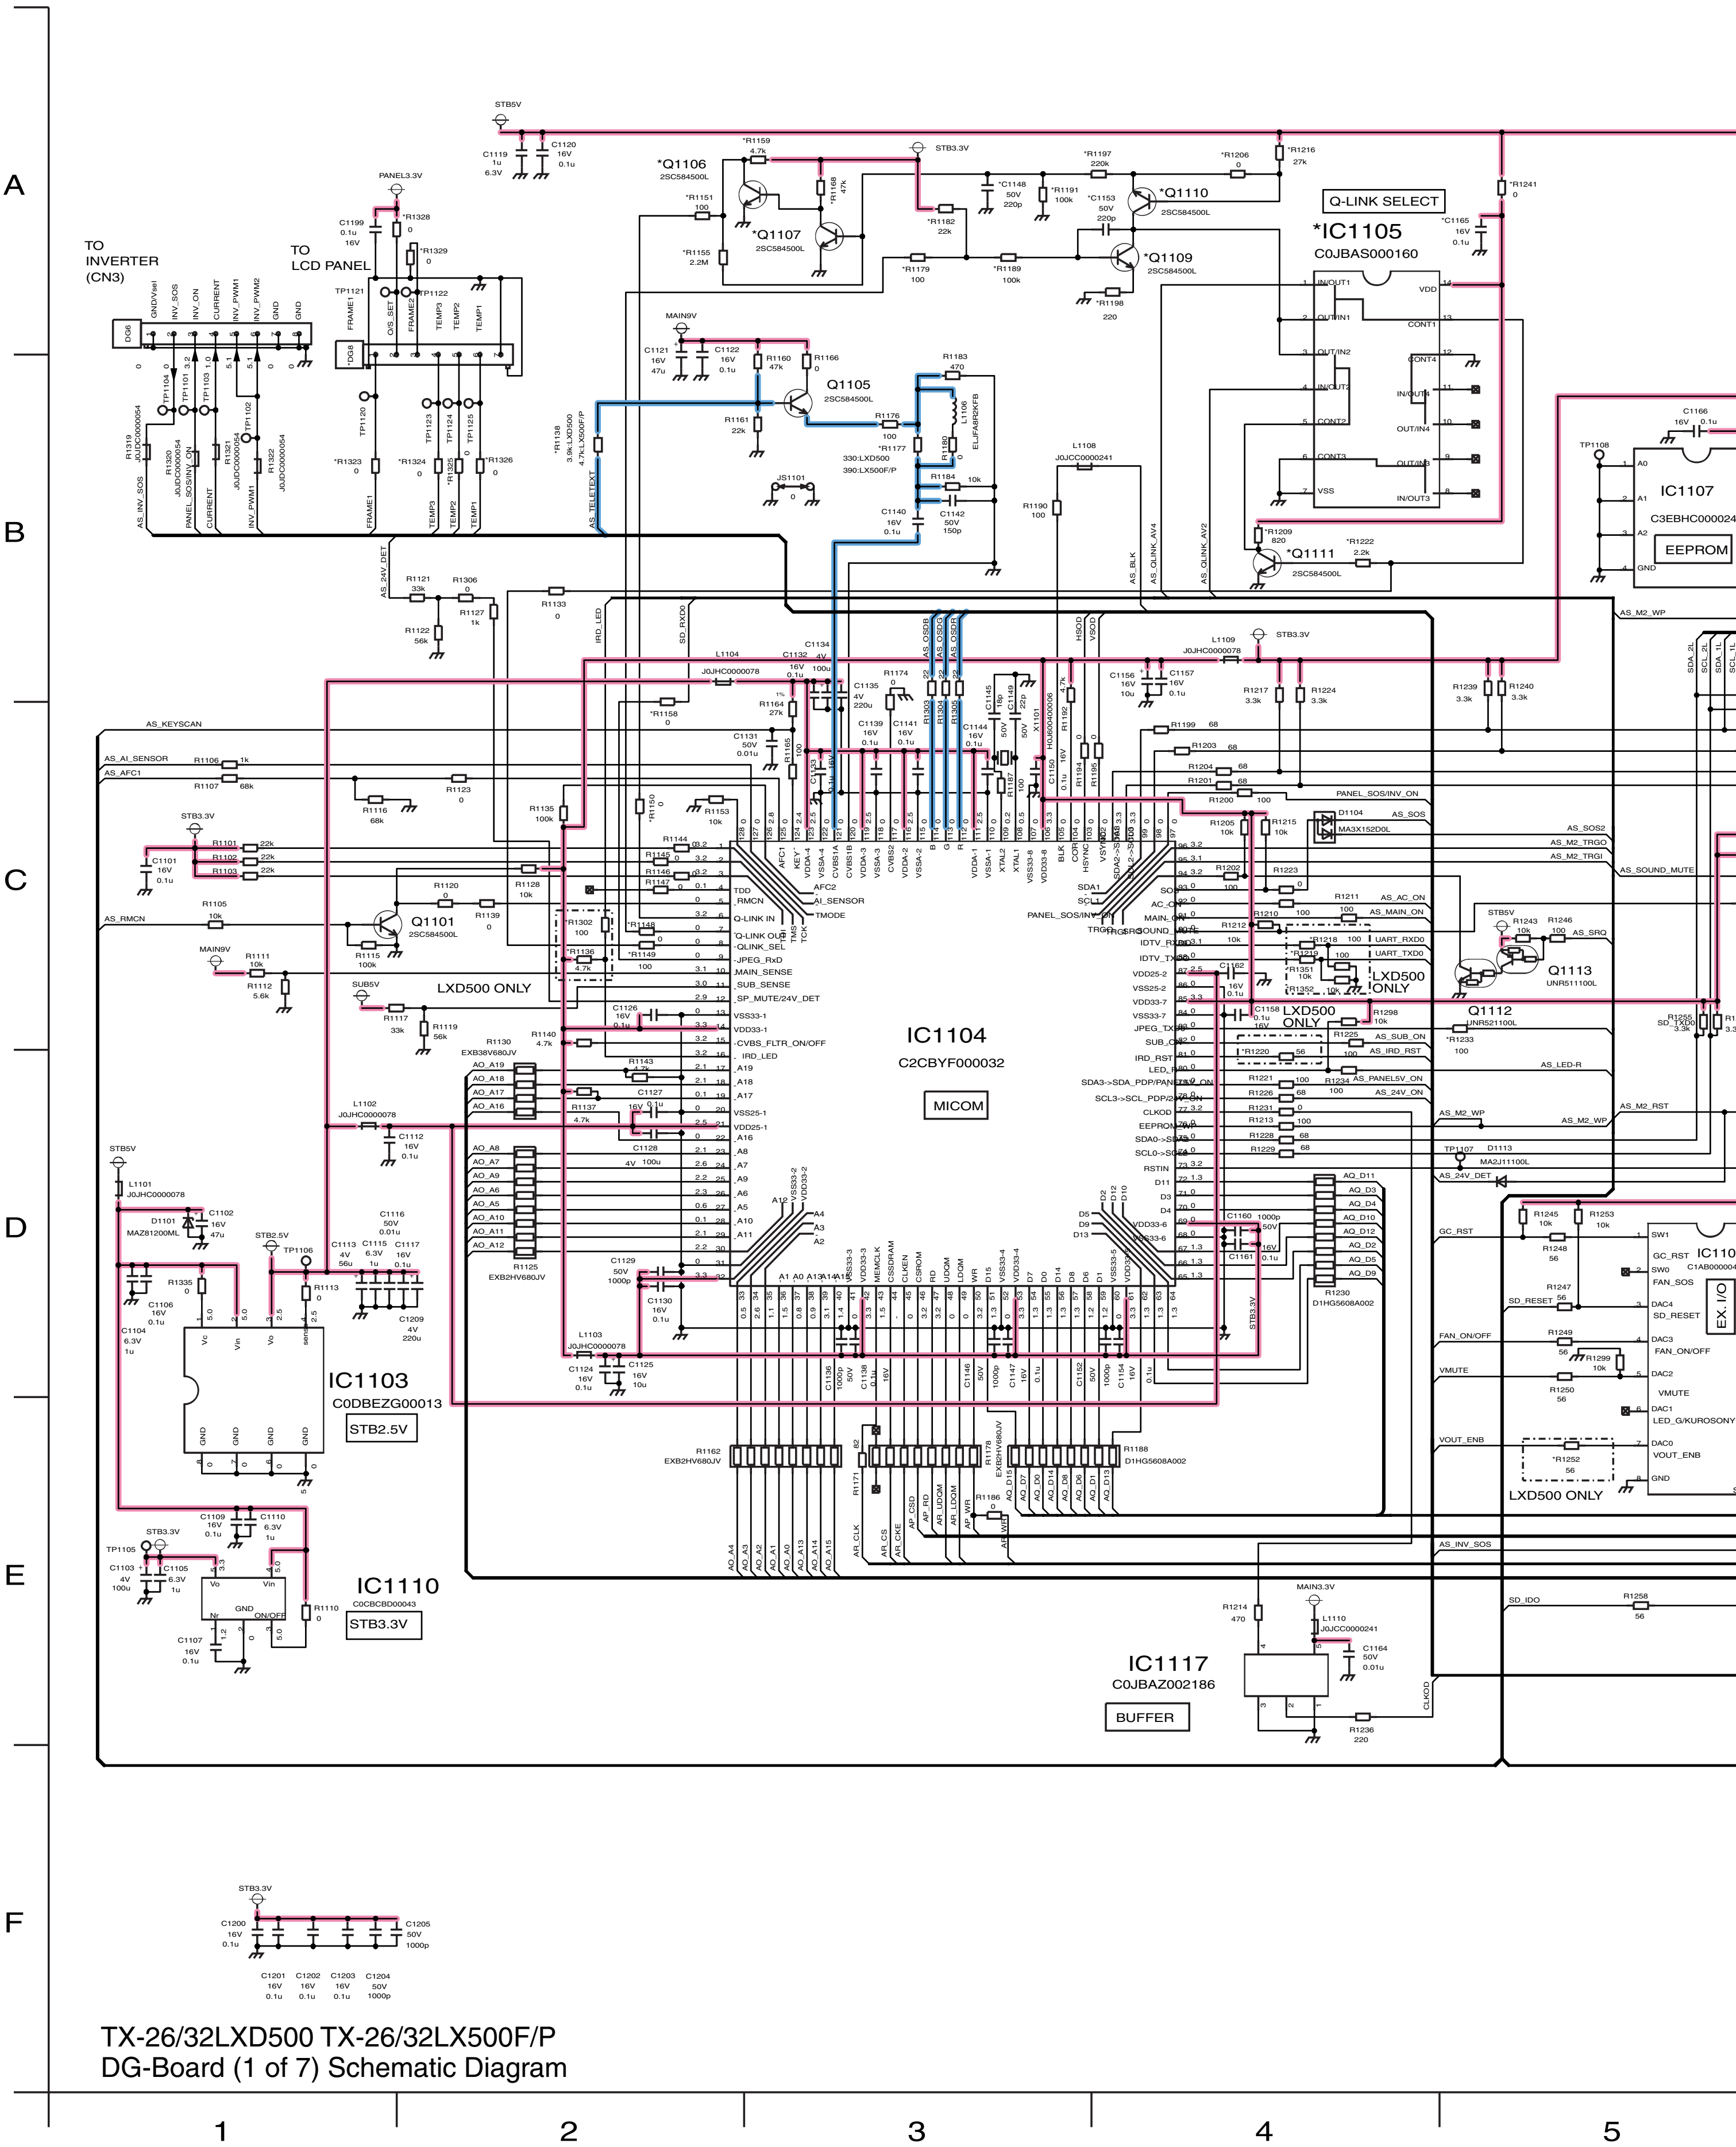
A
B
C
D
E
F
1
2
3
4
5
TO INVERTER (CN3)
TO LCD PANEL
DG6
DG8
STB5V
STB3.3V
PANEL3.3V
MAIN9V
MAIN3.3V
SUB5V
STB2.5V
*Q1106
2SC584500L
*Q1107
2SC584500L
*Q1110
2SC584500L
*Q1109
2SC584500L
Q1105
2SC584500L
*Q1111
2SC584500L
Q1101
2SC584500L
Q1113
UNR511100L
Q1112
UNR521100L
Q-LINK SELECT
*IC1105
C0JBAS000160
IC1107
C3EBHC000024
EEPROM
IC1104
C2CBYF000032
MICOM
IC1103
C0DBEZG00013
STB2.5V
IC1110
C0CBCBD00043
STB3.3V
IC1117
C0JBAZ002186
BUFFER
EX. I/O
LXD500 ONLY
AS_KEYSCAN
AS_AI_SENSOR
AS_AFC1
AS_RMCN
AS_TELETEXT
AS_24V_DET
AS_OSDB
AS_OSDG
AS_OSDR
AS_BLK
AS_QLINK_AV4
AS_QLINK_AV2
AS_M2_WP
AS_SOS
AS_SOS2
AS_M2_TRGO
AS_M2_TRGI
AS_SOUND_MUTE
AS_AC_ON
AS_MAIN_ON
AS_SRQ
UART_RXD0
UART_TXD0
AS_SUB_ON
AS_IRD_RST
AS_LED-R
AS_PANEL5V_ON
AS_24V_ON
AS_M2_RST
AS_INV_SOS
SD_IDO
GC_RST
FAN_ON/OFF
VMUTE
VOUT_ENB
LED_G/KUROSONY
SD_RESET

TX-26/32LXD500 TX-26/32LX500F/P
DG-Board (1 of 7) Schematic Diagram

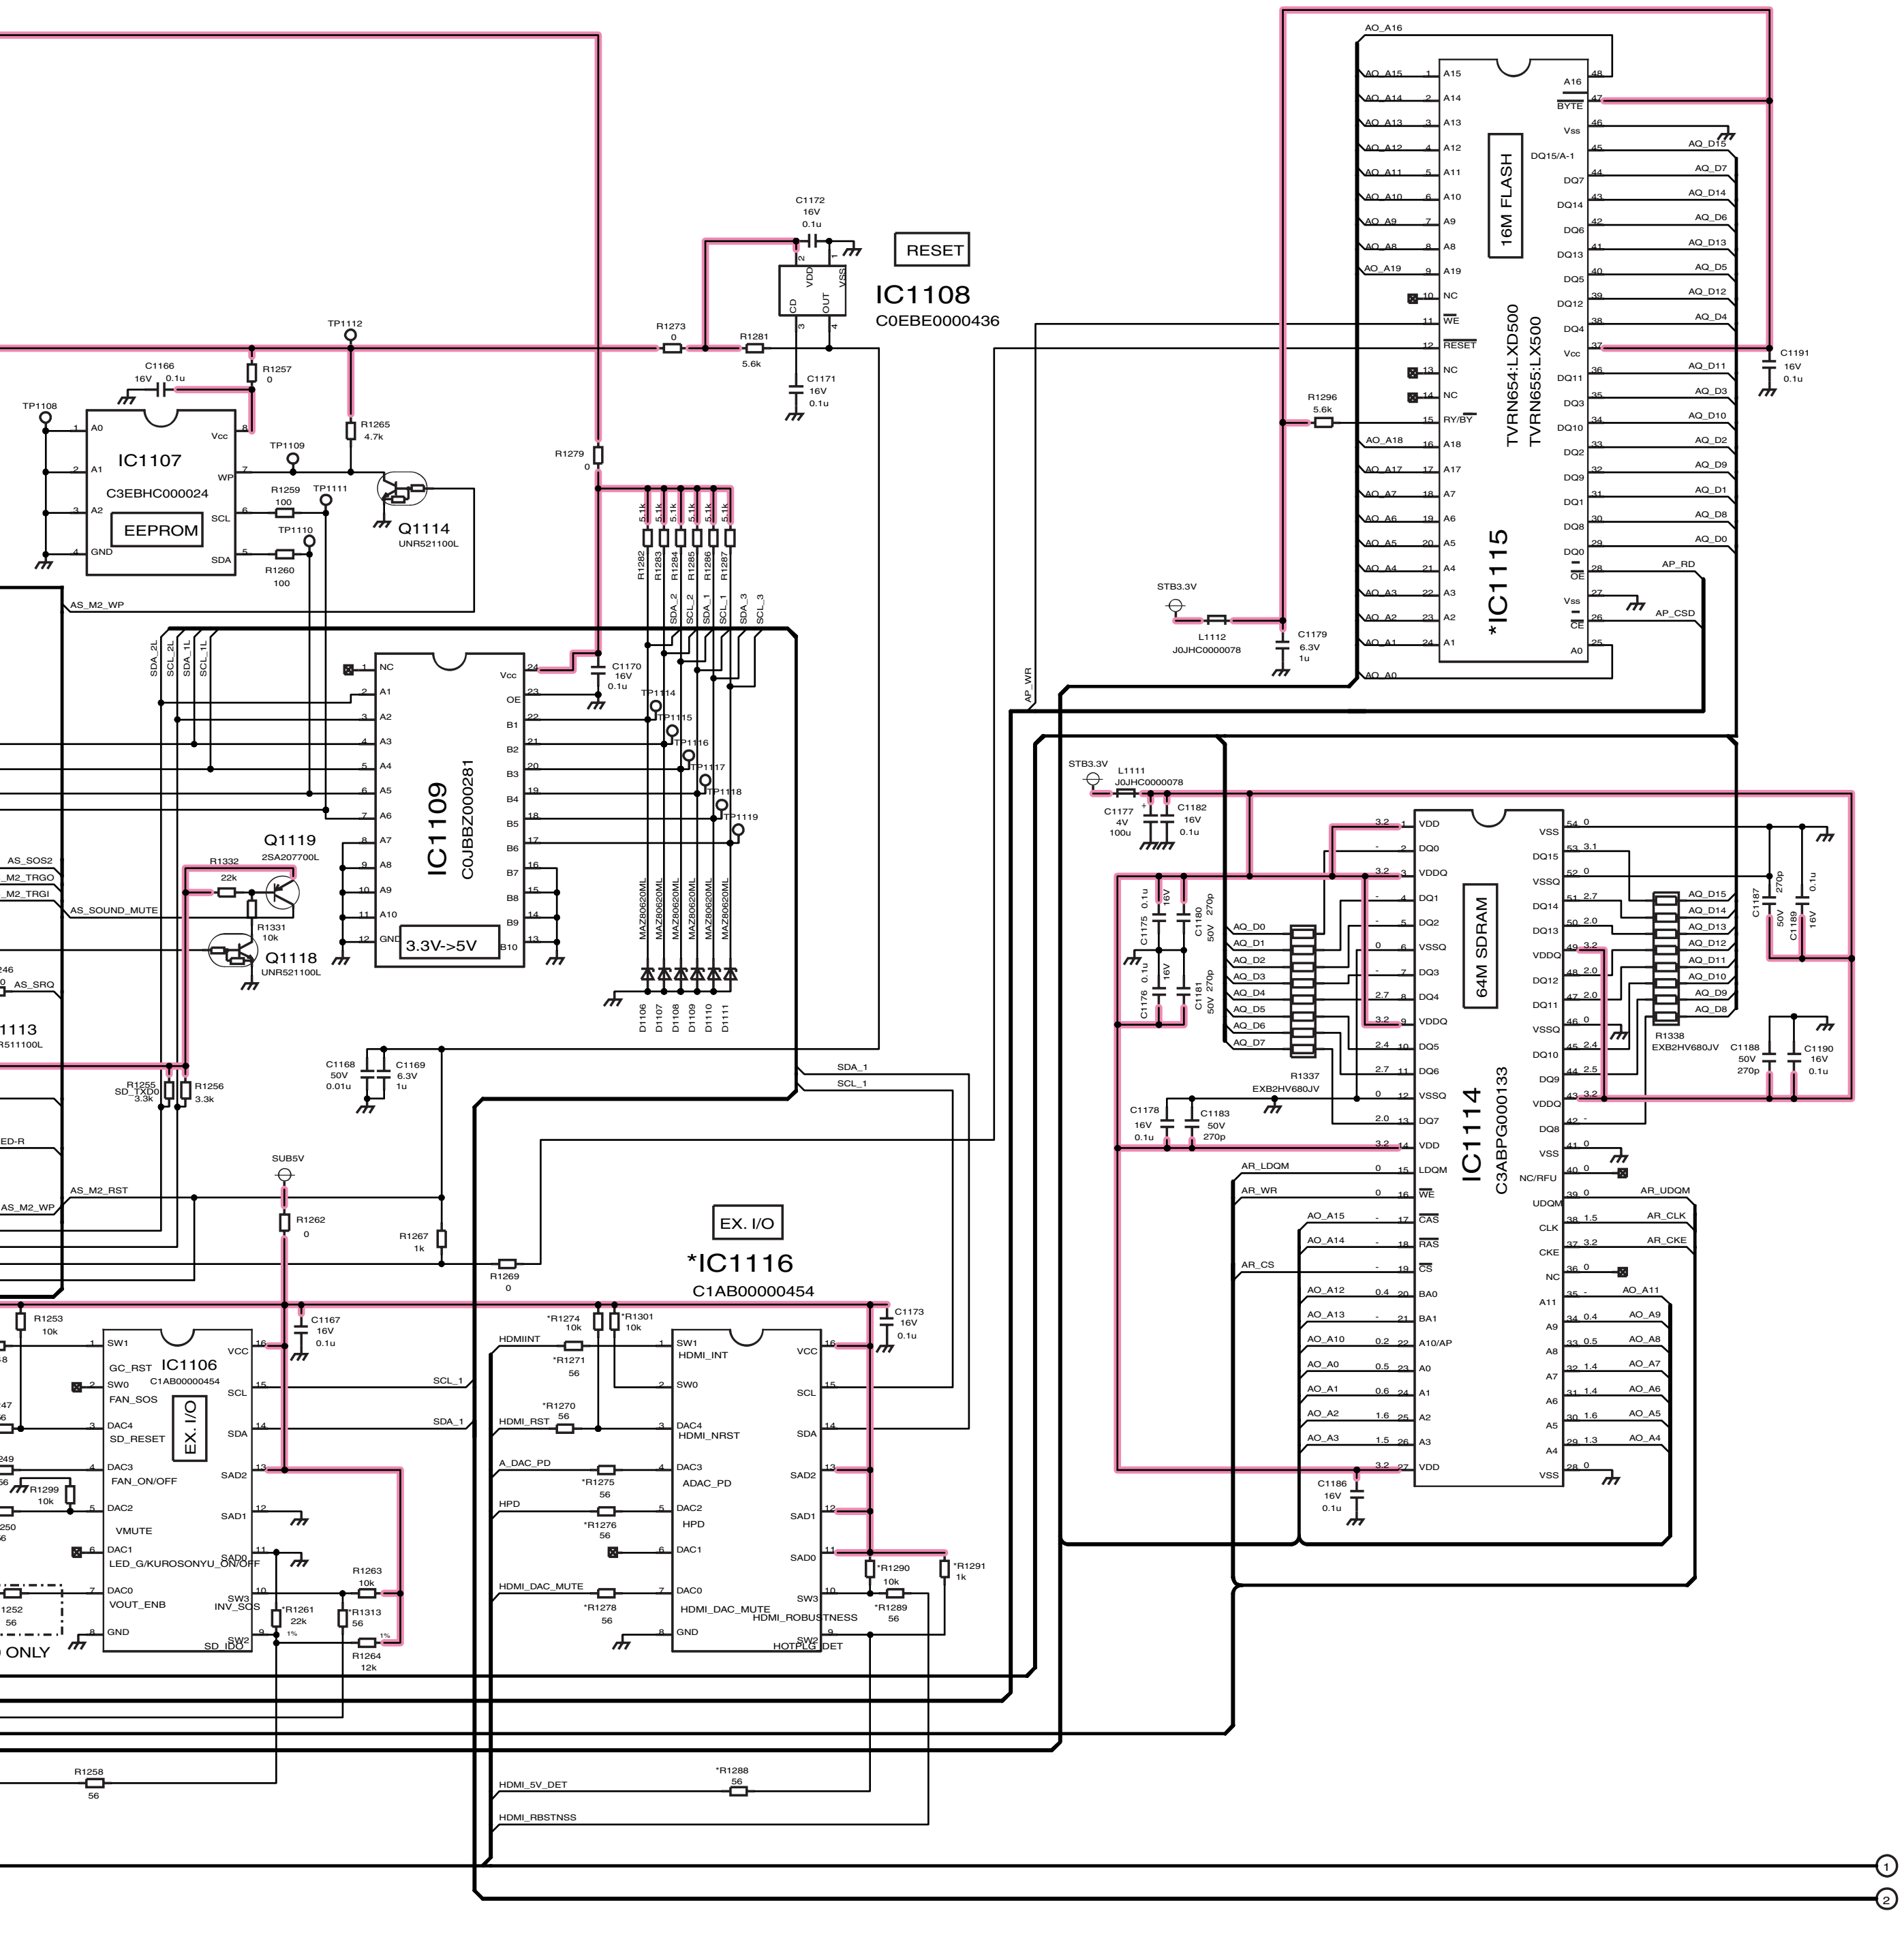
RESET
IC1108
C0EBE0000436
IC1107
C3EBHC000024
EEPROM
Q1114
UNR521100L
IC1109
C0JBBZ000281
3.3V->5V
Q1119
2SA207700L
Q1118
UNR521100L
16M FLASH
TVRN654:LXD500
TVRN655:LX500
*IC1115
64M SDRAM
IC1114
C3ABPG000133
EX. I/O
*IC1116
C1AB00000454
IC1106
C1AB00000454
EX. I/O
SDA_1
SCL_1
HDMI_5V_DET
HDMI_RBSTNSS
ONLY
1
2
3

DG-BOARD (1/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (1 of 7) Schematic Diagram

5 6 7 8 9

11.17. DG-Board (2 of 7) Schematic Diagram

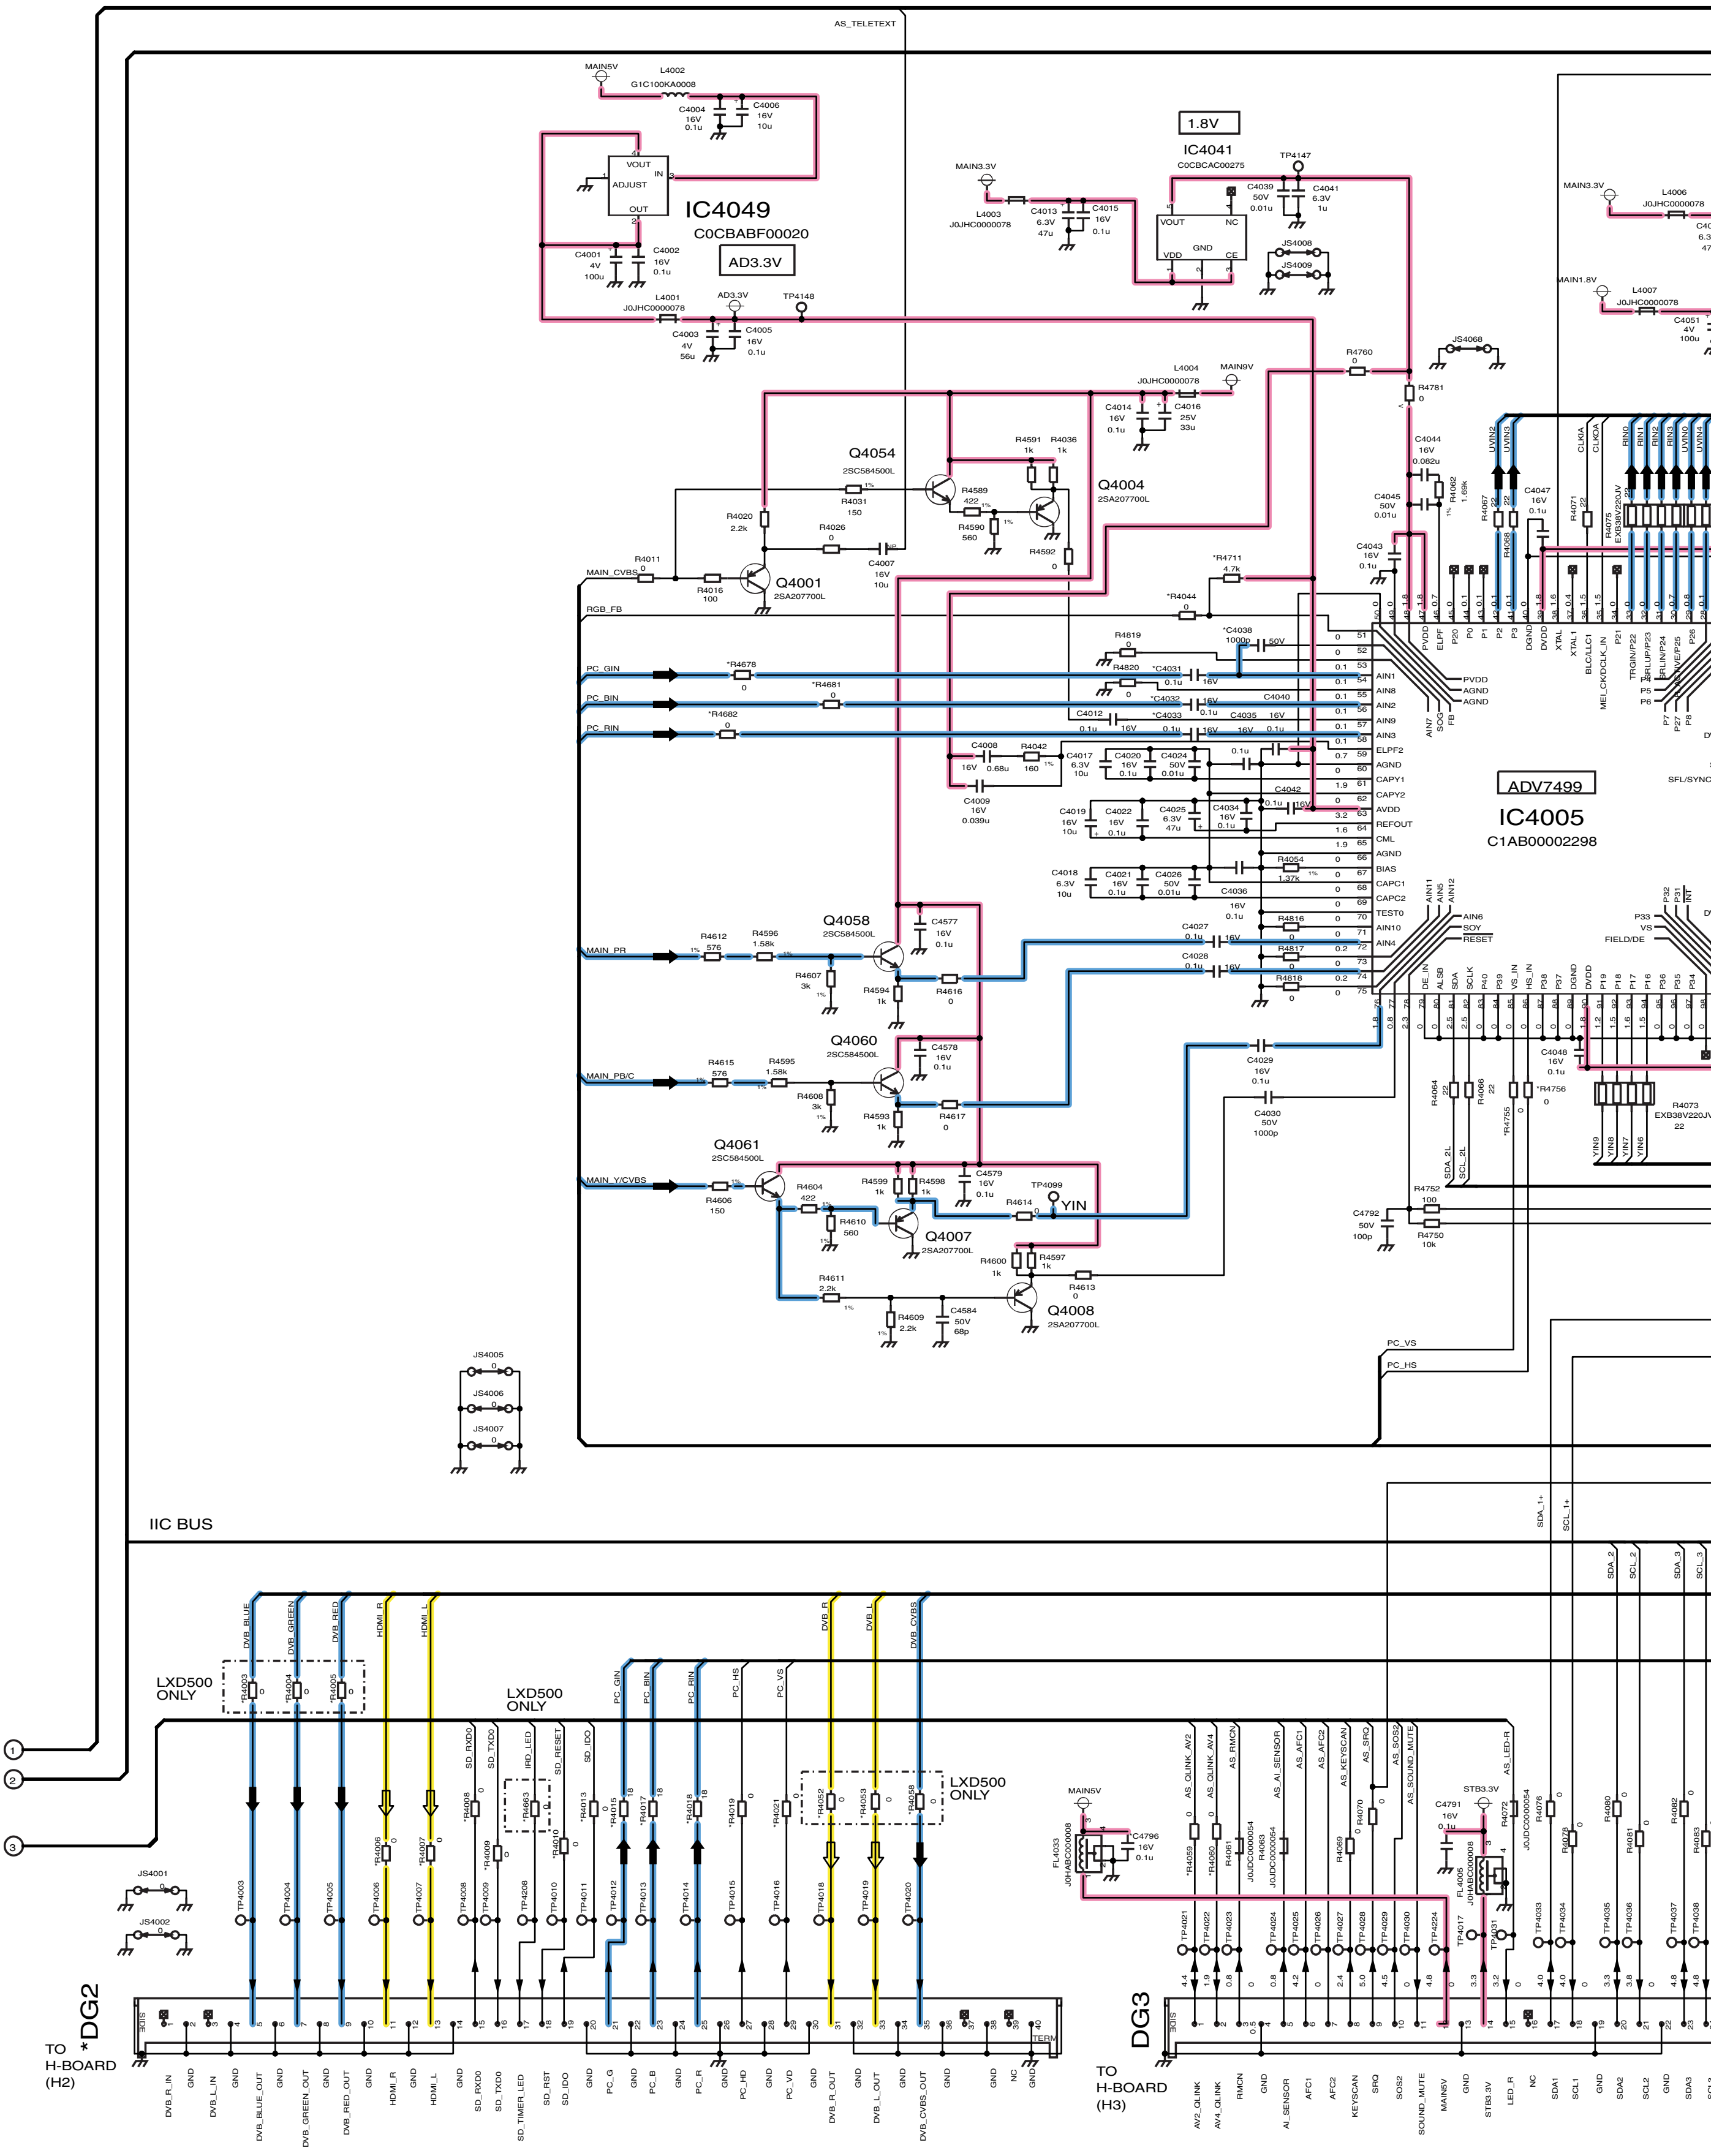
AS_TELETEXT
MAIN5V
L4002
G1C100KA0008
C4004 16V 0.1u
C4006 16V 10u
IC4049
C0CBABF00020
VOUT
IN
ADJUST
OUT
AD3.3V
C4001 4V 100u
C4002 16V 0.1u
L4001 J0JHC0000078
TP4148
C4003 4V 56u
C4005 16V 0.1u
1.8V
IC4041
C0CBCAC00275
TP4147
MAIN3.3V
L4003 J0JHC0000078
C4013 6.3V 47u
C4015 16V 0.1u
C4039 50V 0.01u
C4041 6.3V 1u
VOUT
NC
GND
VDD
CE
JS4008
JS4009
L4004 J0JHC0000078
MAIN9V
C4014 16V 0.1u
C4016 25V 33u
R4760 0
R4781 0
JS4068
Q4054
2SC584500L
R4031 150
R4589 422
R4590 560
R4591 1k
R4036 1k
Q4004
2SA207700L
R4592 0
R4020 2.2k
R4026 0
C4007 16V 10u
R4011 0
MAIN_CVBS
R4016 100
Q4001
2SA207700L
RGB_FB
*R4711 4.7k
*R4044 0
C4044 16V 0.082u
C4045 50V 0.01u
R4062 1.69k
C4043 16V 0.1u
C4047 16V 0.1u
R4819 0
R4820 0
*C4038 1000p
PC_GIN
*R4678 0
PC_BIN
*R4681 0
PC_RIN
*R4682 0
*C4031 0.1u
*C4032
*C4033
C4012
C4040
C4035
C4008
R4042 160
C4009 16V 0.039u
C4017 6.3V 10u
C4020 16V 0.1u
C4024 50V 0.01u
C4019 16V 10u
C4022 16V 0.1u
C4025 6.3V 47u
C4034 16V 0.1u
C4042
R4054 1.37k
C4018 6.3V 10u
C4021 16V 0.1u
C4026 50V 0.01u
C4036 16V 0.1u
C4027 0.1u
C4028 0.1u
R4816 0
R4817 0
R4818 0
AIN1
AIN8
AIN2
AIN9
AIN3
ELPF2
AGND
CAPY1
CAPY2
AVDD
REFOUT
CML
AGND
BIAS
CAPC1
CAPC2
TEST0
AIN10
AIN4
PVDD
AGND
AGND
ADV7499
IC4005
C1AB00002298
SFL/SYNC
AIN6
SOY
RESET
P33
VS
FIELD/DE
MAIN3.3V
L4006 J0JHC0000078
MAIN1.8V
L4007 J0JHC0000078
C4051 4V 100u
R4075 EXB38V220JV
R4071 22
R4067
R4068
Q4058
2SC584500L
C4577 16V 0.1u
R4612 576
R4596 1.58k
MAIN_PR
R4607 3k
R4594 1k
R4616 0
Q4060
2SC584500L
C4578 16V 0.1u
MAIN_PB/C
R4615 576
R4595 1.58k
R4608 3k
R4593 1k
R4617 0
C4029 16V 0.1u
C4030 50V 1000p
C4048 16V 0.1u
R4064 22
R4066 22
R4755 0
*R4756 0
R4073 EXB38V220JV 22
Q4061
2SC584500L
MAIN_Y/CVBS
R4606 150
R4604 422
R4599 1k
R4598 1k
C4579 16V 0.1u
TP4099
YIN
R4614 0
R4610 560
Q4007
2SA207700L
R4600 1k
R4597 1k
R4613 0
R4611 2.2k
R4609 2.2k
C4584 50V 68p
Q4008
2SA207700L
R4752 100
C4792 50V 100p
R4750 10k
SDA_2L
SCL_2L
PC_VS
PC_HS
JS4005
JS4006
JS4007
IIC BUS
SDA_1
SCL_1
SDA_2
SCL_2
SDA_3
SCL_3
DVB_BLUE
DVB_GREEN
DVB_RED
HDMI_R
HDMI_L
DVB_R
DVB_L
DVB_CVBS
LXD500 ONLY
*R4003
*R4004
*R4005
LXD500 ONLY
SD_RXD0
SD_TXD0
IRD_LED
SD_RESET
SD_IDO
PC_GIN
PC_BIN
PC_RIN
PC_HS
PC_VS
*R4006
*R4007
*R4008
*R4009
*R4663
*R4010
*R4013
*R4015
*R4017
*R4018
*R4019
*R4021
*R4052
*R4063
*R4058
LXD500 ONLY
TP4003
TP4004
TP4005
TP4006
TP4007
TP4008
TP4009
TP4208
TP4010
TP4011
TP4012
TP4013
TP4014
TP4015
TP4016
TP4018
TP4019
TP4020
JS4001
JS4002
1
2
3
*DG2
TO H-BOARD (H2)
DVB_R_IN
GND
DVB_L_IN
GND
DVB_BLUE_OUT
GND
DVB_GREEN_OUT
GND
DVB_RED_OUT
GND
HDMI_R
GND
HDMI_L
GND
SD_RXD0
SD_TXD0
SD_TIMER_LED
SD_RST
SD_IDO
GND
PC_G
GND
PC_B
GND
PC_R
GND
PC_HD
GND
PC_VD
GND
DVB_R_OUT
GND
DVB_L_OUT
GND
DVB_CVBS_OUT
GND
GND
NC
GND
TERM
AS_QLINK_AV2
AS_QLINK_AV4
AS_RMCN
AS_AI_SENSOR
AS_AFC1
AS_AFC2
AS_KEYSCAN
AS_SRQ
AS_SOS2
AS_SOUND_MUTE
AS_LED_R
MAIN5V
FL4033 J0HABC000008
C4796 16V 0.1u
STB3.3V
C4791 16V 0.1u
FL4005 J0HABC000008
R4059
R4060
R4061
R4663
R4069
R4070
R4072
R4076
R4078
R4080
R4081
R4082
R4083
TP4021
TP4022
TP4023
TP4024
TP4025
TP4026
TP4027
TP4028
TP4029
TP4030
TP4224
TP4017
TP4031
TP4033
TP4034
TP4035
TP4036
TP4037
TP4038
DG3
TO H-BOARD (H3)
AV2_QLINK
AV4_QLINK
RMCN
GND
AI_SENSOR
AFC1
AFC2
KEYSCAN
SRQ
SOS2
SOUND_MUTE
MAIN5V
GND
STB3.3V
LED_R
NC
SDA1
SCL1
GND
SDA2
SCL2
GND
SDA3

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (2 of 7) Schematic Diagram

10 11 12 13 14

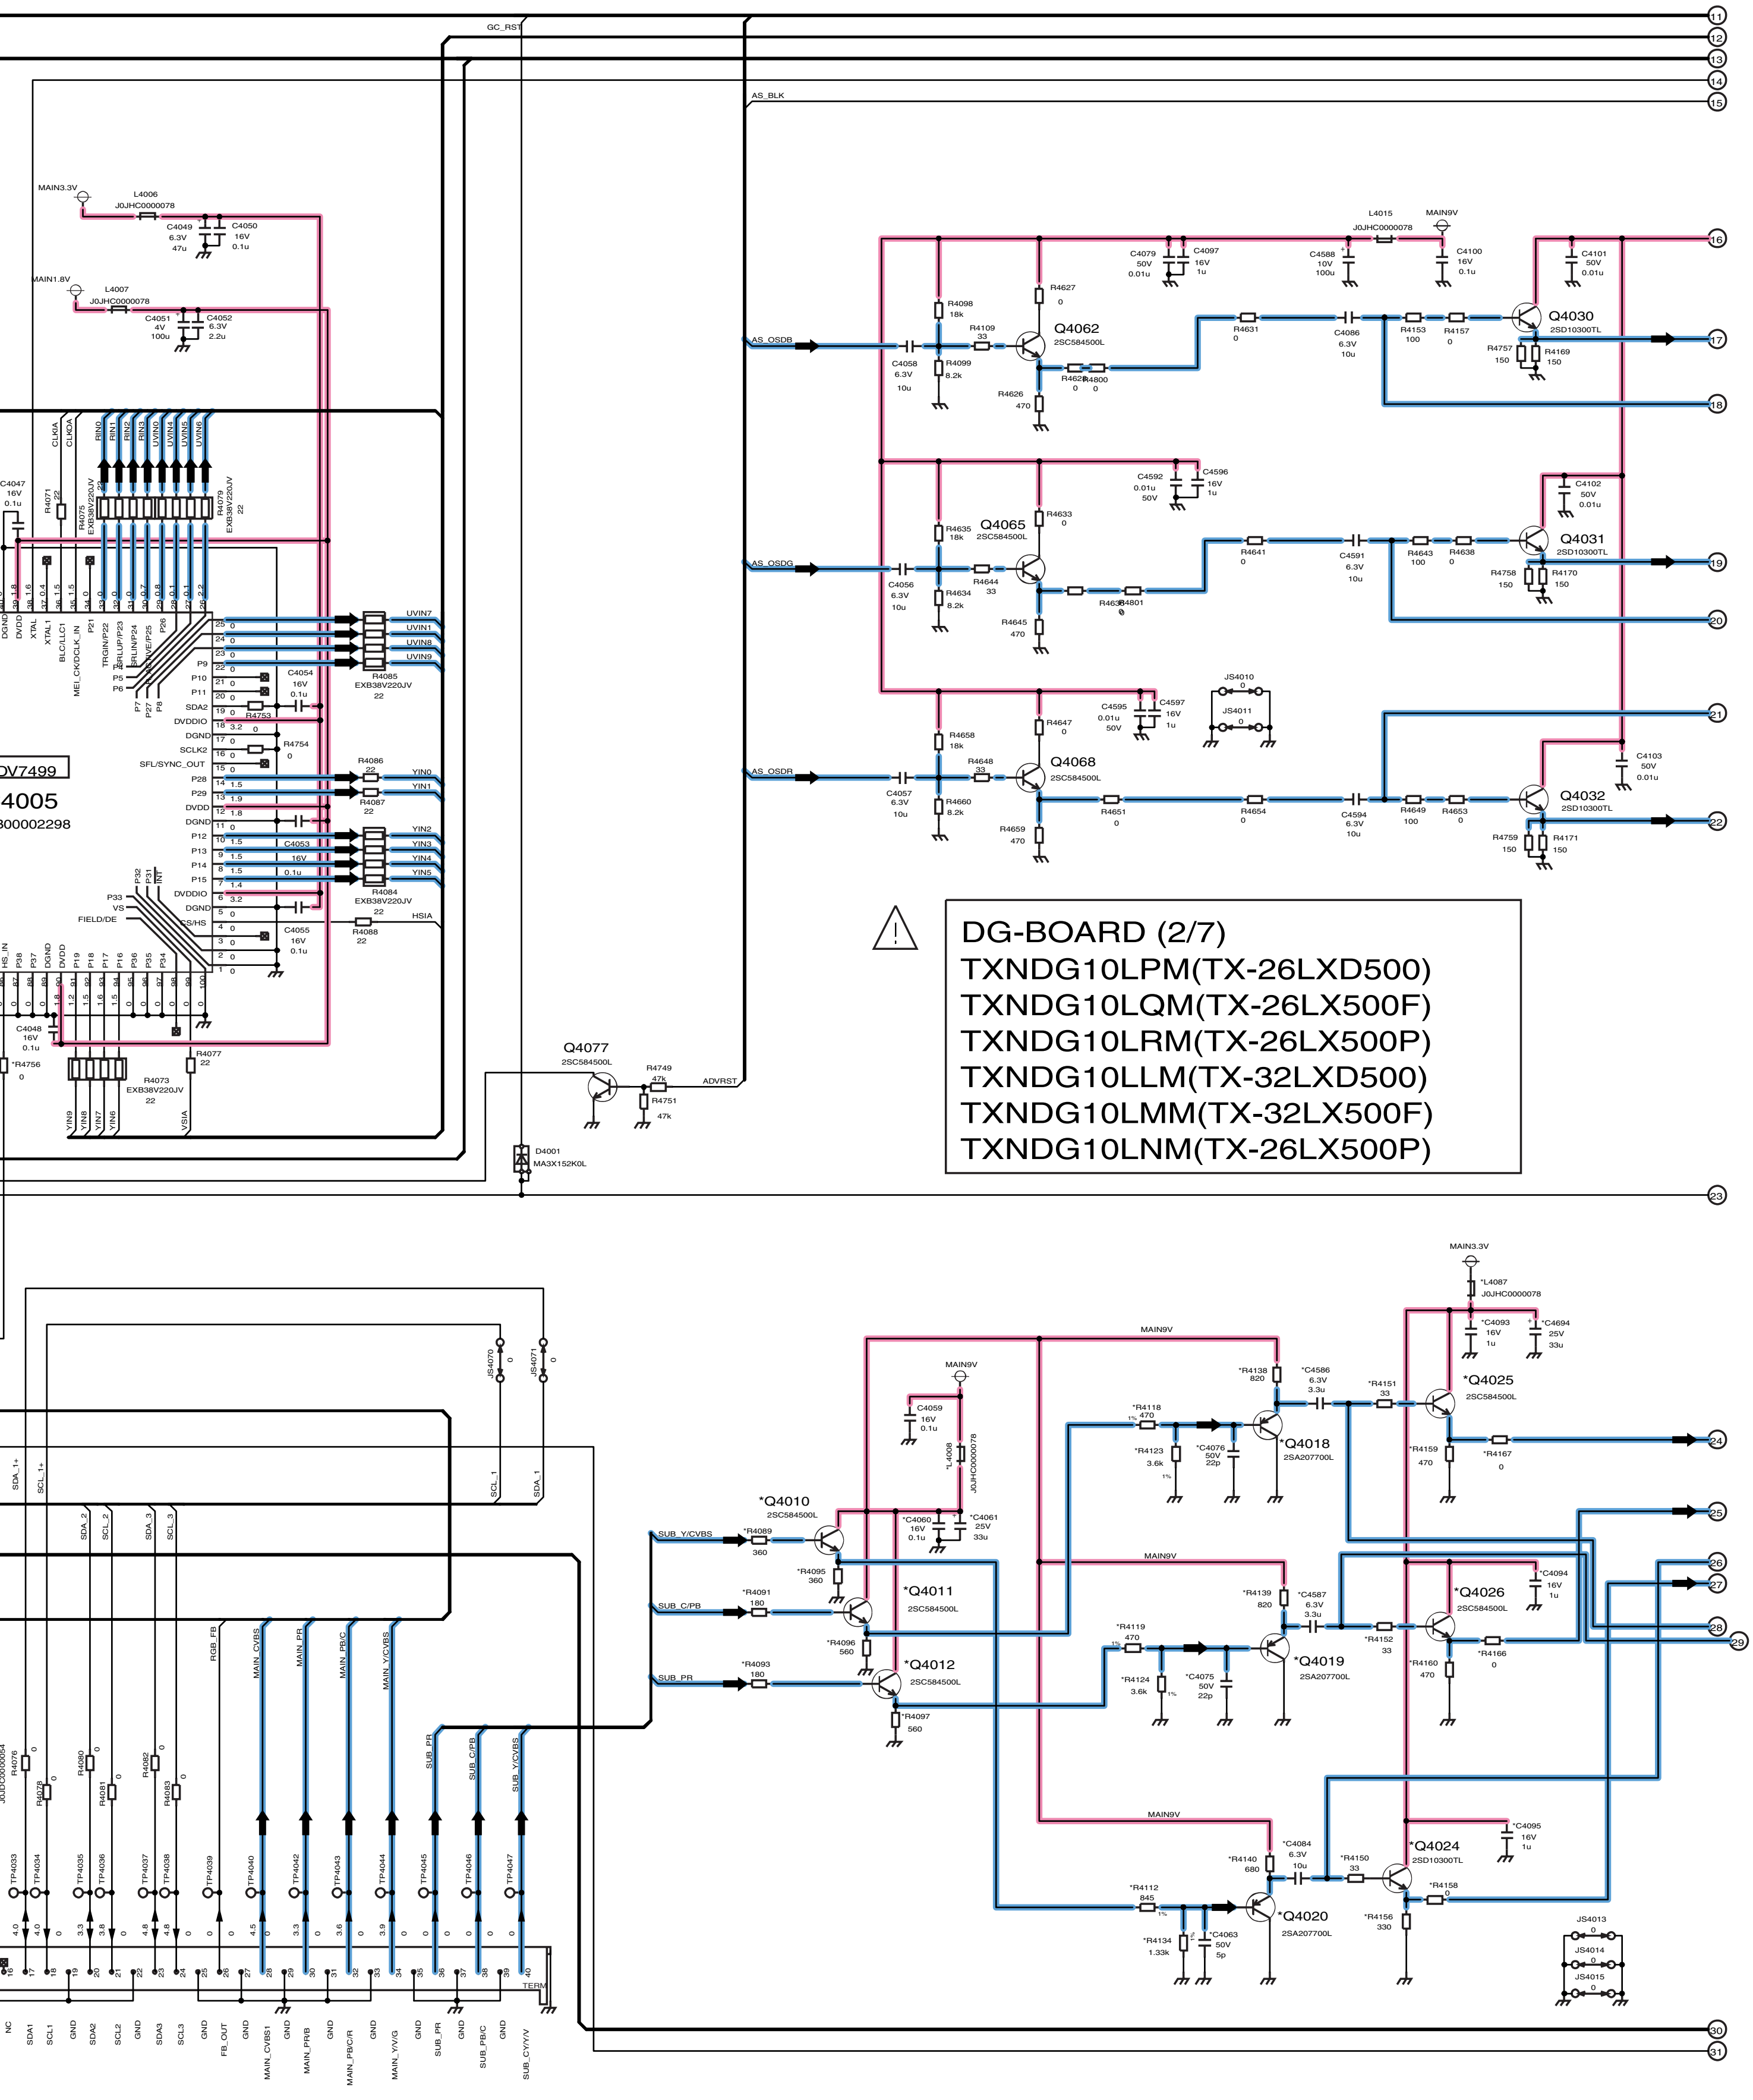
DG-BOARD (2/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
GC_RST
AS_BLK
AS_OSDB
AS_OSDG
AS_OSDR
ADVRST
MAIN3.3V
MAIN1.8V
MAIN9V
L4006 J0JHC0000078
L4007 J0JHC0000078
L4015 J0JHC0000078
Q4062 2SC584500L
Q4065 2SC584500L
Q4068 2SC584500L
Q4030 2SD10300TL
Q4031 2SD10300TL
Q4032 2SD10300TL
Q4077 2SC584500L
D4001 MA3X152K0L
*Q4010 2SC584500L
*Q4011 2SC584500L
*Q4012 2SC584500L
*Q4018 2SA207700L
*Q4019 2SA207700L
*Q4020 2SA207700L
*Q4024 2SD10300TL
*Q4025 2SC584500L
*Q4026 2SC584500L
SUB_Y/CVBS
SUB_C/PB
SUB_PR
MAIN_CVBS
MAIN_PR
MAIN_PB/C
MAIN_Y/CVBS
RGB_FB
JS4070
JS4071
JS4010
JS4011
JS4013
JS4014
JS4015
R4085 EXB38V220JV
R4084 EXB38V220JV
R4073 EXB38V220JV
UVIN7
UVIN1
UVIN8
UVIN9
YIN0
YIN1
YIN2
YIN3
YIN4
YIN5
HSIA
DV7499
4005
NC
SDA1
SCL1
GND
SDA2
SCL2
SDA3
SCL3
FB_OUT
MAIN_CVBS1
MAIN_PR/B
MAIN_PB/C/R
MAIN_Y/V/G
SUB_PR
SUB_PB/C
SUB_CY/YV
TERM
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (2 of 7) Schematic Diagram

14 15 16 17 18

11.18. DG-Board (3 of 7) Schematic Diagram

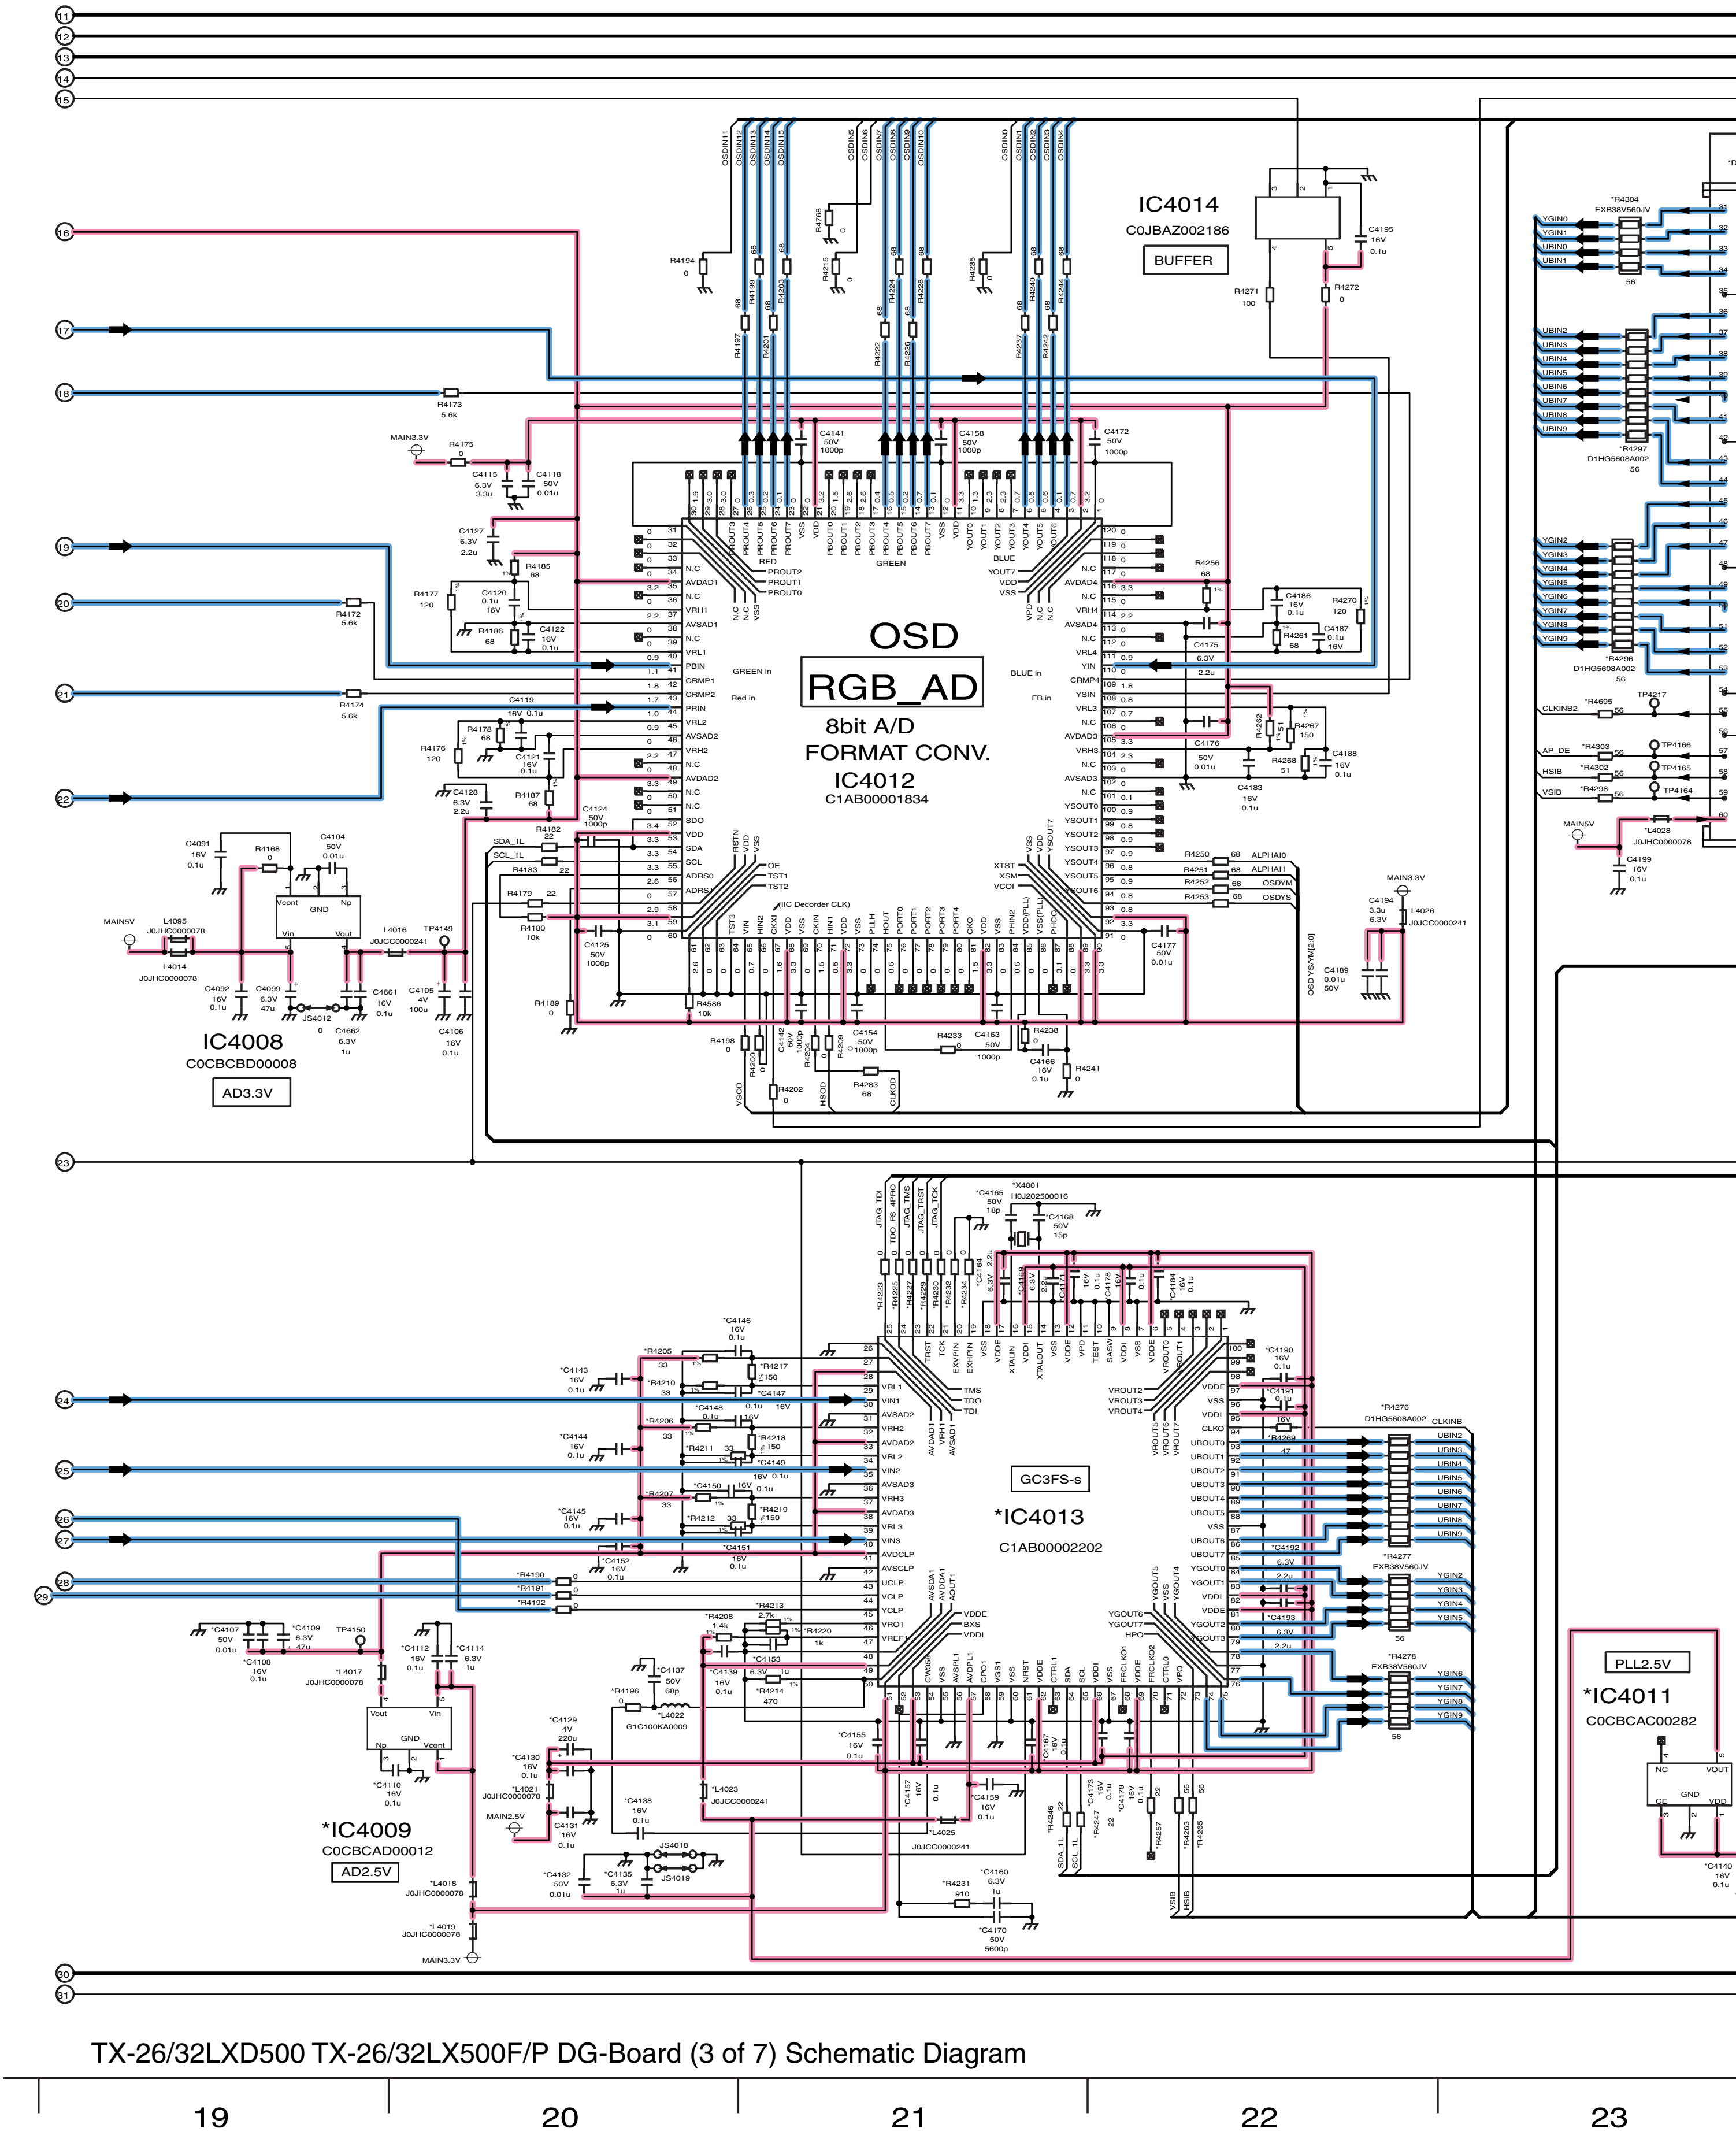
OSD
RGB_AD
8bit A/D
FORMAT CONV.
IC4012
C1AB00001834
IC4014
C0JBAZ002186
BUFFER
IC4008
C0CBCBD00008
AD3.3V
GC3FS-s
*IC4013
C1AB00002202
*IC4009
C0CBCAD00012
AD2.5V
PLL2.5V
*IC4011
C0CBCAC00282
GREEN in
Red in
BLUE in
FB in
MAIN3.3V
MAIN5V
MAIN2.5V
SDA_1L
SCL_1L
VSOO
HSOO
CLKOO
OSD YS/YM[2:0]
ALPHAI0
ALPHAI1
OSDYM
OSDYS
CLKINB2
AP_DE
HSIB
VSIB
TP4149
TP4150
TP4164
TP4165
TP4166
TP4217
*X4001
H0J202500016
D1HG5608A002
EXB38V560JV
JS4012
JS4018
JS4019
19
20
21
22
23

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (3 of 7) Schematic Diagram

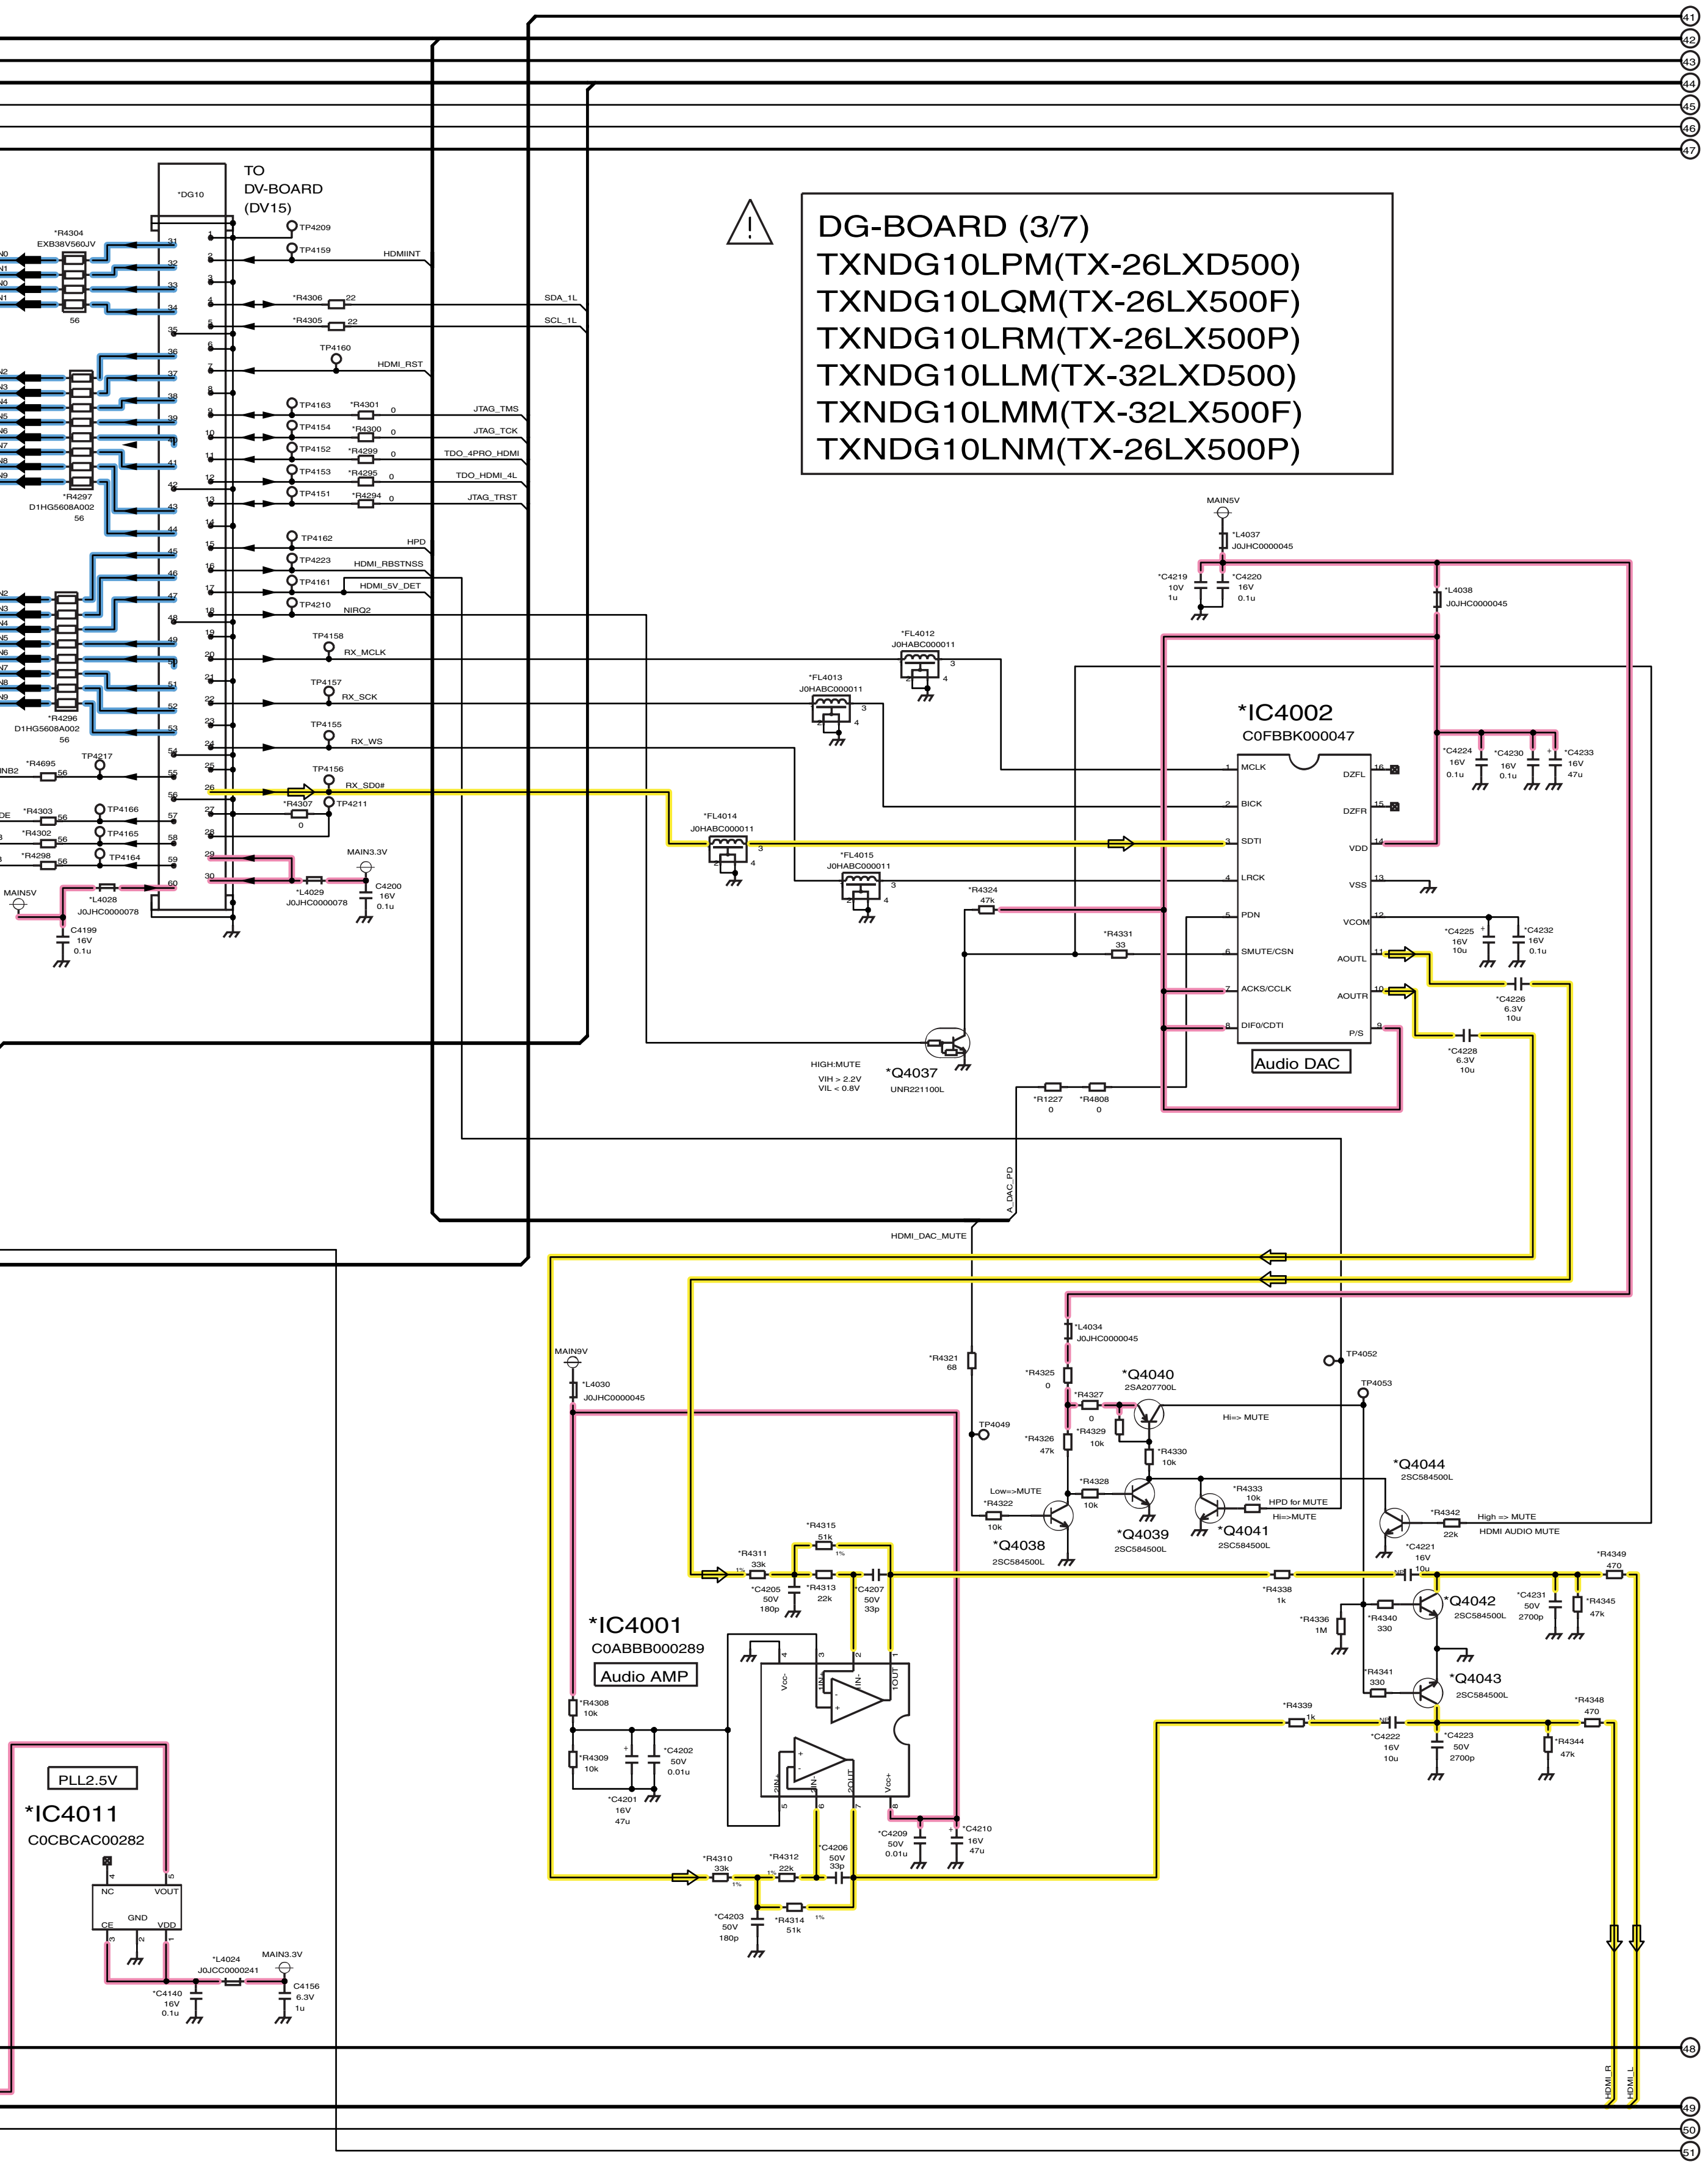
TO DV-BOARD (DV15)
*DG10
*IC4002
C0FBBK000047
Audio DAC
MCLK
BICK
SDTI
LRCK
PDN
SMUTE/CSN
ACKS/CCLK
DIF0/CDTI
DZFL
DZFR
VDD
VSS
VCOM
AOUTL
AOUTR
P/S
*IC4001
C0ABBB000289
Audio AMP
PLL2.5V
*IC4011
C0CBCAC00282
*Q4037
UNR221100L
HIGH:MUTE
VIH > 2.2V
VIL < 0.8V
*Q4038
*Q4039
*Q4040
*Q4041
*Q4042
*Q4043
*Q4044
MAIN5V
MAIN3.3V
MAIN9V
HDMIINT
SDA_1L
SCL_1L
HDMI_RST
JTAG_TMS
JTAG_TCK
TDO_4PRO_HDMI
TDO_HDMI_4L
JTAG_TRST
HPD
HDMI_RBSTNSS
HDMI_5V_DET
NIRQ2
RX_MCLK
RX_SCK
RX_WS
RX_SD0#
A_DAC_PD
HDMI_DAC_MUTE
Low=>MUTE
Hi=> MUTE
HPD for MUTE
High => MUTE
HDMI AUDIO MUTE
HDMI_R
HDMI_L
41
42
43
44
45
46
47
48
49
50
51

DG-BOARD (3/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (3 of 7) Schematic Diagram

23	24	25	26	27

11.19. DG-Board (4 of 7) Schematic Diagram

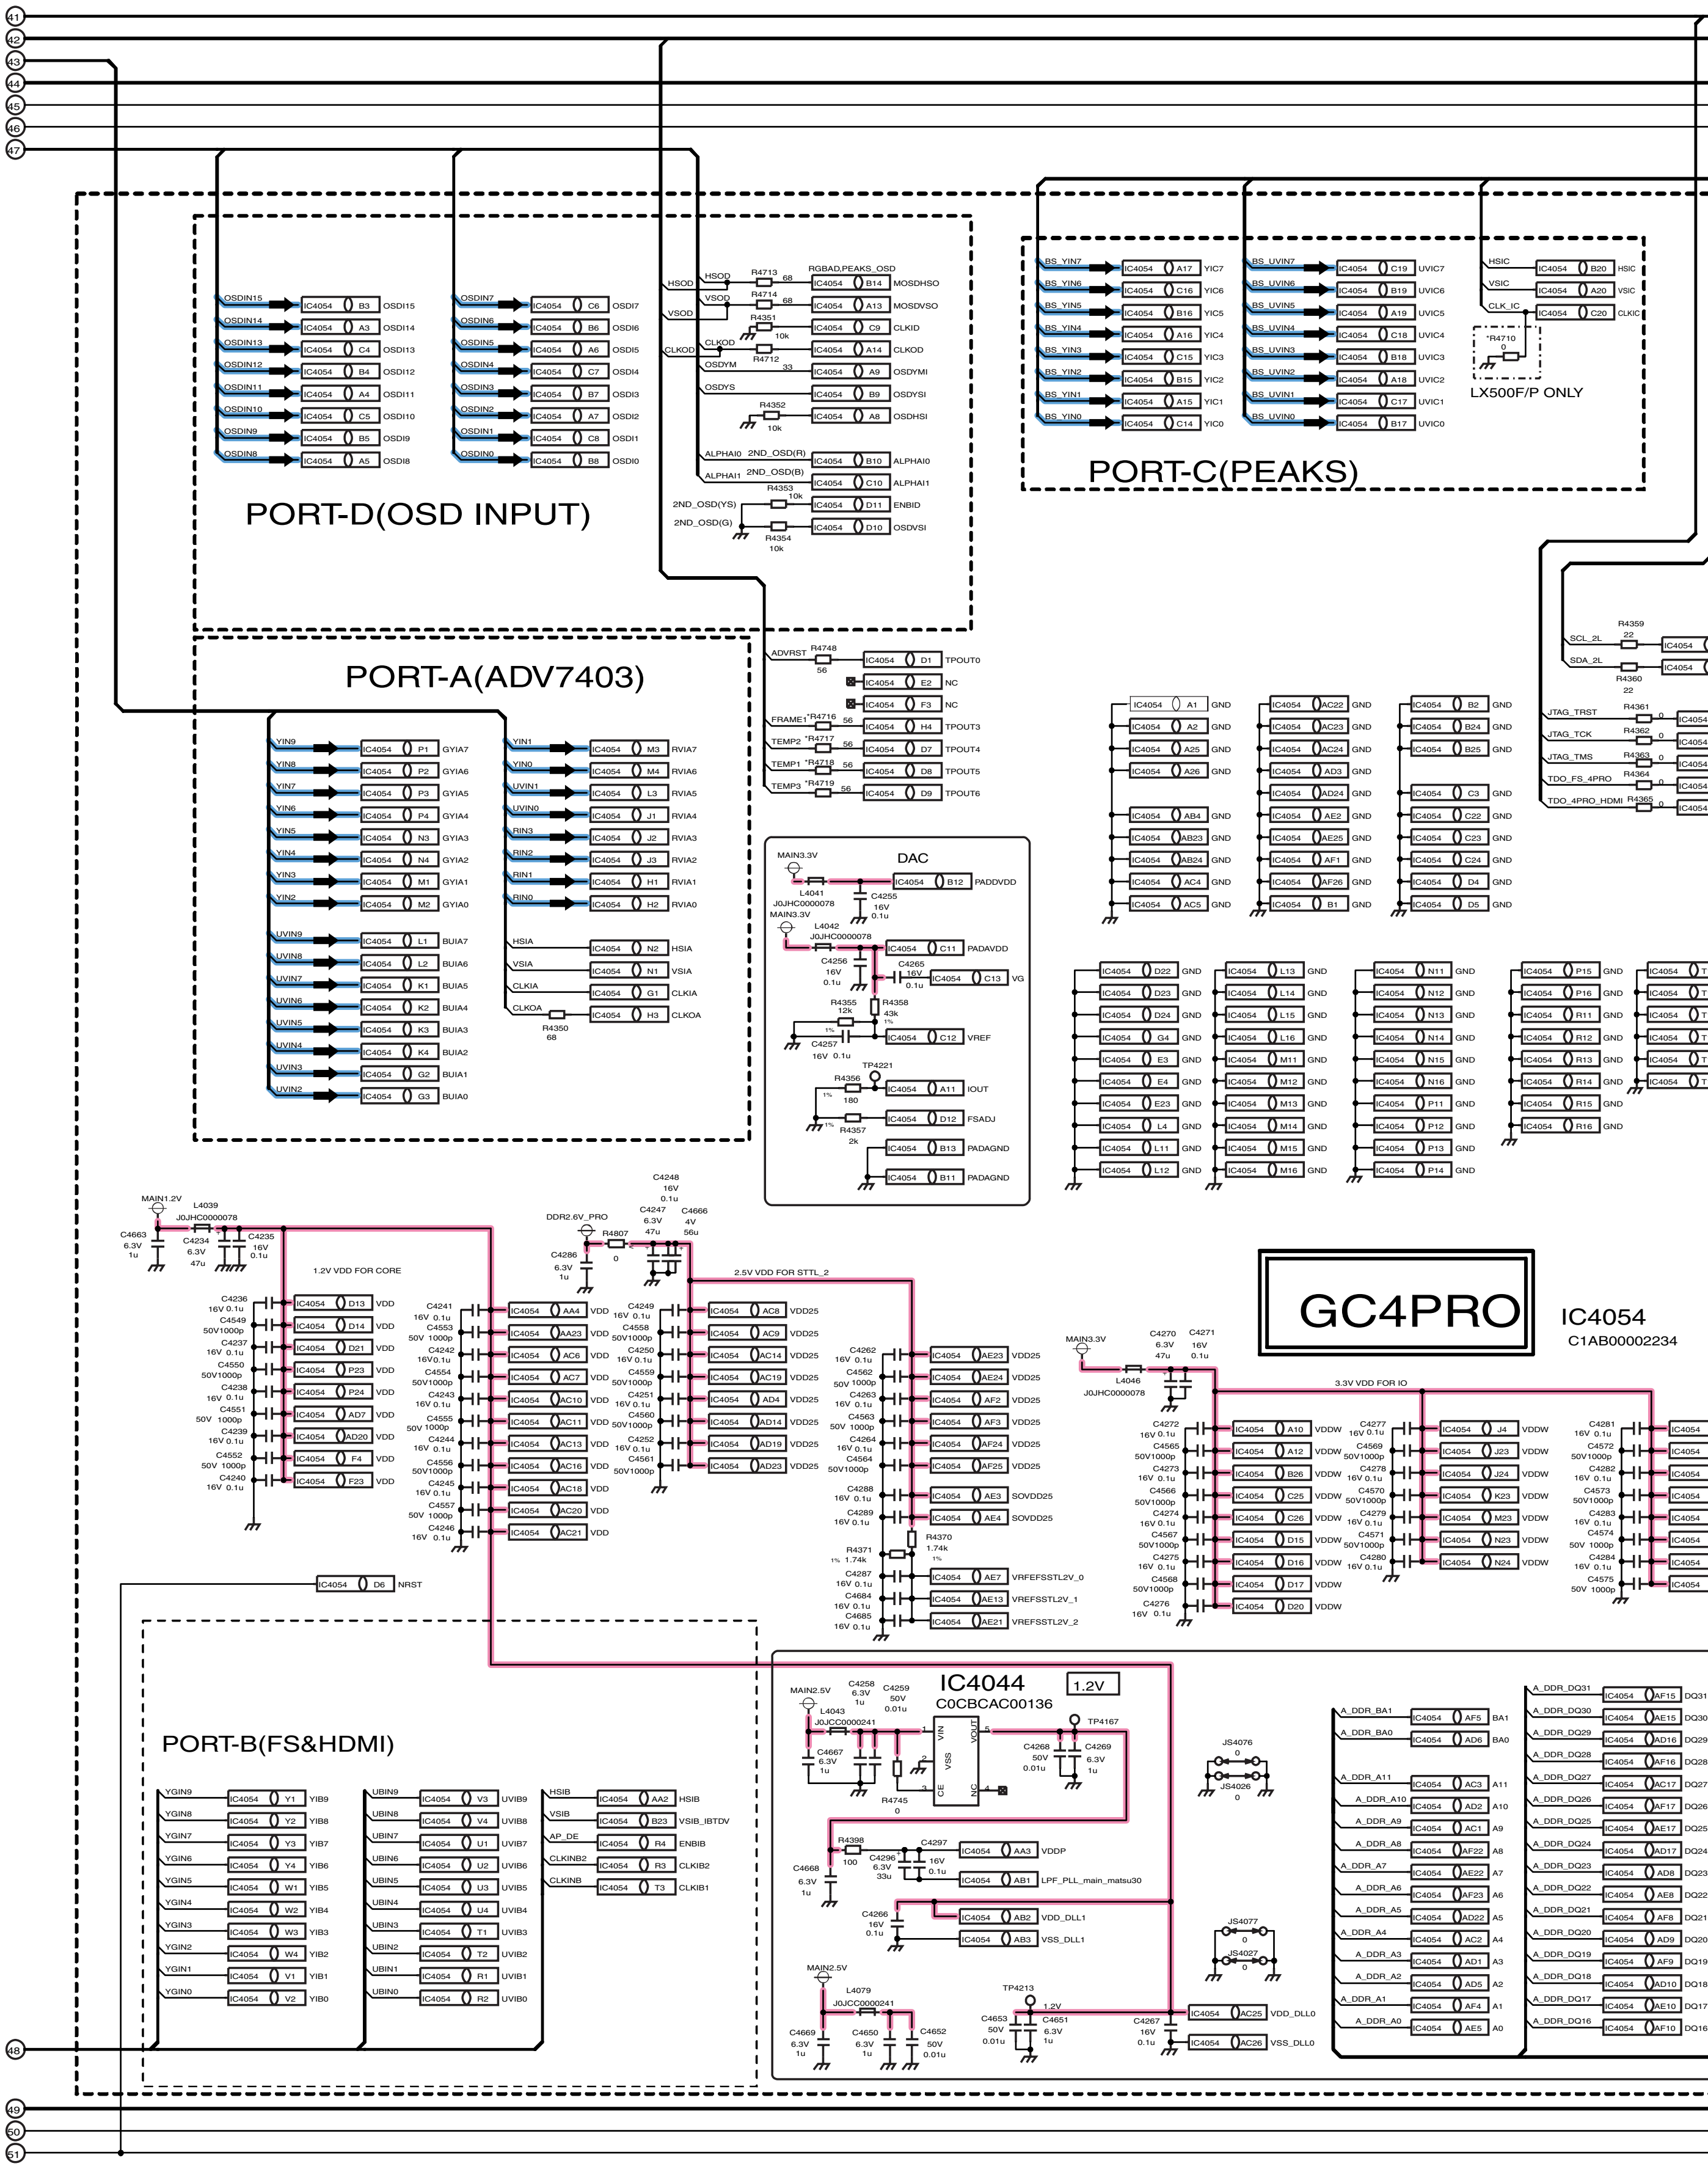
PORT-D(OSD INPUT)
PORT-C(PEAKS)
LX500F/P ONLY
PORT-A(ADV7403)
DAC
GC4PRO
IC4054
C1AB00002234
1.2V VDD FOR CORE
2.5V VDD FOR STTL_2
3.3V VDD FOR IO
PORT-B(FS&HDMI)
IC4044
C0CBCAC00136
1.2V
MAIN1.2V
MAIN3.3V
MAIN2.5V
DDR2.6V_PRO
NRST

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (4 of 7) Schematic Diagram

28 29 30 31 32

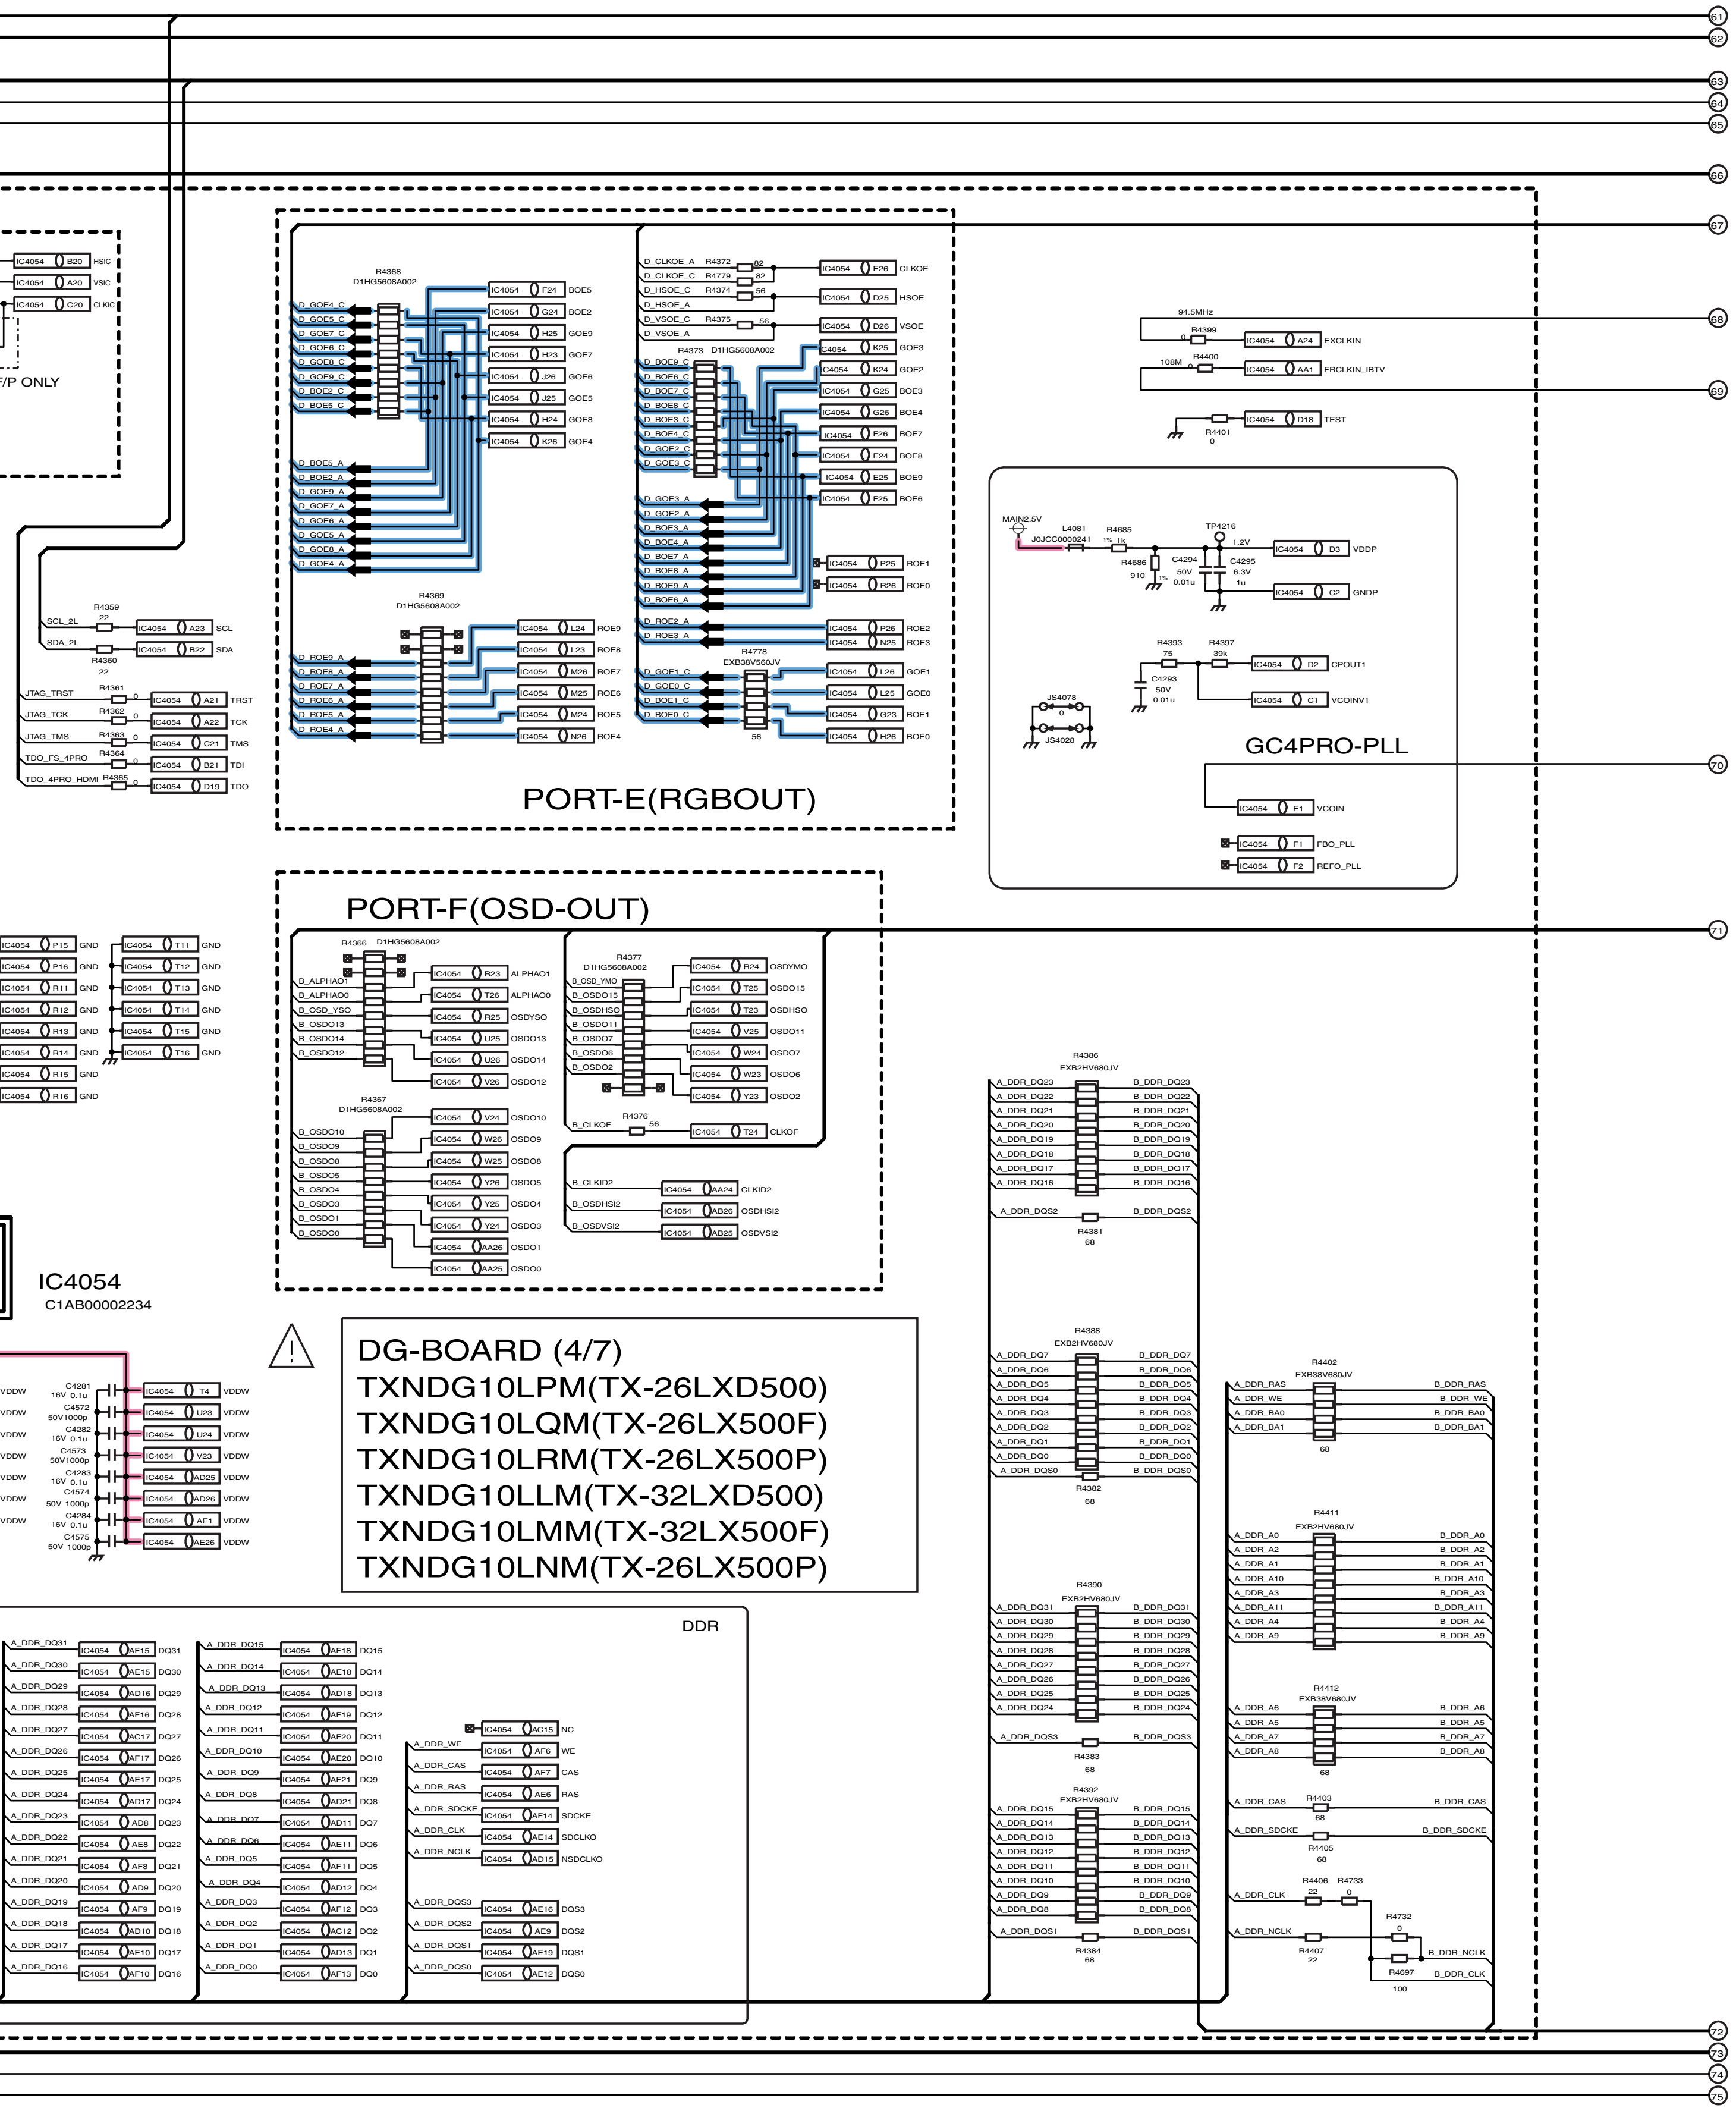
PORT-E(RGBOUT)
PORT-F(OSD-OUT)
GC4PRO-PLL
DDR
IC4054
C1AB00002234
F/P ONLY
MAIN2.5V
94.5MHz
EXCLKIN
FRCLKIN_IBTV
TEST
VDDP
GNDP
CPOUT1
VCOINV1
VCOIN
FBO_PLL
REFO_PLL
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75

DG-BOARD (4/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

11.20. DG-Board (5 of 7) Schematic Diagram

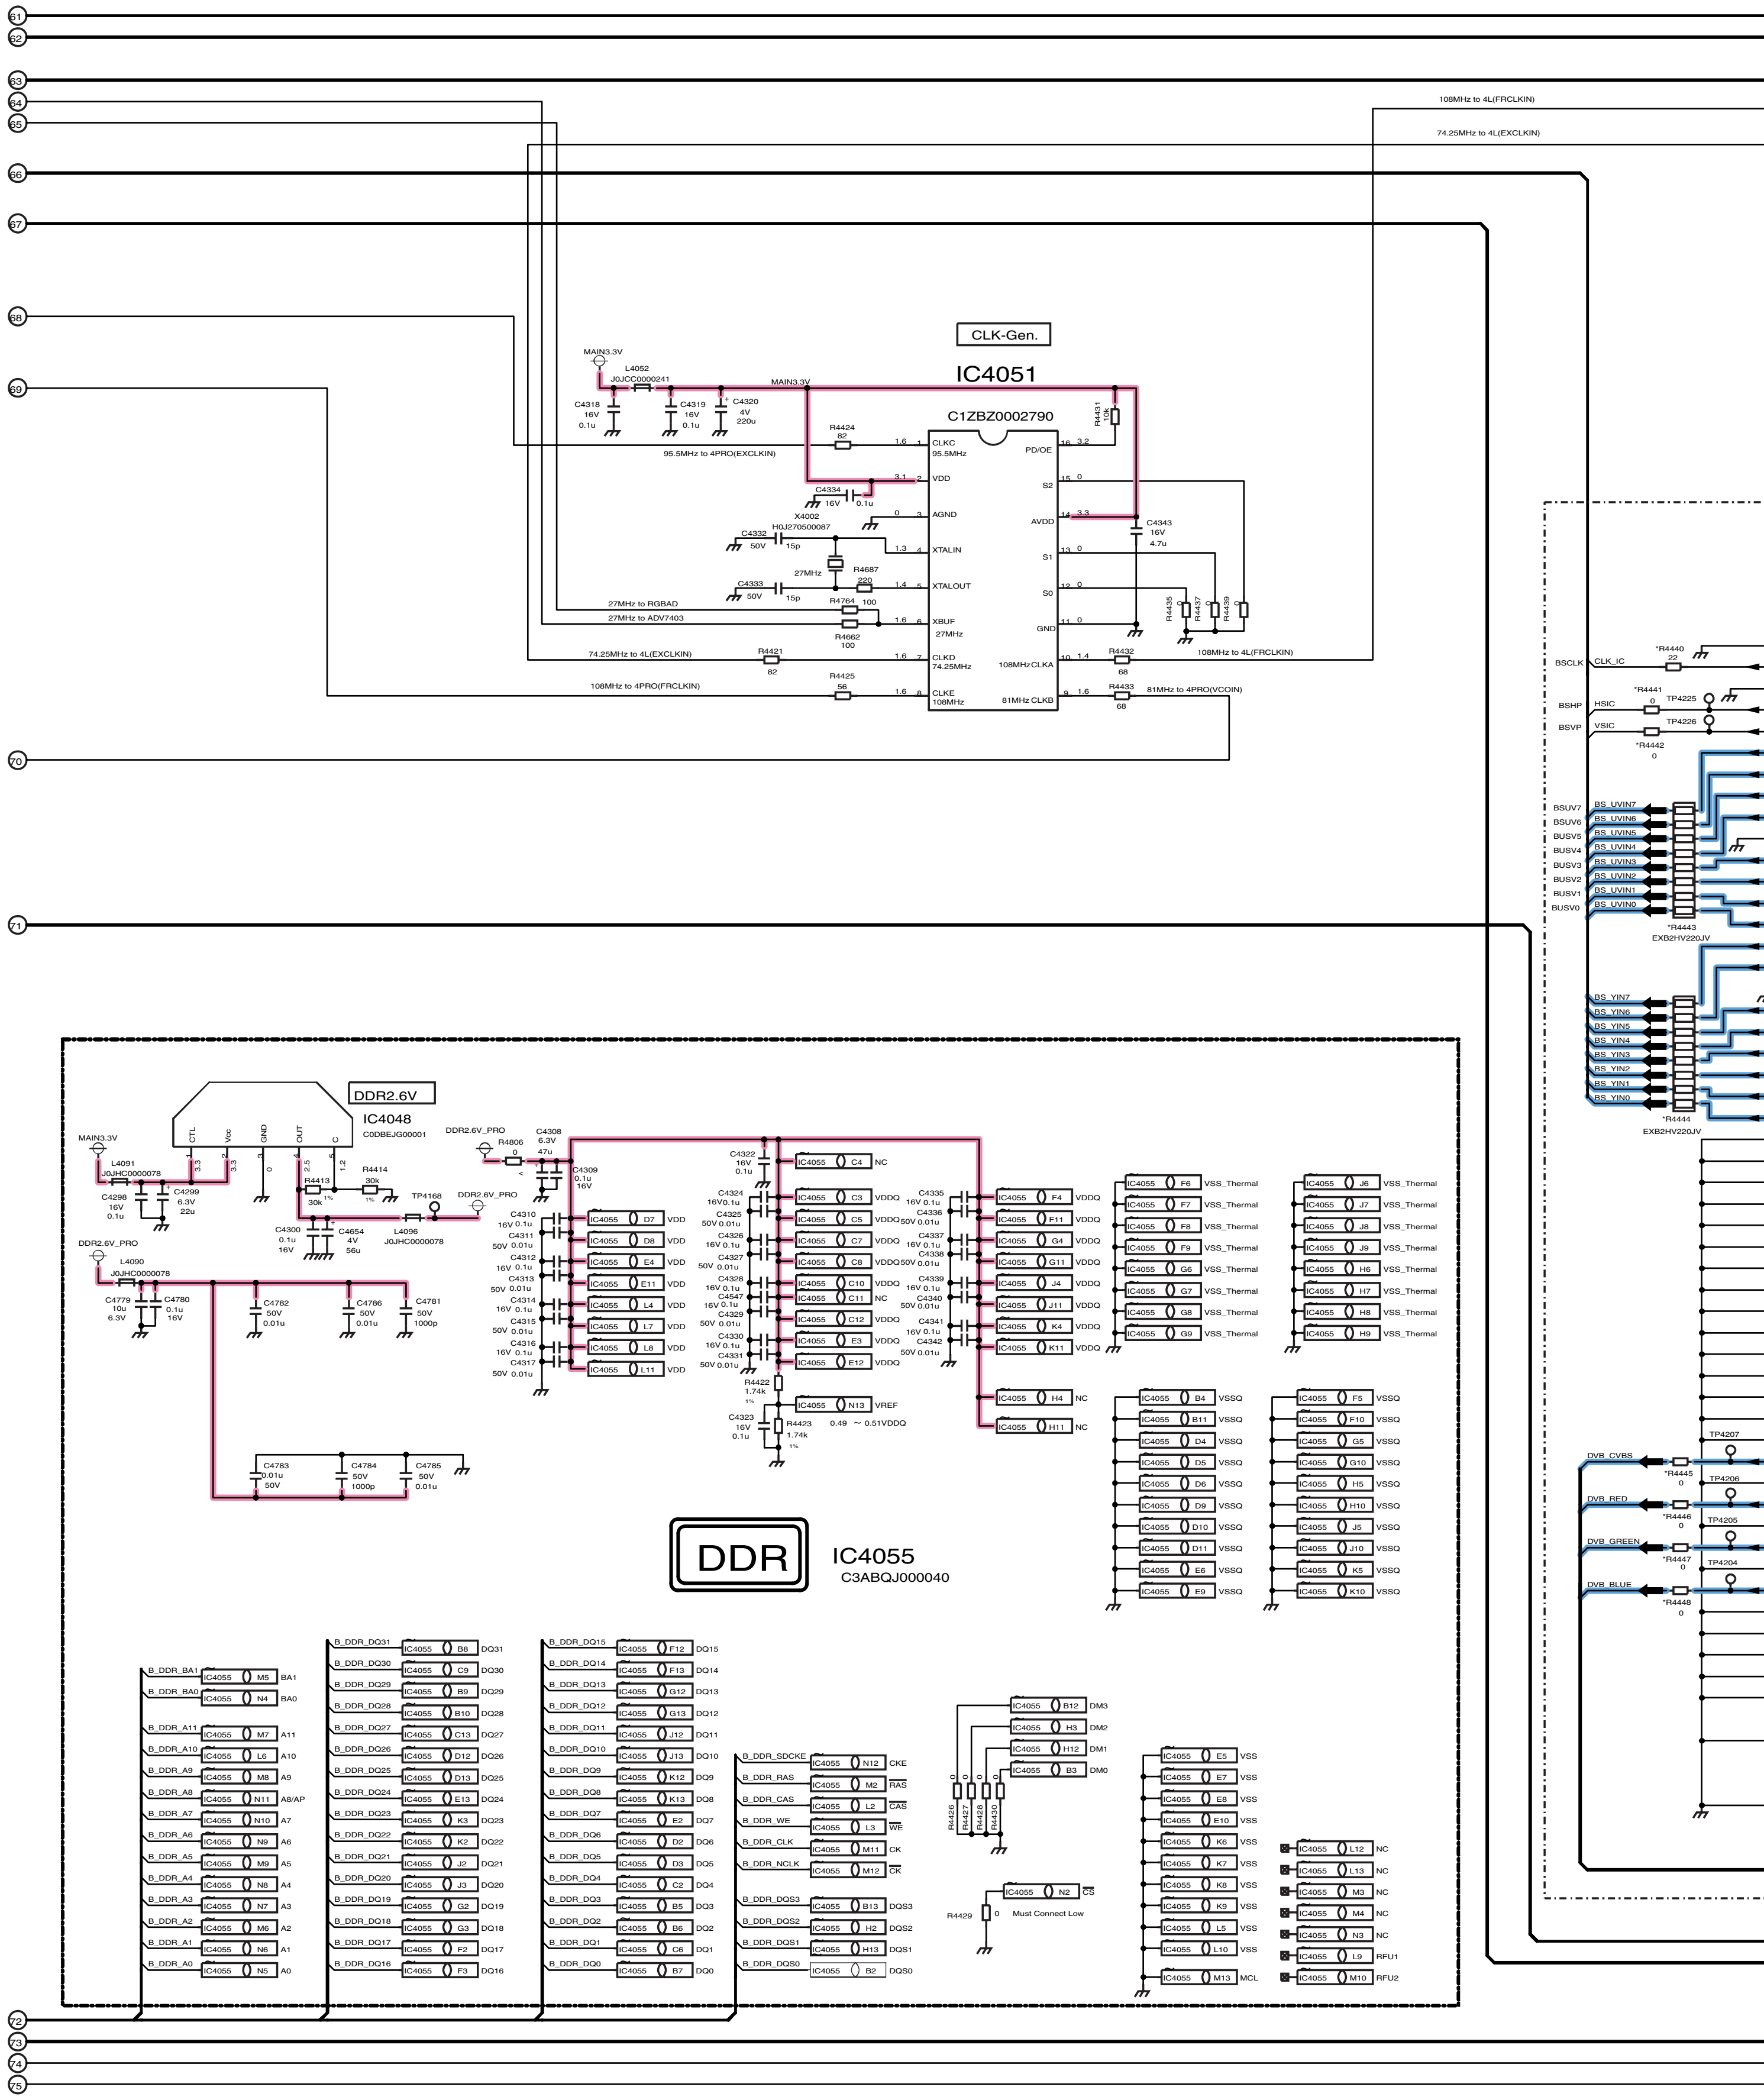
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
CLK-Gen.
IC4051
C1ZBZ0002790
MAIN3.3V
L4052
J0JCC0000241
C4318 16V 0.1u
C4319 16V 0.1u
C4320 4V 220u
R4424 82
95.5MHz to 4PRO(EXCLKIN)
C4334 16V 0.1u
C4332 50V 15p
X4002 H0J270500087
27MHz
R4687 220
C4333 50V 15p
R4764 100
27MHz to RGBAD
27MHz to ADV7403
R4662 100
74.25MHz to 4L(EXCLKIN)
R4421 82
108MHz to 4PRO(FRCLKIN)
R4425 56
CLKC 95.5MHz
VDD
AGND
XTALIN
XTALOUT
XBUF 27MHz
CLKD 74.25MHz
CLKE 108MHz
PD/OE
S2
AVDD
S1
S0
GND
108MHzCLKA
81MHz CLKB
R4431 10k
C4343 16V 4.7u
R4435
R4437
R4439
R4432 68
R4433 68
108MHz to 4L(FRCLKIN)
81MHz to 4PRO(VCOIN)
74.25MHz to 4L(EXCLKIN)
BSCLK
CLK_IC
*R4440 22
BSHP
HSIC
*R4441 0
TP4225
TP4226
BSVP
VSIC
*R4442 0
BSUV7
BSUV6
BSUV5
BSUV4
BSUV3
BSUV2
BSUV1
BSUV0
BS_UVIN7
BS_UVIN6
BS_UVIN5
BS_UVIN4
BS_UVIN3
BS_UVIN2
BS_UVIN1
BS_UVIN0
*R4443 EXB2HV220JV
BS_YIN7
BS_YIN6
BS_YIN5
BS_YIN4
BS_YIN3
BS_YIN2
BS_YIN1
BS_YIN0
*R4444 EXB2HV220JV
DVB_CVBS
DVB_RED
DVB_GREEN
DVB_BLUE
*R4445 0
*R4446 0
*R4447 0
*R4448 0
TP4207
TP4206
TP4205
TP4204
DDR2.6V
IC4048
C0DBEJG00001
CTL
Vcc
GND
OUT
C
MAIN3.3V
L4091 J0JHC0000078
C4298 16V 0.1u
C4299 6.3V 22u
R4413 30k
R4414 30k
TP4168
DDR2.6V_PRO
C4300 0.1u 16V
C4654 4V 56u
L4096 J0JHC0000078
DDR2.6V_PRO
L4090 J0JHC0000078
C4779 10u 6.3V
C4780 0.1u 16V
C4782 50V 0.01u
C4786 50V 0.01u
C4781 50V 1000p
C4783 0.01u 50V
C4784 50V 1000p
C4785 50V 0.01u
R4806 0
C4308 6.3V 47u
C4309 0.1u 16V
C4322 16V 0.1u
R4422 1.74k
C4323 16V 0.1u
R4423 1.74k
0.49 ~ 0.51VDDQ
VREF
DDR
IC4055
C3ABQJ000040
VDD
VDDQ
VSS_Thermal
VSSQ
VSS
NC
MCL
RFU1
RFU2
B_DDR_BA1
B_DDR_BA0
B_DDR_A11
B_DDR_A10
B_DDR_A9
B_DDR_A8
B_DDR_A7
B_DDR_A6
B_DDR_A5
B_DDR_A4
B_DDR_A3
B_DDR_A2
B_DDR_A1
B_DDR_A0
B_DDR_DQ31
B_DDR_DQ16
B_DDR_DQ15
B_DDR_DQ0
B_DDR_SDCKE
B_DDR_RAS
B_DDR_CAS
B_DDR_WE
B_DDR_CLK
B_DDR_NCLK
B_DDR_DQS3
B_DDR_DQS2
B_DDR_DQS1
B_DDR_DQS0
CKE
RAS
CAS
WE
CK
DQS3
DQS2
DQS1
DQS0
DM3
DM2
DM1
DM0
R4426
R4427
R4428
R4430
R4429 0
CS
Must Connect Low

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (5 of 7) Schematic Diagram

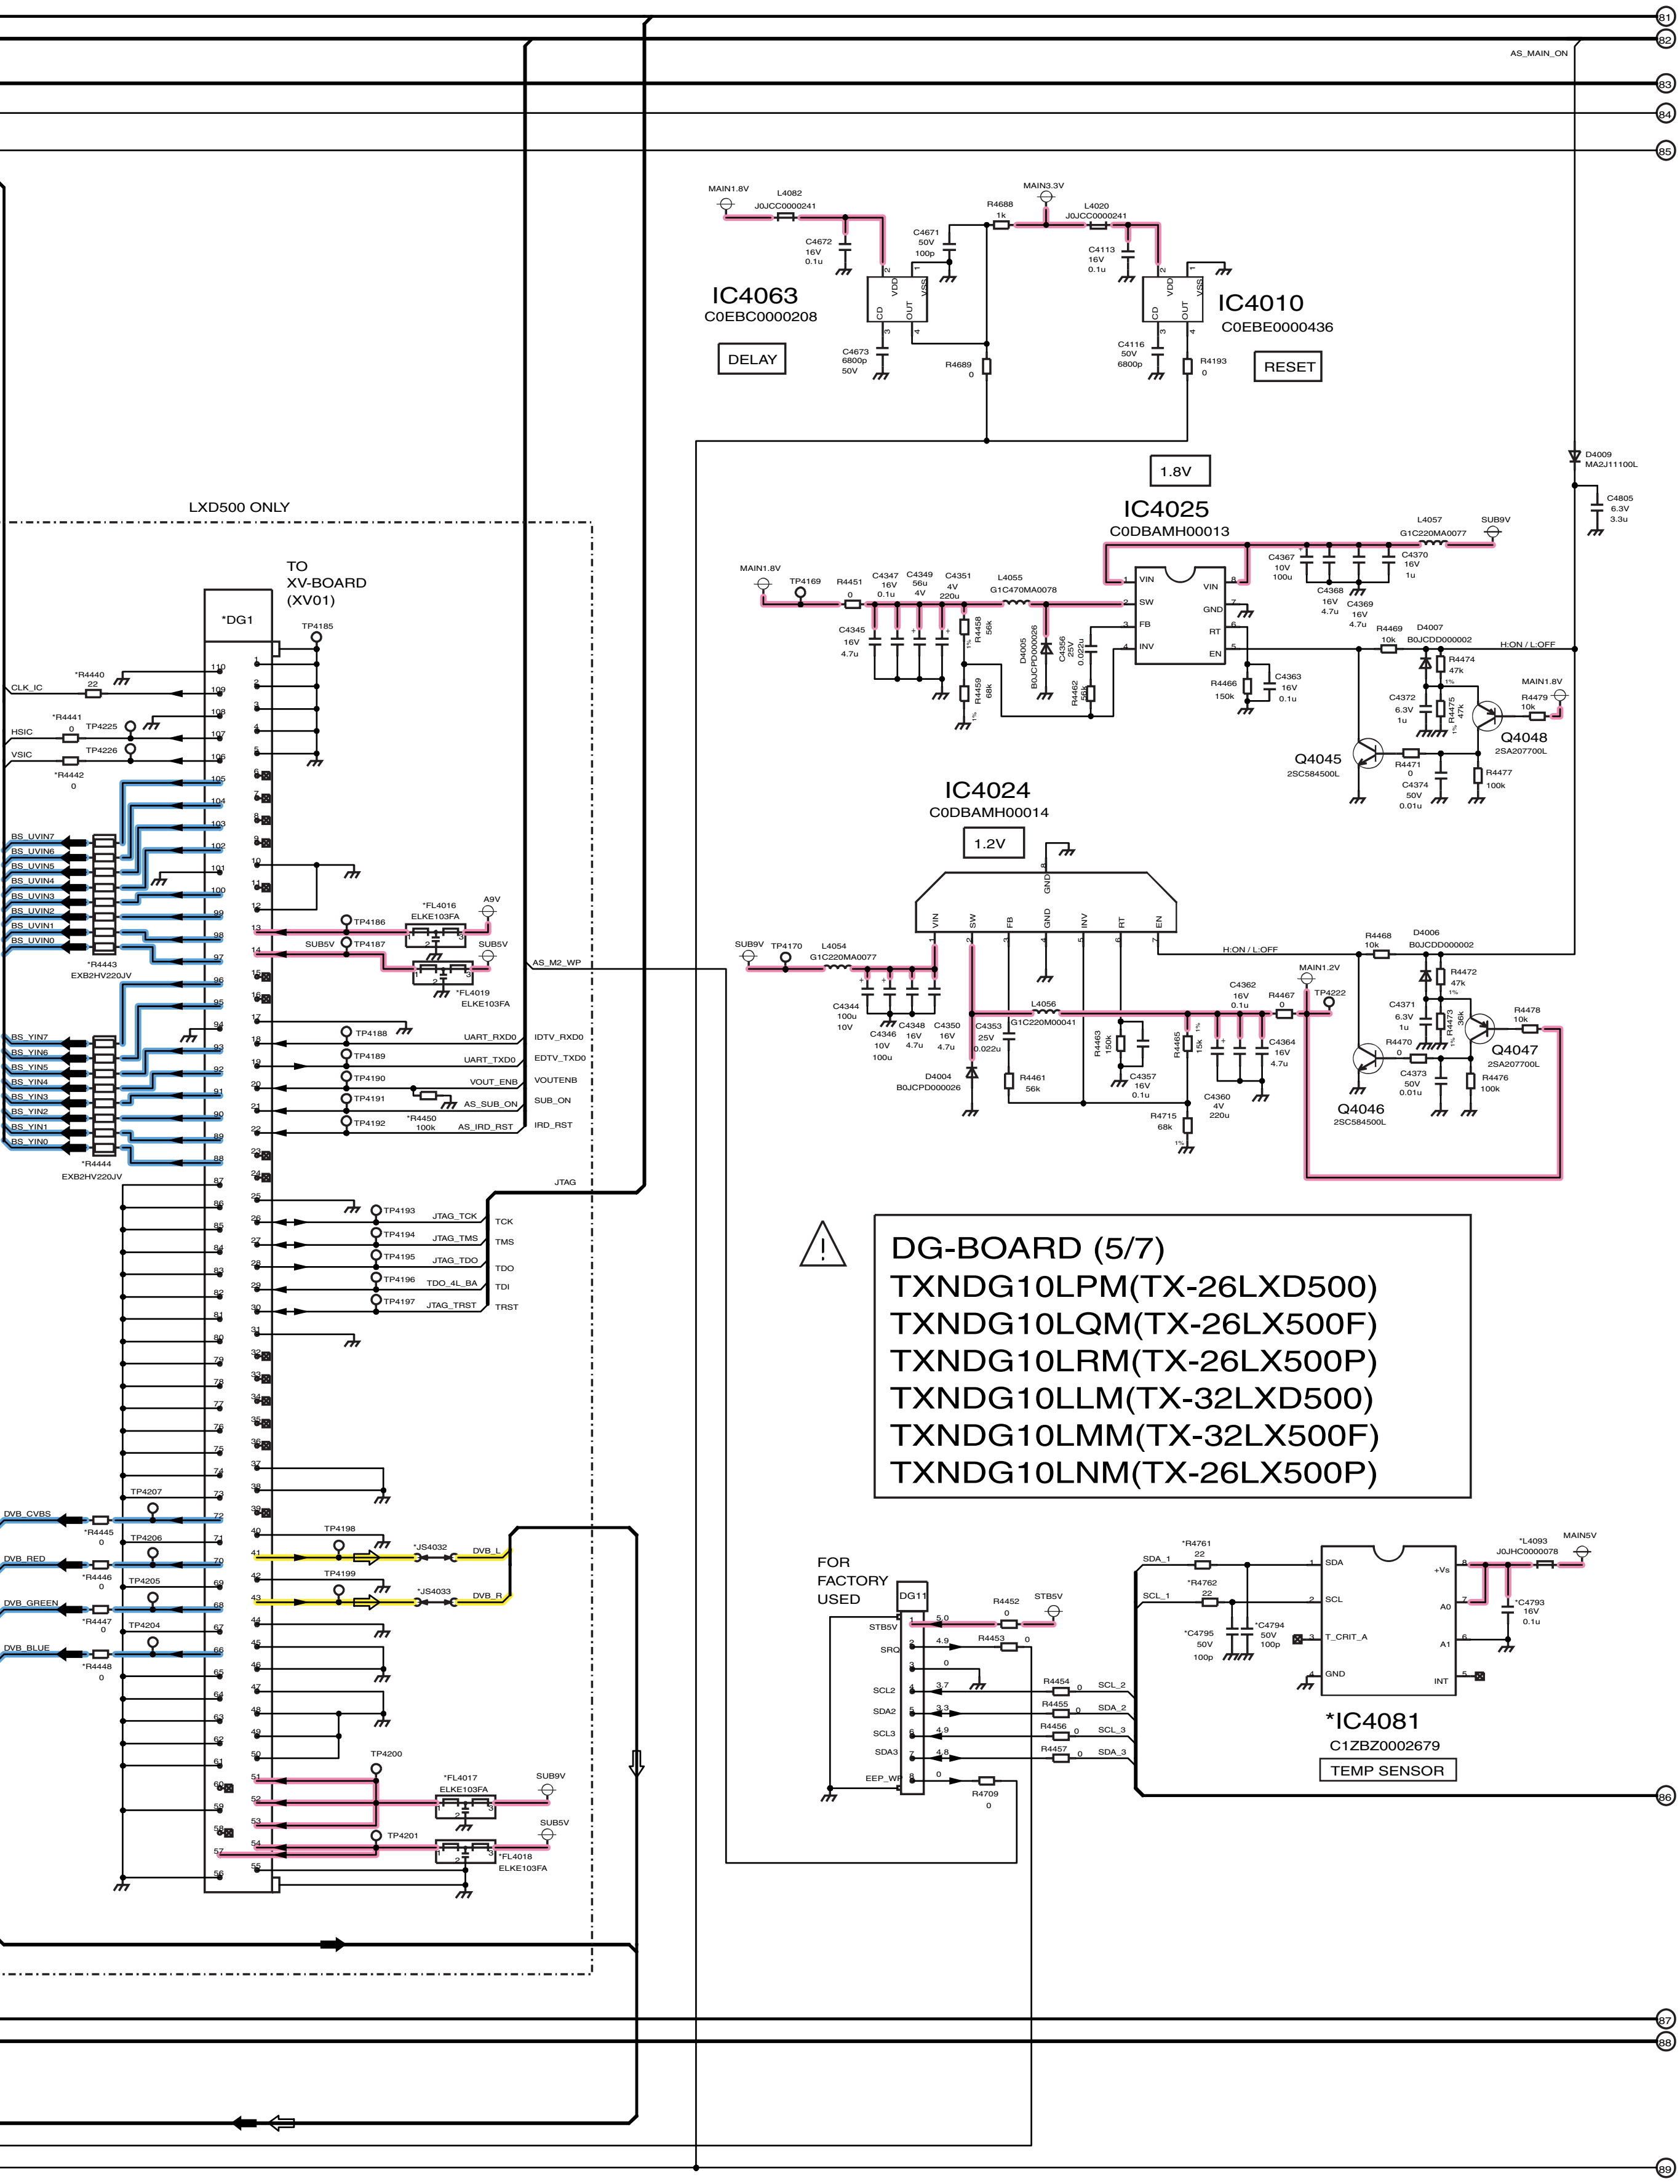
IC4063
C0EBC0000208
DELAY
IC4010
C0EBE0000436
RESET
IC4025
C0DBAMH00013
1.8V
IC4024
C0DBAMH00014
1.2V
Q4045
2SC584500L
Q4048
2SA207700L
Q4046
2SC584500L
Q4047
2SA207700L
D4009
MA2J11100L
LXD500 ONLY
TO
XV-BOARD
(XV01)
*DG1
FOR
FACTORY
USED
DG11
*IC4081
C1ZBZ0000267
TEMP SENSOR
MAIN1.8V
MAIN3.3V
MAIN1.2V
MAIN5V
SUB9V
SUB5V
STB5V
AS_MAIN_ON
H:ON / L:OFF
AS_M2_WP
JTAG
CLK_IC
HSIC
VSIC
BS_UVIN7
BS_UVIN6
BS_UVIN5
BS_UVIN4
BS_UVIN3
BS_UVIN2
BS_UVIN1
BS_UVIN0
BS_YIN7
BS_YIN6
BS_YIN5
BS_YIN4
BS_YIN3
BS_YIN2
BS_YIN1
BS_YIN0
DVB_CVBS
DVB_RED
DVB_GREEN
DVB_BLUE
DVB_L
DVB_R
UART_RXD0
UART_TXD0
VOUT_ENB
AS_SUB_ON
AS_IRD_RST
IDTV_RXD0
EDTV_TXD0
VOUTENB
SUB_ON
IRD_RST
JTAG_TCK
JTAG_TMS
JTAG_TDO
TDO_4L_BA
JTAG_TRST
TCK
TMS
TDO
TDI
TRST
SDA_1
SCL_1
SCL_2
SDA_2
SCL_3
SDA_3
81
82
83
84
85
86
87
88
89

DG-BOARD (5/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (5 of 7) Schematic Diagram

11.21. DG-Board (6 of 7) Schematic Diagram

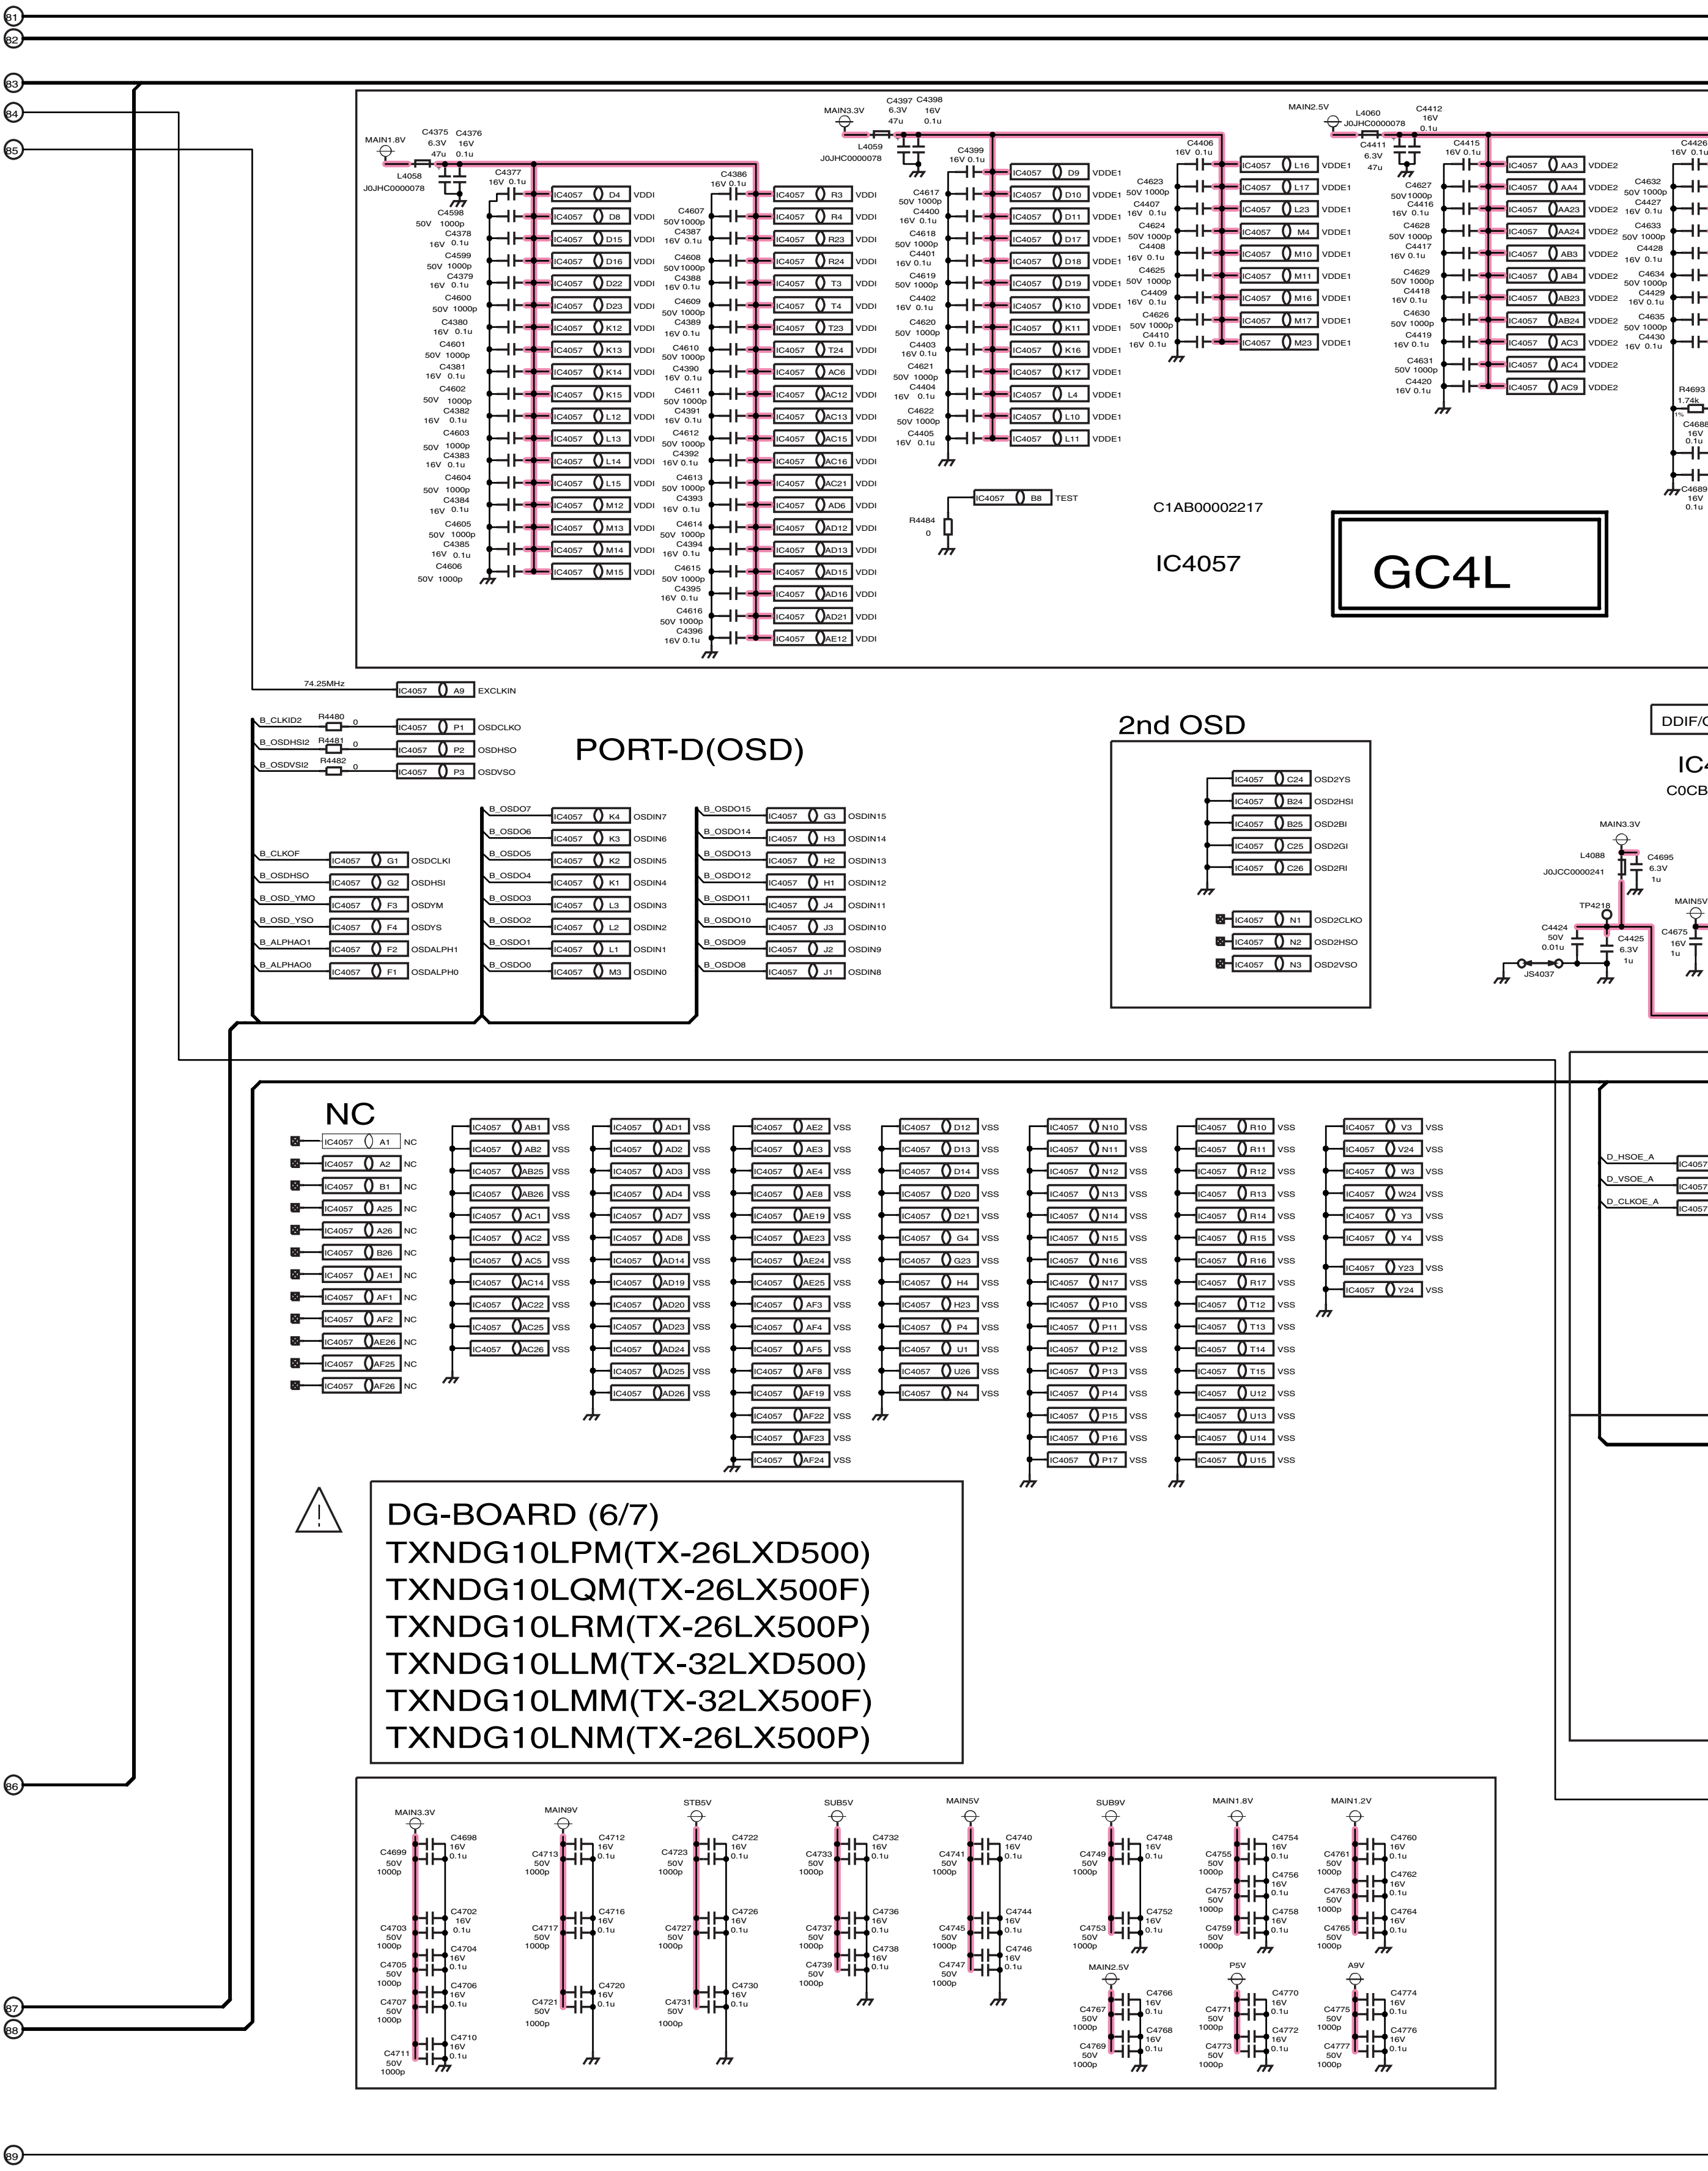
IC4057
C1AB00002217
GC4L
PORT-D(OSD)
2nd OSD
NC
DG-BOARD (6/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
MAIN1.8V
MAIN3.3V
MAIN2.5V
MAIN9V
STB5V
SUB5V
MAIN5V
SUB9V
MAIN1.2V
P5V
A9V
74.25MHz
EXCLKIN

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (6 of 7) Schematic Diagram

46	47	48	49	50

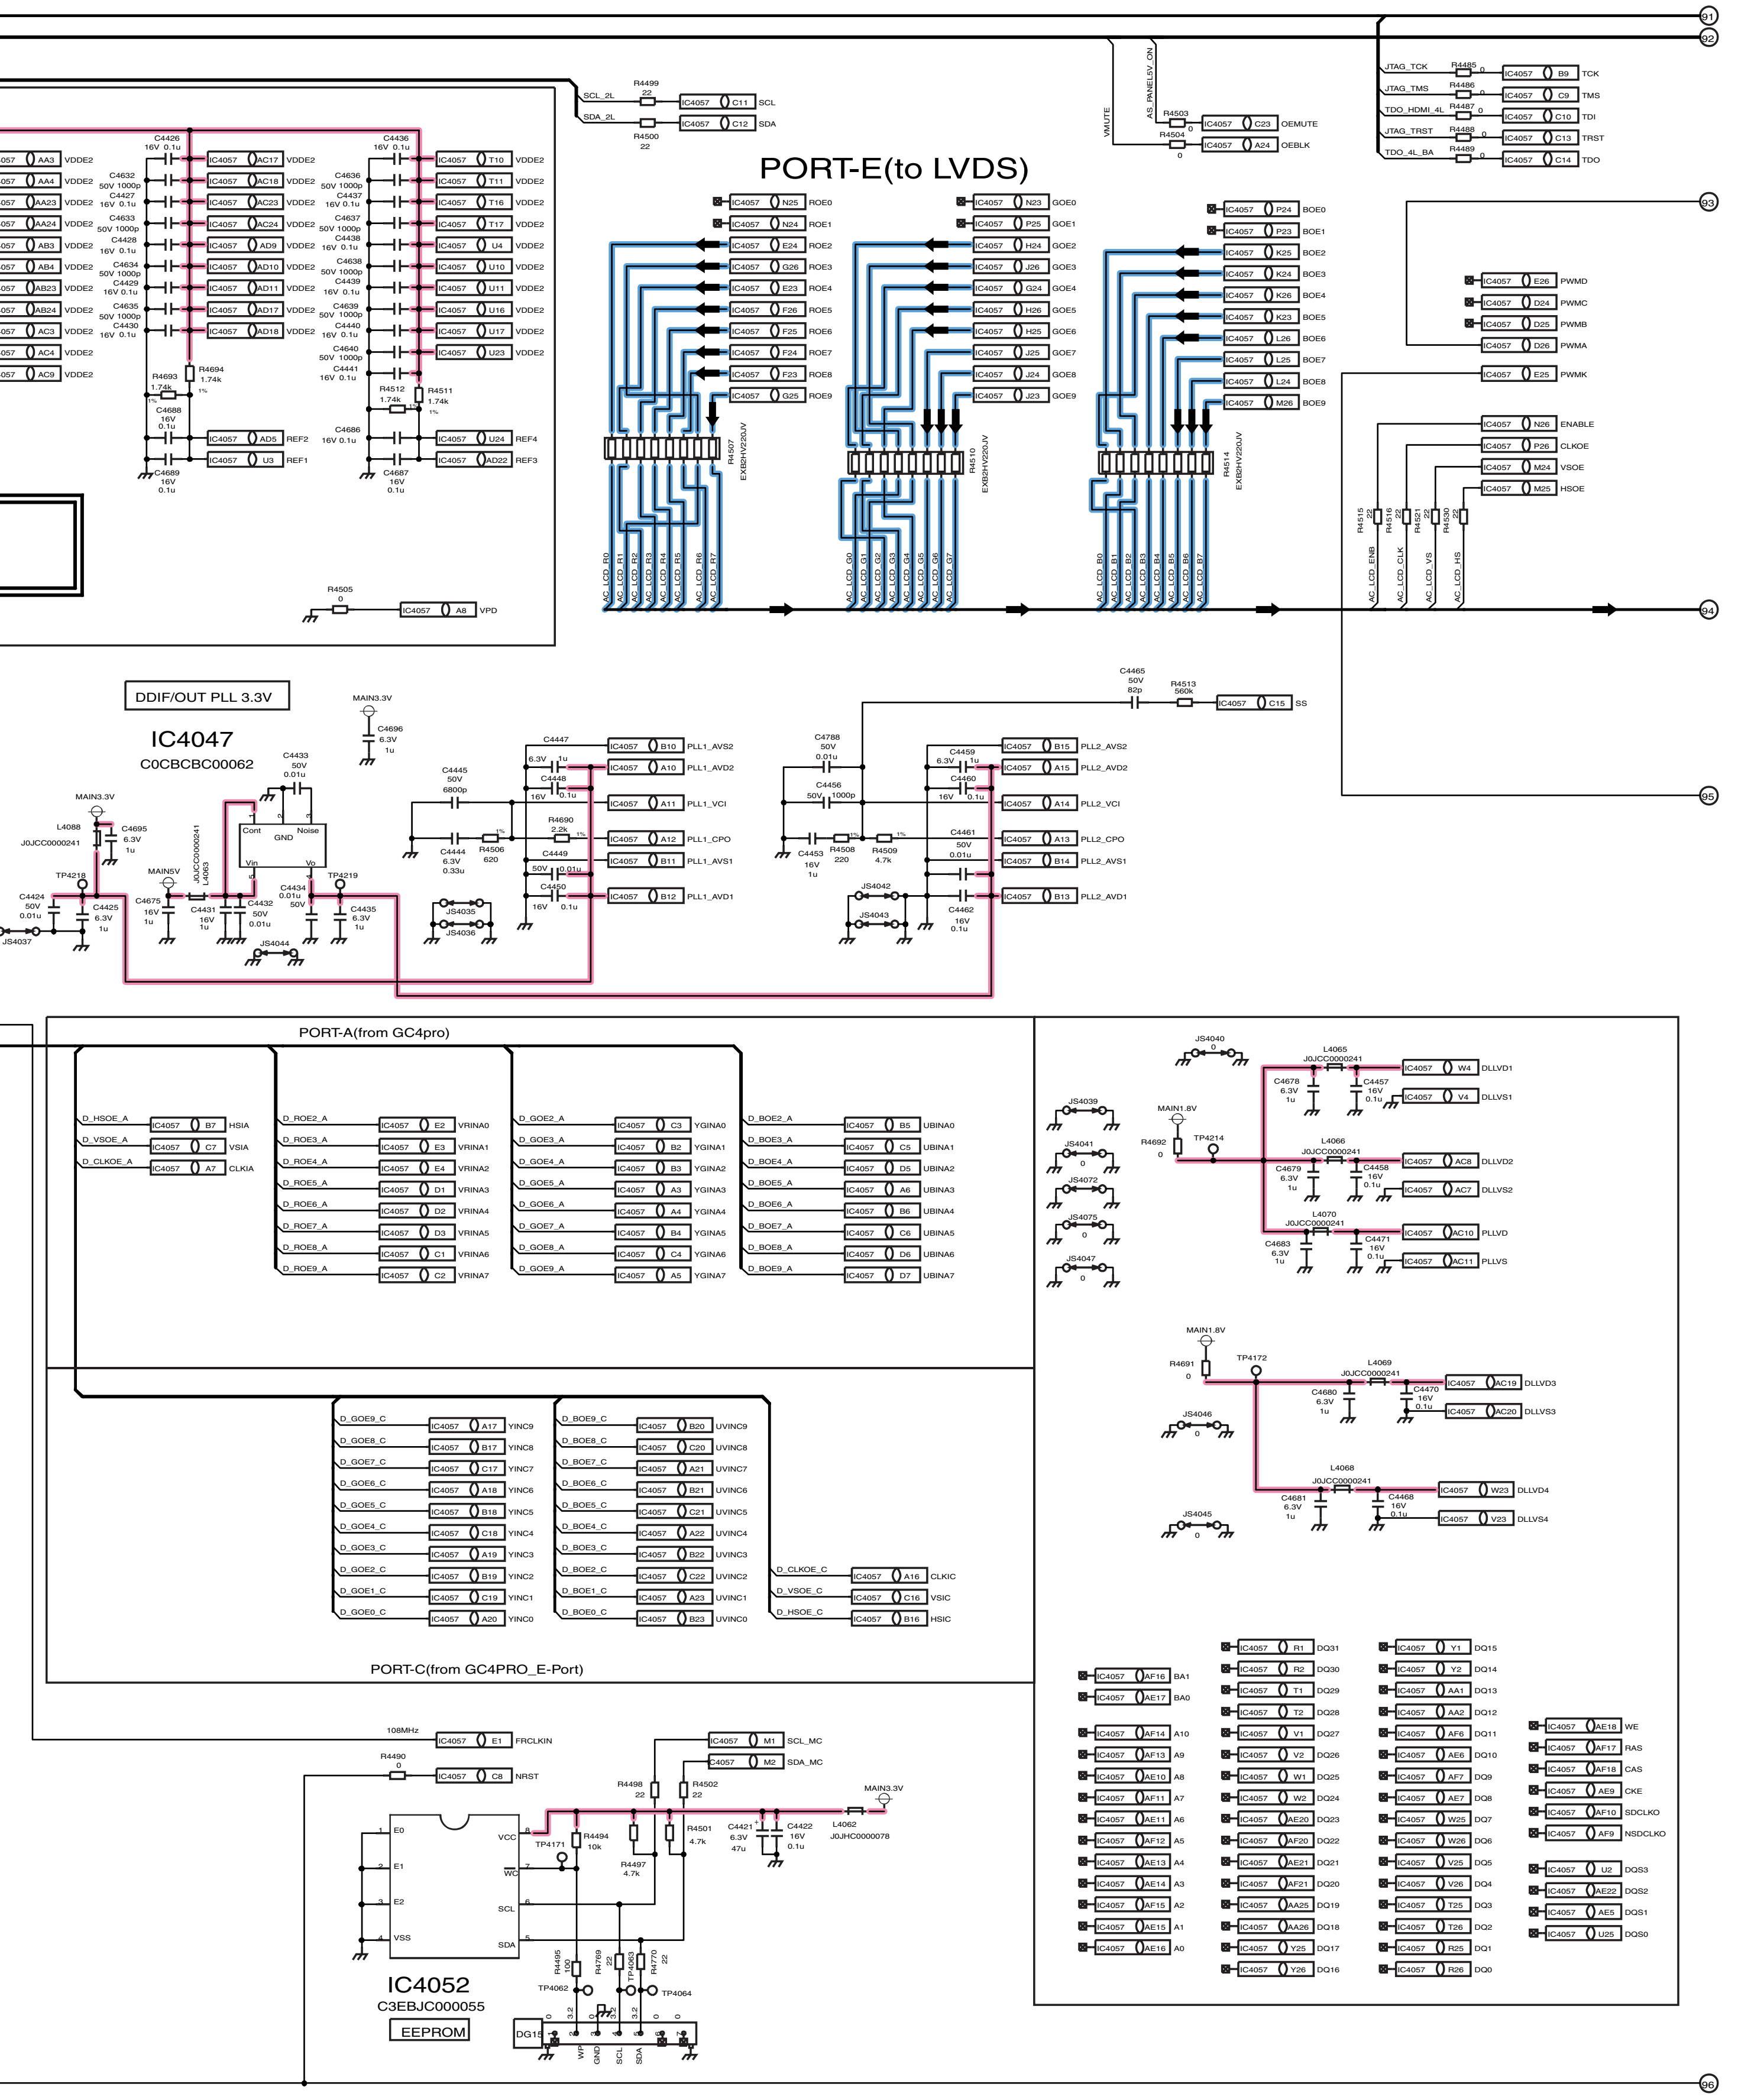
PORT-E(to LVDS)
DDIF/OUT PLL 3.3V
IC4047
C0CBCBC00062
PORT-A(from GC4pro)
PORT-C(from GC4PRO_E-Port)
IC4052
C3EBJC000055
EEPROM
50
51
52
53
54

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (6 of 7) Schematic Diagram

11.22. DG-Board (7 of 7) Schematic Diagram

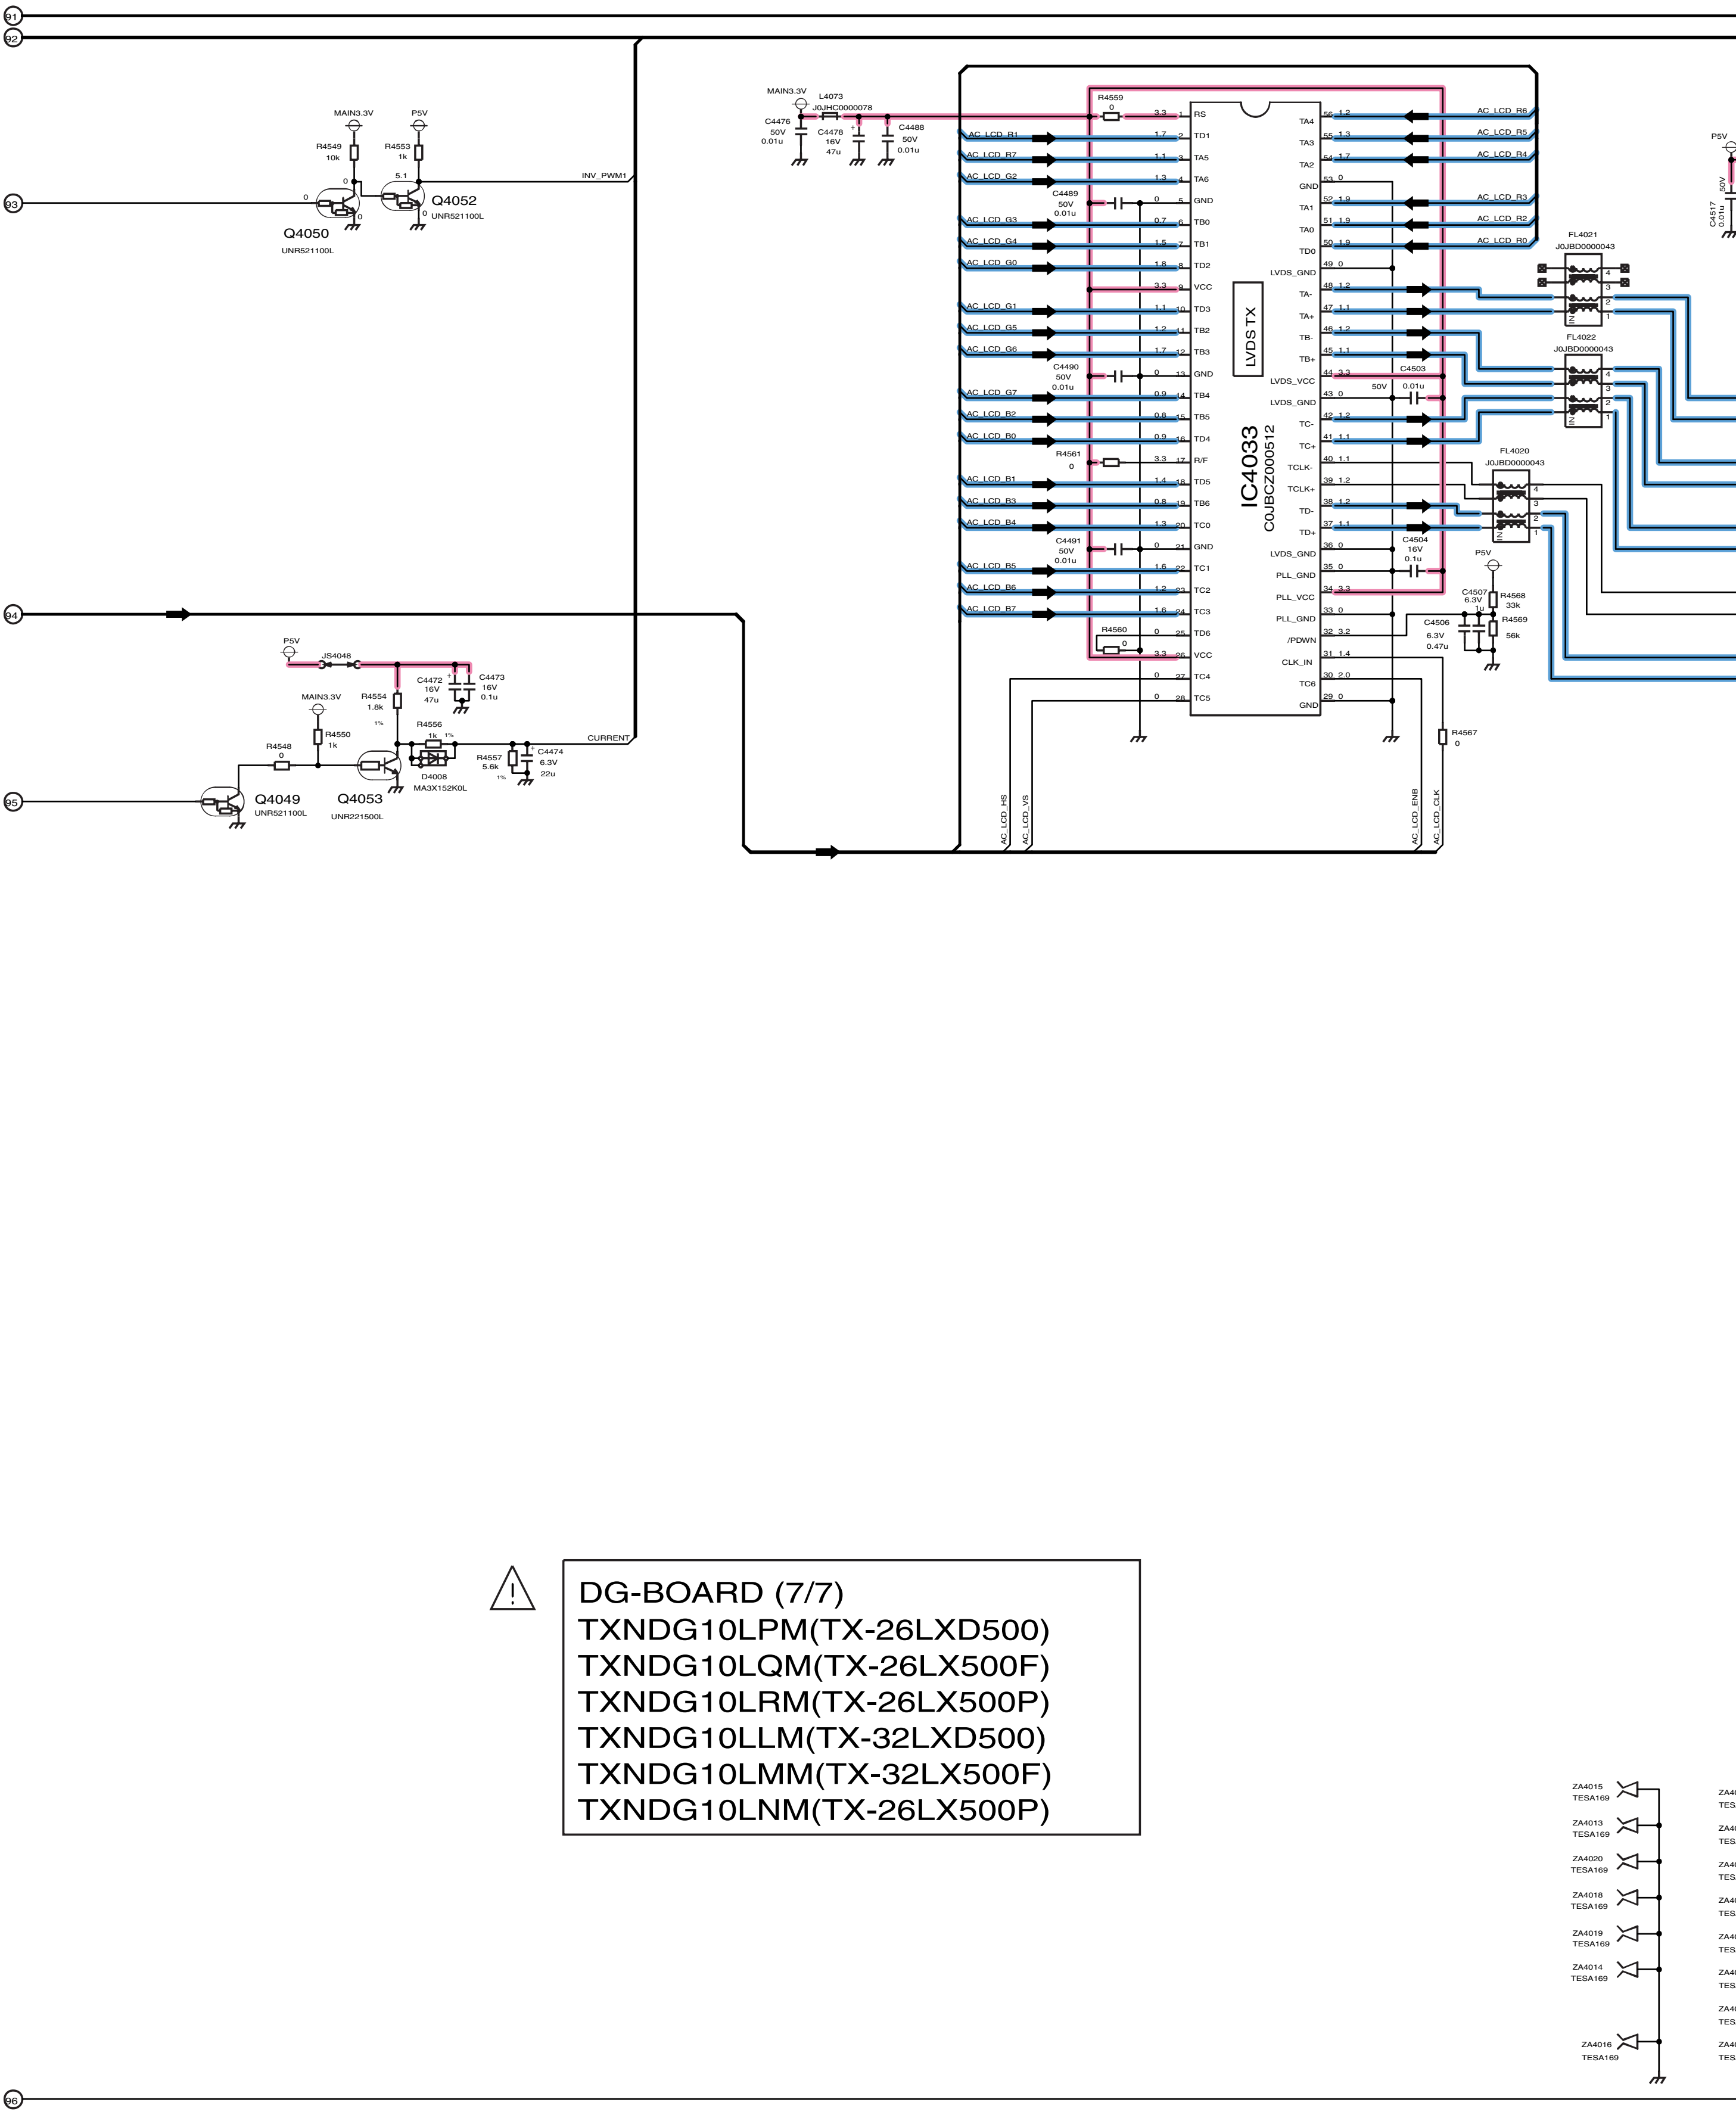

IC4033
C0JBCZ000512
LVDS TX
Q4050
UNR521100L
Q4052
UNR521100L
Q4049
UNR521100L
Q4053
UNR221500L
D4008
MA3X152K0L
INV_PWM1
CURRENT
MAIN3.3V
P5V
L4073
J0JHC0000078
FL4021
J0JBD0000043
FL4022
J0JBD0000043
FL4020
J0JBD0000043
R4549
R4553
R4554
R4550
R4548
R4556
R4557
R4559
R4561
R4560
R4567
R4568
R4569
C4476
C4478
C4488
C4489
C4490
C4491
C4472
C4473
C4474
C4503
C4504
C4506
C4507
C4517
JS4048
AC_LCD_R1
AC_LCD_R7
AC_LCD_G2
AC_LCD_G3
AC_LCD_G4
AC_LCD_G0
AC_LCD_G1
AC_LCD_G5
AC_LCD_G6
AC_LCD_G7
AC_LCD_B2
AC_LCD_B0
AC_LCD_B1
AC_LCD_B3
AC_LCD_B4
AC_LCD_B5
AC_LCD_B6
AC_LCD_B7
AC_LCD_R6
AC_LCD_R5
AC_LCD_R4
AC_LCD_R3
AC_LCD_R2
AC_LCD_R0
AC_LCD_HS
AC_LCD_VS
AC_LCD_ENB
AC_LCD_CLK
ZA4015
ZA4013
ZA4020
ZA4018
ZA4019
ZA4014
ZA4016
TESA169

DG-BOARD (7/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

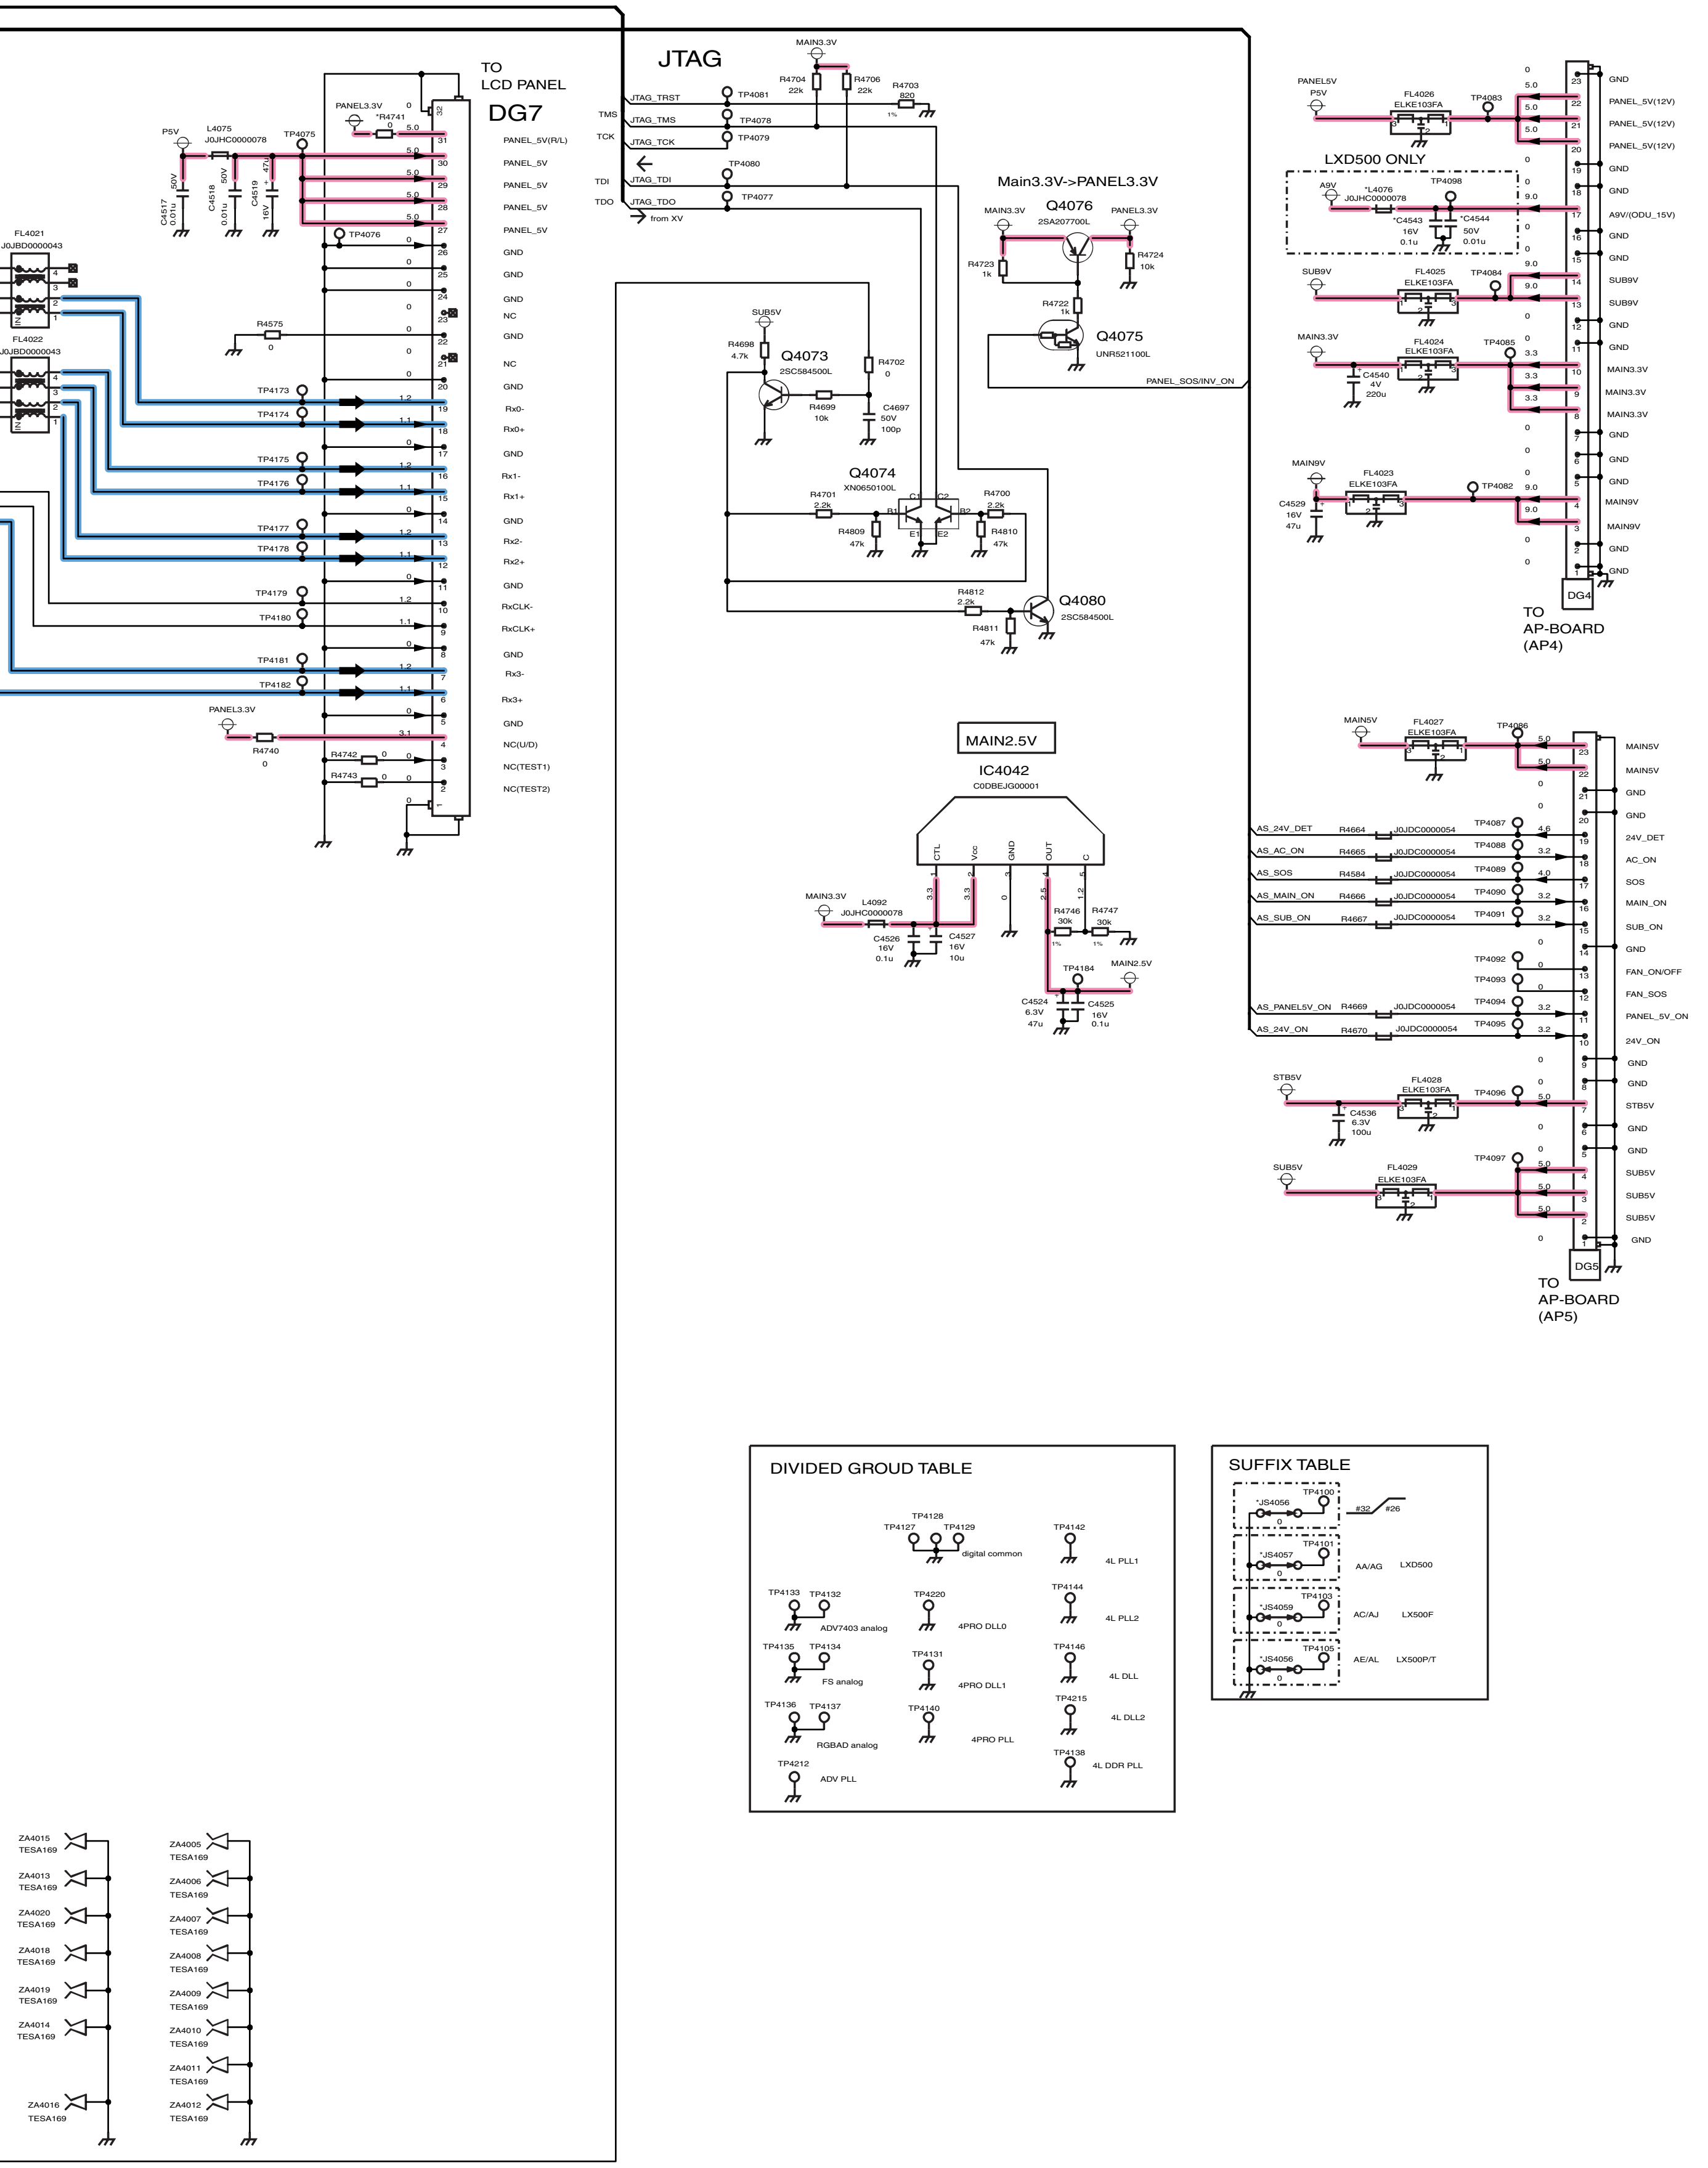
TO
LCD PANEL
DG7
JTAG
JTAG_TRST
JTAG_TMS
JTAG_TCK
JTAG_TDI
JTAG_TDO
from XV
Main3.3V->PANEL3.3V
Q4076
Q4075
Q4073
Q4074
Q4080
PANEL_SOS/INV_ON
MAIN2.5V
IC4042
C0DBEJG00001
LXD500 ONLY
TO
AP-BOARD
(AP4)
DG4
TO
AP-BOARD
(AP5)
DG5
DIVIDED GROUD TABLE
digital common
ADV7403 analog
FS analog
RGBAD analog
ADV PLL
4PRO DLL0
4PRO DLL1
4PRO PLL
4L PLL1
4L PLL2
4L DLL
4L DLL2
4L DDR PLL
SUFFIX TABLE
AA/AG
LXD500
AC/AJ
LX500F
AE/AL
LX500P/T
TESA169

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (7 of 7) Schematic Diagram

59 60 61 62 63

11.23. G-Board Schematic Diagram

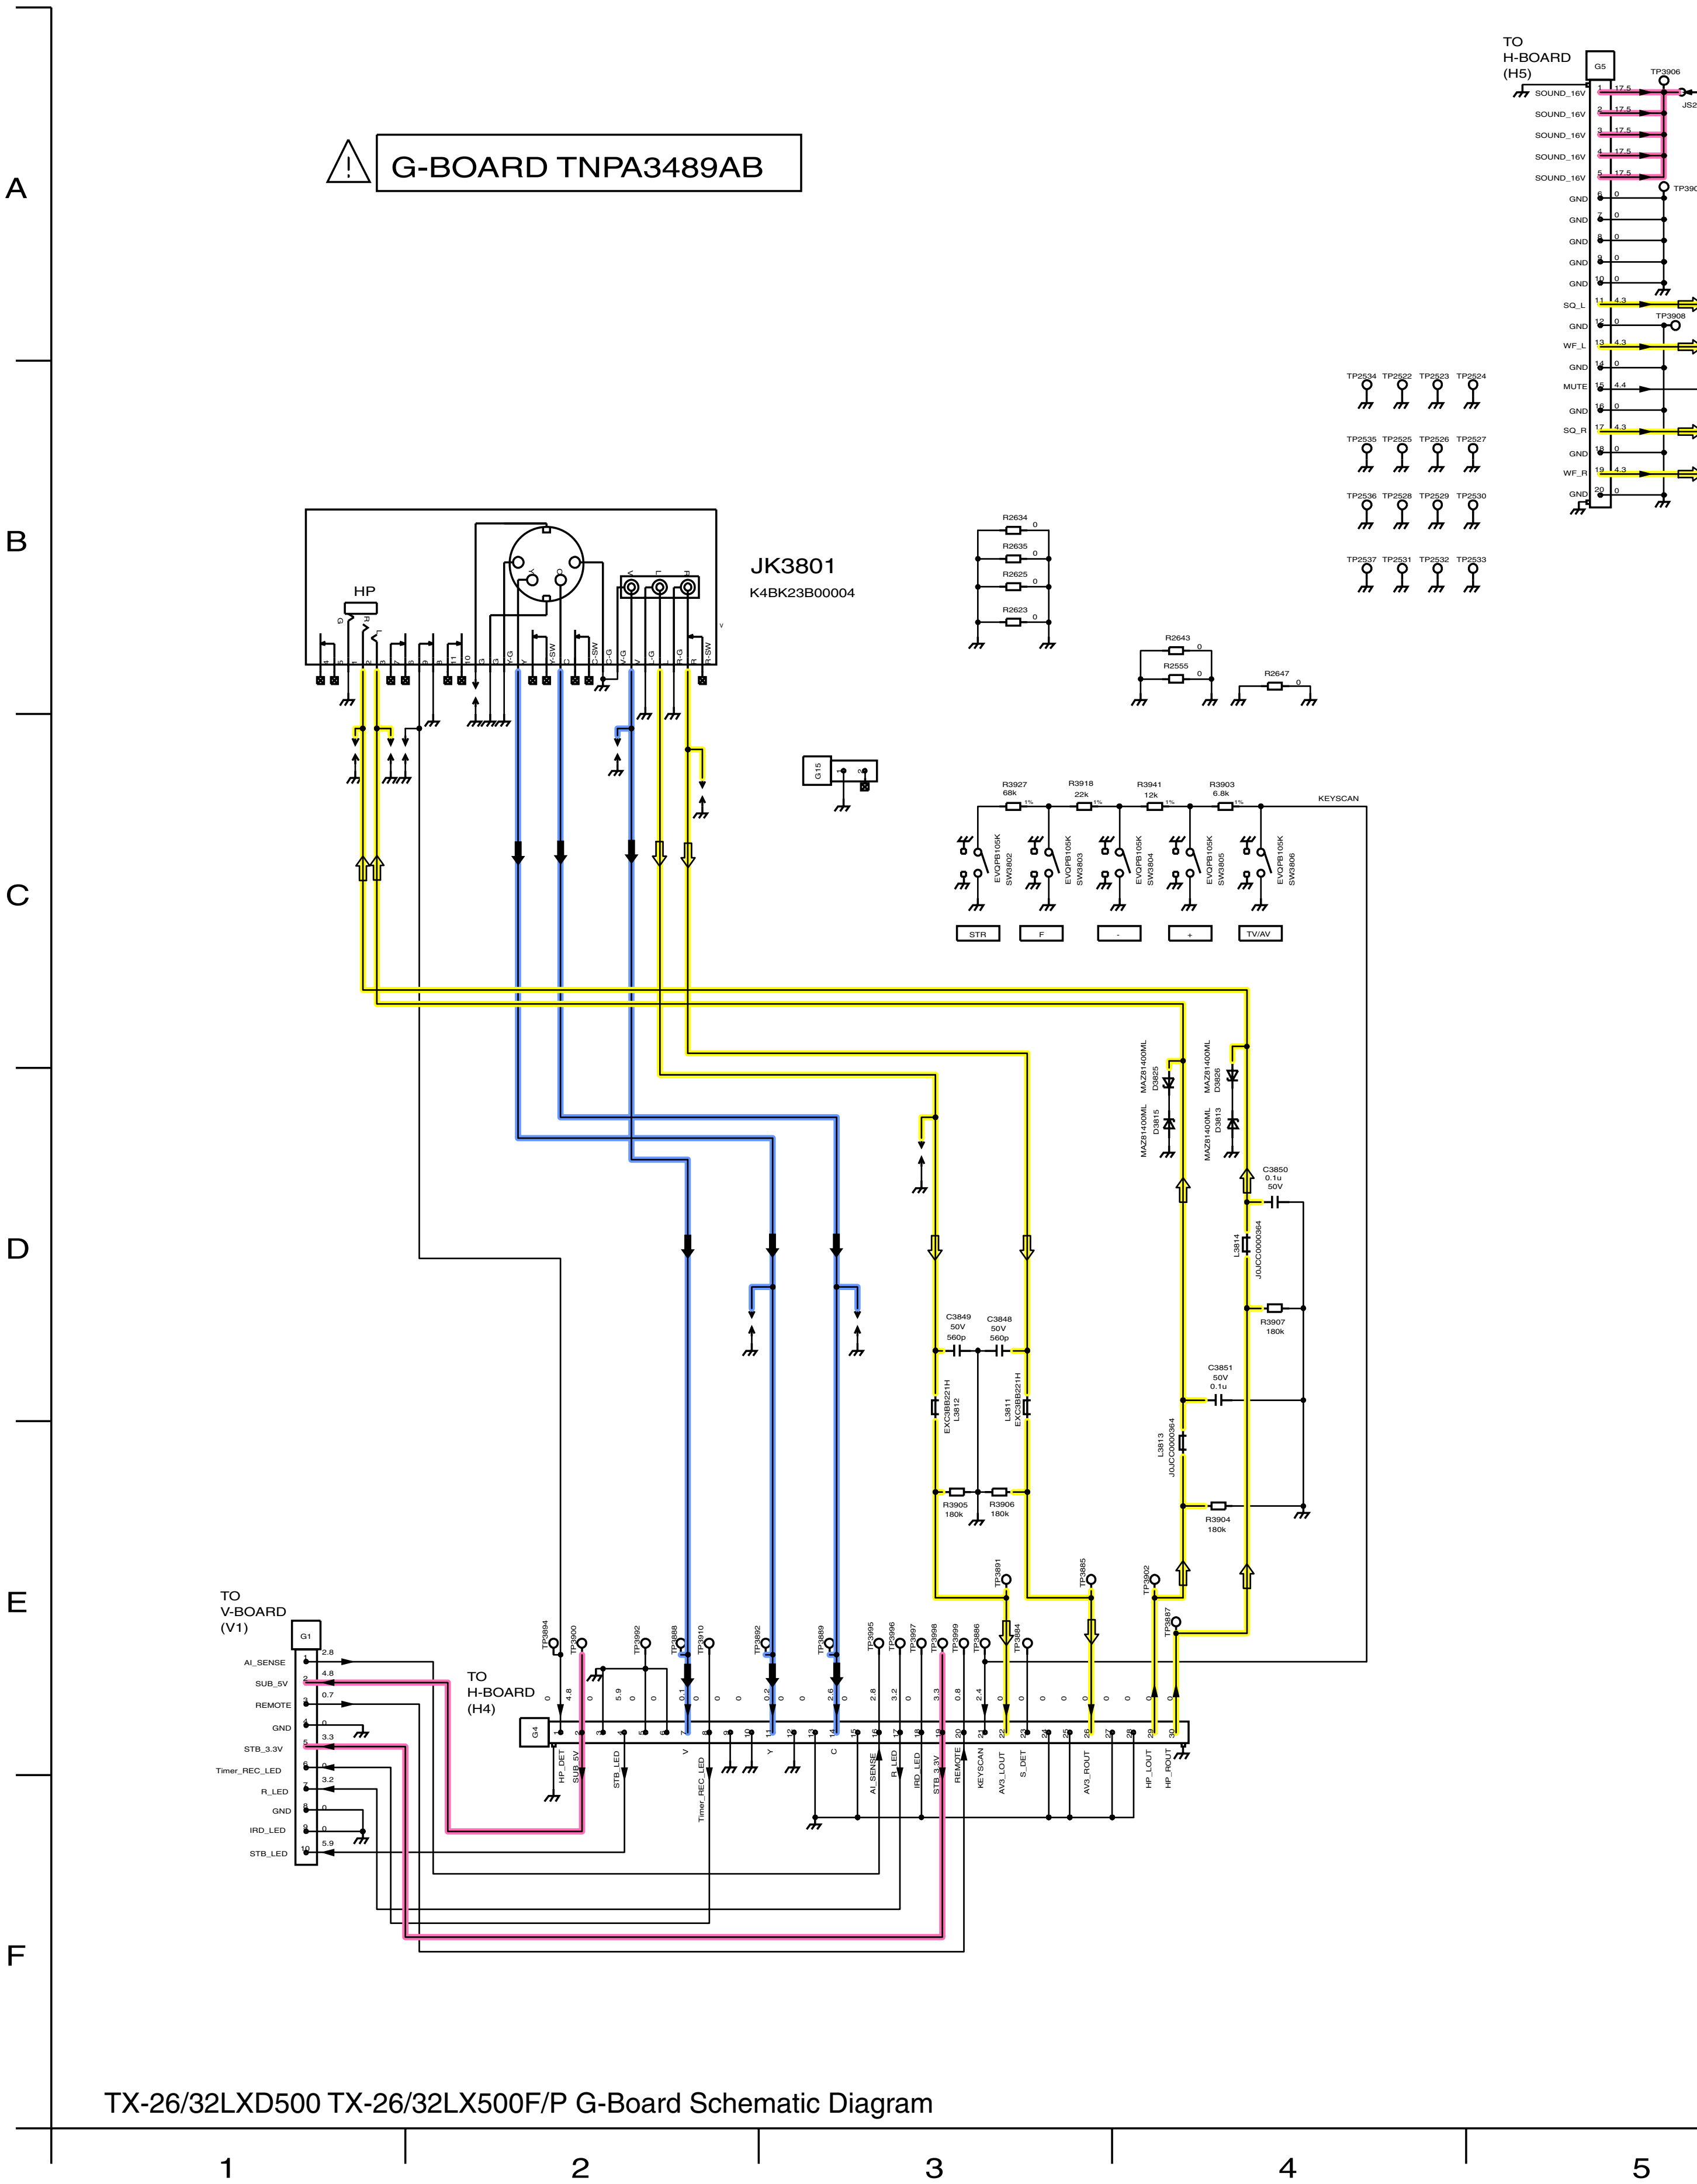
G-BOARD TNPA3489AB
JK3801
K4BK23B00004
HP
TO H-BOARD (H5)
G5
SOUND_16V
GND
SQ_L
WF_L
MUTE
SQ_R
WF_R
TO V-BOARD (V1)
G1
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
IRD_LED
STB_LED
TO H-BOARD (H4)
G4
HP_DET
STB_LED
V
Y
C
AI_SENSE
R_LED
IRD_LED
STB_3.3V
REMOTE
KEYSCAN
AV3_LOUT
S_DET
AV3_ROUT
HP_LOUT
HP_ROUT
G15
KEYSCAN
R3927 68k
R3918 22k
R3941 12k
R3903 6.8k
EVQPB105K
SW3802
SW3803
SW3804
SW3805
SW3806
STR
F
-
+
TV/AV
R2634
R2635
R2625
R2623
R2643
R2555
R2647
MAZ81400ML
D3825
D3815
D3826
D3813
C3850 0.1u 50V
L3814 J0JCC0000364
R3907 180k
C3851 50V 0.1u
L3813 J0JCC0000364
R3904 180k
C3849 50V 560p
C3848 50V 560p
EXCBB221H
L3812
L3811
R3905 180k
R3906 180k
A
B
C
D
E
F
1
2
3
4
5

TX-26/32LXD500 TX-26/32LX500F/P G-Board Schematic Diagram

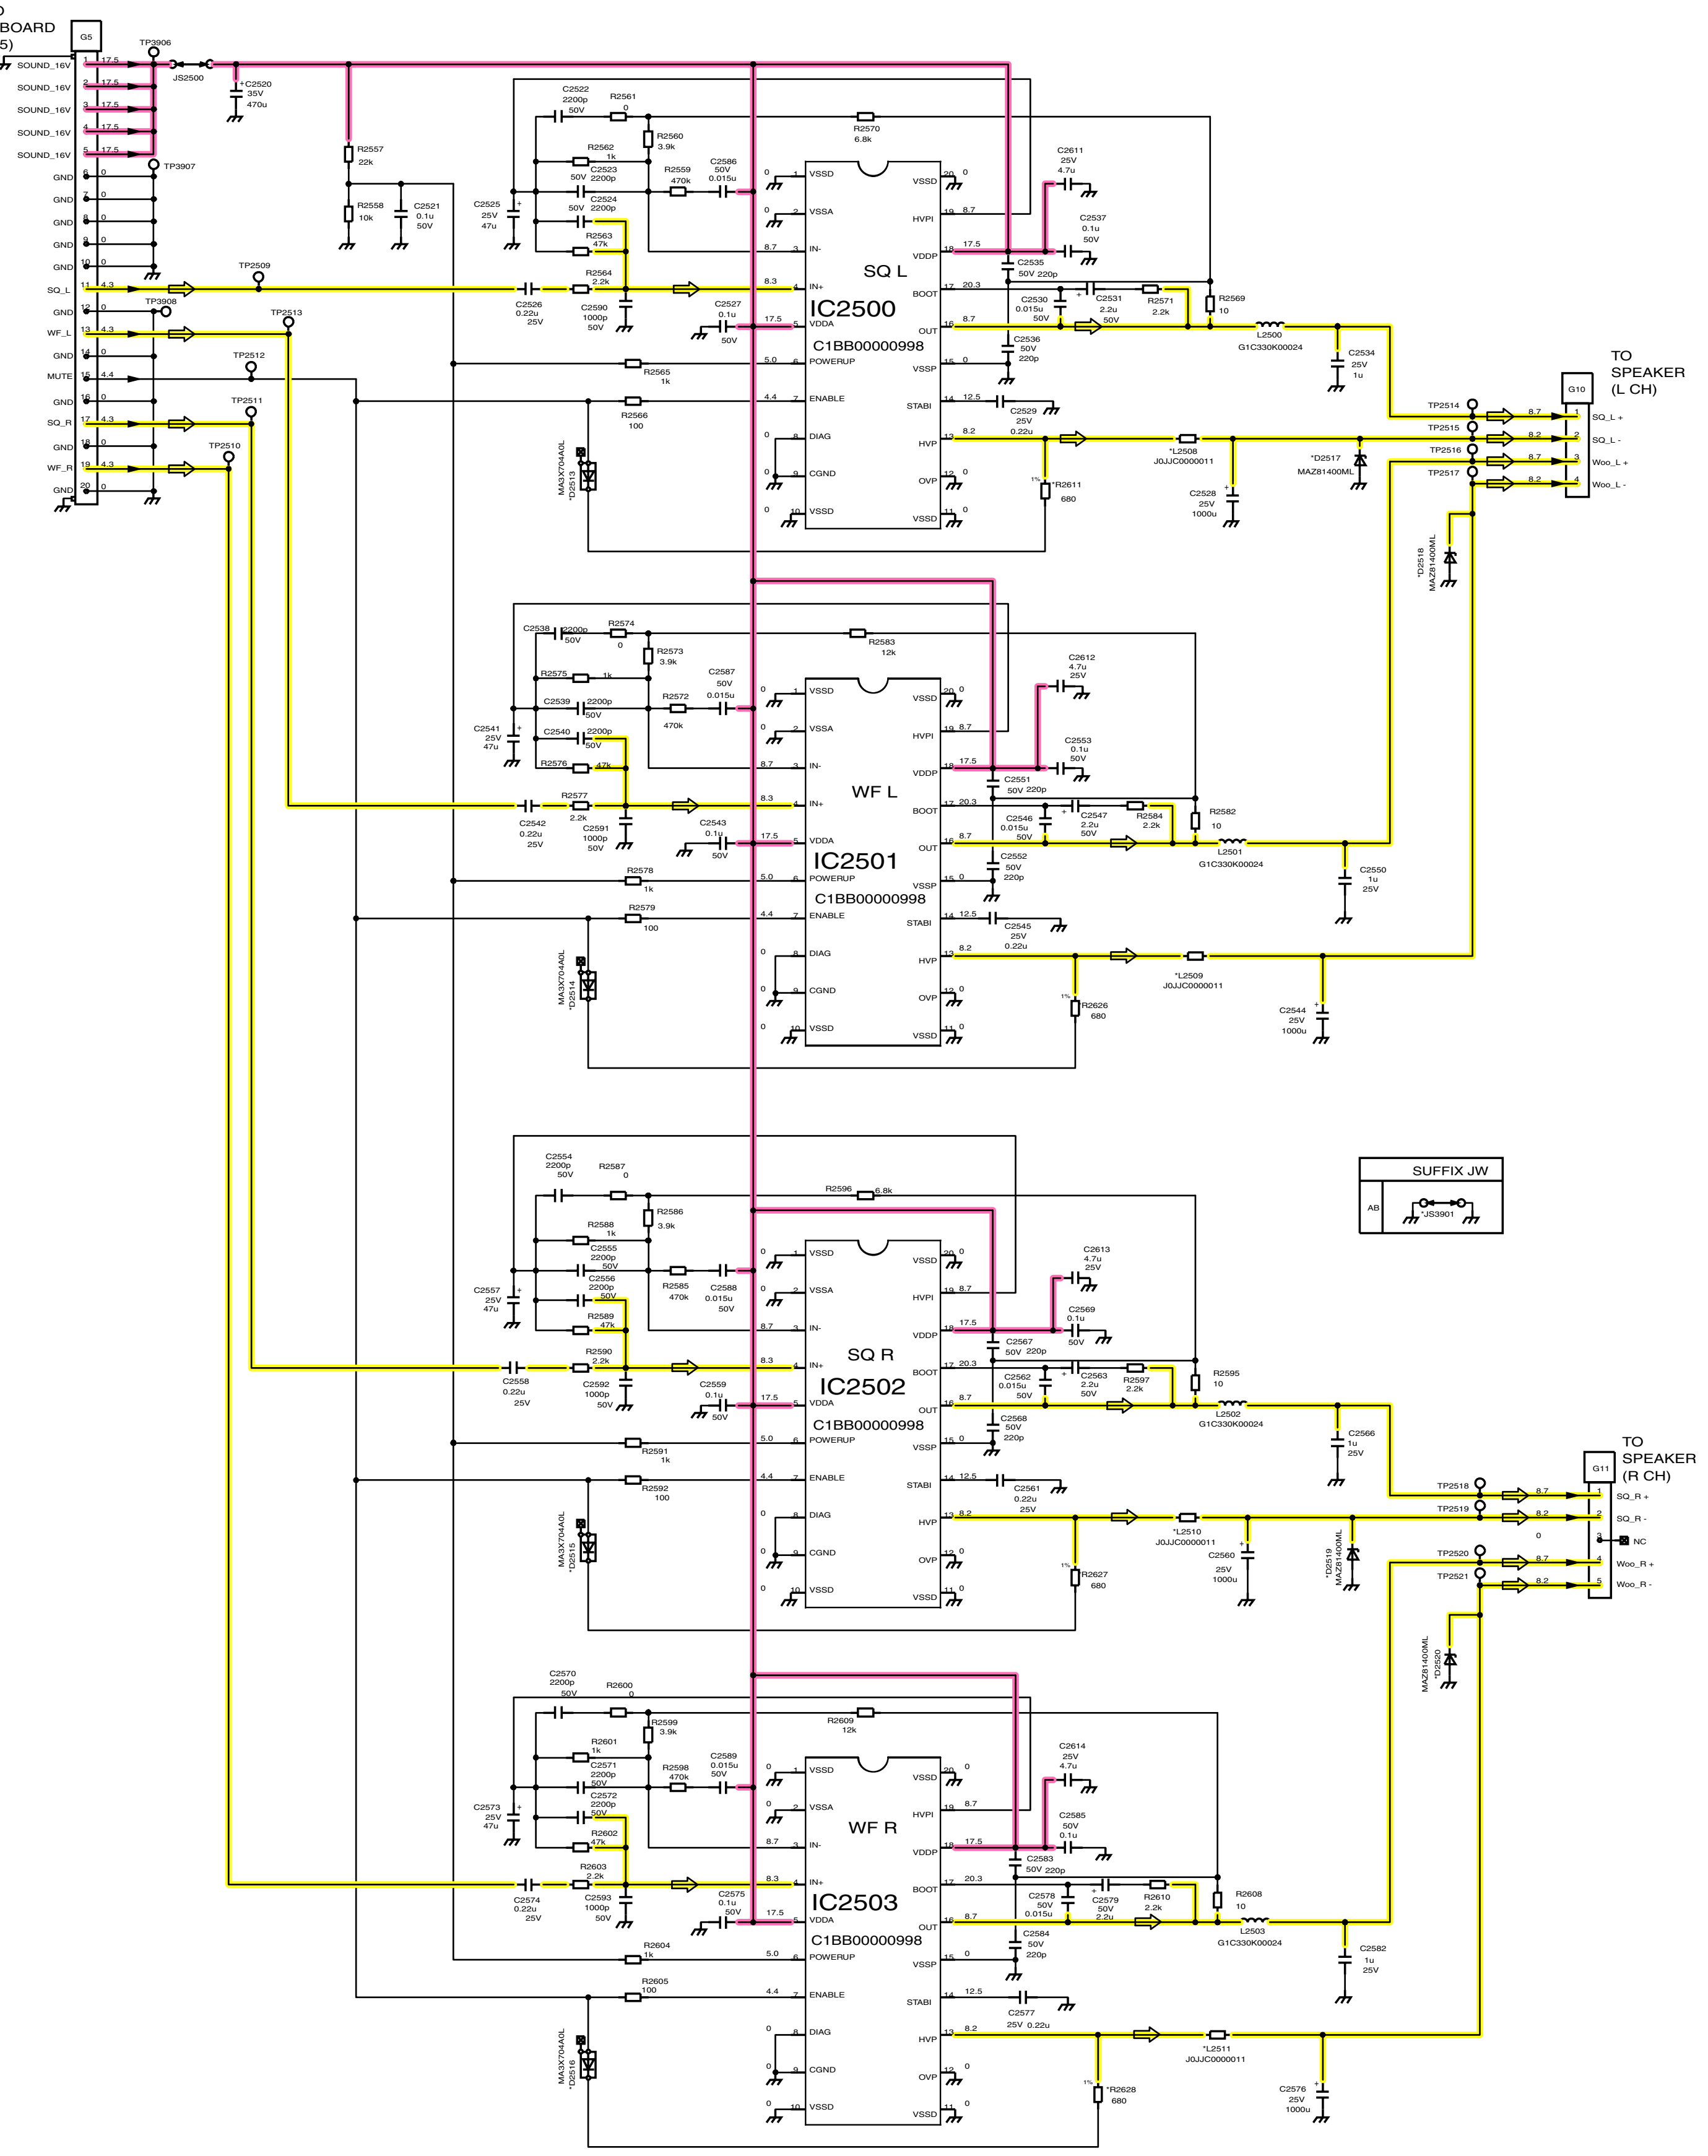
BOARD
G5
SOUND_16V
GND
SQ_L
WF_L
MUTE
SQ_R
WF_R
TP3906
TP3907
TP3908
JS2500
C2520 35V 470u
R2557 22k
R2558 10k
C2521 0.1u 50V
TP2509
TP2513
TP2512
TP2511
TP2510
SQ L
IC2500
C1BB00000998
WF L
IC2501
C1BB00000998
SQ R
IC2502
C1BB00000998
WF R
IC2503
C1BB00000998
VSSD
VSSA
IN-
IN+
VDDA
POWERUP
ENABLE
DIAG
CGND
HVPI
VDDP
BOOT
OUT
VSSP
STABI
HVP
OVP
L2500 G1C330K00024
L2501 G1C330K00024
L2502 G1C330K00024
L2503 G1C330K00024
*L2508 J0JJC0000011
*L2509 J0JJC0000011
*L2510 J0JJC0000011
*L2511 J0JJC0000011
*D2513 MA3X704A0L
*D2514 MA3X704A0L
*D2515 MA3X704A0L
*D2516 MA3X704A0L
*D2517 MAZ81400ML
*D2518 MAZ81400ML
*D2519 MAZ81400ML
*D2520 MAZ81400ML
TO SPEAKER (L CH)
G10
SQ_L +
SQ_L -
Woo_L +
Woo_L -
TP2514
TP2515
TP2516
TP2517
TO SPEAKER (R CH)
G11
SQ_R +
SQ_R -
NC
Woo_R +
Woo_R -
TP2518
TP2519
TP2520
TP2521
SUFFIX JW
AB
*JS3901

TX-26/32LXD500 TX-26/32LX500F/P G-Board Schematic Diagram

5	6	7	8	9

11.24. GP and V-Board Schematic Diagram

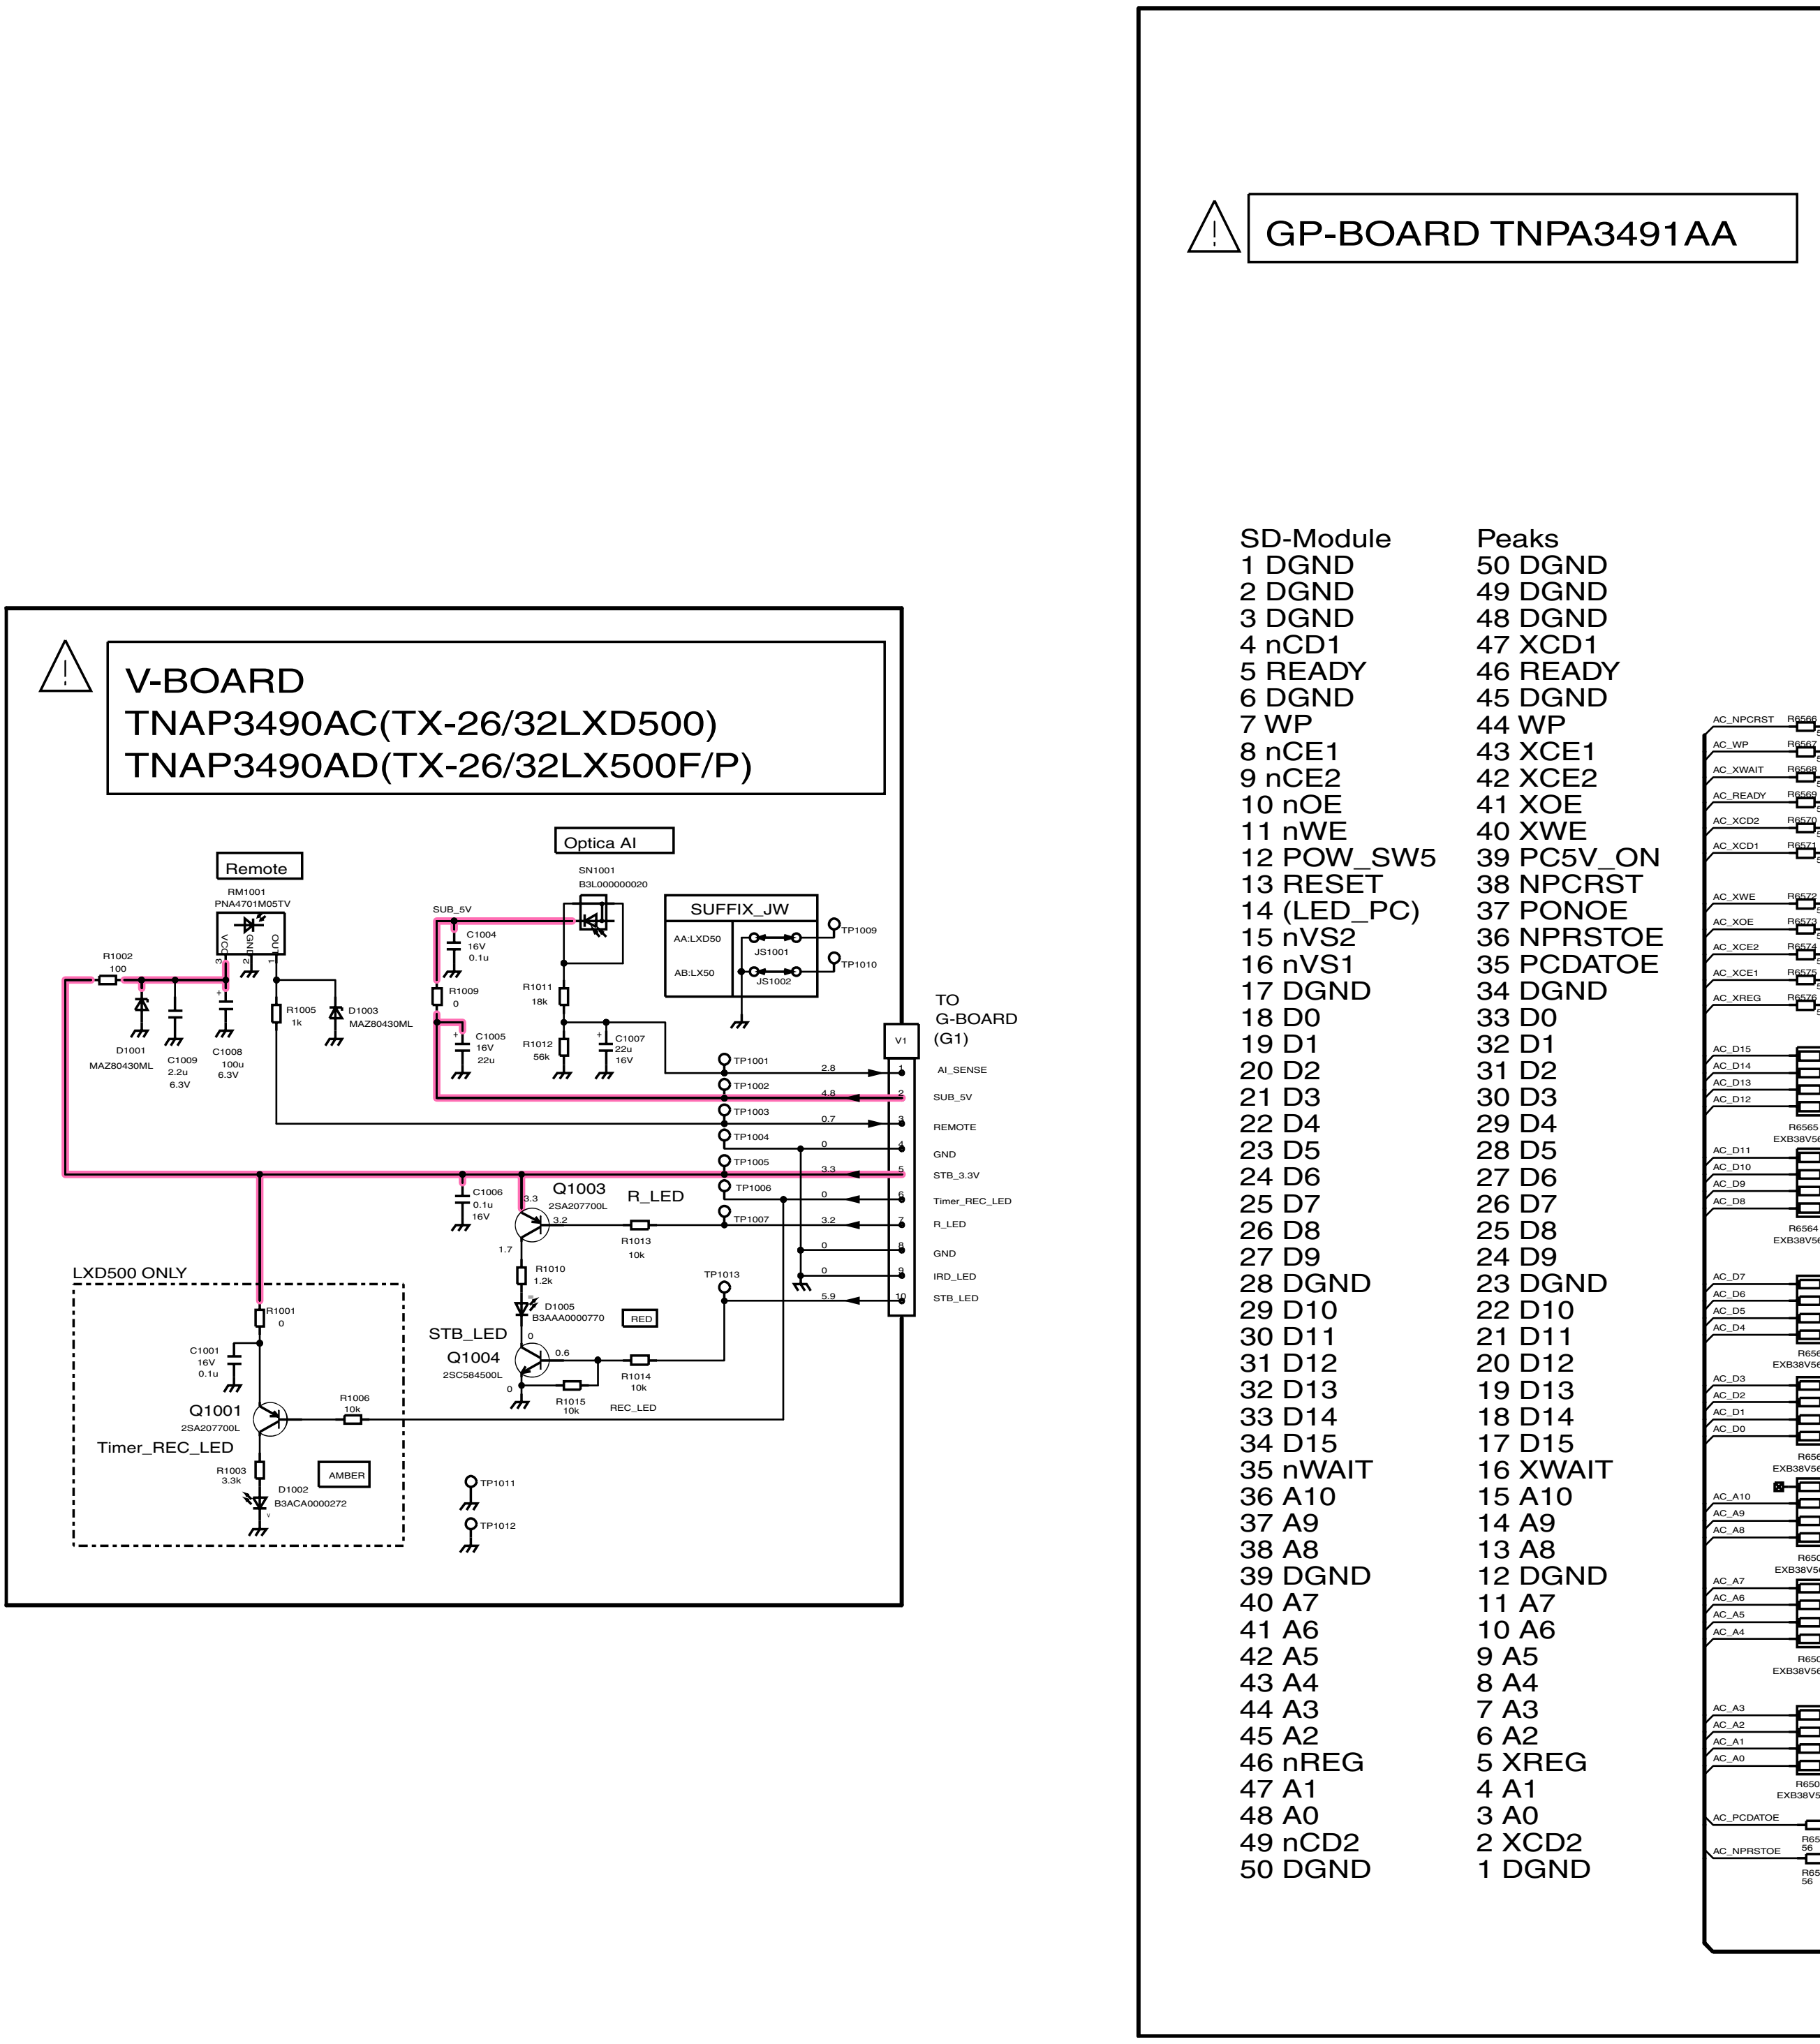
V-BOARD
TNAP3490AC(TX-26/32LXD500)
TNAP3490AD(TX-26/32LX500F/P)
Remote
RM1001
PNA4701M05TV
Optica AI
SN1001
B3L000000020
SUFFIX_JW
AA:LXD50
AB:LX50
JS1001
JS1002
TP1009
TP1010
SUB_5V
R1002
100
D1001
MAZ80430ML
C1009
2.2u
6.3V
C1008
100u
6.3V
R1005
1k
D1003
MAZ80430ML
C1004
16V
0.1u
R1009
0
C1005
16V
22u
R1011
18k
R1012
56k
C1007
22u
16V
TO
G-BOARD
(G1)
V1
TP1001
TP1002
TP1003
TP1004
TP1005
TP1006
TP1007
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
GND
IRD_LED
STB_LED
2.8
4.8
0.7
0
3.3
0
3.2
0
0
5.9
C1006
0.1u
16V
Q1003
2SA207700L
R_LED
R1013
10k
R1010
1.2k
D1005
B3AAA0000770
RED
TP1013
LXD500 ONLY
R1001
0
C1001
16V
0.1u
Q1001
2SA207700L
Timer_REC_LED
R1006
10k
R1003
3.3k
D1002
B3ACA0000272
AMBER
STB_LED
Q1004
2SC584500L
R1014
10k
R1015
10k
REC_LED
TP1011
TP1012
GP-BOARD TNPA3491AA
AC_NPCRST
AC_WP
AC_XWAIT
AC_READY
AC_XCD2
AC_XCD1
AC_XWE
AC_XOE
AC_XCE2
AC_XCE1
AC_XREG
AC_D15
AC_D14
AC_D13
AC_D12
AC_D11
AC_D10
AC_D9
AC_D8
AC_D7
AC_D6
AC_D5
AC_D4
AC_D3
AC_D2
AC_D1
AC_D0
AC_A10
AC_A9
AC_A8
AC_A7
AC_A6
AC_A5
AC_A4
AC_A3
AC_A2
AC_A1
AC_A0
AC_PCDATOE
AC_NPRSTOE
A
B
C
D
E
F
1
2
3
4
5

SD-Module	Peaks
1 DGND	50 DGND
2 DGND	49 DGND
3 DGND	48 DGND
4 nCD1	47 XCD1
5 READY	46 READY
6 DGND	45 DGND
7 WP	44 WP
8 nCE1	43 XCE1
9 nCE2	42 XCE2
10 nOE	41 XOE
11 nWE	40 XWE
12 POW_SW5	39 PC5V_ON
13 RESET	38 NPCRST
14 (LED_PC)	37 PONOE
15 nVS2	36 NPRSTOE
16 nVS1	35 PCDATOE
17 DGND	34 DGND
18 D0	33 D0
19 D1	32 D1
20 D2	31 D2
21 D3	30 D3
22 D4	29 D4
23 D5	28 D5
24 D6	27 D6
25 D7	26 D7
26 D8	25 D8
27 D9	24 D9
28 DGND	23 DGND
29 D10	22 D10
30 D11	21 D11
31 D12	20 D12
32 D13	19 D13
33 D14	18 D14
34 D15	17 D15
35 nWAIT	16 XWAIT
36 A10	15 A10
37 A9	14 A9
38 A8	13 A8
39 DGND	12 DGND
40 A7	11 A7
41 A6	10 A6
42 A5	9 A5
43 A4	8 A4
44 A3	7 A3
45 A2	6 A2
46 nREG	5 XREG
47 A1	4 A1
48 A0	3 A0
49 nCD2	2 XCD2
50 DGND	1 DGND

TX-26/32LXD500 TX-26/32LX500F/P GP and V-Board Schematic Diagram

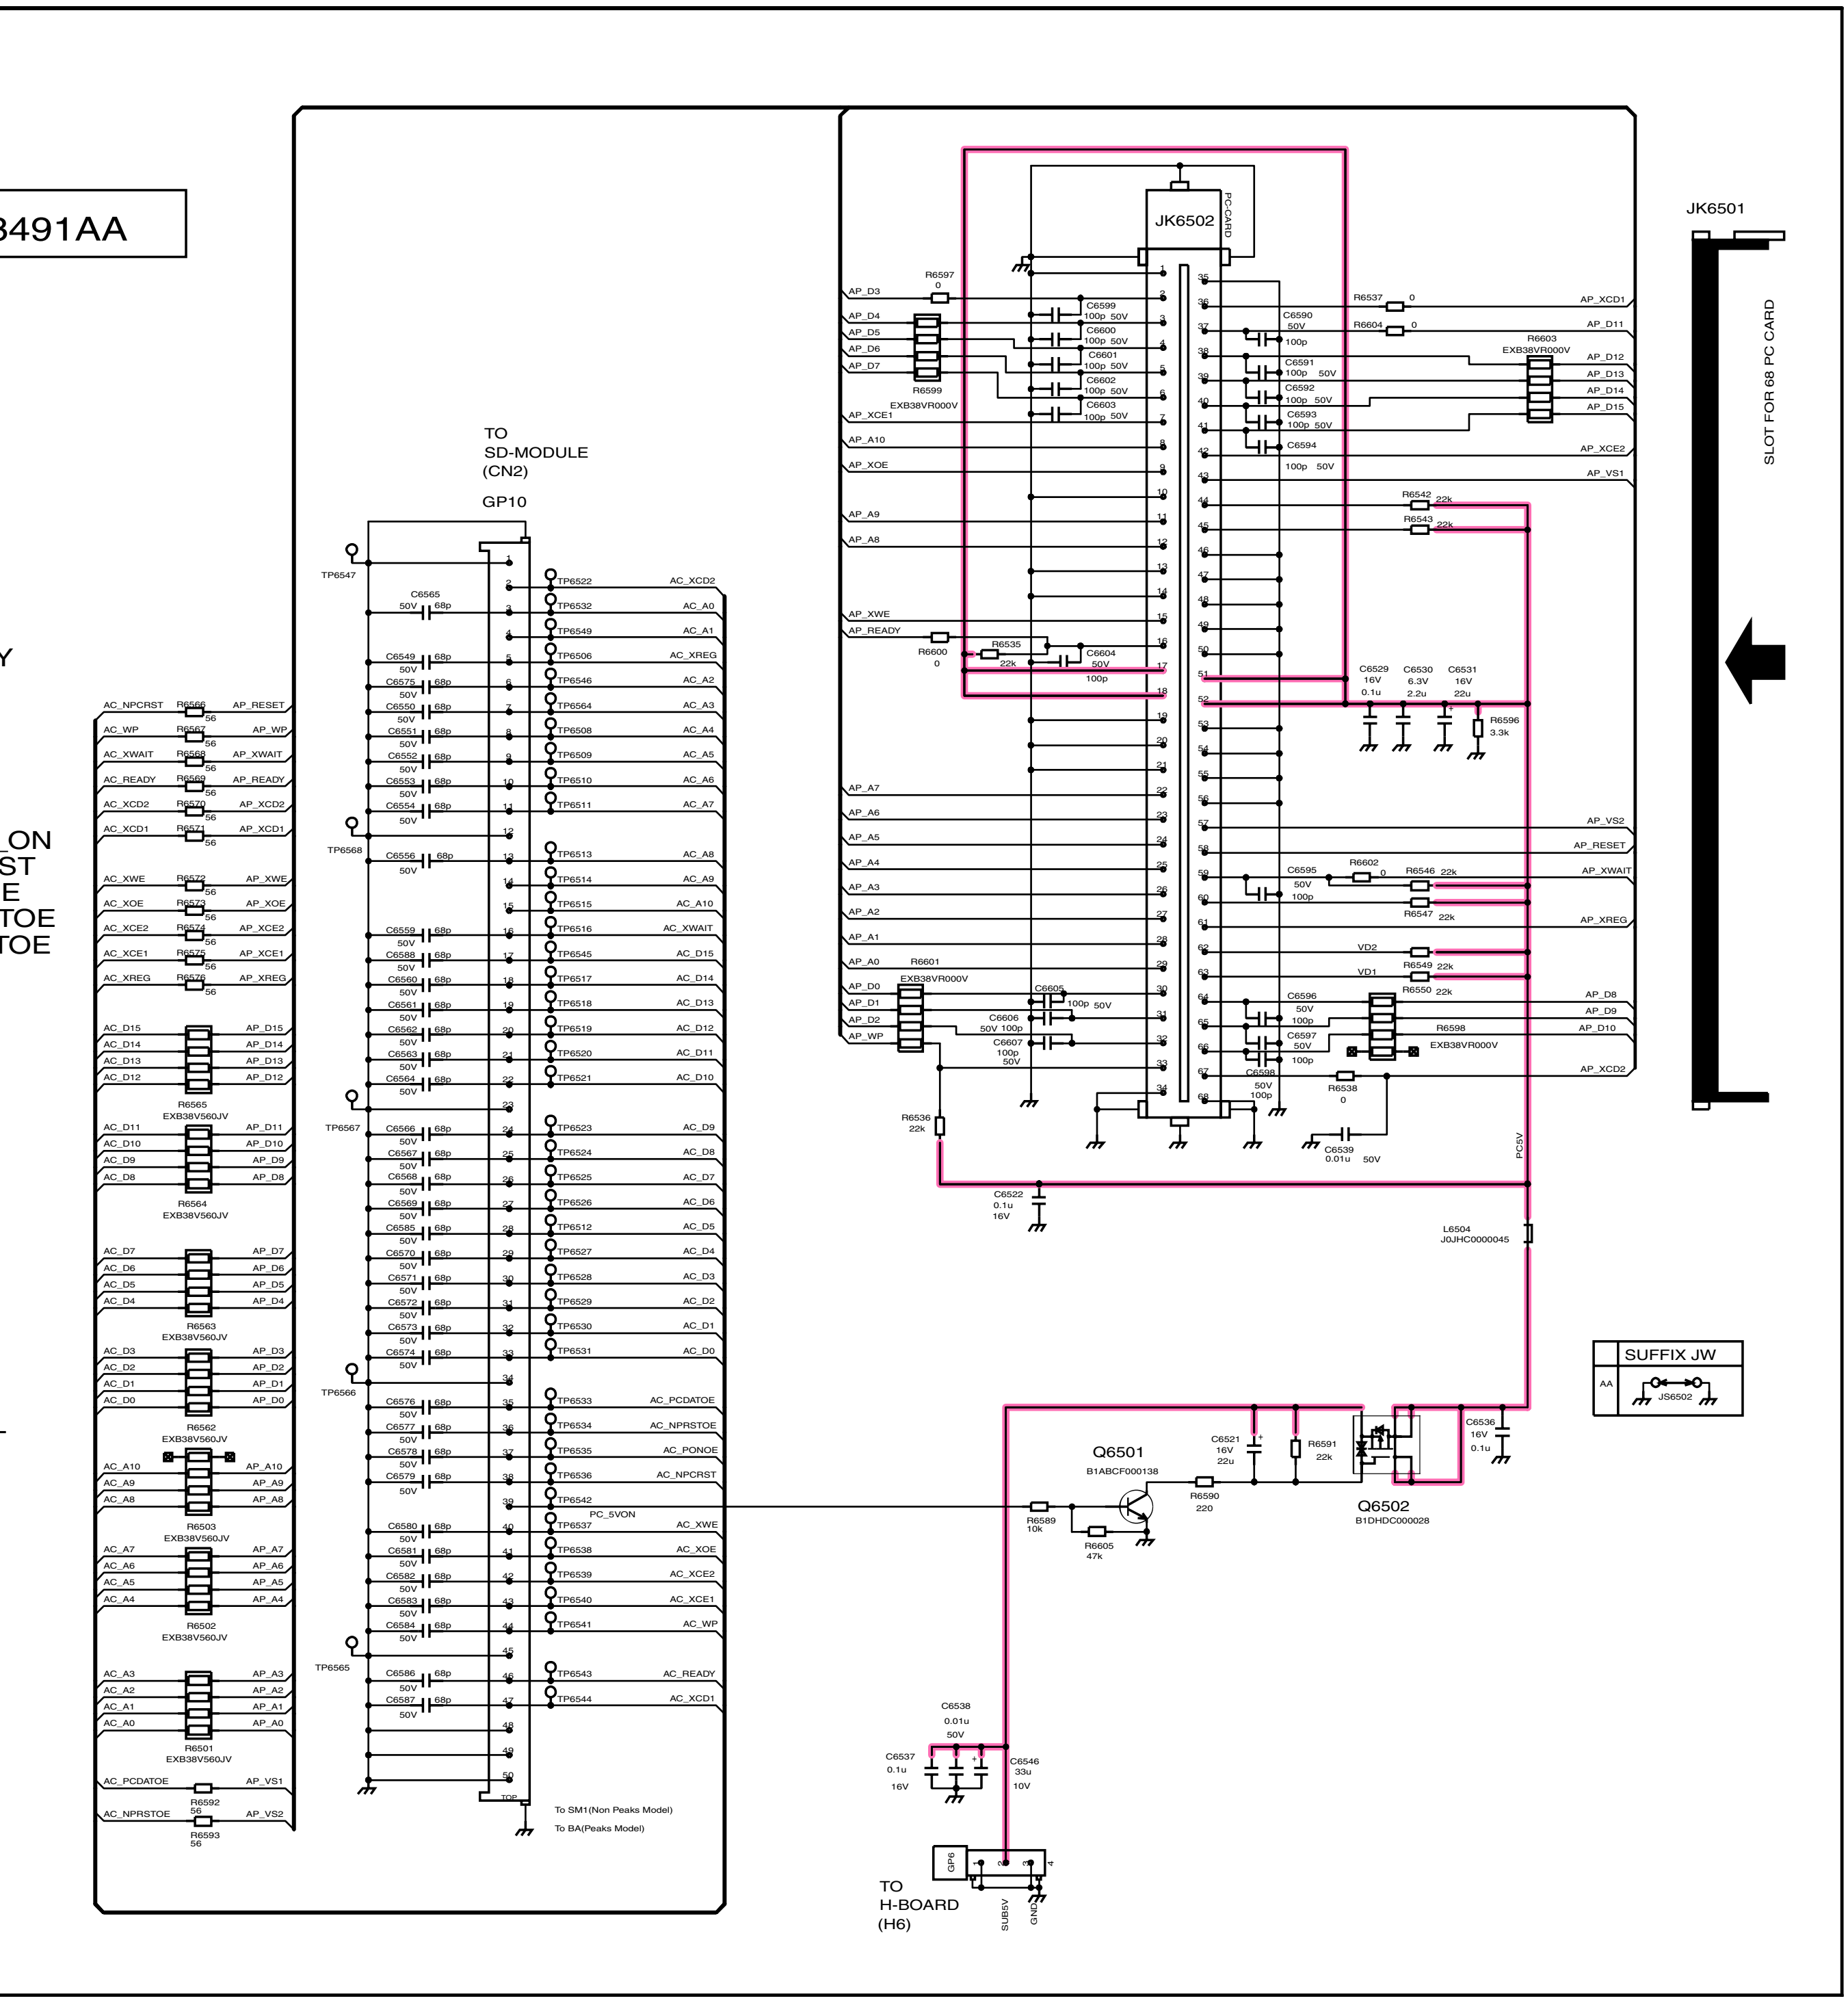
JK6502
PC-CARD
JK6501
SLOT FOR 68 PC CARD
TO
SD-MODULE
(CN2)
GP10
To SM1(Non Peaks Model)
To BA(Peaks Model)
Q6501
B1ABCF000138
Q6502
B1DHDC000028
L6504
J0JHC0000045
PC5V
PC_5VON
SUFFIX JW
AA
JS6502
TO
H-BOARD
(H6)
GP6
SUB5V
GND

TX-26/32LXD500 TX-26/32LX500F/P GP and V-Board Schematic Diagram

5	6	7	8	9

11.25. GS-Board Schematic Diagram

⚠ GS-BOARD TNPA3615AA

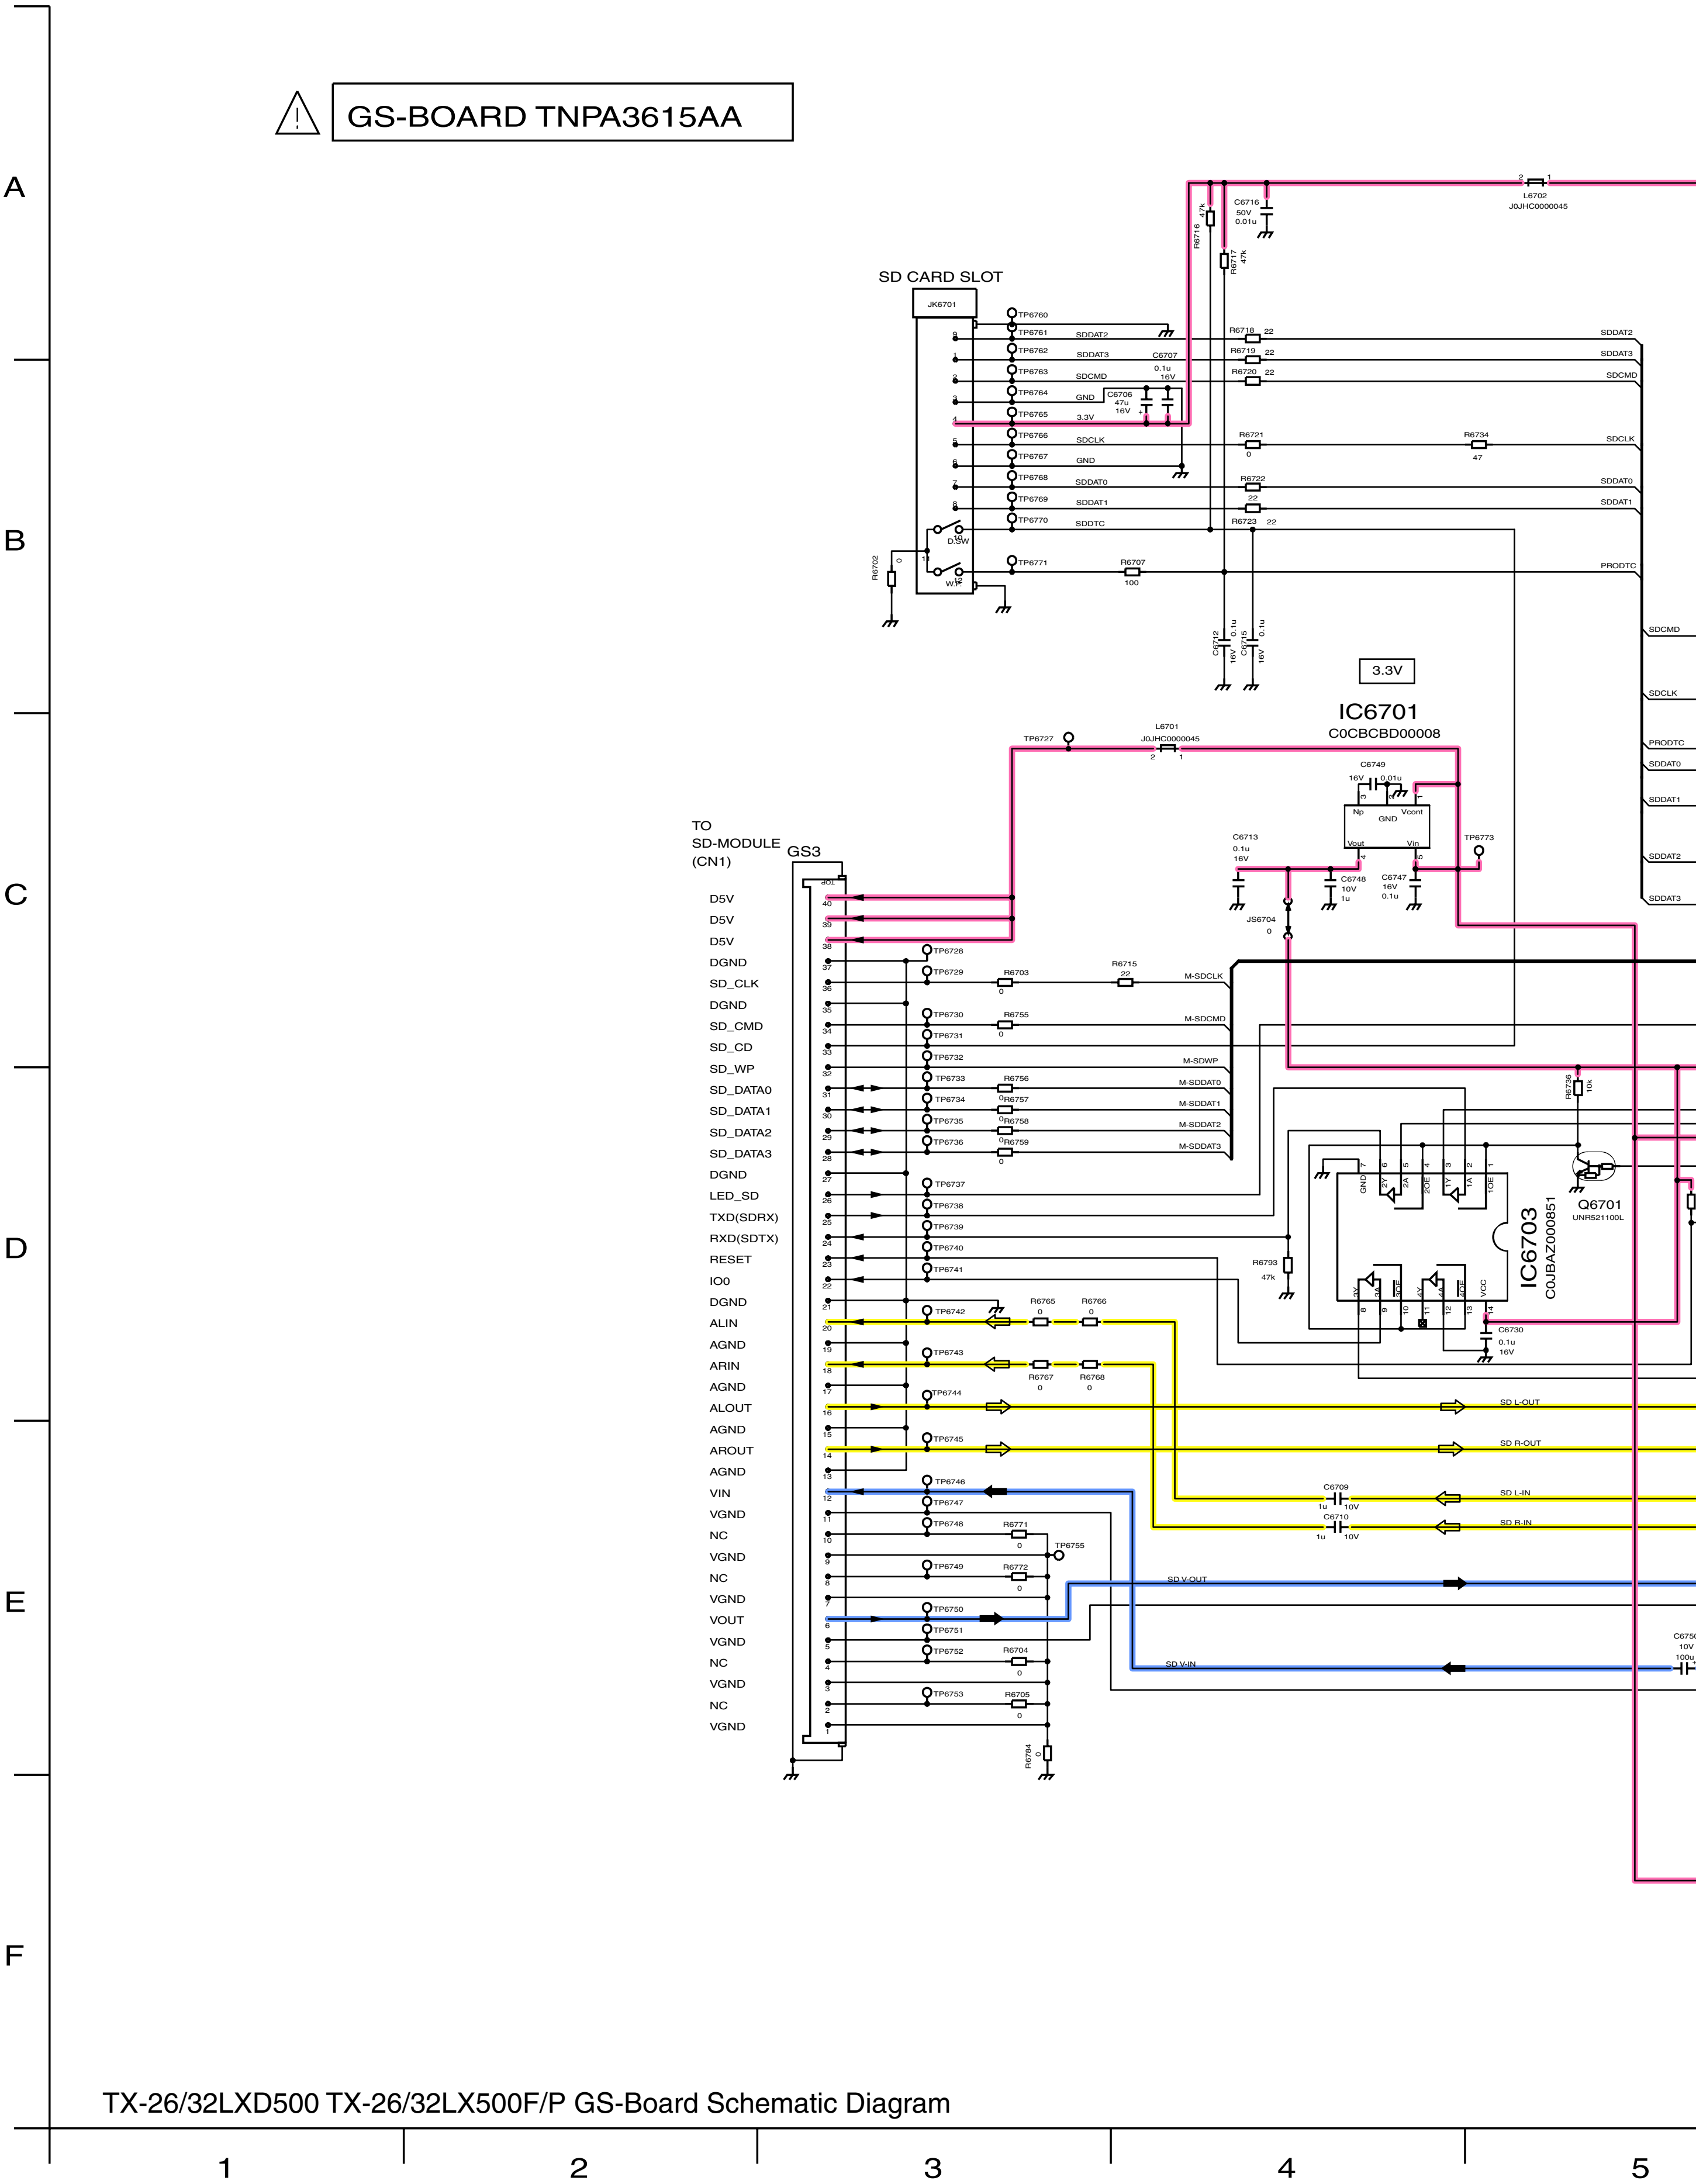
A
B
C
D
E
F
1
2
3
4
5
SD CARD SLOT
JK6701
L6702
J0JHC0000045
C6716
50V
0.01u
R6716
47k
R6717
47k
TP6760
TP6761
TP6762
TP6763
TP6764
TP6765
TP6766
TP6767
TP6768
TP6769
TP6770
TP6771
SDDAT2
SDDAT3
SDCMD
GND
3.3V
SDCLK
GND
SDDAT0
SDDAT1
SDDTC
C6707
0.1u
16V
C6706
47u
16V
R6718 22
R6719 22
R6720 22
R6721 0
R6734 47
R6722 22
R6723 22
D.SW
W.P
R6702 0
R6707 100
PRODTC
C6712 0.1u 16V
C6715 0.1u 16V
3.3V
IC6701
C0CBCBD00008
TP6727
L6701
J0JHC0000045
C6749
16V 0.01u
Np
Vcont
GND
Vout
Vin
TP6773
C6713
0.1u
16V
C6748
10V
1u
C6747
16V
0.1u
JS6704
0
TO
SD-MODULE
(CN1)
GS3
D5V
D5V
D5V
DGND
SD_CLK
DGND
SD_CMD
SD_CD
SD_WP
SD_DATA0
SD_DATA1
SD_DATA2
SD_DATA3
DGND
LED_SD
TXD(SDRX)
RXD(SDTX)
RESET
IO0
DGND
ALIN
AGND
ARIN
AGND
ALOUT
AGND
AROUT
AGND
VIN
VGND
NC
VGND
NC
VGND
VOUT
VGND
NC
VGND
NC
VGND
TP6728
TP6729
TP6730
TP6731
TP6732
TP6733
TP6734
TP6735
TP6736
TP6737
TP6738
TP6739
TP6740
TP6741
TP6742
TP6743
TP6744
TP6745
TP6746
TP6747
TP6748
TP6749
TP6750
TP6751
TP6752
TP6753
TP6755
R6703 0
R6715 22
M-SDCLK
R6755 0
M-SDCMD
M-SDWP
R6756 0
R6757 0
R6758 0
R6759 0
M-SDDAT0
M-SDDAT1
M-SDDAT2
M-SDDAT3
R6765 0
R6766 0
R6767 0
R6768 0
R6771 0
R6772 0
R6704 0
R6705 0
R6784 0
R6793 47k
R6795 10k
Q6701
UNR521100L
IC6703
C0JBAZ000851
GND
2Y
2A
2OE
1Y
1A
1OE
3Y
3A
3OE
4Y
4A
4OE
VCC
C6730
0.1u
16V
SD L-OUT
SD R-OUT
SD L-IN
SD R-IN
C6709
1u 10V
C6710
1u 10V
SD V-OUT
SD V-IN
SDCMD
SDCLK
PRODTC
SDDAT0
SDDAT1
SDDAT2
SDDAT3
10V
100u

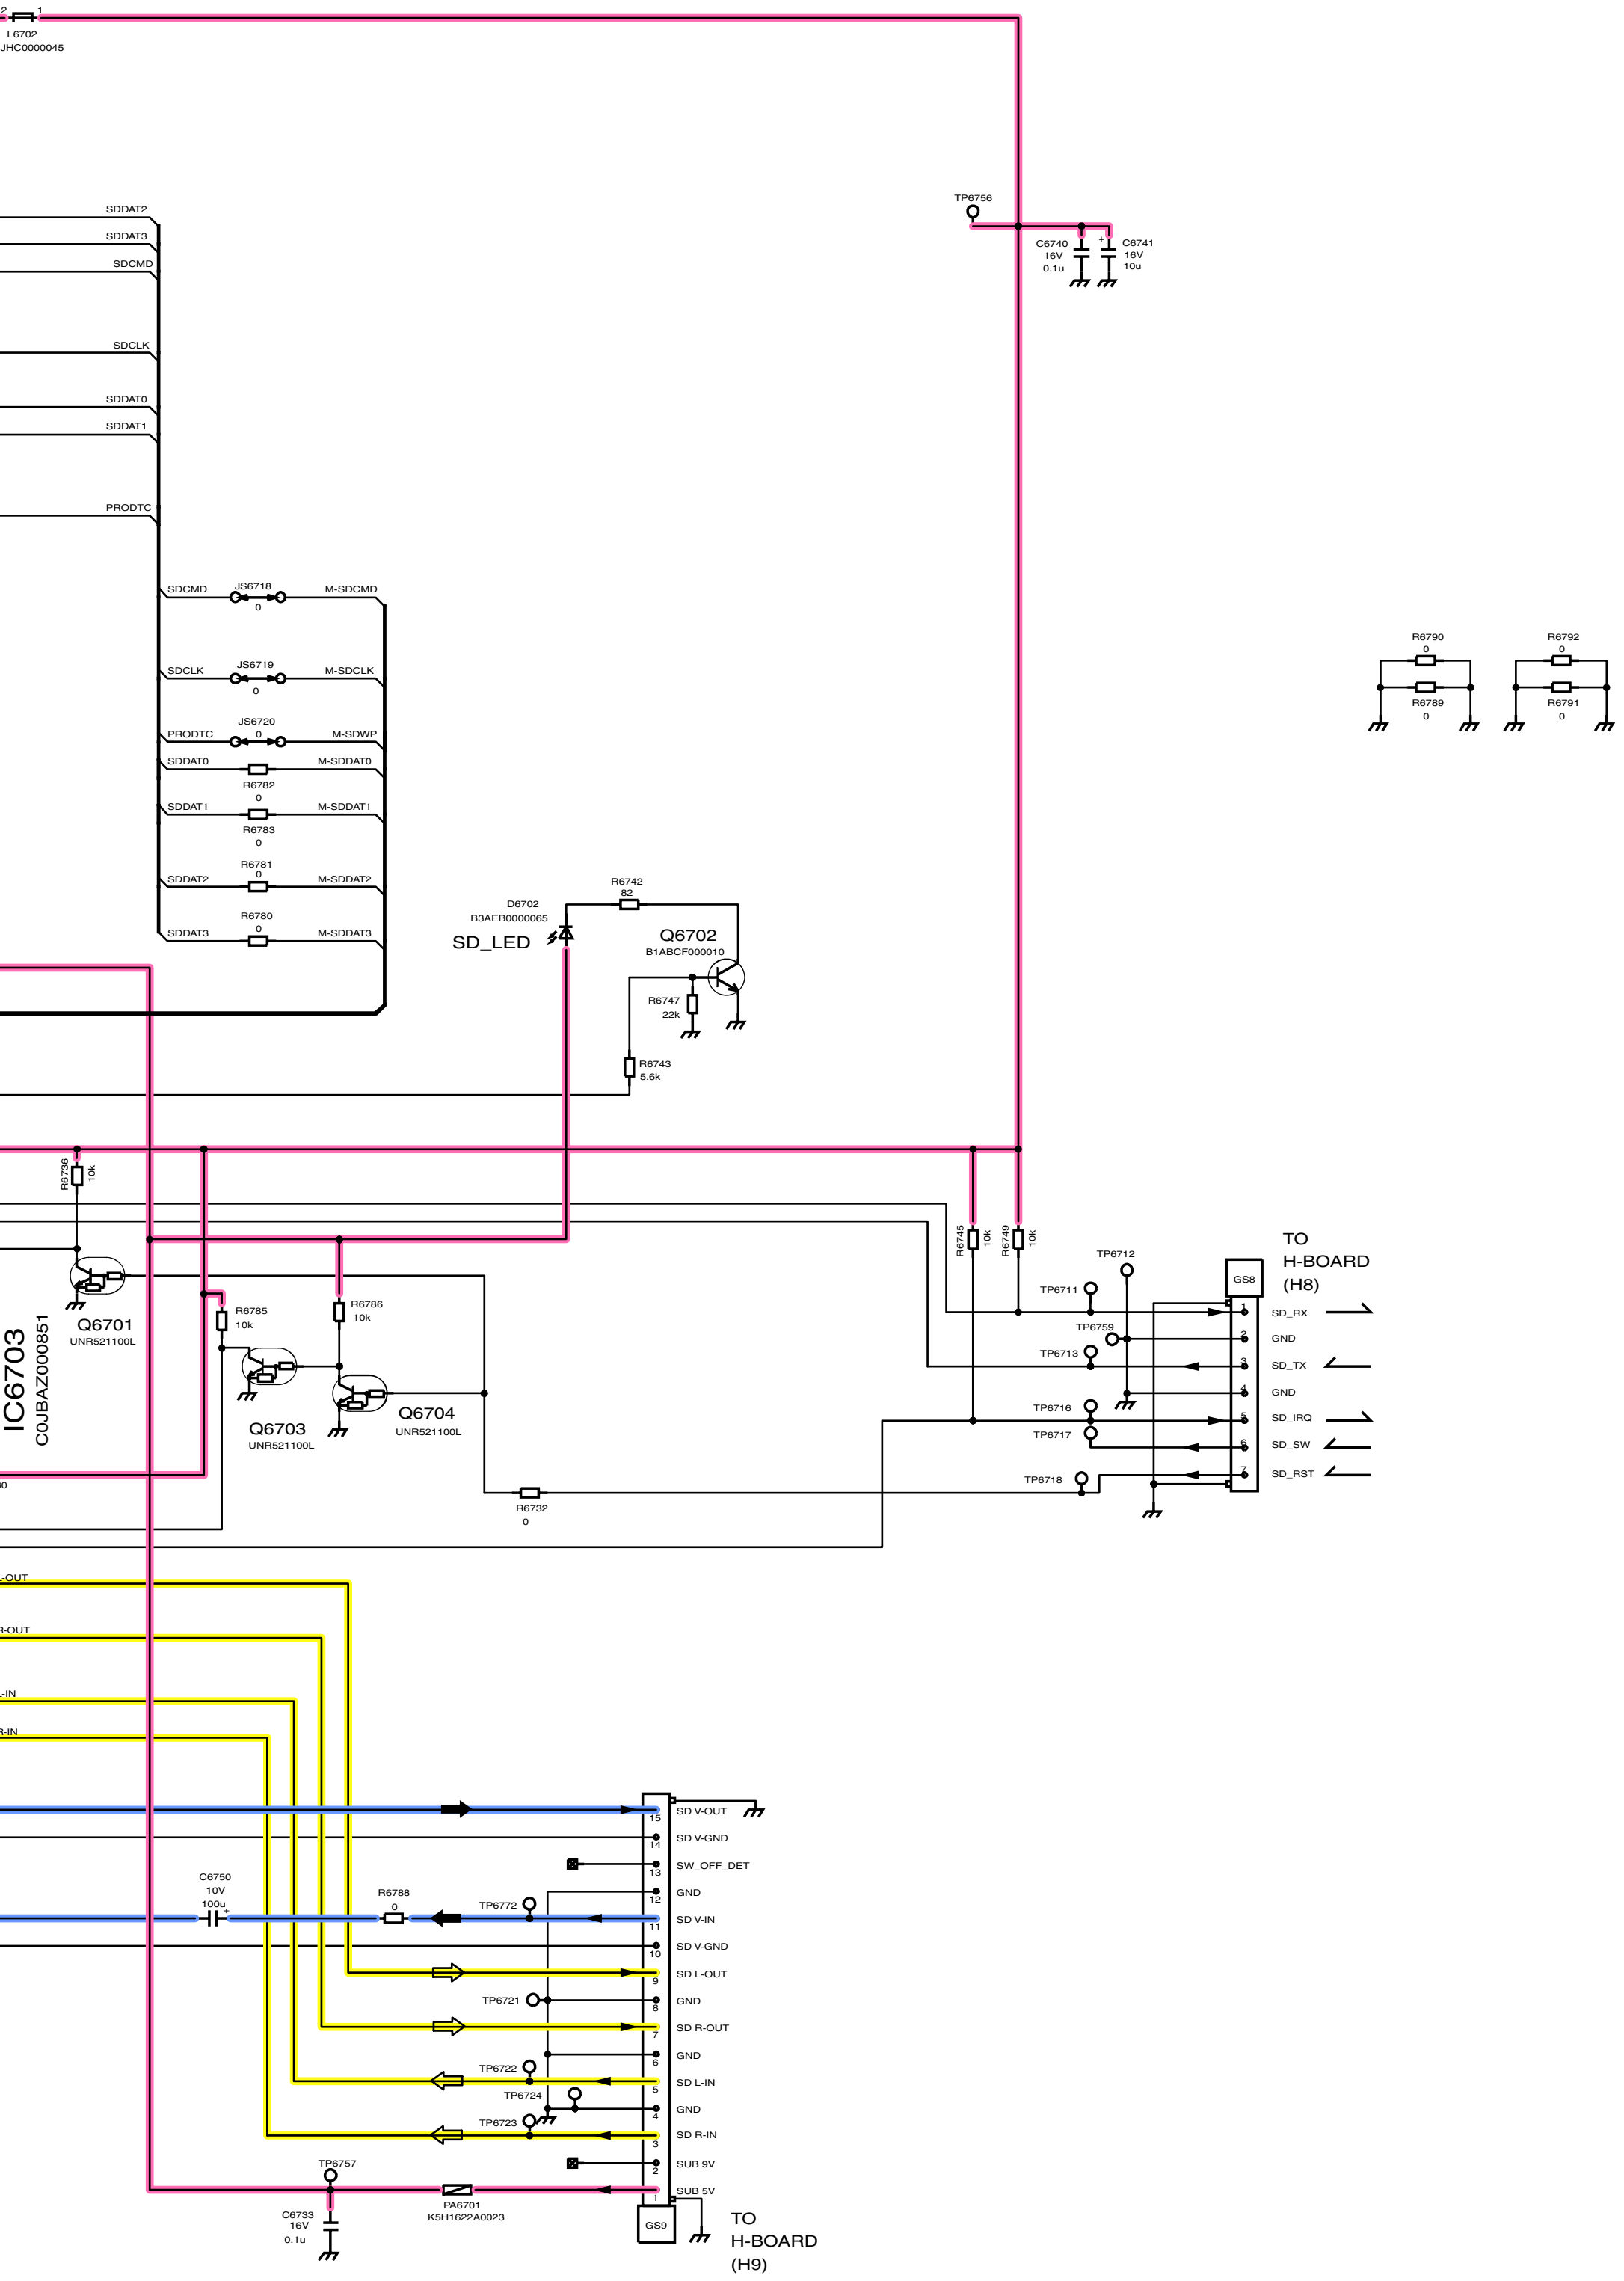
L6702
JHC0000045
TP6756
C6740
16V
0.1u
C6741
16V
10u
SDDAT2
SDDAT3
SDCMD
SDCLK
SDDAT0
SDDAT1
PRODTC
SDCMD
JS6718
0
M-SDCMD
SDCLK
JS6719
0
M-SDCLK
PRODTC
JS6720
0
M-SDWP
SDDAT0
R6782
0
M-SDDAT0
SDDAT1
R6783
0
M-SDDAT1
SDDAT2
R6781
0
M-SDDAT2
SDDAT3
R6780
0
M-SDDAT3
R6790
0
R6789
0
R6792
0
R6791
0
D6702
B3AEB0000065
SD_LED
R6742
82
Q6702
B1ABCF000010
R6747
22k
R6743
5.6k
R6795
10k
R6740
10k
R6749
10k
IC6703
C0JBAZ000851
Q6701
UNR521100L
R6785
10k
R6786
10k
Q6703
UNR521100L
Q6704
UNR521100L
R6732
0
TP6712
TP6711
TP6759
TP6713
TP6716
TP6717
TP6718
GS8
TO
H-BOARD
(H8)
SD_RX
GND
SD_TX
GND
SD_IRQ
SD_SW
SD_RST
-OUT
-OUT
-IN
-IN
C6750
10V
100u
R6788
0
TP6772
TP6721
TP6722
TP6724
TP6723
TP6757
C6733
16V
0.1u
PA6701
K5H1622A0023
SD V-OUT
SD V-GND
SW_OFF_DET
GND
SD V-IN
SD V-GND
SD L-OUT
GND
SD R-OUT
GND
SD L-IN
GND
SD R-IN
SUB 9V
SUB 5V
GS9
TO
H-BOARD
(H9)

TX-26/32LXD500 TX-26/32LX500F/P GS-Board Schematic Diagram

5 6 7 8 9

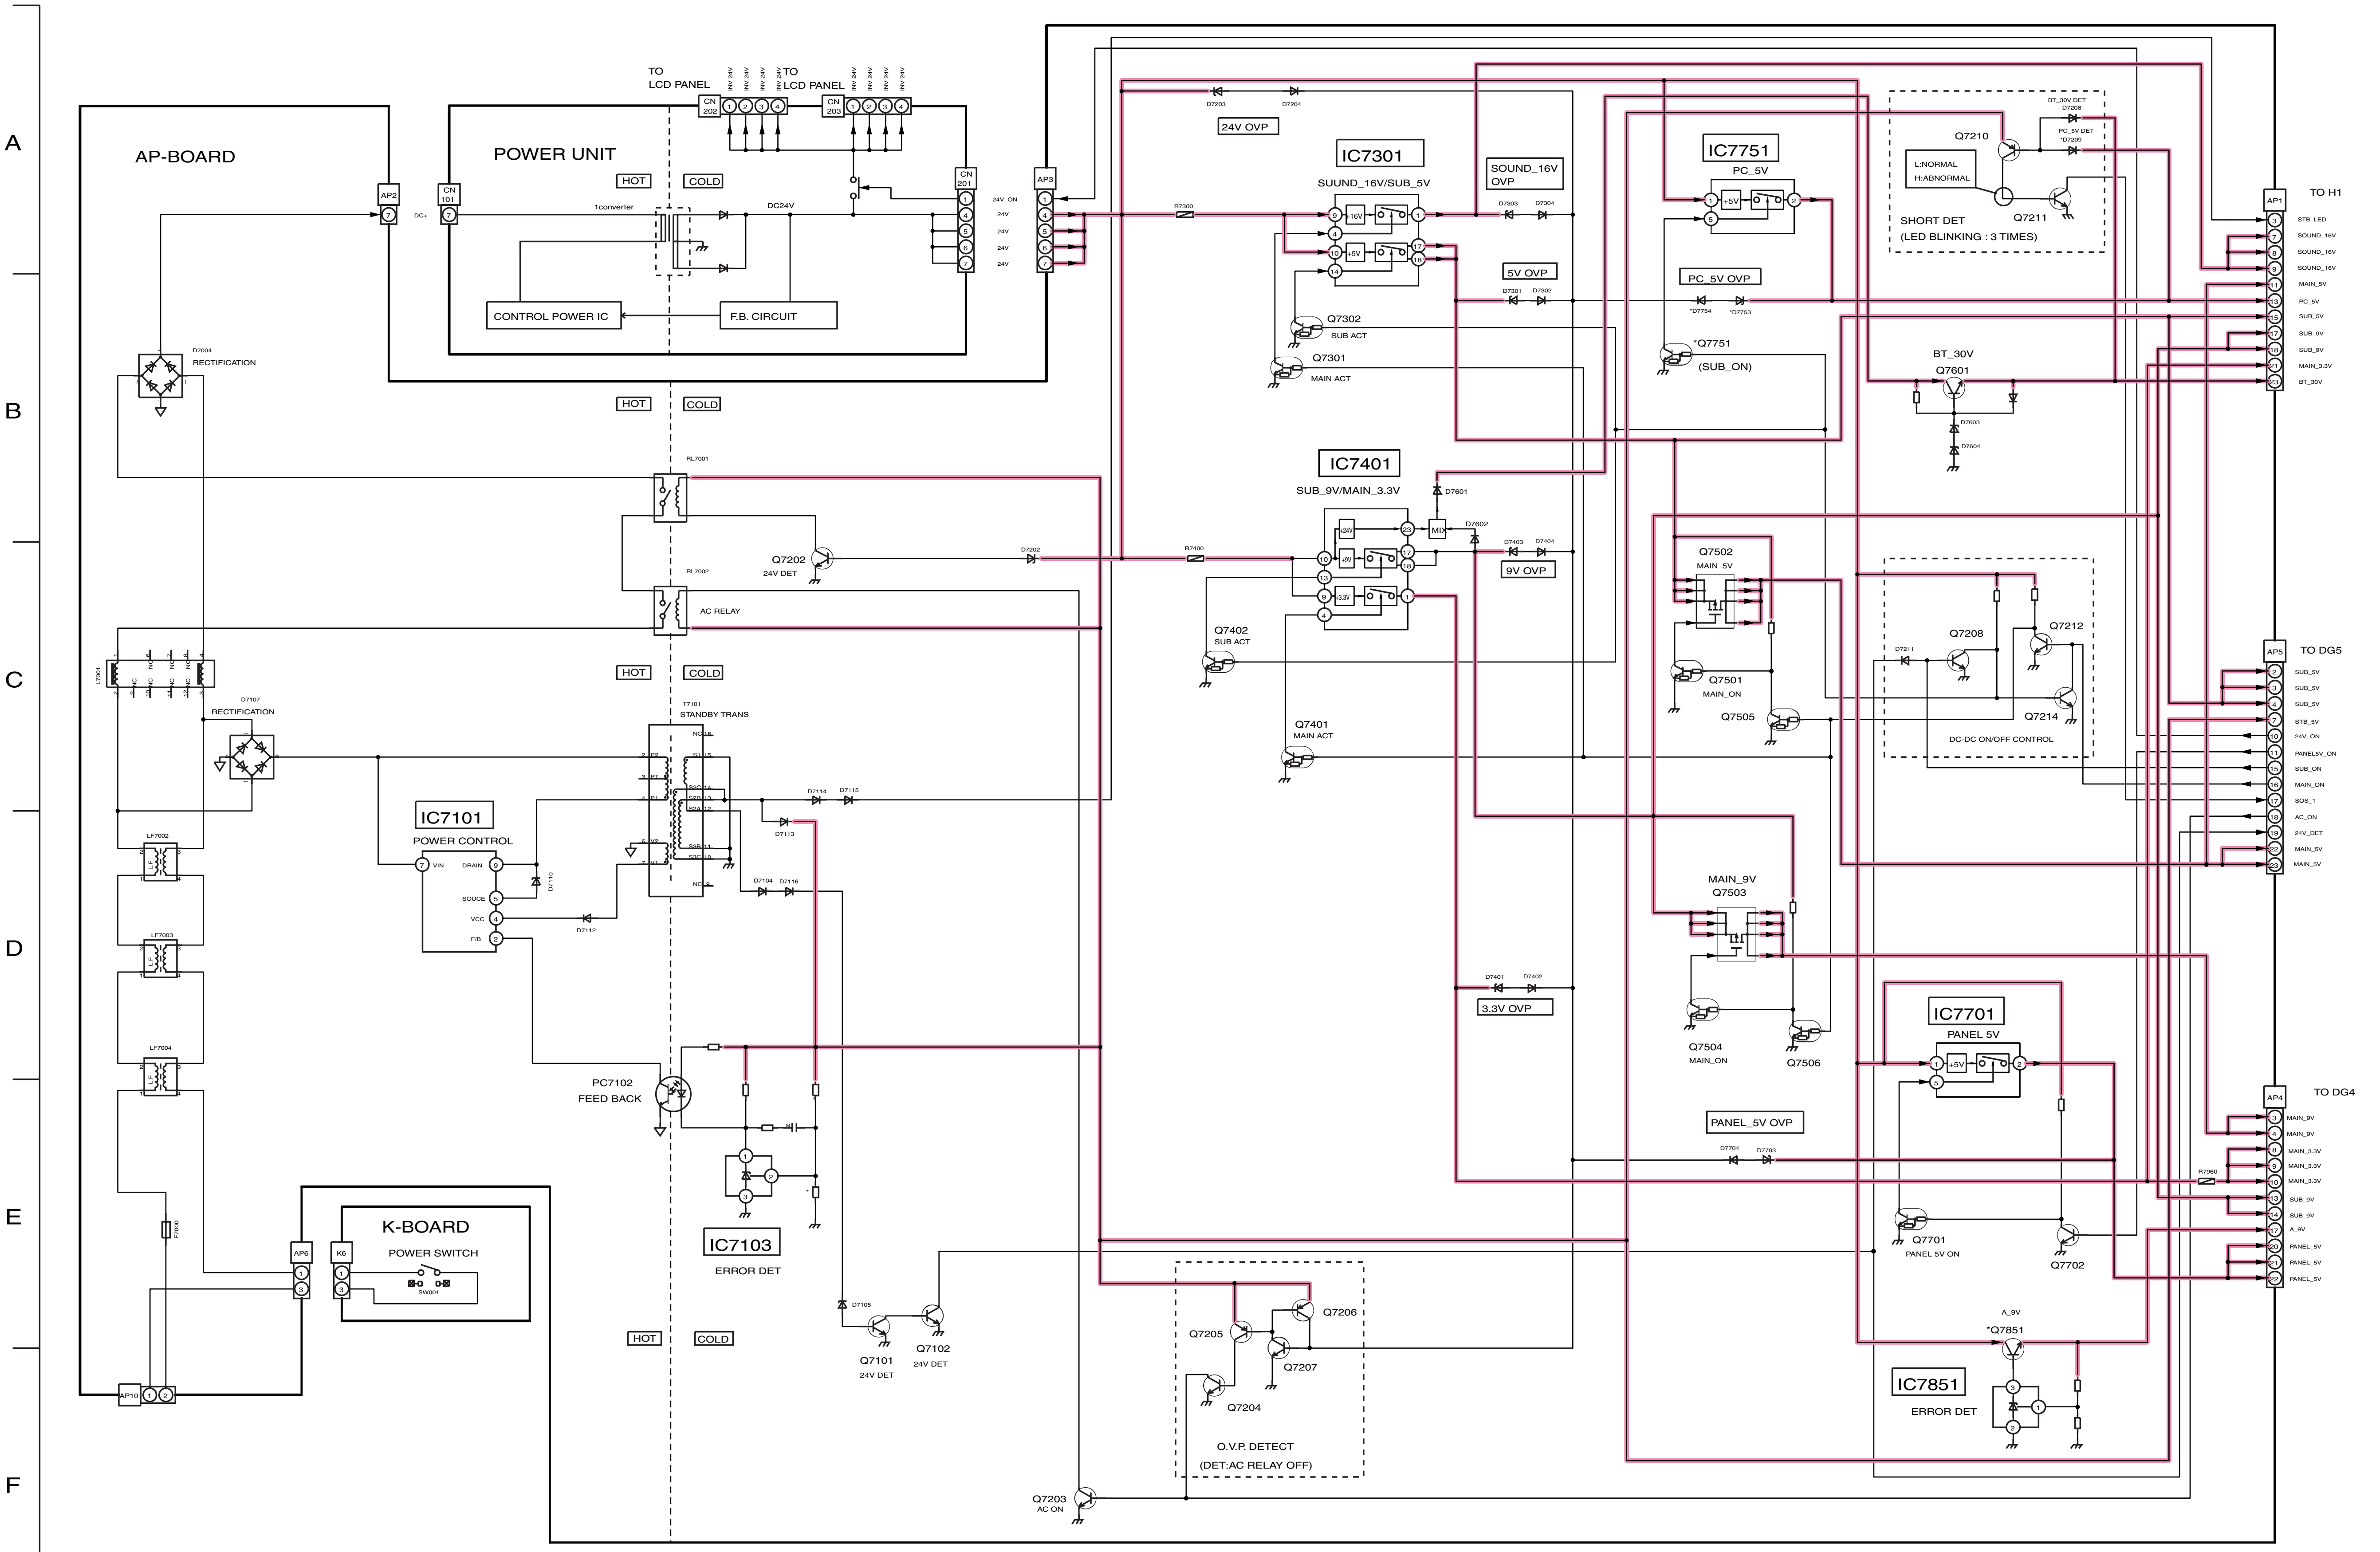
A
B
C
D
E
F
AP-BOARD
AP2
POWER UNIT
HOT
COLD
TO LCD PANEL
CN 202
CN 203
INV 24V
CN 101
CN 201
1converter
DC24V
DC+
24V_ON
24V
CONTROL POWER IC
F.B. CIRCUIT
AP3
D7004
RECTIFICATION
RL7001
RL7002
AC RELAY
Q7202
24V DET
D7202
L7001
D7107
RECTIFICATION
T7101
STANDBY TRANS
LF7002
LF7003
LF7004
IC7101
POWER CONTROL
VIN
DRAIN
SOUCE
VCC
F/B
D7110
D7112
D7113
D7114
D7115
D7104
D7116
PC7102
FEED BACK
IC7103
ERROR DET
D7105
Q7101
24V DET
Q7102
24V DET
F7000
K-BOARD
POWER SWITCH
SW001
AP6
K6
AP10
D7203
D7204
24V OVP
R7300
IC7301
SUUND_16V/SUB_5V
SOUND_16V OVP
D7303
D7304
5V OVP
D7301
D7302
Q7302
SUB ACT
Q7301
MAIN ACT
IC7401
SUB_9V/MAIN_3.3V
R7400
D7601
D7602
MIX
D7403
D7404
9V OVP
Q7402
SUB ACT
Q7401
MAIN ACT
D7401
D7402
3.3V OVP
O.V.P. DETECT
(DET:AC RELAY OFF)
Q7205
Q7206
Q7207
Q7204
Q7203
AC ON
IC7751
PC_5V
PC_5V OVP
*D7754
*D7753
*Q7751
(SUB_ON)
Q7210
L:NORMAL
H:ABNORMAL
Q7211
SHORT DET
(LED BLINKING : 3 TIMES)
BT_30V DET
D7208
PC_5V DET
*D7209
BT_30V
Q7601
D7603
D7604
Q7502
MAIN_5V
Q7501
MAIN_ON
Q7505
D7211
Q7208
Q7212
Q7214
DC-DC ON/OFF CONTROL
MAIN_9V
Q7503
Q7504
MAIN_ON
Q7506
IC7701
PANEL 5V
PANEL_5V OVP
D7704
D7703
R7960
Q7701
PANEL 5V ON
Q7702
A_9V
*Q7851
IC7851
ERROR DET
AP1
TO H1
STB_LED
SOUND_16V
MAIN_5V
PC_5V
SUB_5V
SUB_9V
MAIN_3.3V
BT_30V
AP5
TO DG5
STB_5V
24V_ON
PANEL5V_ON
SUB_ON
MAIN_ON
SOS_1
AC_ON
24V_DET
AP4
TO DG4
MAIN_9V
A_9V
PANEL_5V
1
2
3
4
5
6
7
8
9

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (1 of 7)

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (1 of 7)

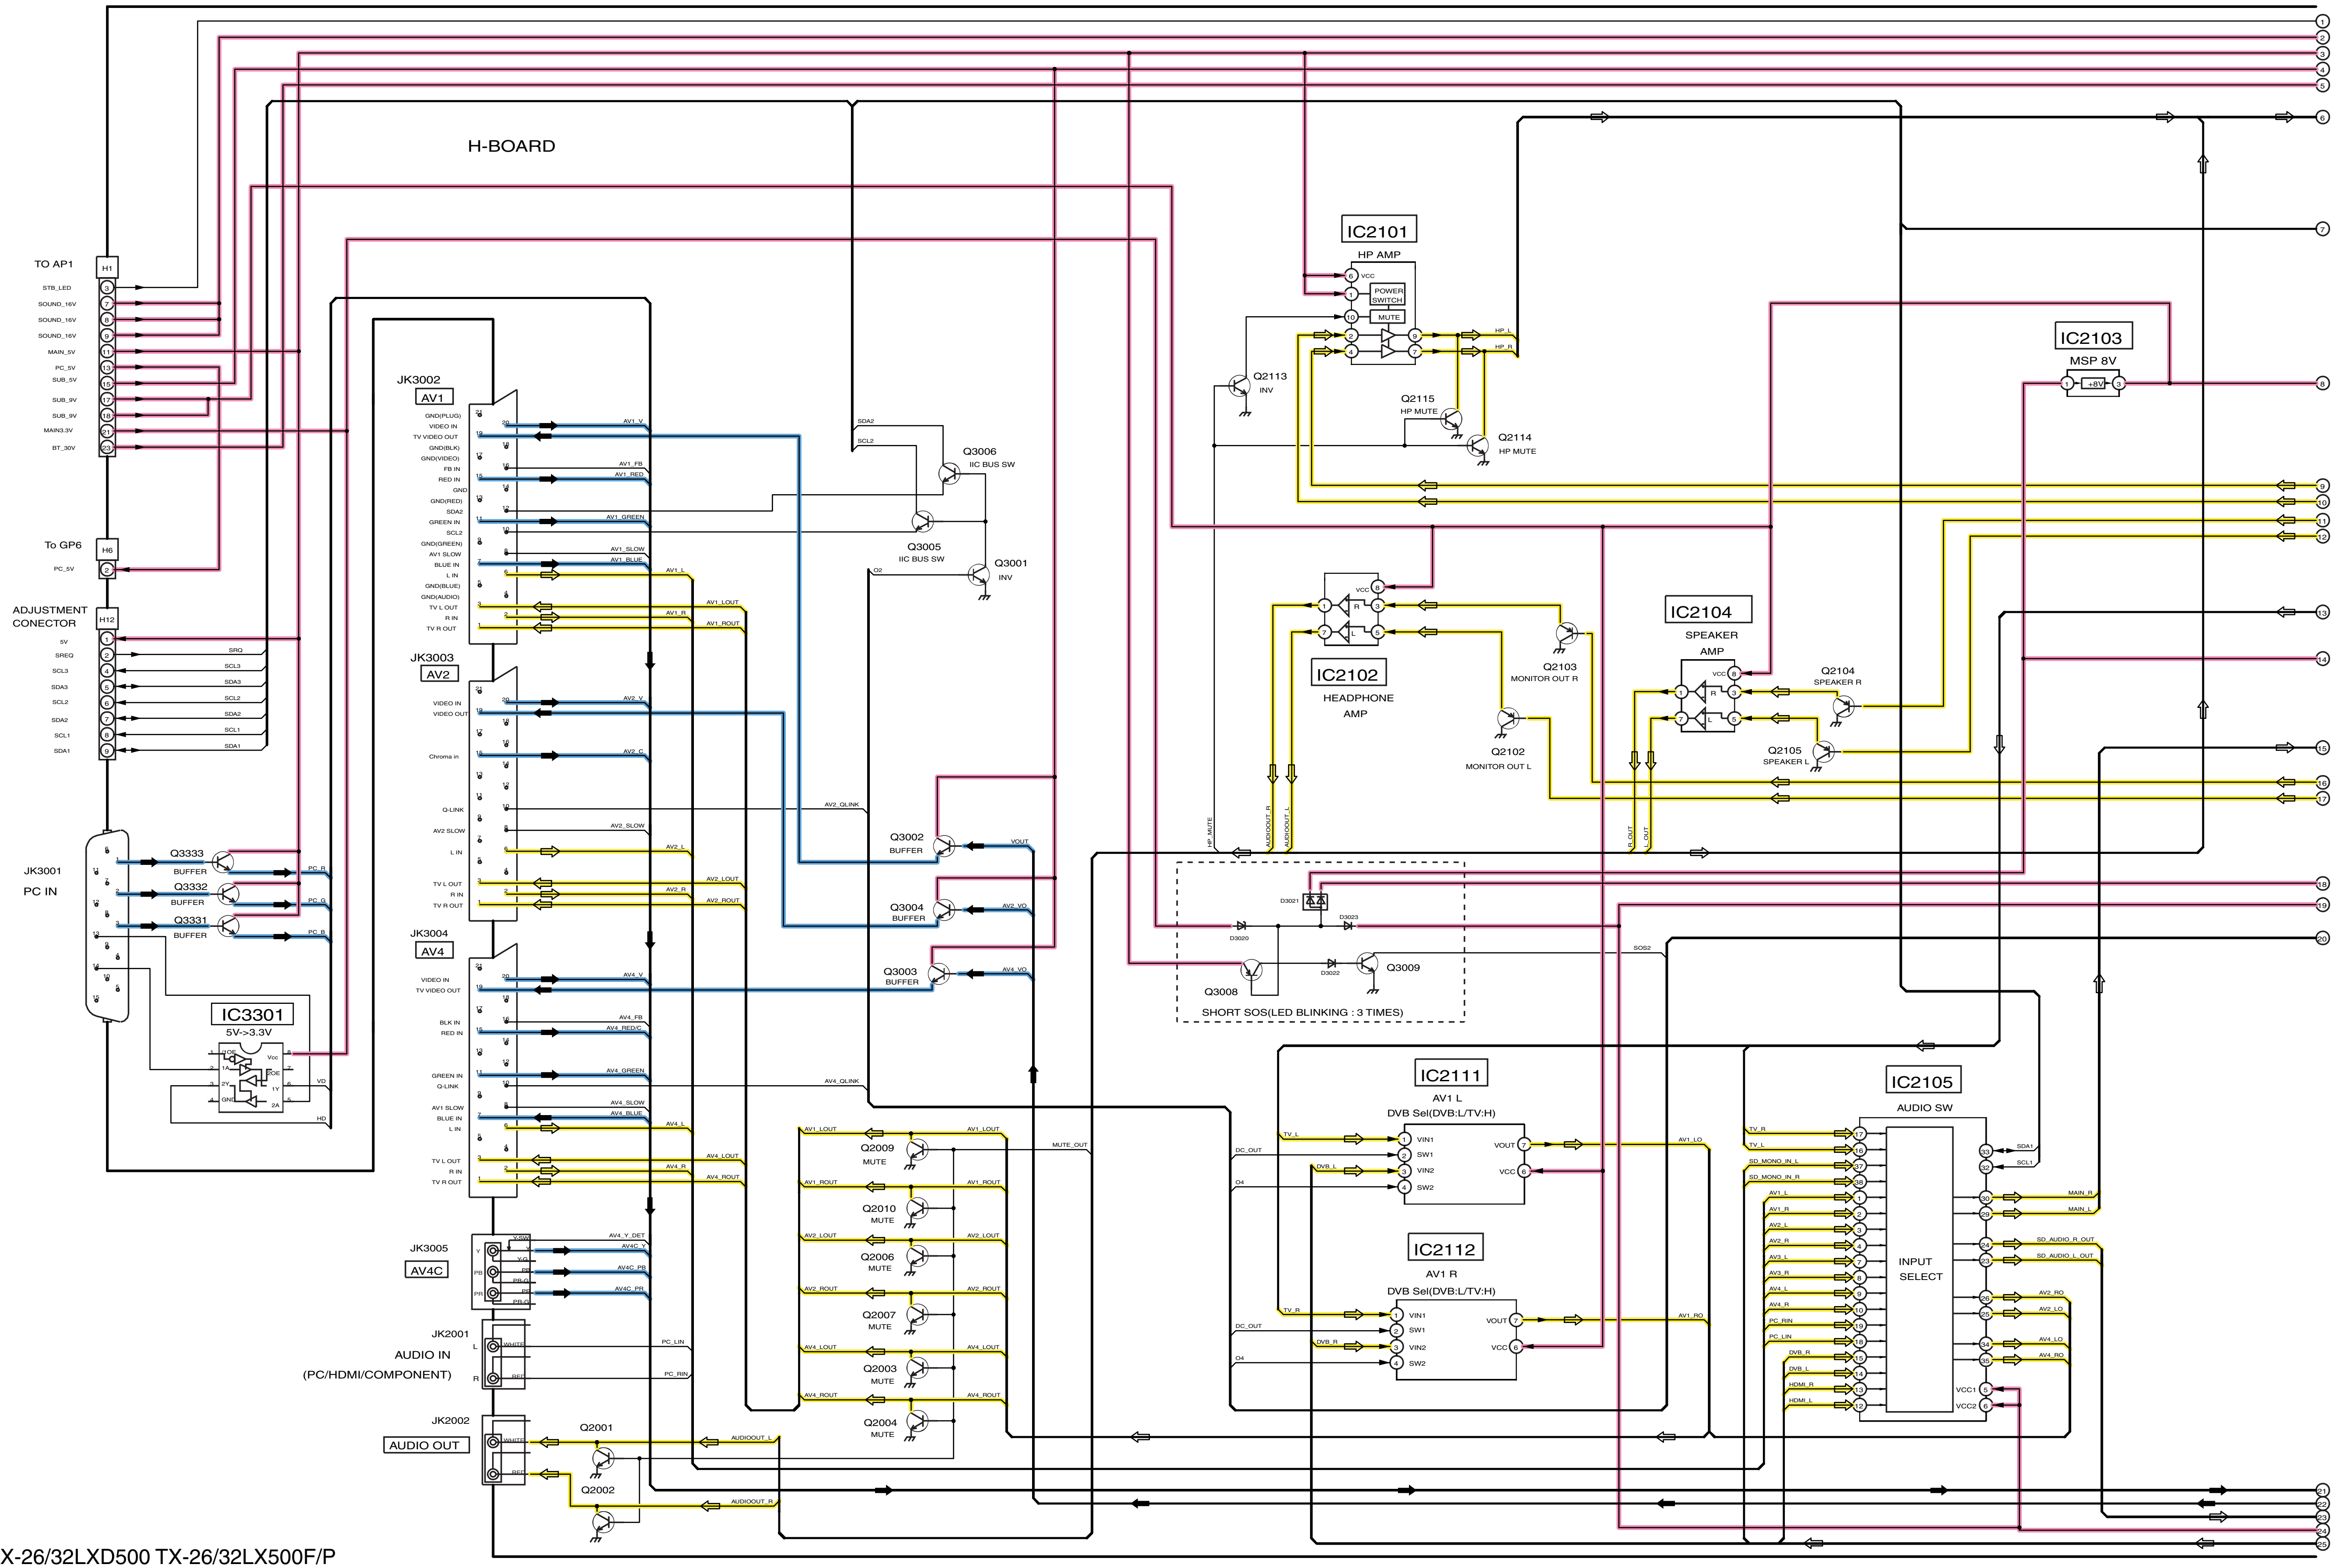
H-BOARD
TO AP1
H1
STB_LED
SOUND_16V
SOUND_16V
SOUND_16V
MAIN_5V
PC_5V
SUB_5V
SUB_9V
SUB_9V
MAIN3.3V
BT_30V
To GP6
H6
PC_5V
ADJUSTMENT CONECTOR
H12
5V
SREQ
SCL3
SDA3
SCL2
SDA2
SCL1
SDA1
JK3001
PC IN
Q3333 BUFFER
Q3332 BUFFER
Q3331 BUFFER
PC_R
PC_G
PC_B
IC3301
5V->3.3V
VD
HD
JK3002
AV1
GND(PLUG)
VIDEO IN
TV VIDEO OUT
GND(BLK)
GND(VIDEO)
FB IN
RED IN
GND
GND(RED)
SDA2
GREEN IN
SCL2
GND(GREEN)
AV1 SLOW
BLUE IN
L IN
GND(BLUE)
GND(AUDIO)
TV L OUT
R IN
TV R OUT
AV1_V
AV1_FB
AV1_RED
AV1_GREEN
AV1_SLOW
AV1_BLUE
AV1_L
AV1_LOUT
AV1_R
AV1_ROUT
JK3003
AV2
VIDEO IN
VIDEO OUT
Chroma in
Q-LINK
AV2 SLOW
L IN
TV L OUT
R IN
TV R OUT
AV2_V
AV2_C
AV2_QLINK
AV2_SLOW
AV2_L
AV2_LOUT
AV2_R
AV2_ROUT
JK3004
AV4
VIDEO IN
TV VIDEO OUT
BLK IN
RED IN
GREEN IN
Q-LINK
AV1 SLOW
BLUE IN
L IN
TV L OUT
R IN
TV R OUT
AV4_V
AV4_FB
AV4_RED/C
AV4_GREEN
AV4_QLINK
AV4_SLOW
AV4_BLUE
AV4_L
AV4_LOUT
AV4_R
AV4_ROUT
JK3005
AV4C
Y
PB
PR
AV4_Y_DET
AV4C_V
AV4C_PB
AV4C_PR
JK2001
AUDIO IN
(PC/HDMI/COMPONENT)
WHITE
RED
PC_LIN
PC_RIN
JK2002
AUDIO OUT
Q2001
Q2002
AUDIOOUT_L
AUDIOOUT_R
SDA2
SCL2
Q3006 IIC BUS SW
Q3005 IIC BUS SW
Q3001 INV
O2
Q3002 BUFFER
Q3004 BUFFER
Q3003 BUFFER
VOUT
AV2_VO
AV4_VO
AV1_LOUT
Q2009 MUTE
AV1_ROUT
Q2010 MUTE
AV2_LOUT
Q2006 MUTE
AV2_ROUT
Q2007 MUTE
AV4_LOUT
Q2003 MUTE
AV4_ROUT
Q2004 MUTE
MUTE_OUT
IC2101
HP AMP
VCC
POWER SWITCH
MUTE
HP_L
HP_R
Q2113 INV
Q2115 HP MUTE
Q2114 HP MUTE
IC2103
MSP 8V
+8V
IC2102
HEADPHONE AMP
VCC
Q2103 MONITOR OUT R
Q2102 MONITOR OUT L
IC2104
SPEAKER AMP
VCC
Q2104 SPEAKER R
Q2105 SPEAKER L
HP_MUTE
AUDIOOUT_R
AUDIOOUT_L
R_OUT
L_OUT
D3021
D3020
D3023
D3022
Q3008
Q3009
SOS2
SHORT SOS(LED BLINKING : 3 TIMES)
IC2111
AV1 L
DVB Sel(DVB:L/TV:H)
TV_L
DVB_L
DC_OUT
O4
VIN1
SW1
VIN2
SW2
VOUT
VCC
AV1_LO
IC2112
AV1 R
DVB Sel(DVB:L/TV:H)
TV_R
DVB_R
VIN1
SW1
VIN2
SW2
VOUT
VCC
AV1_RO
IC2105
AUDIO SW
INPUT SELECT
TV_R
TV_L
SD_MONO_IN_L
SD_MONO_IN_R
AV1_L
AV1_R
AV2_L
AV2_R
AV3_L
AV3_R
AV4_L
AV4_R
PC_RIN
PC_LIN
DVB_R
DVB_L
HDMI_R
HDMI_L
SDA1
SCL1
MAIN_R
MAIN_L
SD_AUDIO_R_OUT
SD_AUDIO_L_OUT
AV2_RO
AV2_LO
AV4_LO
AV4_RO
VCC1
VCC2
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (2 of 7)

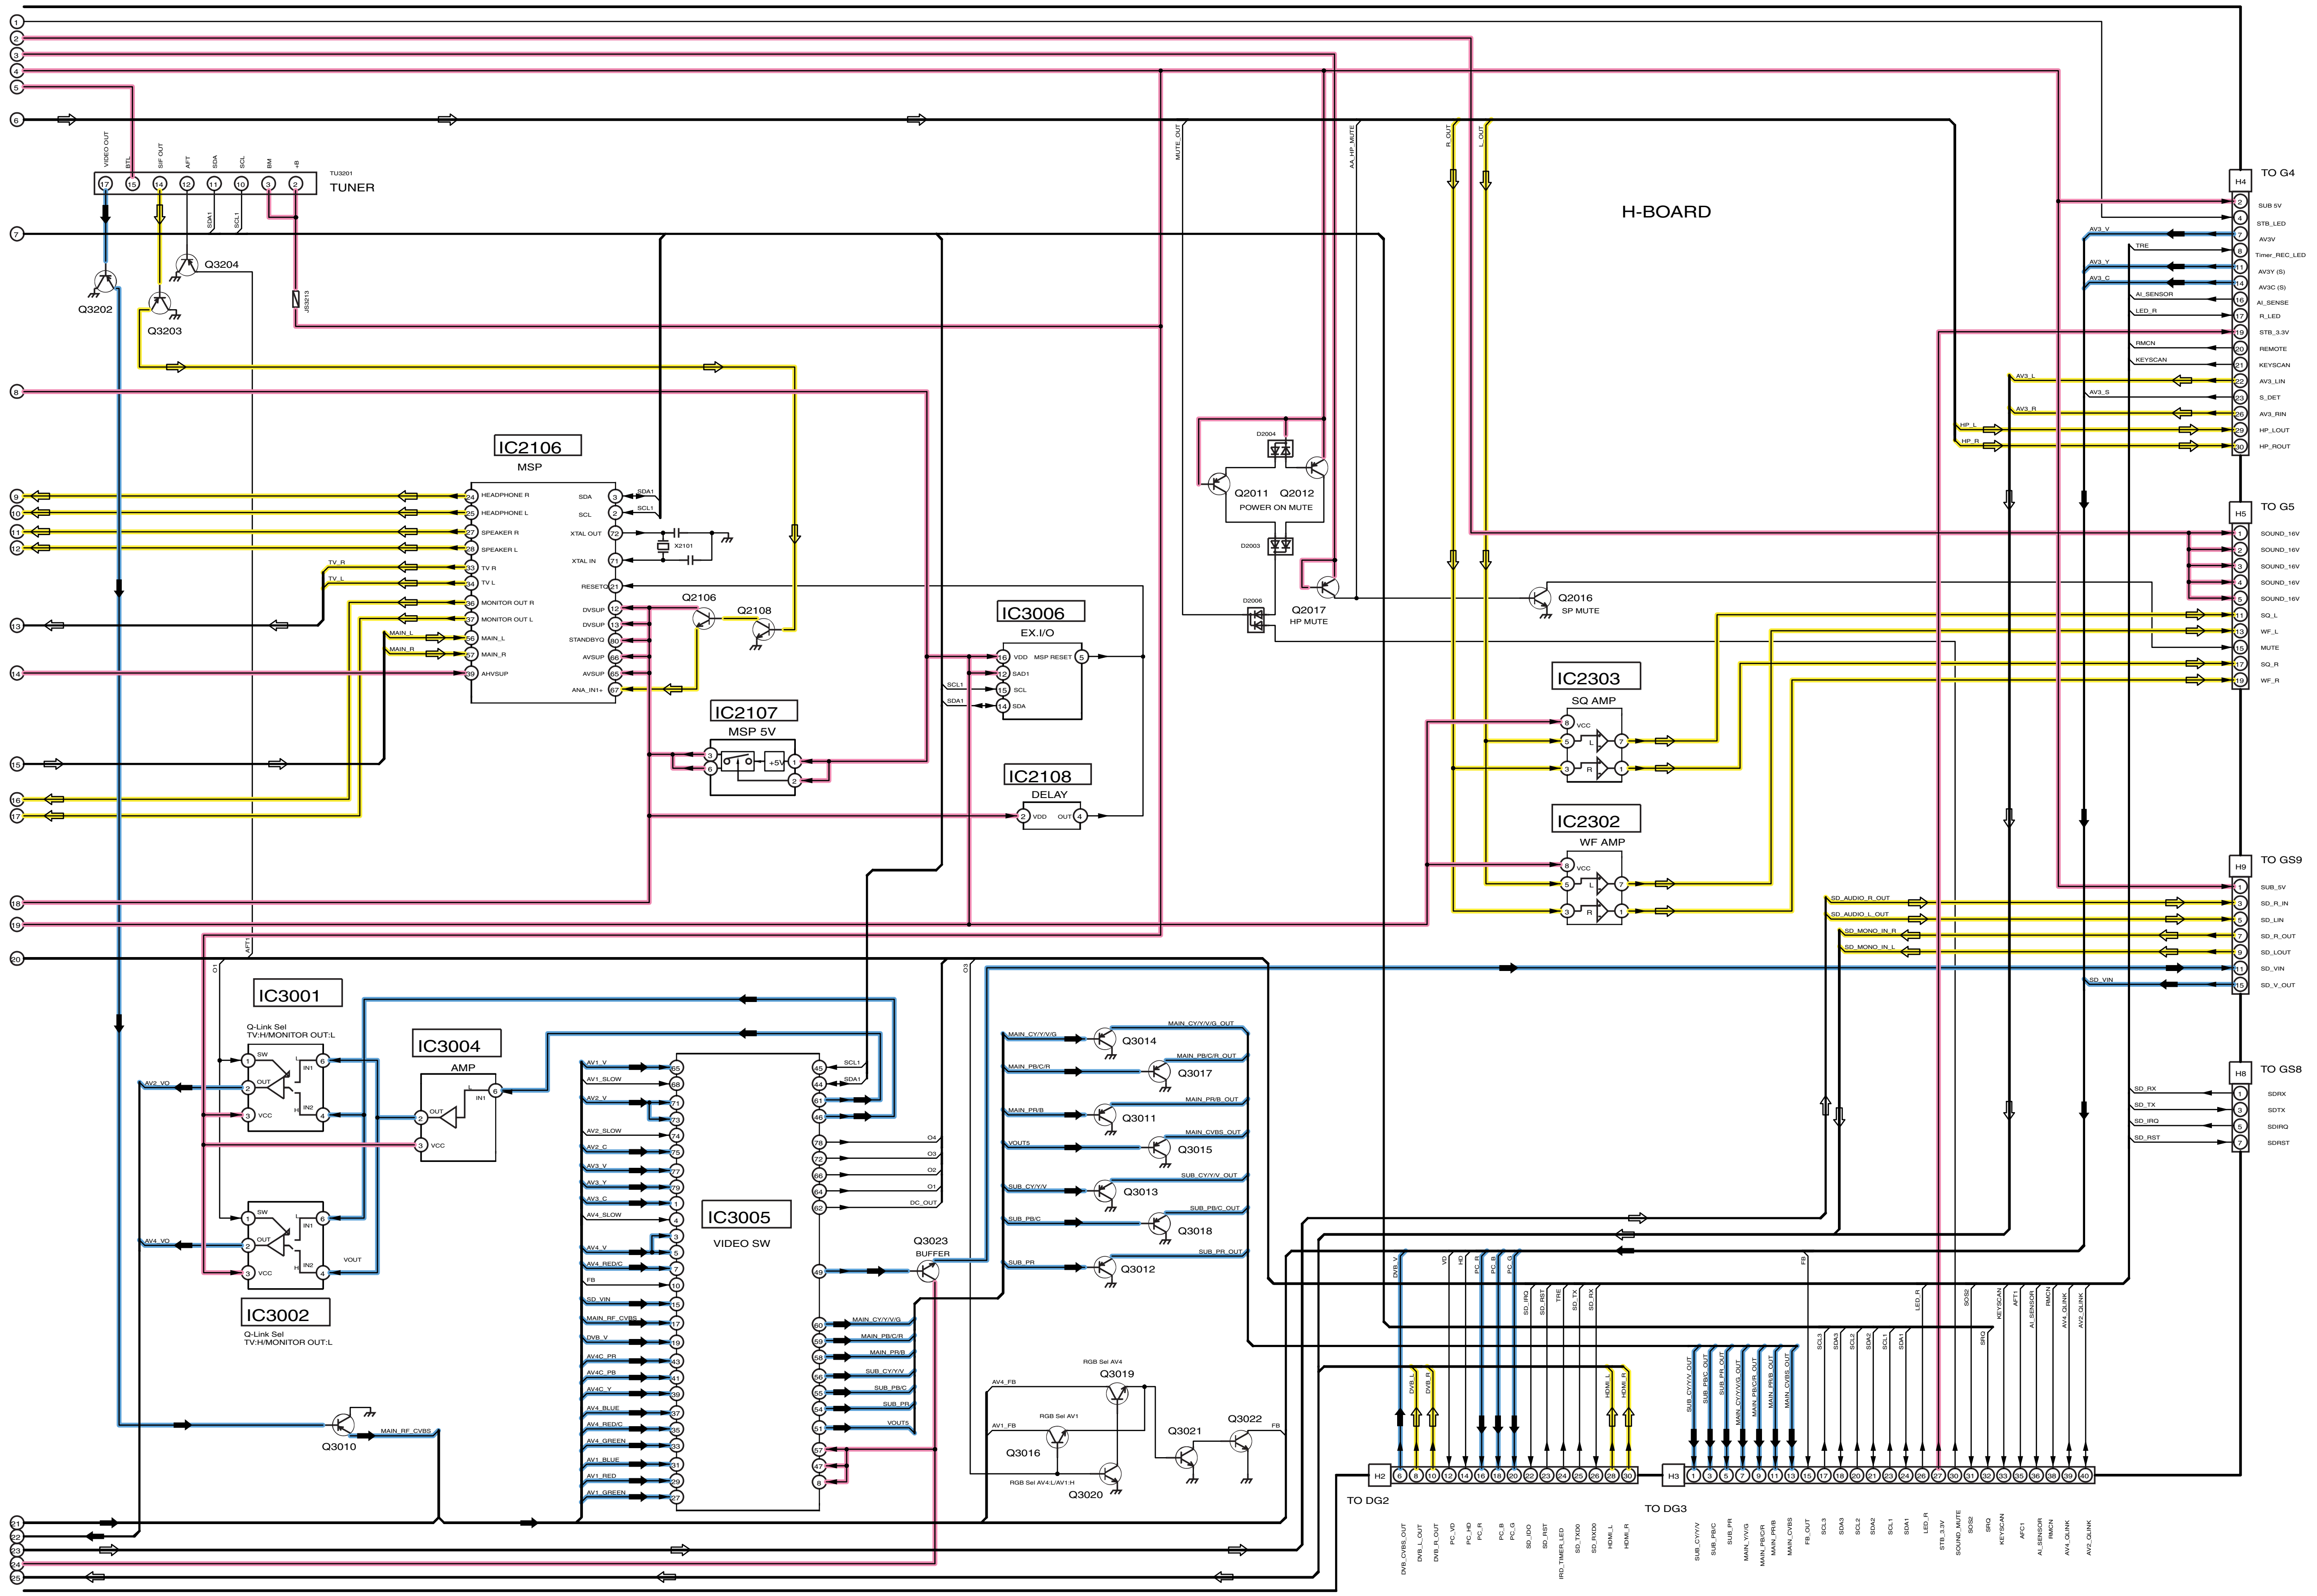
TU3201
TUNER
VIDEO OUT
BTL
SIF OUT
AFT
SDA
SCL
BM
+B
Q3202
Q3203
Q3204
JS3213
IC2106
MSP
HEADPHONE R
HEADPHONE L
SPEAKER R
SPEAKER L
TV R
TV L
MONITOR OUT R
MONITOR OUT L
MAIN_L
MAIN_R
AHVSUP
SDA
SCL
XTAL OUT
XTAL IN
RESETQ
DVSUP
STANDBYQ
AVSUP
ANA_IN1+
X2101
Q2106
Q2108
IC2107
MSP 5V
IC3006
EX.I/O
VDD
MSP RESET
SAD1
IC2108
DELAY
VDD
OUT
IC3001
Q-Link Sel
TV:H/MONITOR OUT:L
IC3002
Q-Link Sel
TV:H/MONITOR OUT:L
AV2_VO
AV4_VO
IC3004
AMP
IC3005
VIDEO SW
Q3023
BUFFER
Q3010
MAIN_RF_CVBS
Q3014
Q3017
Q3011
Q3015
Q3013
Q3018
Q3012
MAIN_CY/Y/V/G_OUT
MAIN_PB/C/R_OUT
MAIN_PR/B_OUT
MAIN_CVBS_OUT
SUB_CY/Y/V_OUT
SUB_PB/C_OUT
SUB_PR_OUT
RGB Sel AV4
Q3019
RGB Sel AV1
Q3016
Q3020
RGB Sel AV4:L/AV1:H
Q3021
Q3022
H-BOARD
MUTE_OUT
AA_HP_MUTE
R_OUT
L_OUT
D2004
D2003
D2006
Q2011
Q2012
POWER ON MUTE
Q2017
HP MUTE
Q2016
SP MUTE
IC2303
SQ AMP
IC2302
WF AMP
H4
TO G4
SUB 5V
STB_LED
AV3V
Timer_REC_LED
AV3Y (S)
AV3C (S)
AI_SENSE
R_LED
STB_3.3V
REMOTE
KEYSCAN
AV3_LIN
S_DET
AV3_RIN
HP_LOUT
HP_ROUT
H5
TO G5
SOUND_16V
SQ_L
WF_L
MUTE
SQ_R
WF_R
H9
TO GS9
SUB_5V
SD_R_IN
SD_LIN
SD_R_OUT
SD_LOUT
SD_VIN
SD_V_OUT
H8
TO GS8
SDRX
SDTX
SDIRQ
SDRST
H2
TO DG2
H3
TO DG3
DVB_CVBS_OUT
DVB_L_OUT
DVB_R_OUT
PC_VD
PC_HD
PC_R
PC_B
PC_G
SD_IDO
SD_RST
IRD_TIMER_LED
SD_TX00
SD_RX00
HDMI_L
HDMI_R
SUB_CY/Y/V
SUB_PB/C
SUB_PR
MAIN_Y/V/G
MAIN_PB/C/R
MAIN_PR/B
MAIN_CVBS
FB_OUT
SCL3
SDA3
SCL2
SDA2
SCL1
SDA1
LED_R
STB_3.3V
SOUND_MUTE
SDIS2
SRIQ
KEYSCAN
AFC1
AI_SENSOR
RMCN
AV4_QLINK
AV2_QLINK

TX-26/32LXD500 TX-26/32LX500F/P Block Diagram (3 of 7)

TX-26/32LXD500 TX-26/32LX500F/P Block Diagram (3 of 7)

19 20 21 22 23 24 25 26 27

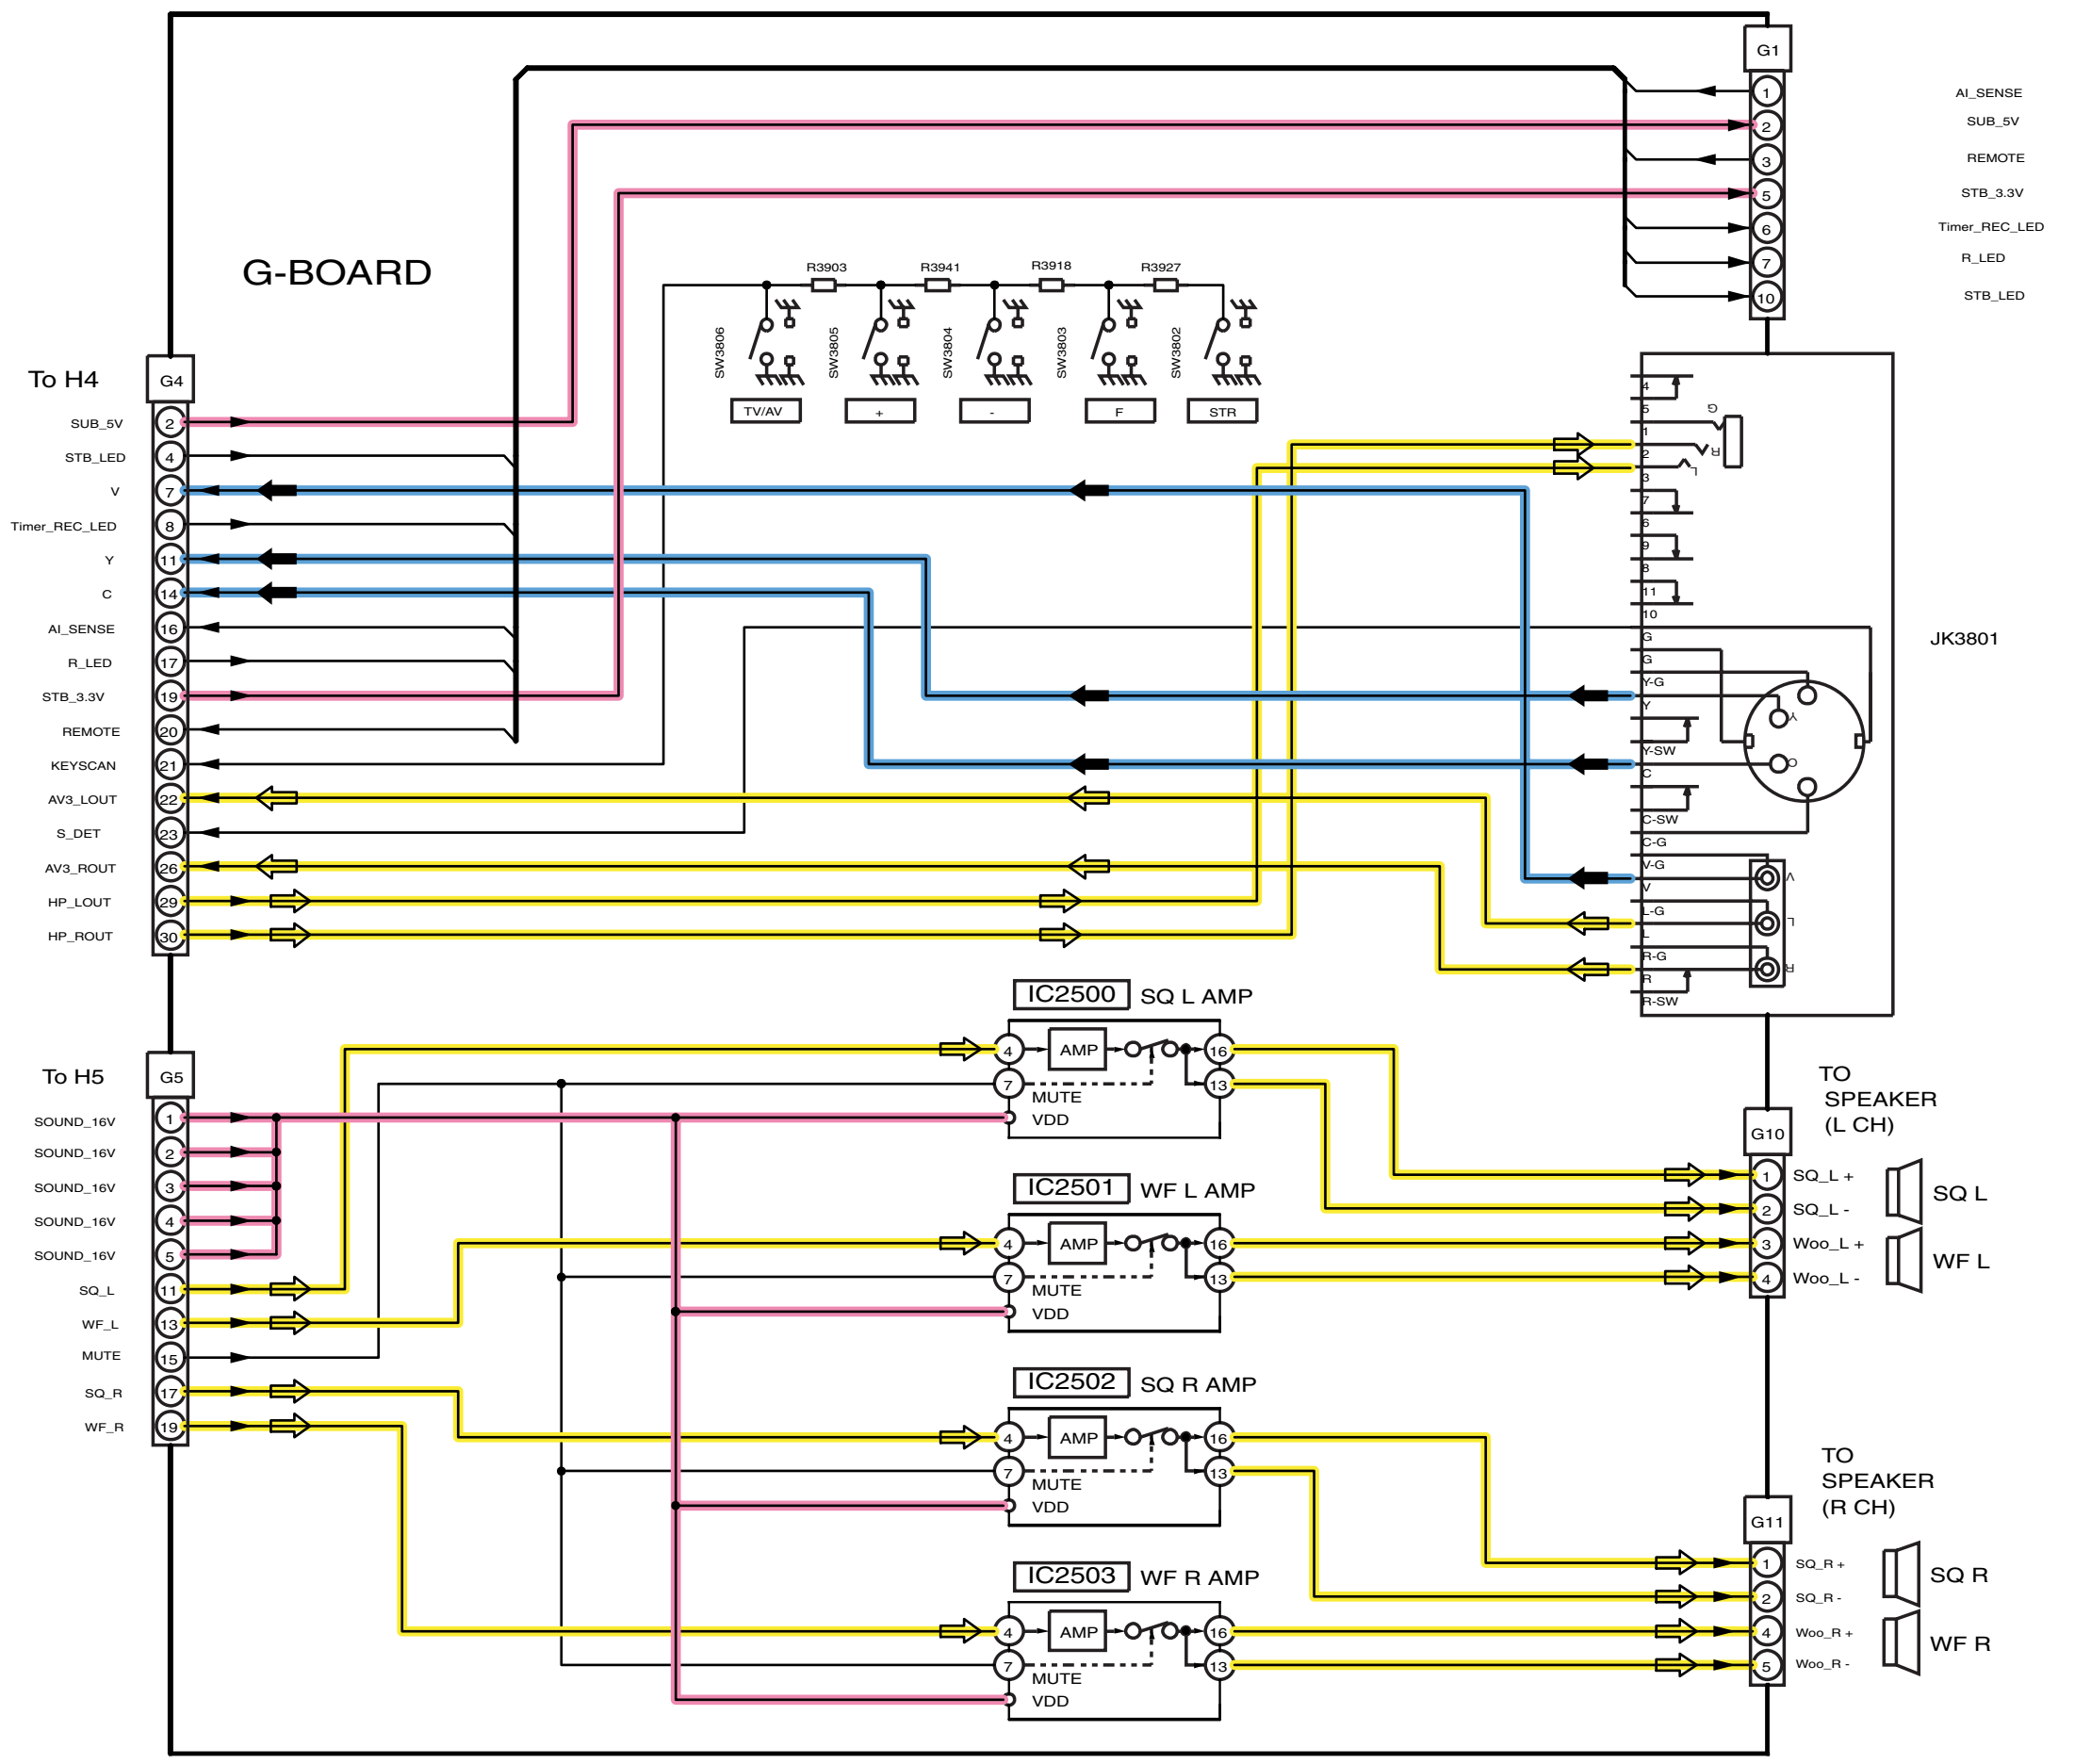
G-BOARD
G1
AI_SENSE
SUB_5V
REMOTE
STB_3.3V
Timer_REC_LED
R_LED
STB_LED
R3903
R3941
R3918
R3927
TV/AV
+
-
F
STR
To H4
G4
SUB_5V
STB_LED
V
Timer_REC_LED
Y
C
AI_SENSE
R_LED
STB_3.3V
REMOTE
KEYSCAN
AV3_LOUT
S_DET
AV3_ROUT
HP_LOUT
HP_ROUT
JK3801
To H5
G5
SOUND_16V
SQ_L
WF_L
MUTE
SQ_R
WF_R
IC2500 SQ L AMP
IC2501 WF L AMP
IC2502 SQ R AMP
IC2503 WF R AMP
AMP
MUTE
VDD
TO SPEAKER (L CH)
G10
SQ_L +
SQ_L -
Woo_L +
Woo_L -
SQ L
WF L
TO SPEAKER (R CH)
G11
SQ_R +
SQ_R -
Woo_R +
Woo_R -
SQ R
WF R

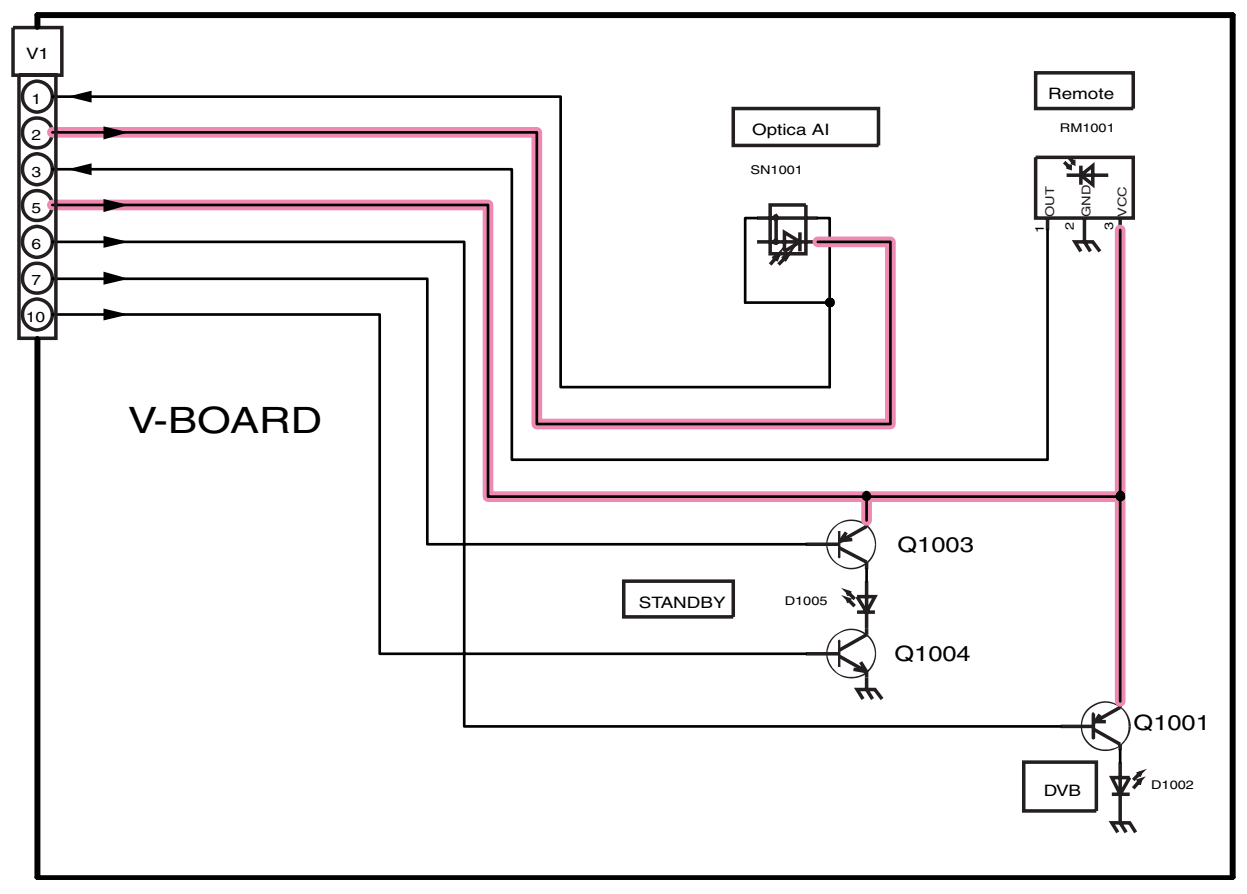
V1
V-BOARD
Optica AI
SN1001
Remote
RM1001
Q1003
STANDBY
D1005
Q1004
Q1001
DVB
D1002

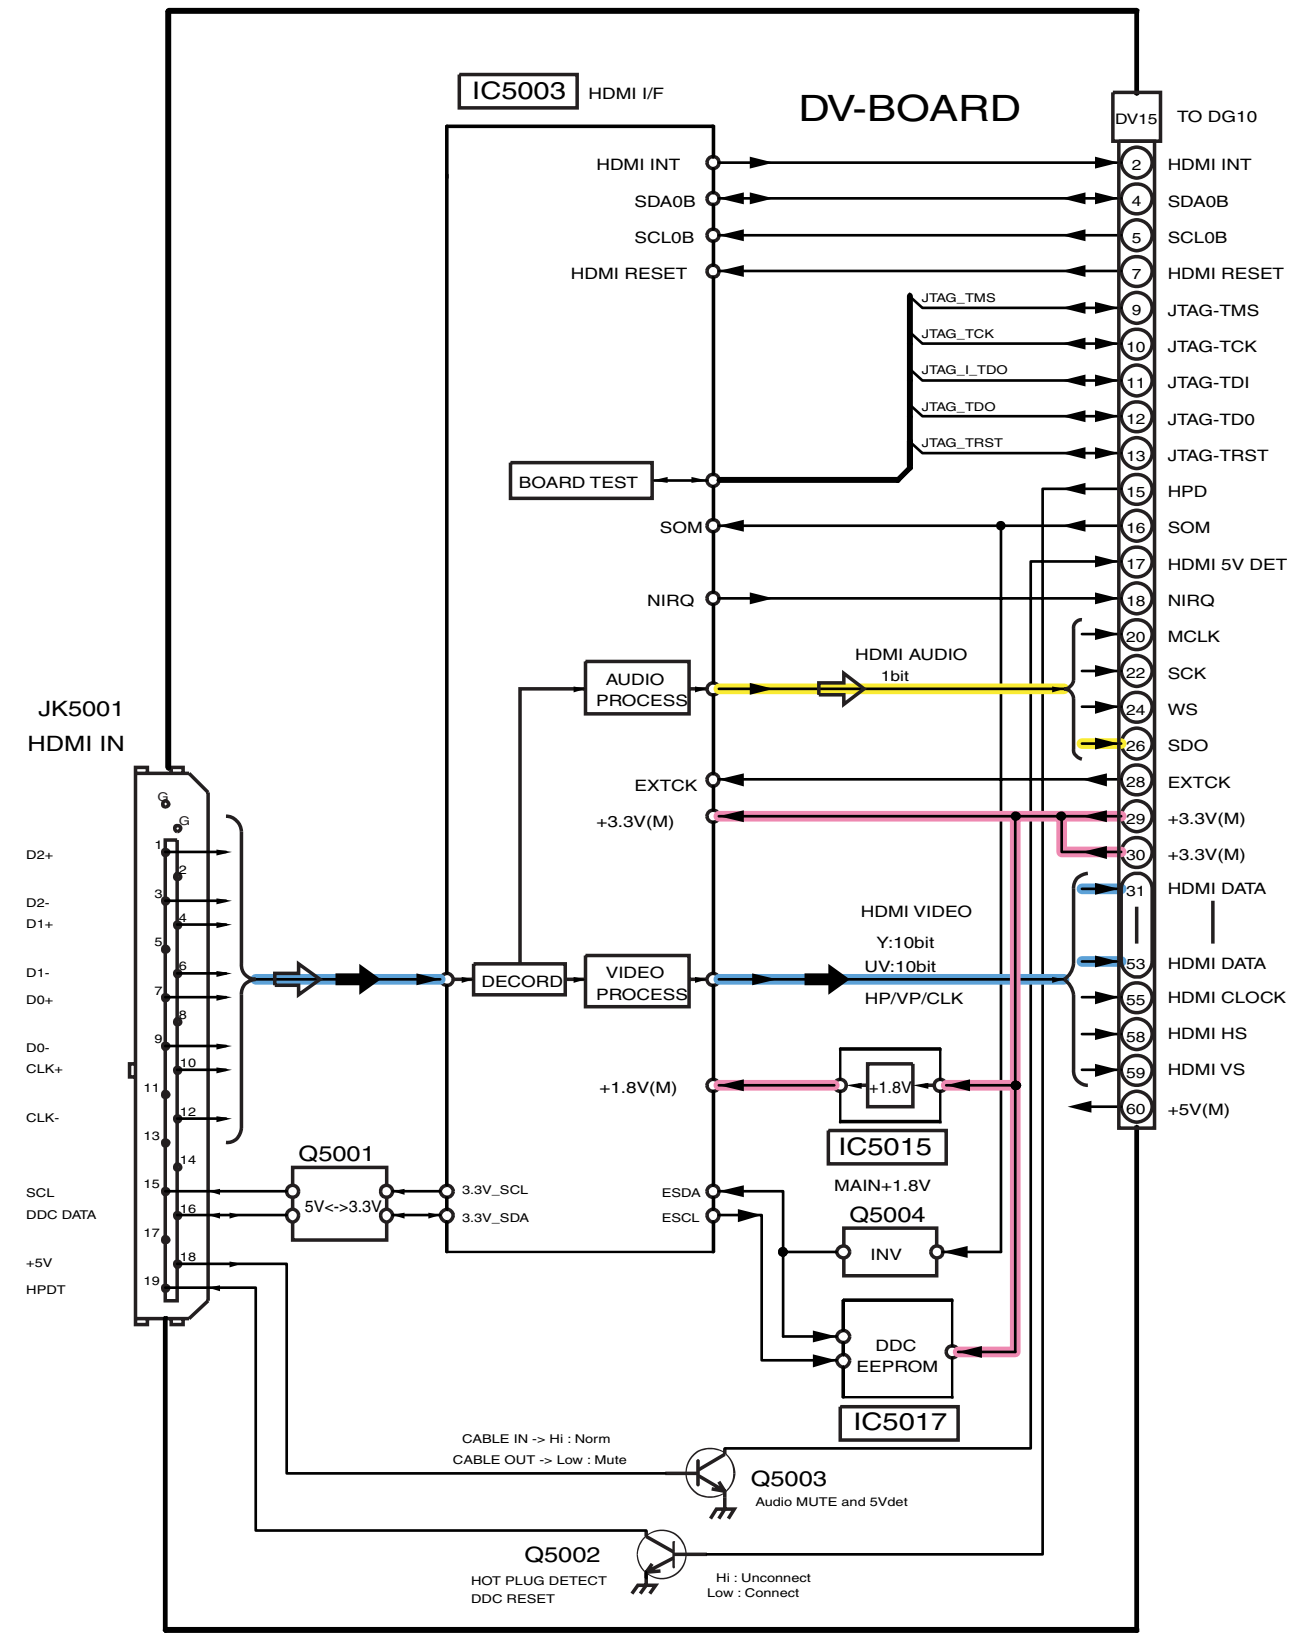
IC5003 HDMI I/F
DV-BOARD
DV15
TO DG10
HDMI INT
SDA0B
SCL0B
HDMI RESET
JTAG-TMS
JTAG-TCK
JTAG-TDI
JTAG-TD0
JTAG-TRST
BOARD TEST
HPD
SOM
HDMI 5V DET
NIRQ
MCLK
AUDIO PROCESS
HDMI AUDIO 1bit
SCK
WS
SDO
EXTCK
+3.3V(M)
JK5001 HDMI IN
HDMI DATA
HDMI VIDEO Y:10bit UV:10bit HP/VP/CLK
DECORD
VIDEO PROCESS
HDMI CLOCK
HDMI HS
HDMI VS
+1.8V(M)
IC5015
MAIN+1.8V
+5V(M)
Q5001
5V<->3.3V
3.3V_SCL
3.3V_SDA
ESDA
ESCL
Q5004
INV
DDC EEPROM
IC5017
CABLE IN -> Hi : Norm
CABLE OUT -> Low : Mute
Q5003
Audio MUTE and 5Vdet
Q5002
HOT PLUG DETECT
DDC RESET
Hi : Unconnect
Low : Connect

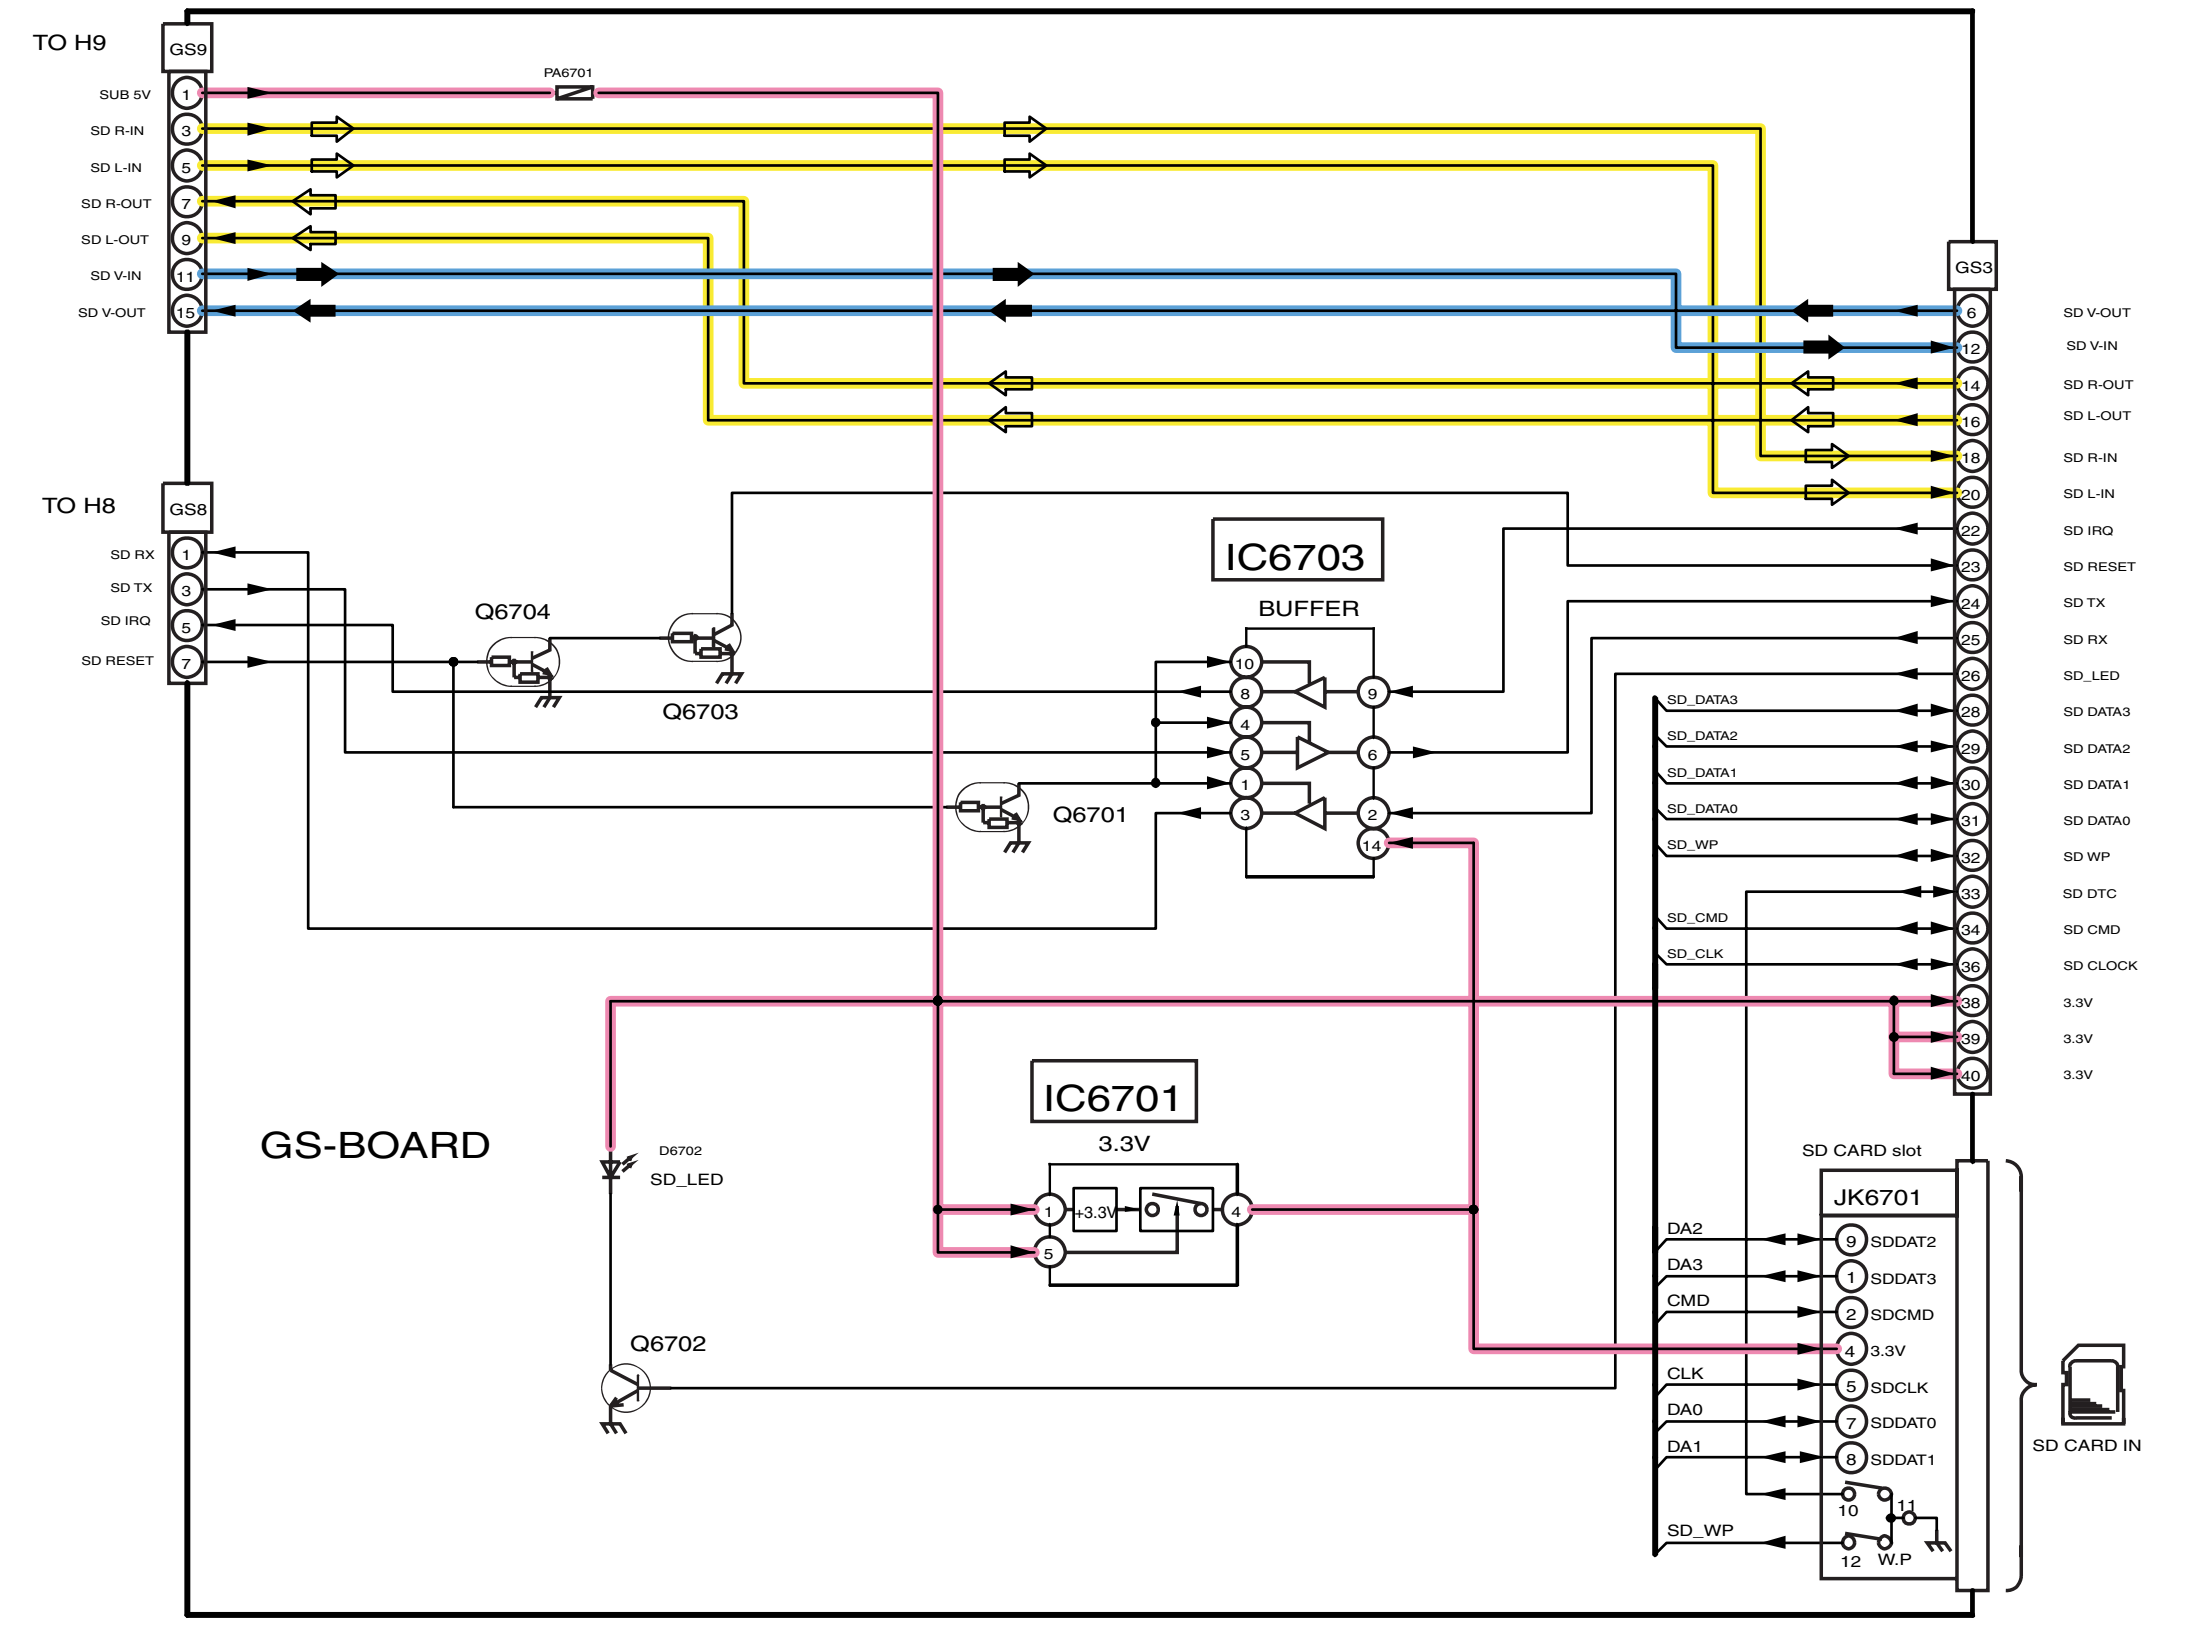
TO H9
GS9
SUB_5V
SD R-IN
SD L-IN
SD R-OUT
SD L-OUT
SD V-IN
SD V-OUT
PA6701
GS3
TO H8
GS8
SD RX
SD TX
SD IRQ
SD RESET
Q6704
Q6703
IC6703
BUFFER
Q6701
SD_DATA3
SD_DATA2
SD_DATA1
SD_DATA0
SD_WP
SD_CMD
SD_CLK
SD LED
SD DTC
SD CLOCK
3.3V
GS-BOARD
IC6701
3.3V
D6702
SD_LED
Q6702
SD CARD slot
JK6701
SDDAT2
SDDAT3
SDCMD
SDCLK
SDDAT0
SDDAT1
W.P
SD CARD IN

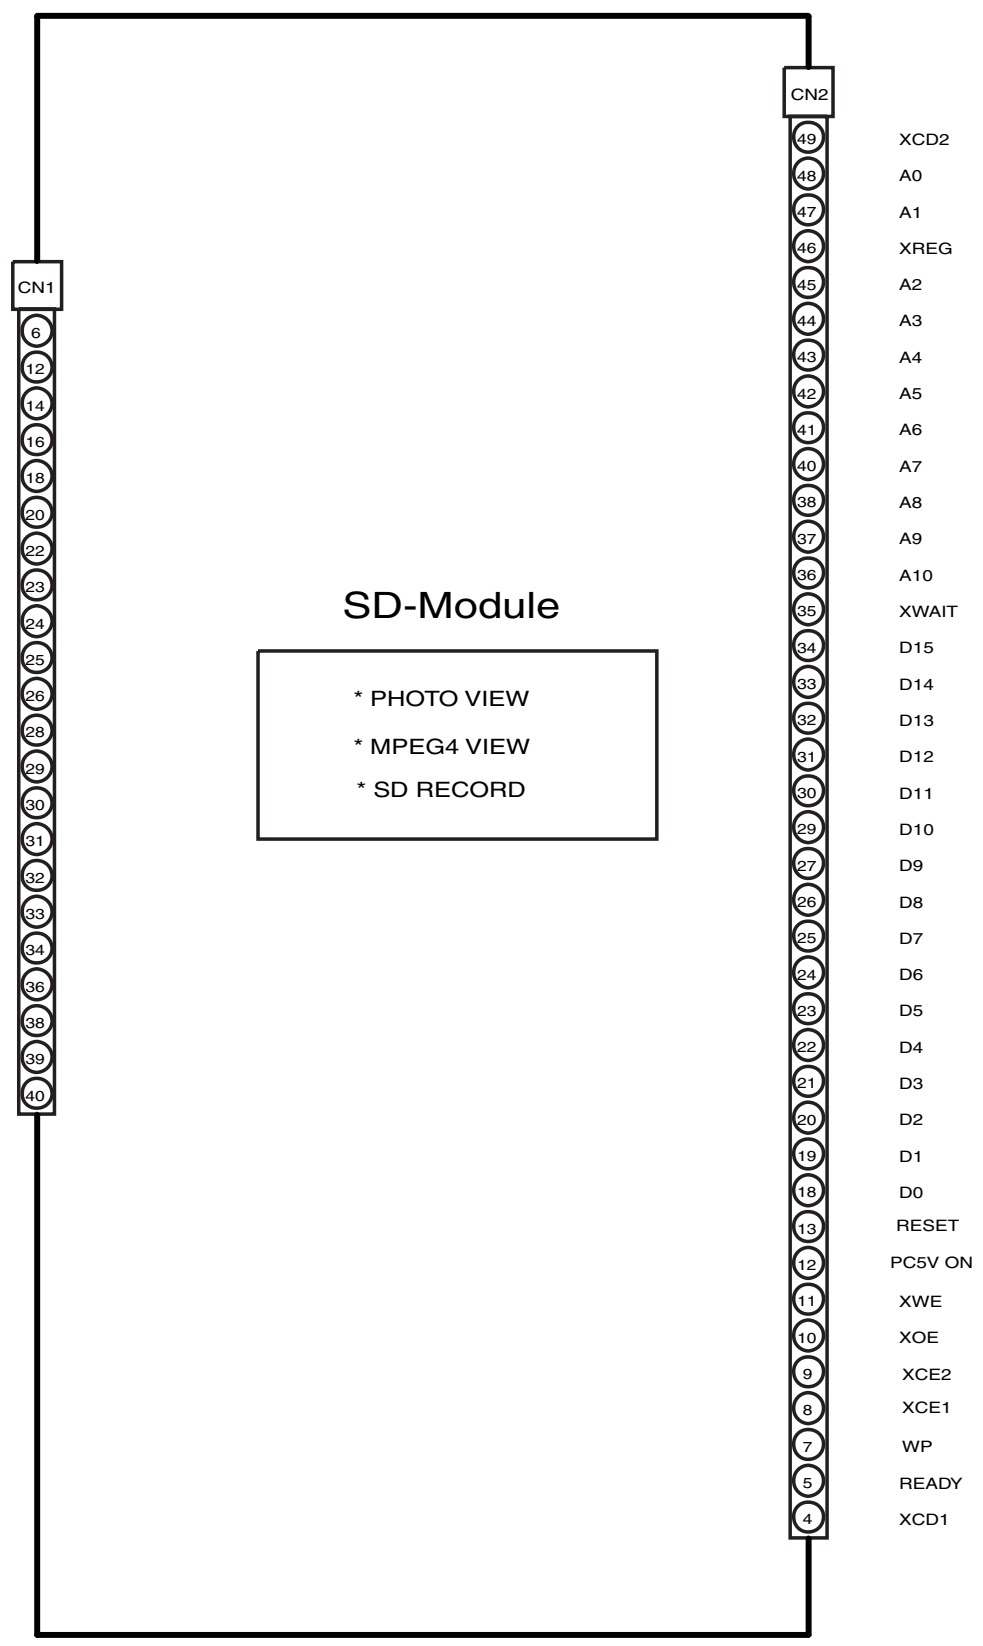
CN1
CN2
SD-Module
* PHOTO VIEW
* MPEG4 VIEW
* SD RECORD
XCD2
A0
A1
XREG
A2
A3
A4
A5
A6
A7
A8
A9
A10
XWAIT
D15
D14
D13
D12
D11
D10
D9
D8
D7
D6
D5
D4
D3
D2
D1
D0
RESET
PC5V ON
XWE
XOE
XCE2
XCE1
WP
READY
XCD1

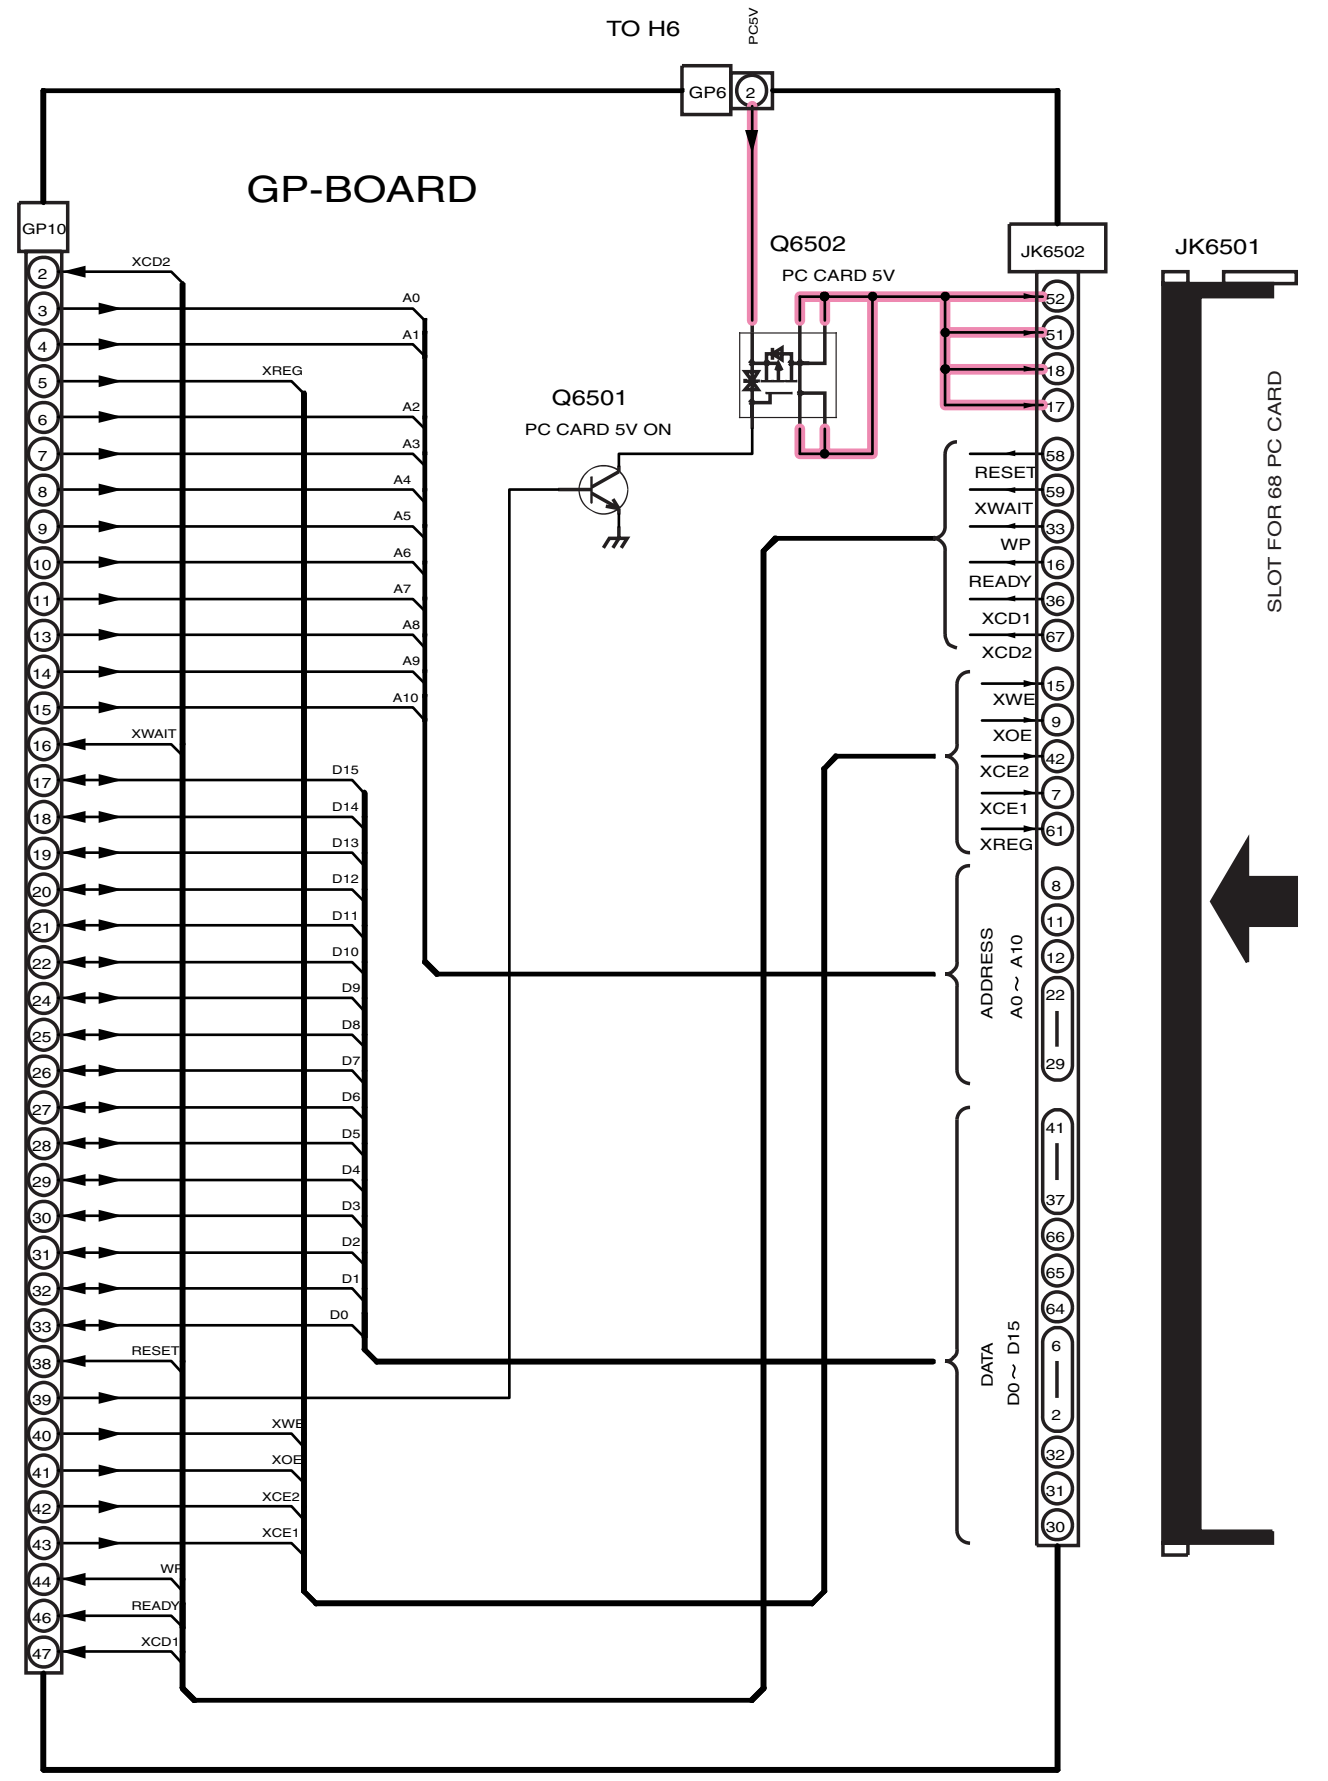
TO H6
GP6
PC5V
GP-BOARD
GP10
Q6502
PC CARD 5V
JK6502
JK6501
Q6501
PC CARD 5V ON
RESET
XWAIT
WP
READY
XCD1
XCD2
XWE
XOE
XCE2
XCE1
XREG
ADDRESS A0 ~ A10
DATA D0 ~ D15
SLOT FOR 68 PC CARD

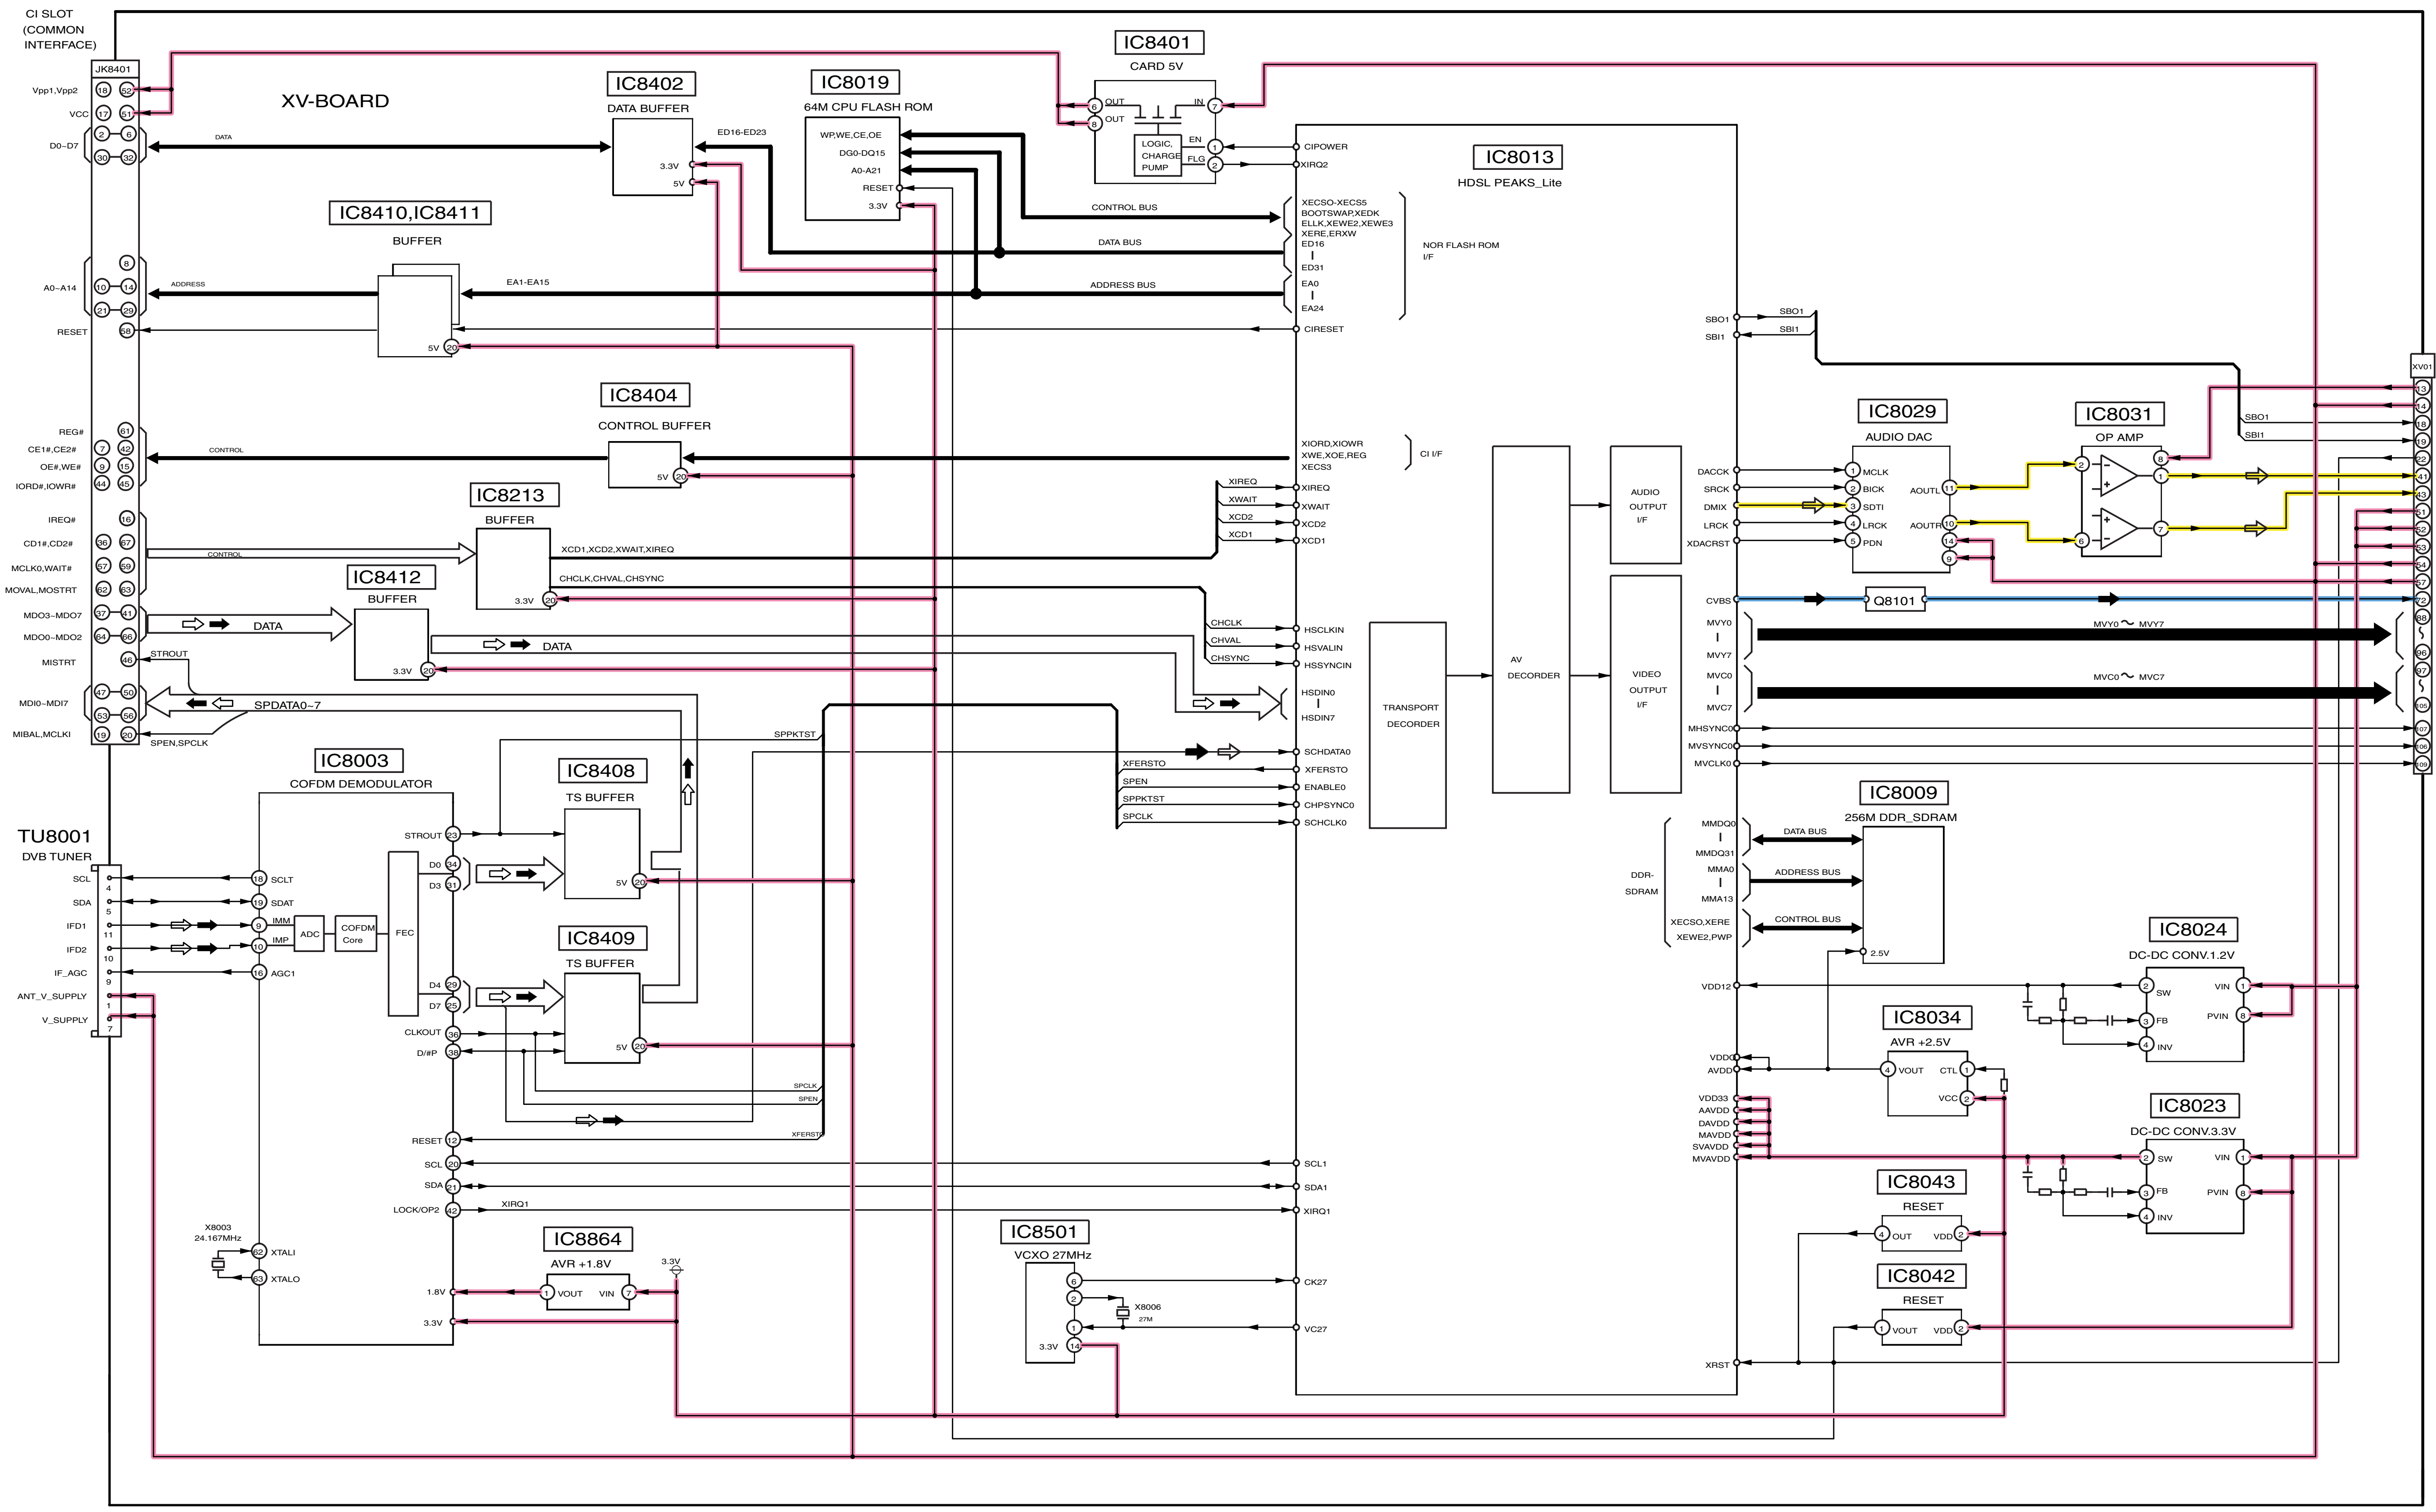
CI SLOT
(COMMON
INTERFACE)
JK8401
Vpp1,Vpp2
VCC
D0~D7
A0~A14
RESET
REG#
CE1#,CE2#
OE#,WE#
IORD#,IOWR#
IREQ#
CD1#,CD2#
MCLK0,WAIT#
MOVAL,MOSTRT
MDO3~MDO7
MDO0~MDO2
MISTRT
MDI0~MDI7
MIBAL,MCLKI
XV-BOARD
DATA
ADDRESS
CONTROL
STROUT
SPDATA0~7
SPEN,SPCLK
IC8402
DATA BUFFER
ED16-ED23
3.3V
5V
IC8019
64M CPU FLASH ROM
WP,WE,CE,OE
DG0-DQ15
A0-A21
RESET
IC8401
CARD 5V
OUT
IN
LOGIC,
CHARGE
PUMP
EN
FLG
IC8410,IC8411
BUFFER
EA1-EA15
CONTROL BUS
DATA BUS
ADDRESS BUS
IC8404
CONTROL BUFFER
IC8213
BUFFER
XCD1,XCD2,XWAIT,XIREQ
CHCLK,CHVAL,CHSYNC
IC8412
BUFFER
IC8013
HDSL PEAKS_Lite
CIPOWER
XIRQ2
XECSO-XECS5
BOOTSWAP,XEDK
ELLK,XEWE2,XEWE3
XERE,ERXW
ED16
ED31
EA0
EA24
NOR FLASH ROM
I/F
CIRESET
XIORD,XIOWR
XWE,XOE,REG
XECS3
CI I/F
XIREQ
XWAIT
XCD2
XCD1
CHCLK
CHVAL
CHSYNC
HSCLKIN
HSVALIN
HSSYNCIN
HSDIN0
HSDIN7
SPPKTST
XFERSTO
SPEN
SPCLK
SCHDATA0
XFERSTO
ENABLE0
CHPSYNC0
SCHCLK0
TRANSPORT
DECORDER
AV
DECORDER
AUDIO
OUTPUT
I/F
VIDEO
OUTPUT
I/F
SBO1
SBI1
DACCK
SRCK
DMIX
LRCK
XDACRST
CVBS
MVY0
MVY7
MVC0
MVC7
MHSYNC0
MVSYNC0
MVCLK0
IC8003
COFDM DEMODULATOR
STROUT
D0
D3
D4
D7
CLKOUT
D/#P
RESET
SCL
SDA
LOCK/OP2
XIRQ1
SCLT
SDAT
IMM
IMP
AGC1
ADC
COFDM
Core
FEC
XTALI
XTALO
X8003
24.167MHz
1.8V
3.3V
IC8408
TS BUFFER
IC8409
TS BUFFER
SPCLK
SPEN
XFERST
IC8864
AVR +1.8V
VOUT
VIN
TU8001
DVB TUNER
SCL
SDA
IFD1
IFD2
IF_AGC
ANT_V_SUPPLY
V_SUPPLY
SCL1
SDA1
XIRQ1
IC8501
VCXO 27MHz
X8006
27M
CK27
VC27
XRST
IC8029
AUDIO DAC
MCLK
BICK
SDTI
LRCK
PDN
AOUTL
AOUTR
IC8031
OP AMP
Q8101
MVY0 ~ MVY7
MVC0 ~ MVC7
XV01
TO DG1
A 9V
SUB 5V
SBO1(SBI1)
SBI1(SBO1)
XRST
DL(BS_L)
DR(BS_R)
SUB 9V
SUB 9V
SUB 9V
SUB 5V
SUB 5V
CVBS
MVY0
MVY7
MVC0
MVC7
MHSYNC0
MVSYNC0
MVCLK0
IC8009
256M DDR_SDRAM
DDR-
SDRAM
MMDQ0
MMDQ31
MMA0
MMA13
XECSO,XERE
XEWE2,PWP
DATA BUS
ADDRESS BUS
CONTROL BUS
2.5V
VDD12
IC8024
DC-DC CONV.1.2V
SW
FB
INV
VIN
PVIN
IC8034
AVR +2.5V
VOUT
CTL
VCC
VDDD
AVDD
VDD33
AAVDD
DAVDD
MAVDD
SVAVDD
MVAVDD
IC8023
DC-DC CONV.3.3V
IC8043
RESET
OUT
VDD
IC8042
RESET
VOUT
VDD

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (5 of 7)

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (5 of 7)

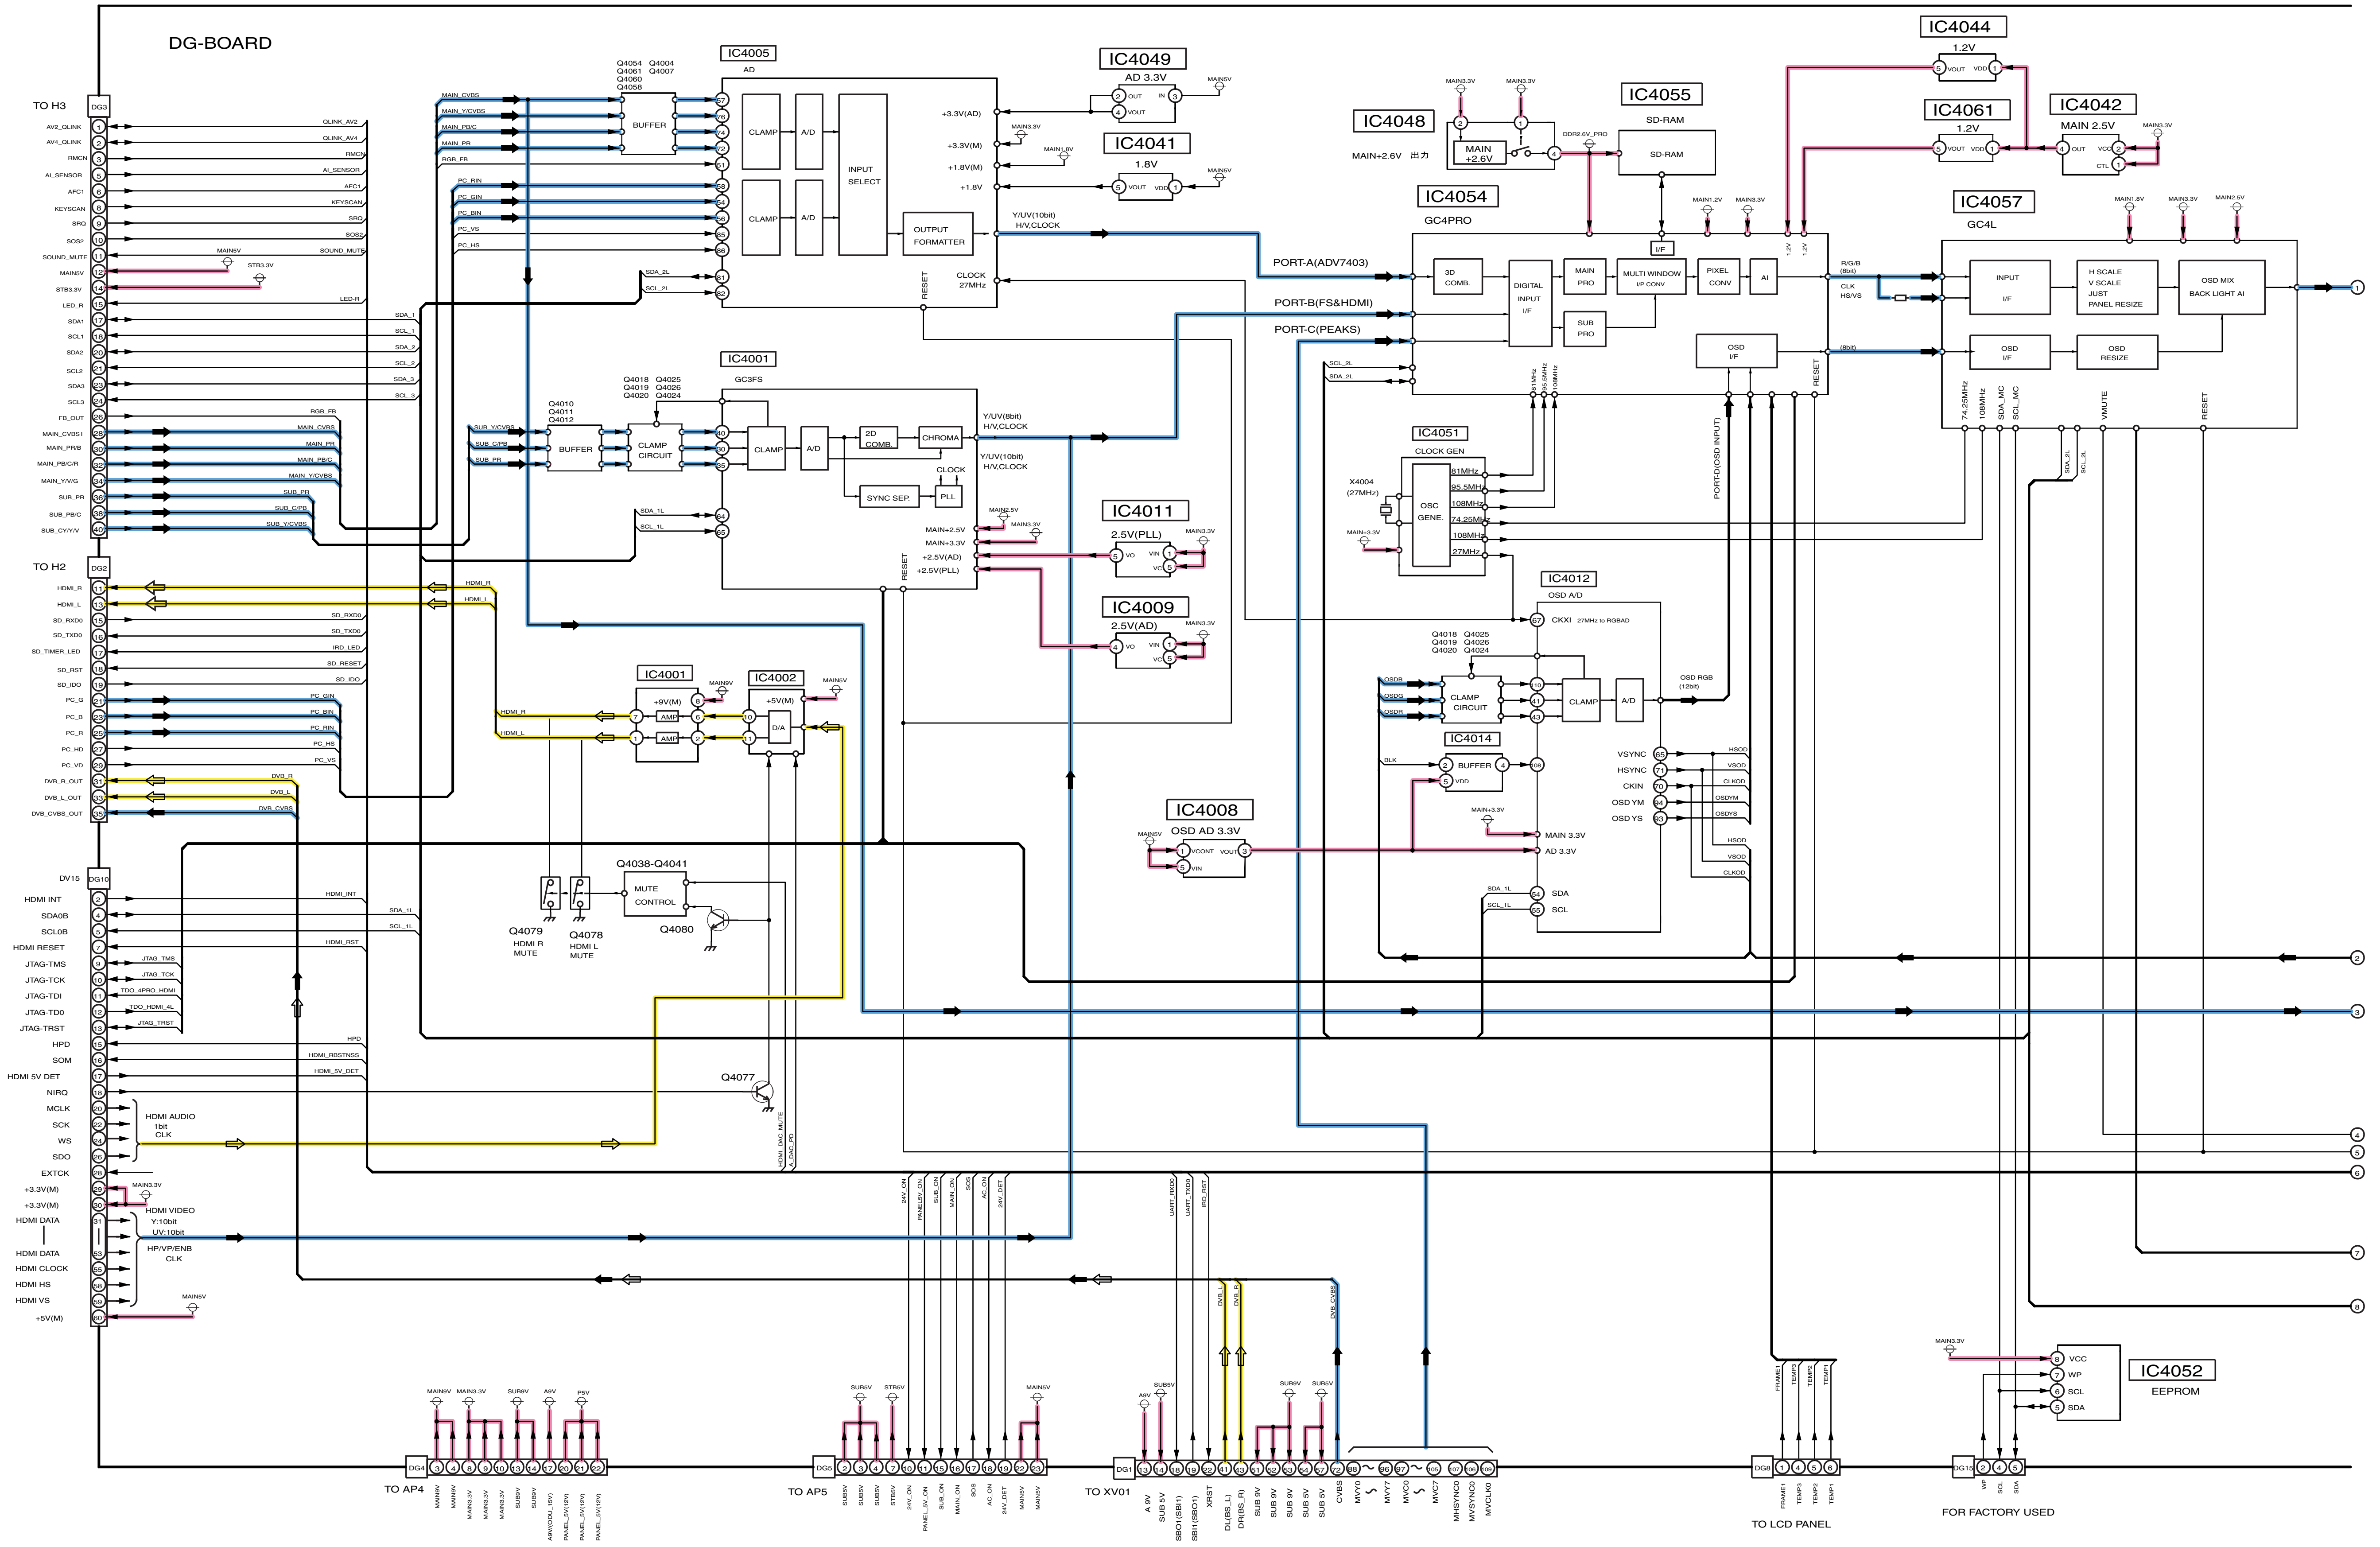
DG-BOARD
TO H3
DG3
AV2_QLINK
AV4_QLINK
RMCN
AI_SENSOR
AFC1
KEYSCAN
SRQ
SOS2
SOUND_MUTE
MAIN5V
STB3.3V
LED_R
SDA1
SCL1
SDA2
SCL2
SDA3
SCL3
FB_OUT
MAIN_CVBS1
MAIN_PR/B
MAIN_PB/C/R
MAIN_Y/Y/G
SUB_PR
SUB_PB/C
SUB_CY/Y/V
TO H2
DG2
HDMI_R
HDMI_L
SD_RXD0
SD_TXD0
SD_TIMER_LED
SD_RST
SD_IDO
PC_G
PC_B
PC_R
PC_HD
PC_VD
DVB_R_OUT
DVB_L_OUT
DVB_CVBS_OUT
DV15
DG10
HDMI INT
SDA0B
SCL0B
HDMI RESET
JTAG-TMS
JTAG-TCK
JTAG-TDI
JTAG-TD0
JTAG-TRST
HPD
SOM
HDMI 5V DET
NIRQ
MCLK
SCK
WS
SDO
EXTCK
+3.3V(M)
+3.3V(M)
HDMI DATA
HDMI DATA
HDMI CLOCK
HDMI HS
HDMI VS
+5V(M)
HDMI AUDIO
1bit
CLK
HDMI VIDEO
Y:10bit
UV:10bit
HP/VP/ENB
CLK
IC4005
AD
Q4054 Q4004
Q4061 Q4007
Q4060
Q4058
BUFFER
CLAMP
A/D
INPUT
SELECT
OUTPUT
FORMATTER
+3.3V(AD)
+3.3V(M)
+1.8V(M)
+1.8V
Y/UV(10bit)
H/V,CLOCK
CLOCK
27MHz
RESET
MAIN_CVBS
MAIN_Y/CVBS
MAIN_PB/C
MAIN_PR
RGB_FB
PC_RIN
PC_GIN
PC_BIN
PC_VS
PC_HS
SDA_2L
SCL_2L
IC4049
AD 3.3V
IC4041
1.8V
IC4001
GC3FS
Q4010
Q4011
Q4012
Q4018 Q4025
Q4019 Q4026
Q4020 Q4024
SUB_Y/CVBS
SUB_C/PB
SUB_PR
BUFFER
CLAMP
CIRCUIT
CLAMP
A/D
2D
COMB.
CHROMA
SYNC SEP.
PLL
CLOCK
Y/UV(8bit)
H/V,CLOCK
Y/UV(10bit)
H/V,CLOCK
SDA_1L
SCL_1L
MAIN+2.5V
MAIN+3.3V
+2.5V(AD)
+2.5V(PLL)
RESET
IC4011
2.5V(PLL)
IC4009
2.5V(AD)
IC4001
+9V(M)
AMP
AMP
IC4002
+5V(M)
D/A
HDMI_R
HDMI_L
Q4038-Q4041
MUTE
CONTROL
Q4079
HDMI R
MUTE
Q4078
HDMI L
MUTE
Q4080
Q4077
HDMI_DAC_MUTE
A_DAC_PD
IC4048
MAIN+2.6V 出力
MAIN
+2.6V
IC4055
SD-RAM
SD-RAM
DDR2.6V_PRO
I/F
IC4054
GC4PRO
PORT-A(ADV7403)
PORT-B(FS&HDMI)
PORT-C(PEAKS)
3D
COMB.
DIGITAL
INPUT
I/F
MAIN
PRO
SUB
PRO
MULTI WINDOW
I/P CONV
PIXEL
CONV
AI
OSD
I/F
RESET
SCL_2L
SDA_2L
81MHz
95.5MHz
108MHz
R/G/B
(8bit)
CLK
HS/VS
(8bit)
IC4044
1.2V
IC4061
1.2V
IC4042
MAIN 2.5V
IC4057
GC4L
INPUT
I/F
H SCALE
V SCALE
JUST
PANEL RESIZE
OSD MIX
BACK LIGHT AI
OSD
I/F
OSD
RESIZE
74.25MHz
108MHz
SDA_MC
SCL_MC
VMUTE
RESET
SDA_2L
SCL_2L
IC4051
CLOCK GEN
X4004
(27MHz)
OSC
GENE.
81MHz
95.5MHz
108MHz
74.25MHz
108MHz
27MHz
PORT-D(OSD INPUT)
IC4012
OSD A/D
CKXI 27MHz to RGBAD
Q4018 Q4025
Q4019 Q4026
Q4020 Q4024
OSDB
OSDG
OSDR
CLAMP
CIRCUIT
CLAMP
A/D
OSD RGB
(12bit)
IC4014
BLK
BUFFER
VDD
VSYNC
HSYNC
CKIN
OSD YM
OSD YS
HSOD
VSOD
CLKOD
OSDYM
OSDYS
MAIN 3.3V
AD 3.3V
SDA
SCL
SDA_1L
SCL_1L
IC4008
OSD AD 3.3V
VCONT
VOUT
VIN
IC4052
EEPROM
VCC
WP
SCL
SDA
DG4
TO AP4
MAIN9V
MAIN3.3V
SUB9V
A9V
P5V
A9V(OOLI_15V)
PANEL_5V(12V)
DG5
TO AP5
SUB5V
STB5V
24V_ON
PANEL5V_ON
SUB_ON
MAIN_ON
SOS
AC_ON
24V_DET
MAIN5V
DG1
TO XV01
A 9V
SUB 5V
SBO1(SB1)
SBI1(SBO1)
XRST
DL(BS_L)
DR(BS_R)
SUB 9V
SUB 5V
CVBS
MVY0
MVY7
MVC0
MVC7
MHSYNC0
MVSYNC0
MVCLK0
UART_RXD0
UART_TXD0
IRD_RST
DVB_L
DVB_R
DVB_CVBS
DG8
TO LCD PANEL
FRAME1
TEMP3
TEMP2
TEMP1
DG15
FOR FACTORY USED
WP
SCL
SDA
MAIN3.3V
MAIN1.8V
MAIN1.2V
MAIN2.5V
1
2
3
4
5
6
7
8

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (6 of 7)

TX-26/32LXD500 TX-26/32LX500F/P
Block Diagram (6 of 7)

46 47 48 49 50 51 52 53 54

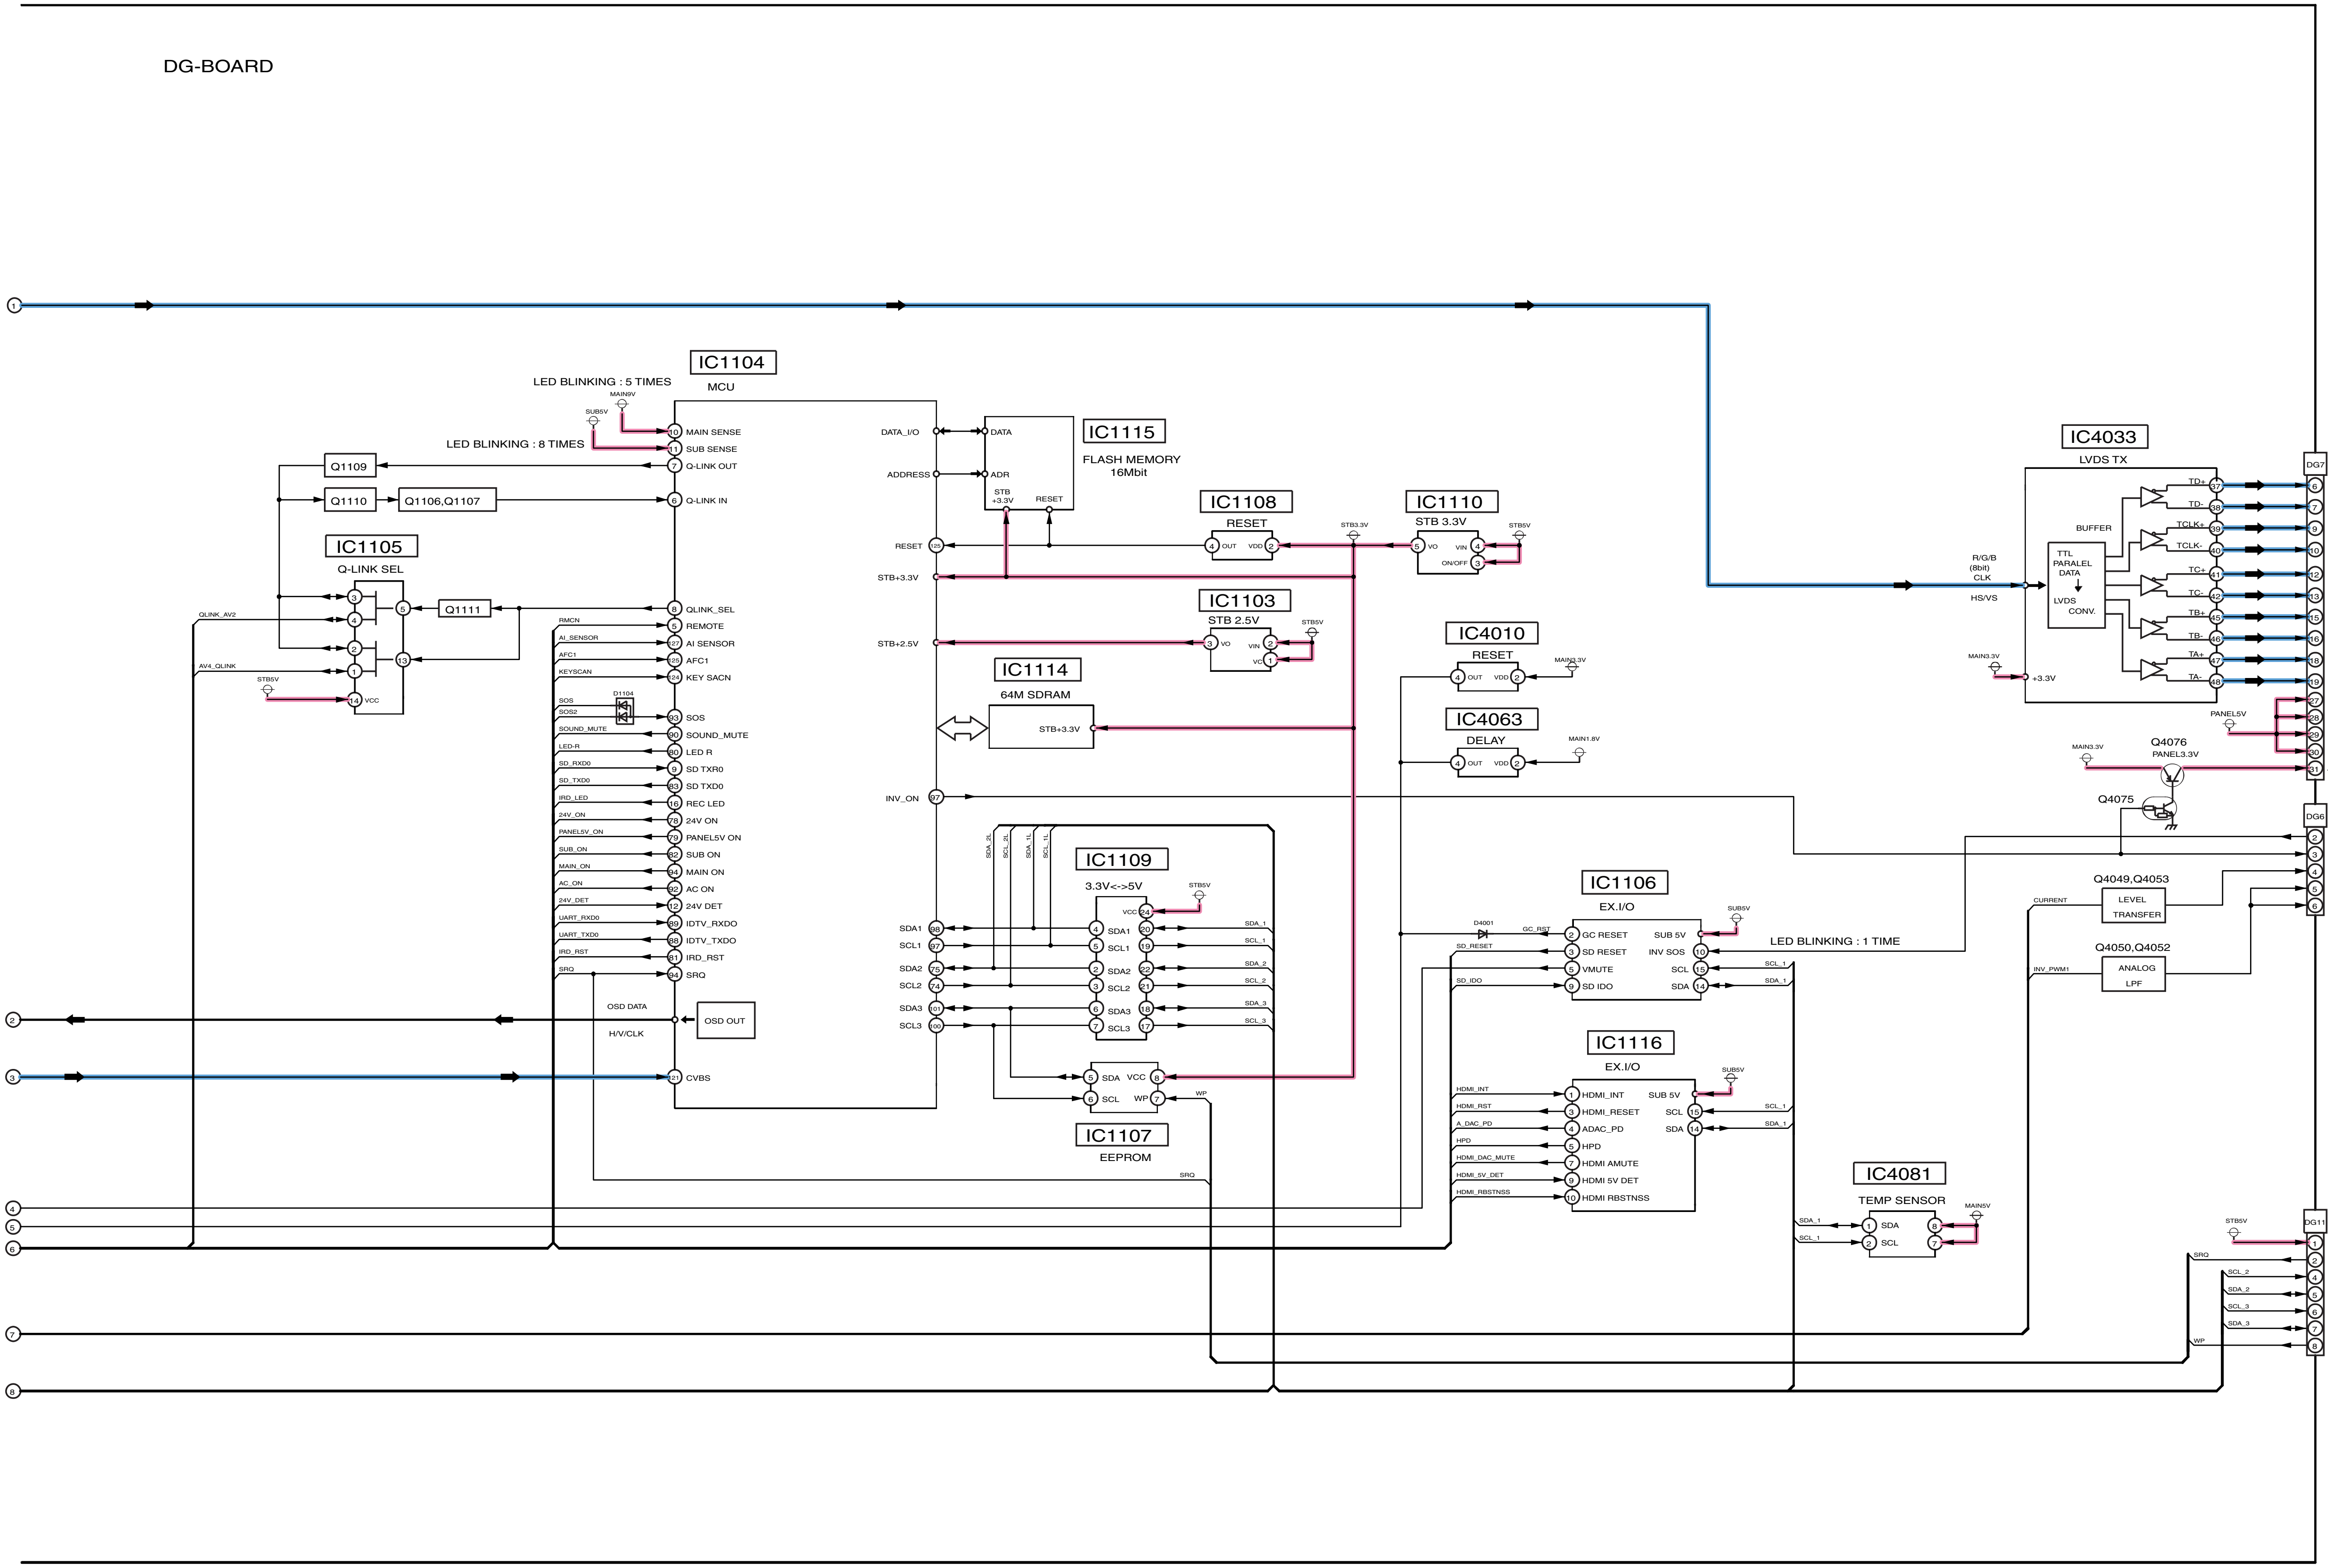
DG-BOARD
IC1104
MCU
LED BLINKING : 5 TIMES
LED BLINKING : 8 TIMES
MAIN SENSE
SUB SENSE
Q-LINK OUT
Q-LINK IN
QLINK_SEL
REMOTE
AI SENSOR
AFC1
KEY SACN
SOS
SOUND_MUTE
LED R
SD TXR0
SD TXD0
REC LED
24V ON
PANEL5V ON
SUB ON
MAIN ON
AC ON
24V DET
IDTV_RXDO
IDTV_TXDO
IRD_RST
SRQ
CVBS
OSD DATA
H/V/CLK
OSD OUT
Q1109
Q1110
Q1106,Q1107
Q1111
IC1105
Q-LINK SEL
QLINK_AV2
AV4_QLINK
D1104
IC1115
FLASH MEMORY
16Mbit
DATA_I/O
ADDRESS
RESET
STB+3.3V
STB+2.5V
INV_ON
IC1108
RESET
IC1110
STB 3.3V
IC1103
STB 2.5V
IC1114
64M SDRAM
IC1109
3.3V<->5V
SDA1
SCL1
SDA2
SCL2
SDA3
SCL3
IC1107
EEPROM
WP
IC4010
RESET
IC4063
DELAY
IC1106
EX.I/O
GC RESET
SD RESET
VMUTE
SD IDO
SUB 5V
INV SOS
SCL
SDA
LED BLINKING : 1 TIME
D4001
IC1116
EX.I/O
HDMI_INT
HDMI_RESET
ADAC_PD
HPD
HDMI AMUTE
HDMI 5V DET
HDMI RBSTNSS
IC4081
TEMP SENSOR
IC4033
LVDS TX
BUFFER
TTL PARALEL DATA
LVDS CONV.
R/G/B (8bit) CLK
HS/VS
+3.3V
DG7
LCD PANEL
RX3+
RX3-
RXCLK+
RXCLK-
RX2+
RX2-
RX1+
RX1-
RX0+
RX0-
+5V(P)
+3.3V(P)
Q4076
PANEL3.3V
Q4075
DG6
LCD PANEL
INV_SOS
INV_ON
CURRENT
INV_PWM1
INV_PWM2
Q4049,Q4053
LEVEL TRANSFER
Q4050,Q4052
ANALOG LPF
DG11
STB5V
SRQ
SCL2
SDA2
SCL3
SDA3
EEP_WP
1
2
3
4
5
6
7
8

AP-BOARD (COMPONENT SIDE)
TNPA3487AA (TX-26/32LXD500)
TNPA3487AC (TX-26/32LX500F/P)

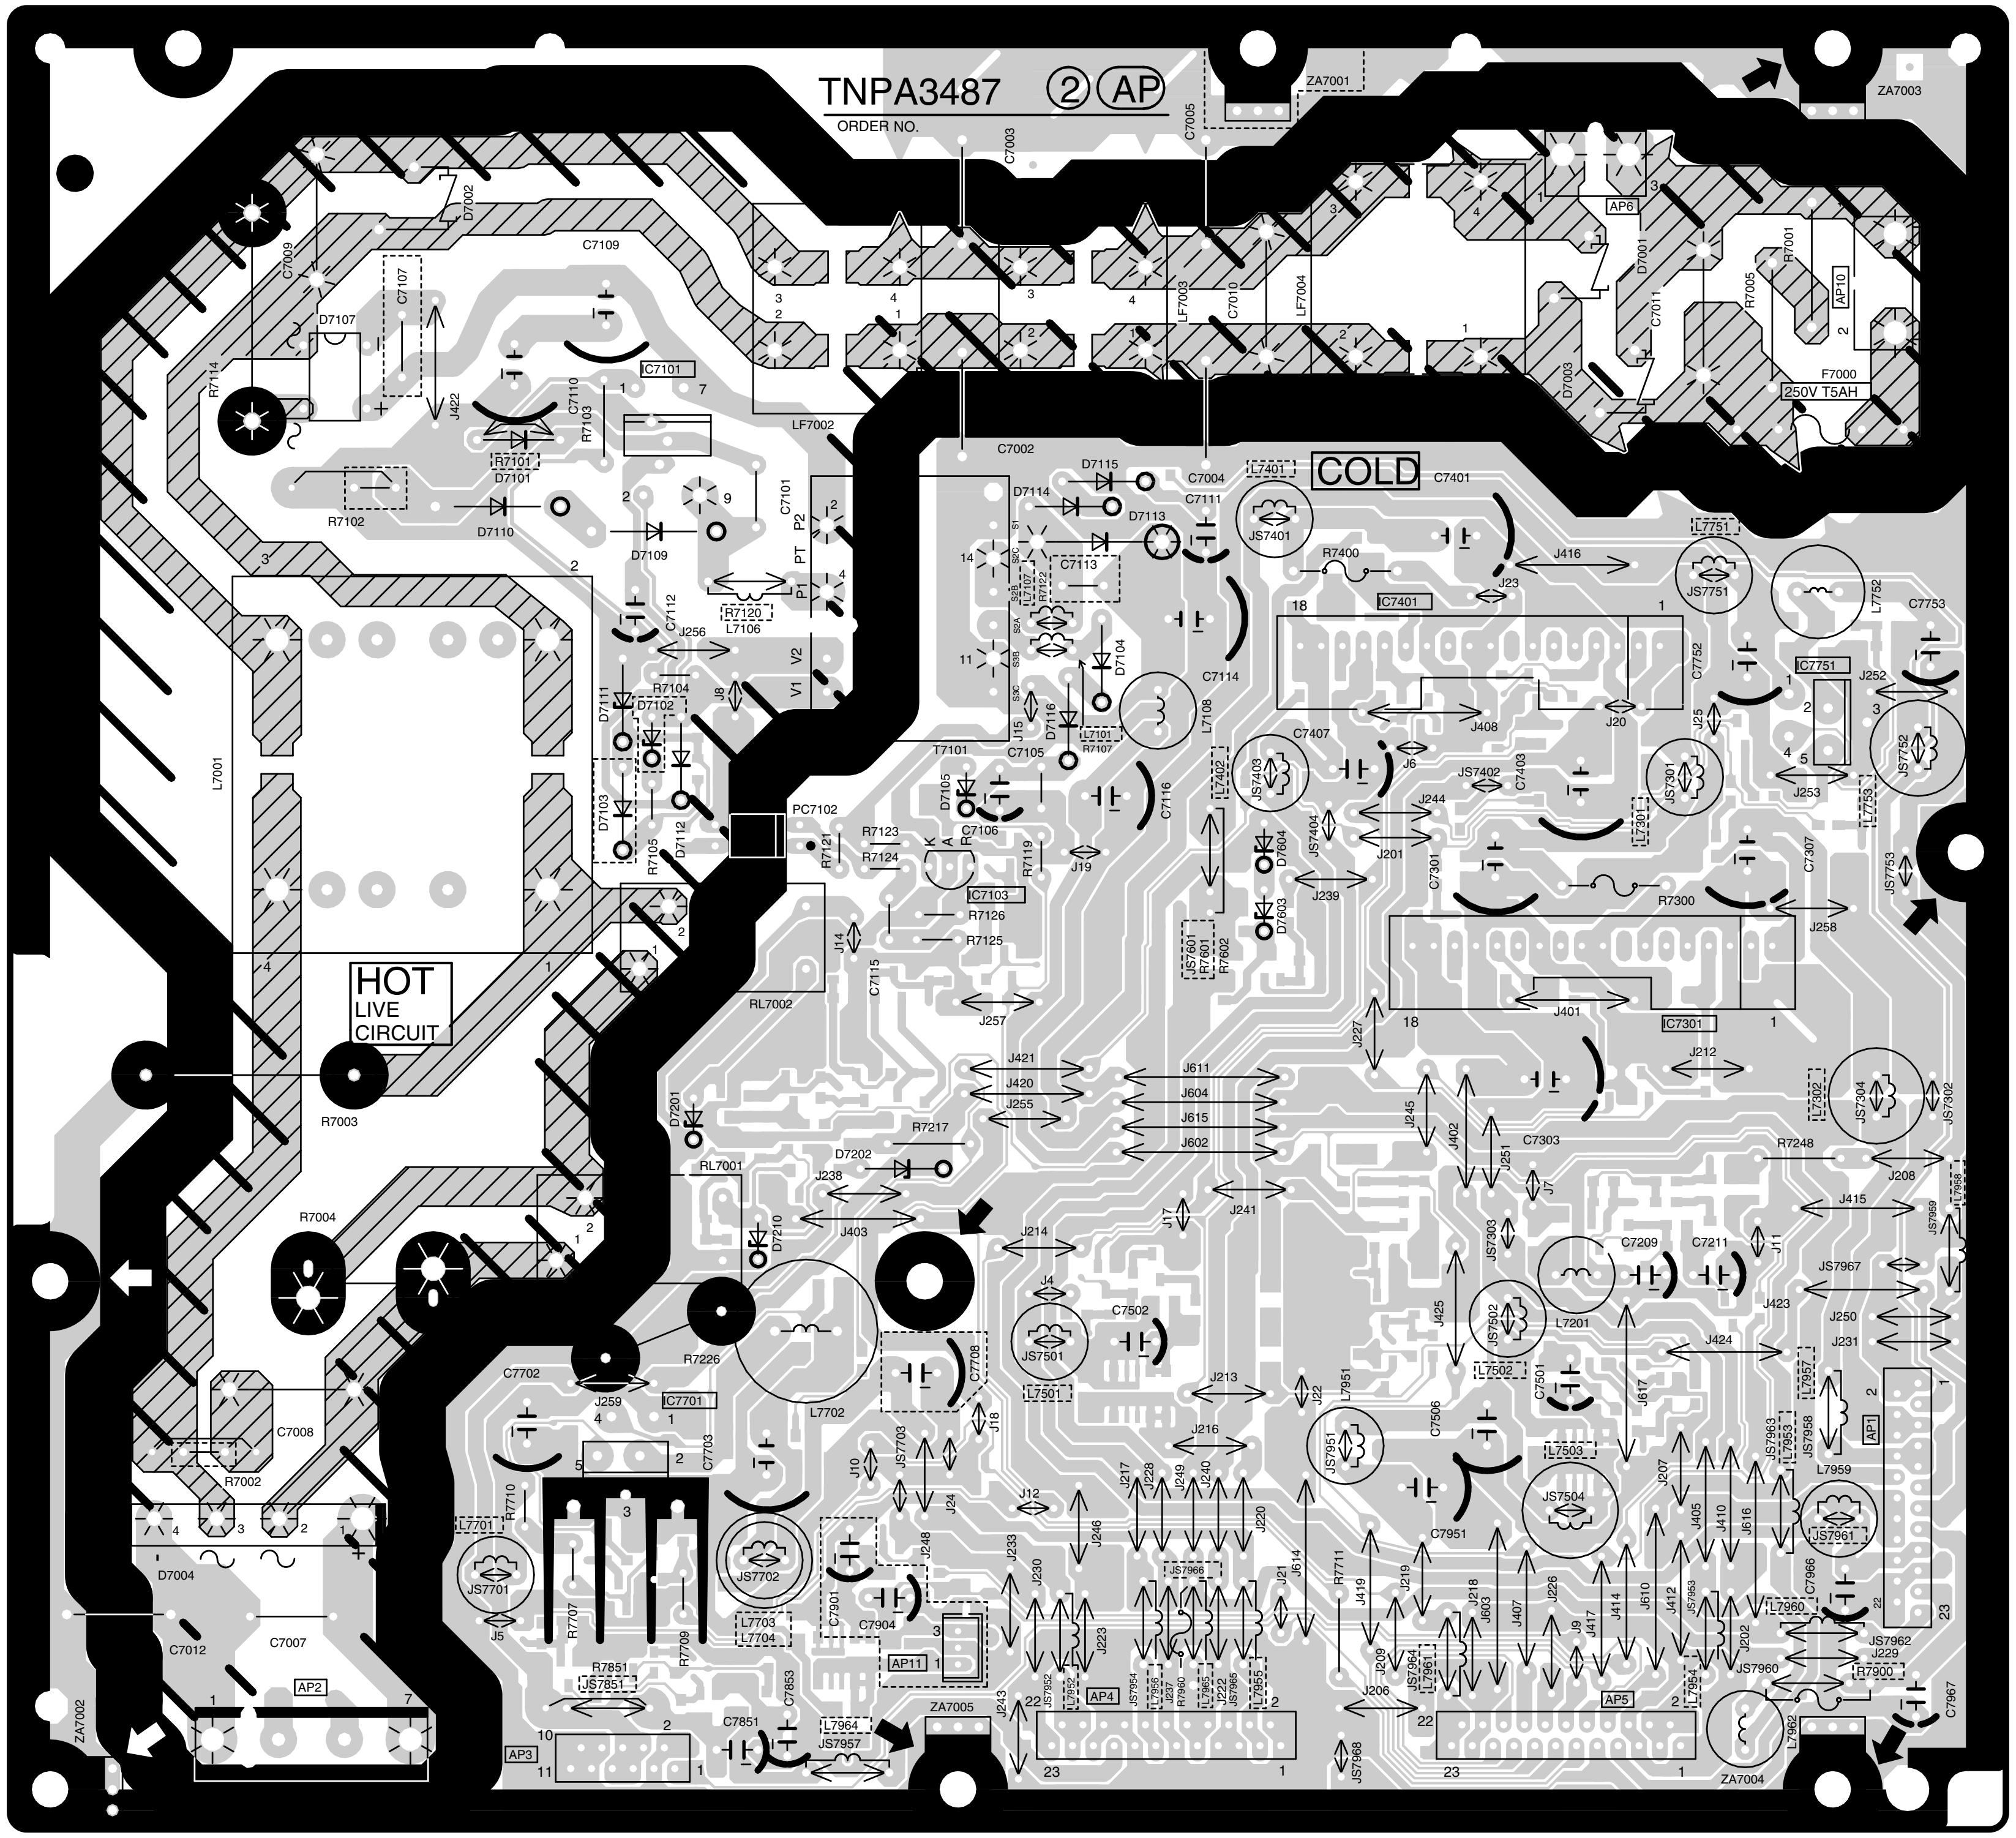
TNPA3487
② AP
ORDER NO.
COLD
HOT
LIVE
CIRCUIT
250V T5AH
F7000
ZA7001
ZA7002
ZA7003
ZA7004
ZA7005
AP1
AP2
AP3
AP4
AP5
AP6
AP10
AP11
IC7101
IC7103
IC7301
IC7401
IC7701
IC7751
PC7102
T7101
L7001
L7702
RL7001
RL7002
LF7002
LF7003
LF7004
R7003
R7004
C7002
C7003
C7004
C7005
C7007
C7008
C7012

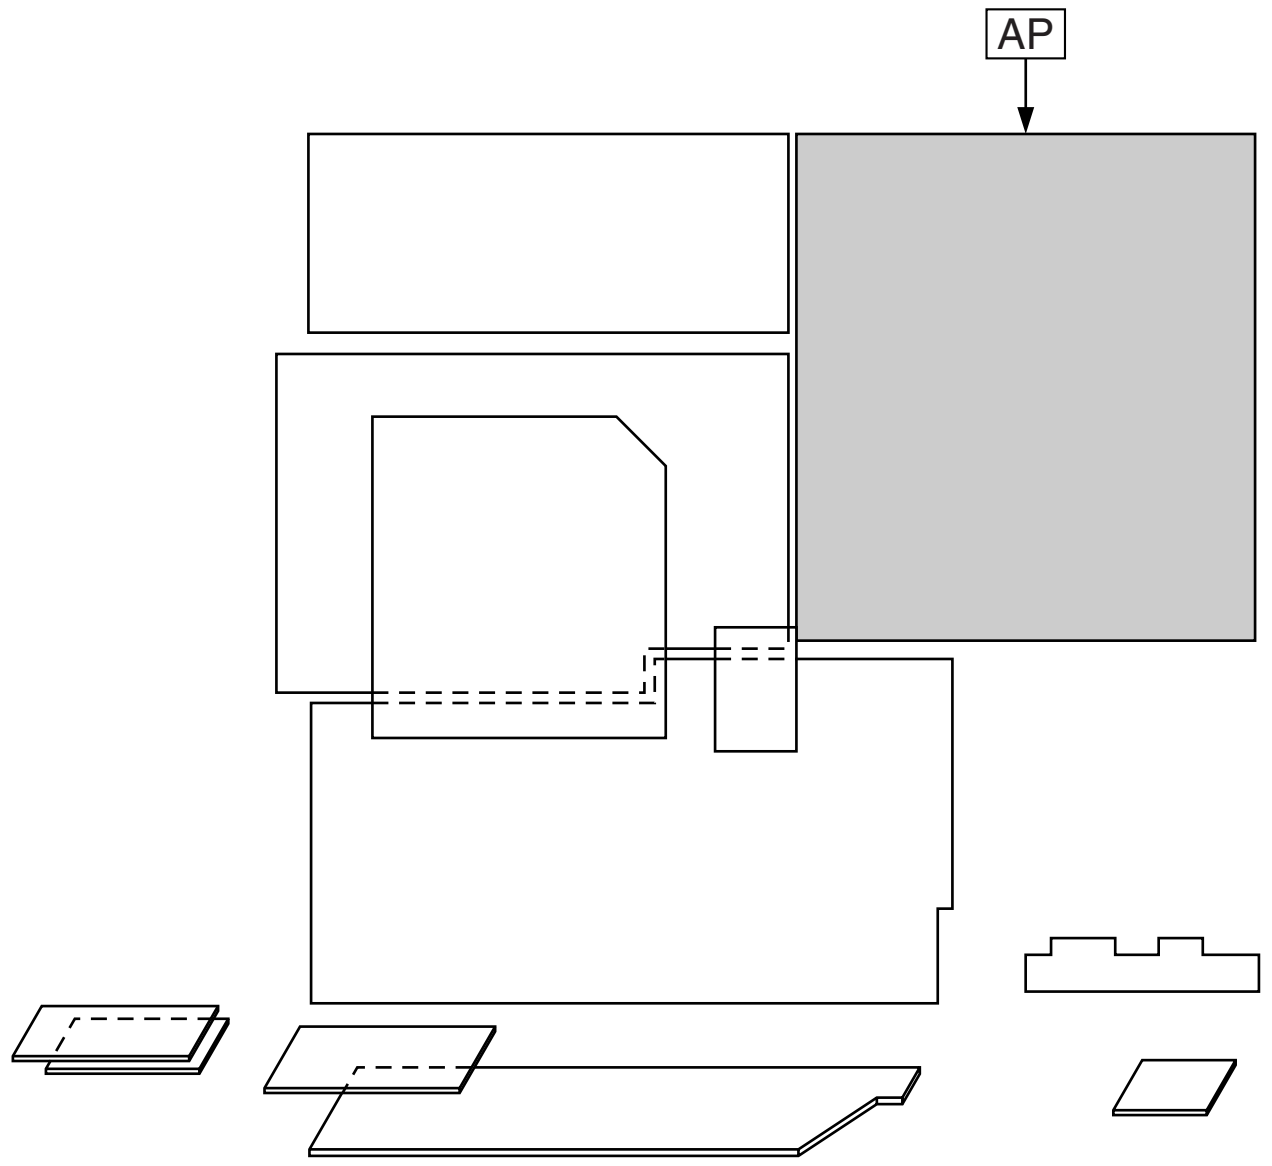

Parts Location

AP-BOARD (COMPONENT SIDE)			
IC			
IC7101	C-5		
IC7103	C-4		
IC7301	E-3		
IC7401	E-4		
IC7701	C-2		
IC7751	F-4		

TX-26/32LXD500 AP-BOARD TNPA3487AA
TX-26/32LX500F/P AP-BOARD TNPA3487AC

AP-BOARD (FOIL SIDE)
TNPA3487AA (TX-26/32LXD500)
TNPA3487AC (TX-26/32LX500F/P)

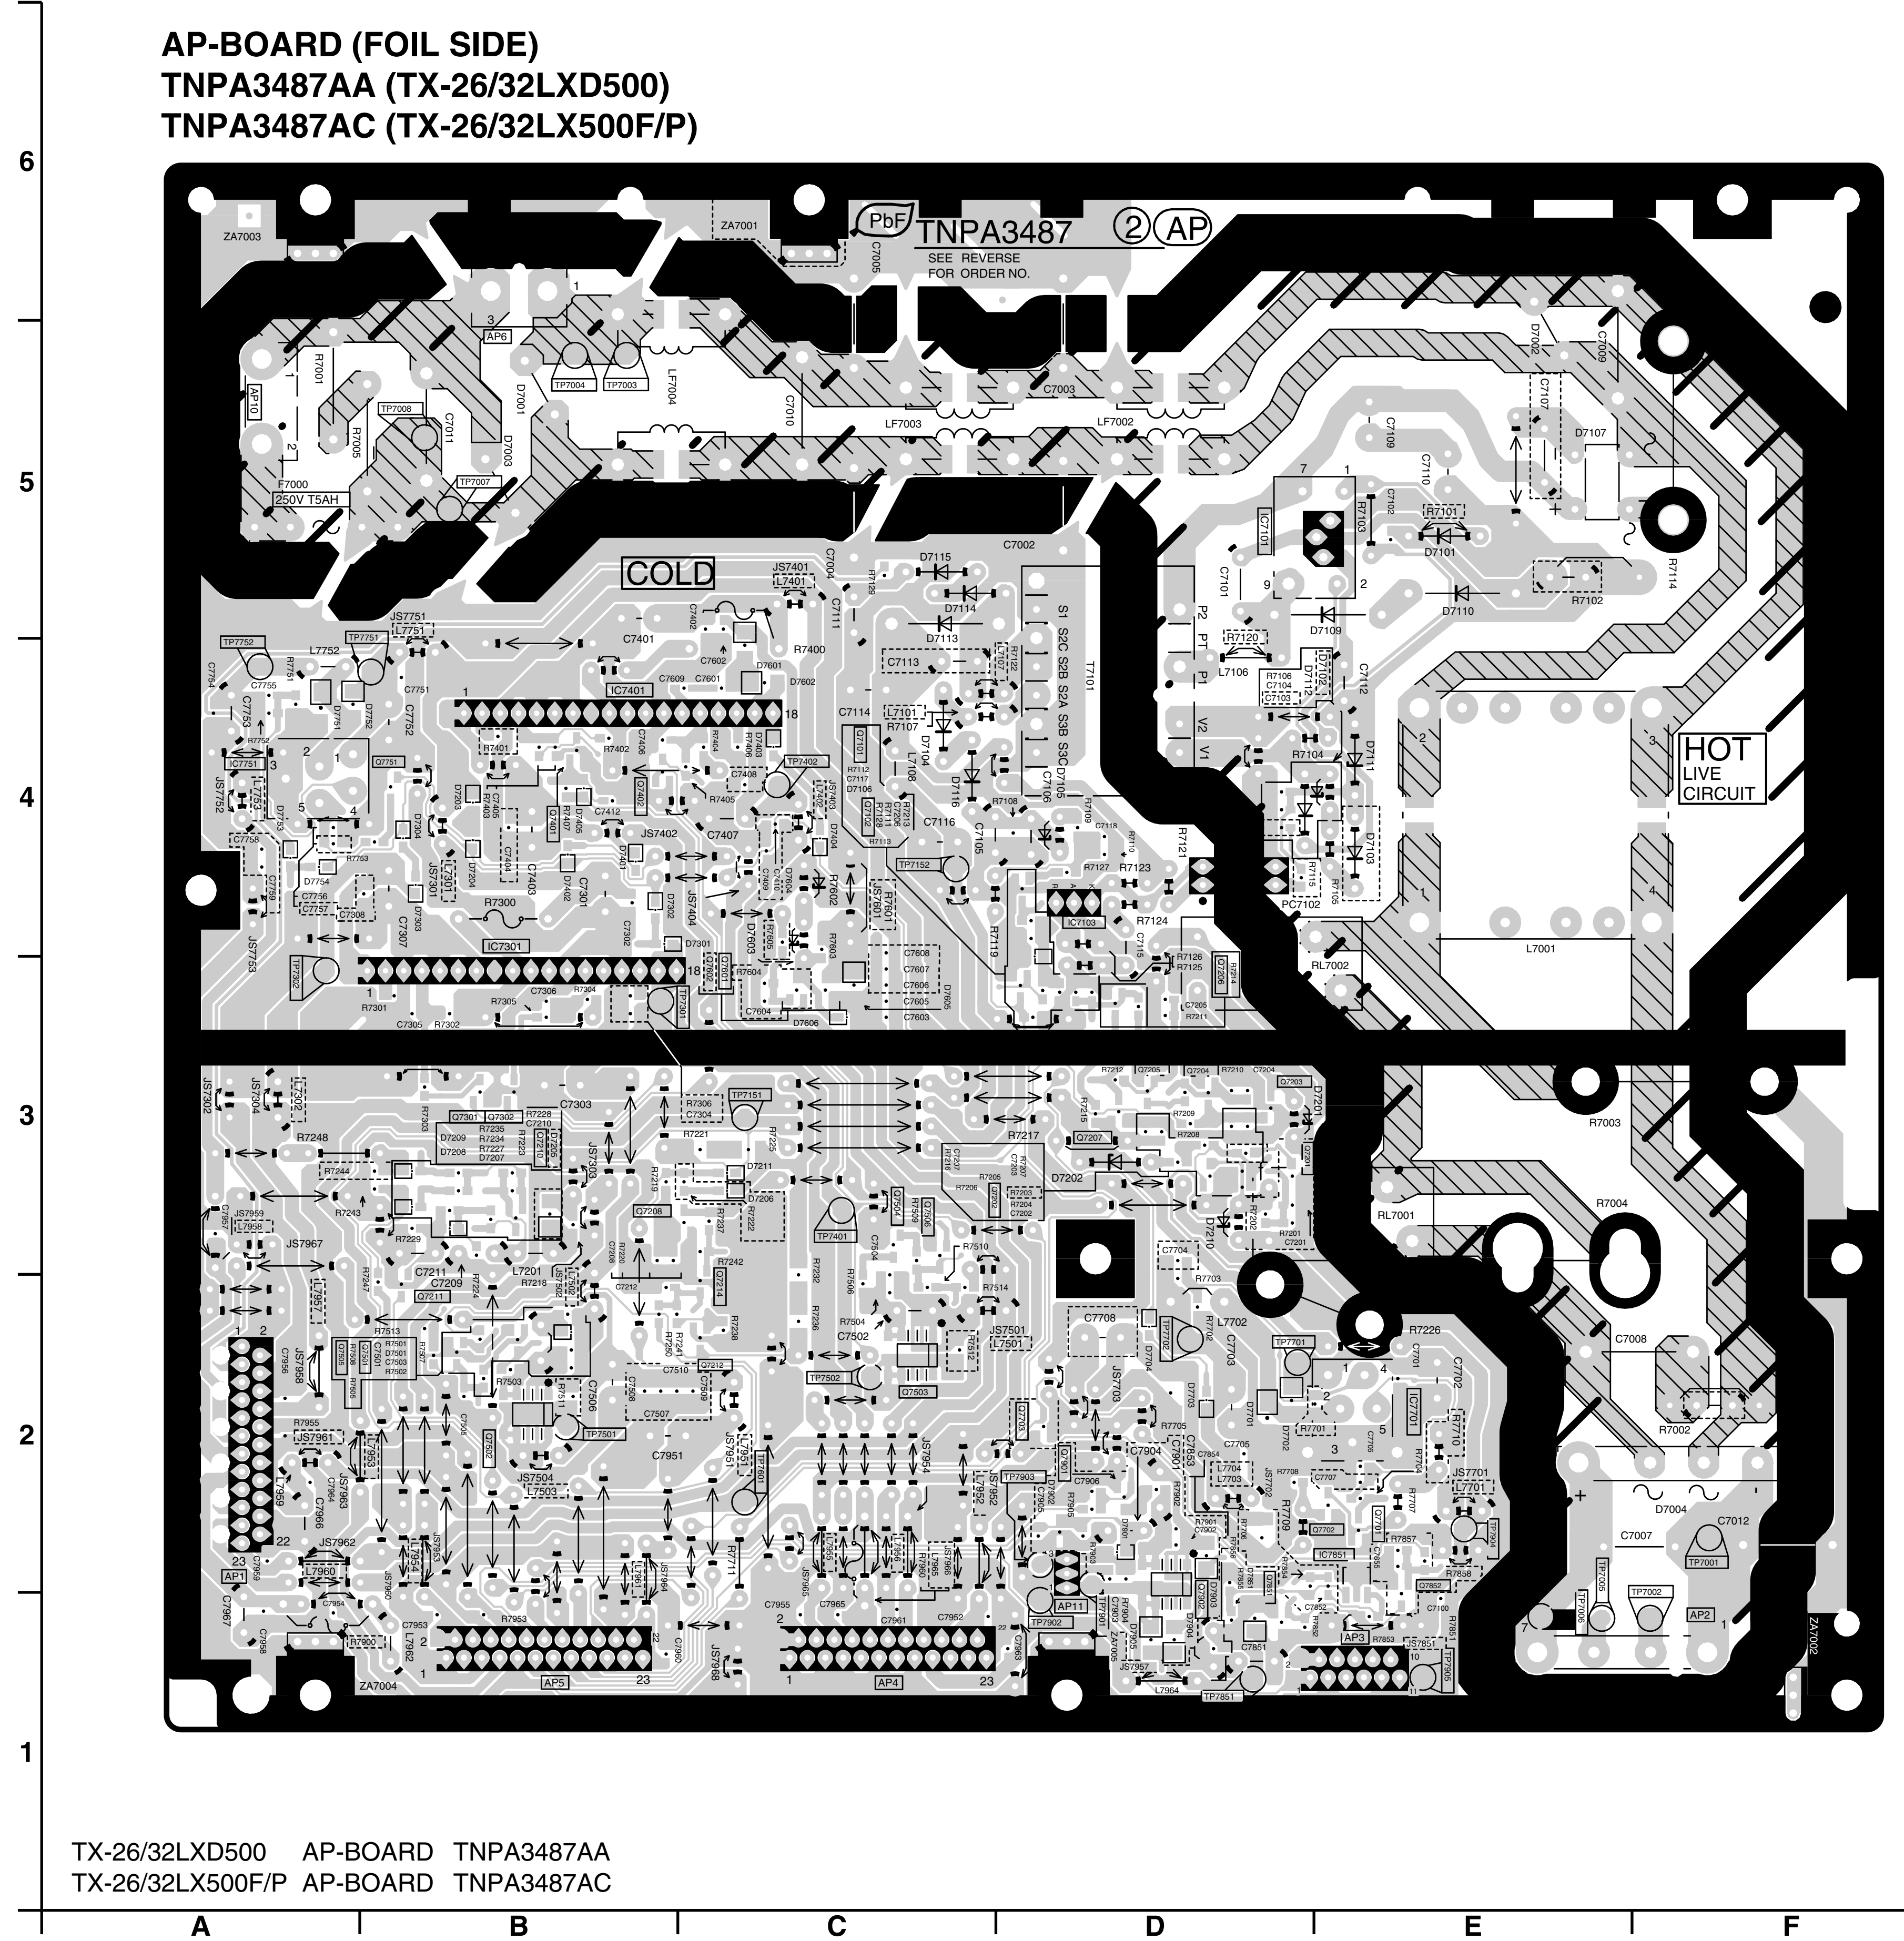
6
5
4
3
2
1
A
B
C
D
E
F
G
H
I
PbF
TNPA3487
② AP
SEE REVERSE FOR ORDER NO.
COLD
HOT
LIVE CIRCUIT
ZA7003
ZA7001
ZA7002
ZA7004
F7000
250V T5AH
AP10
AP6
AP1
AP2
AP3
AP4
AP5
AP11
LF7002
LF7003
LF7004
IC7101
IC7103
IC7301
IC7401
IC7751
IC7701
IC7851
T7101
L7001
RL7001
RL7002
PC7102
C7002
C7003
C7007
C7008
C7012
D7004
R7002
R7003
R7004
TP7001
TP7002

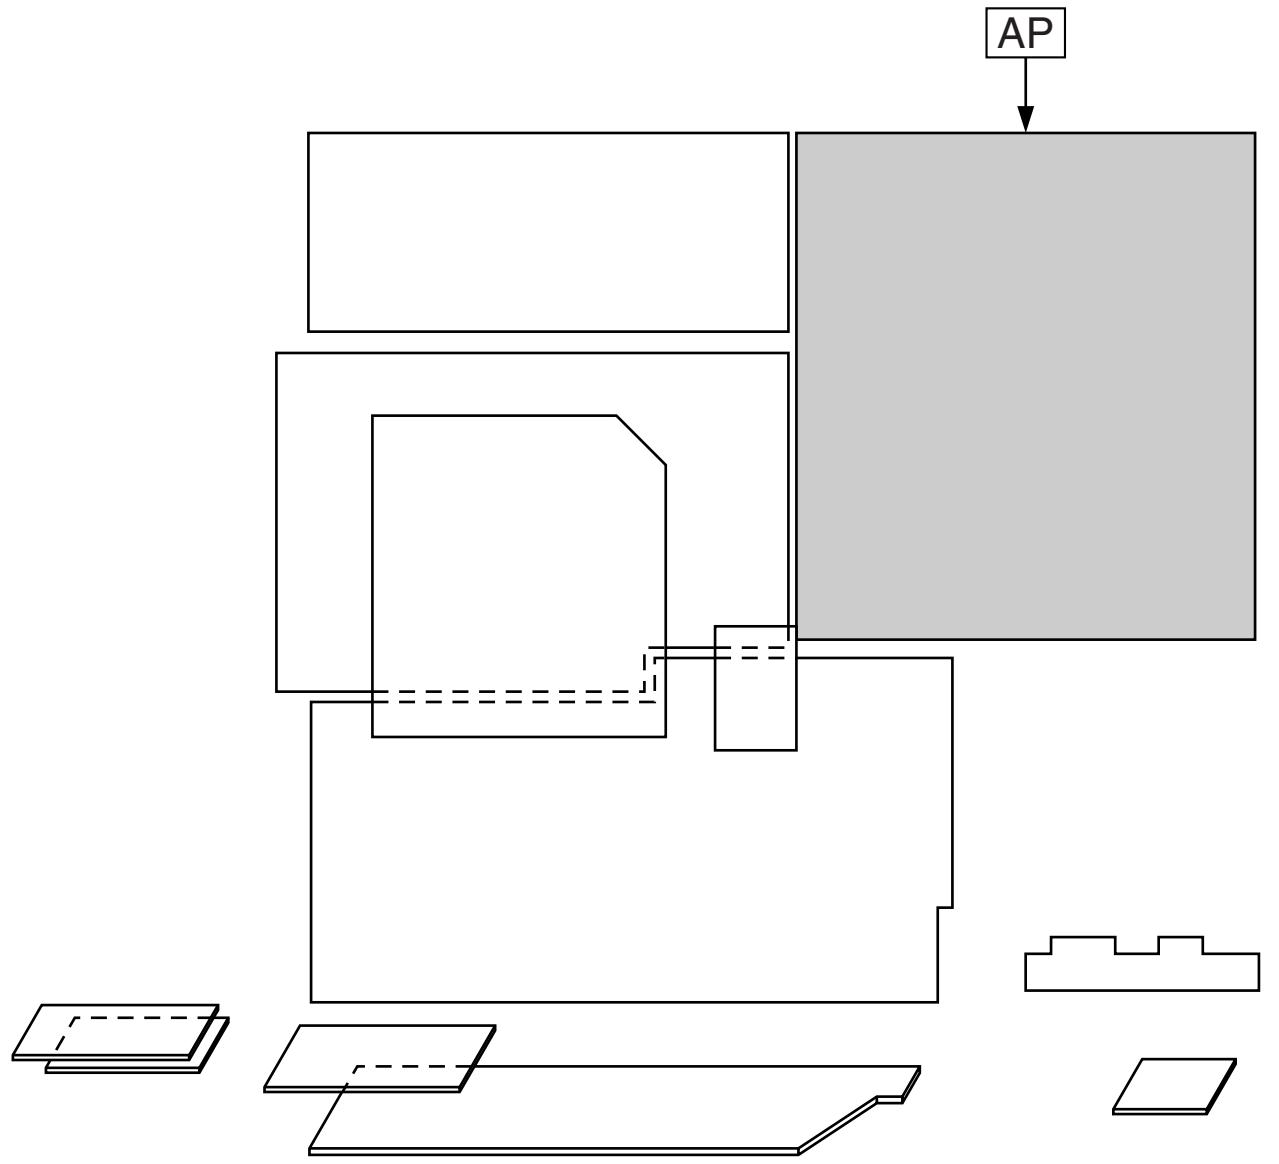

Parts Location

AP-BOARD (FOIL SIDE)					
IC		**TRANSISTOR**		**TRANSISTOR**	
IC7101	D-5	Q7101	C-4	Q7852	E-2
IC7103	D-4	Q7102	C-4	Q7901	D-2
IC7301	B-3	Q7201	D-3	Q7902	D-1
IC7401	B-4	Q7202	C-3	TP7001	F-2
IC7701	E-2	Q7203	D-3	TP7002	F-1
IC7751	A-4	Q7204	D-3	TP7003	B-5
IC7851	E-2	Q7205	D-3	TP7004	B-5
		Q7206	D-3	TP7005	E-1
		Q7207	D-3	TP7006	E-1
		Q7208	B-3	TP7007	B-5
		Q7210	B-3	TP7008	B-5
		Q7211	B-2	TP7151	C-3
		Q7212	C-2	TP7152	C-4
		Q7214	C-2	TP7301	B-3
		Q7301	B-3	TP7302	A-3
		Q7302	B-3	TP7401	C-3
		Q7401	B-4	TP7402	C-4
		Q7402	B-4	TP7501	B-2
		Q7501	A-2	TP7502	C-2
		Q7502	B-2	TP7601	C-2
		Q7503	C-2	TP7701	D-2
		Q7504	C-3	TP7702	D-2
		Q7505	A-2	TP7751	A-4
		Q7506	C-3	TP7752	A-4
		Q7601	C-3	TP7851	D-1
		Q7602	C-3	TP7901	D-1
		Q7701	E-2	TP7902	D-1
		Q7702	E-2	TP7904	E-2
		Q7703	D-2	TP7905	E-1
		Q7751	B-4	TP7909	D-2
		Q7851	D-1		

DG-BOARD (COMPONENT SIDE)

TXNDG10LPM (TX-26LXD500) TXNDG10LQM (TX-26LX500F) TXNDG10LRM (TX-26LX500P)
TXNDG10LLM (TX-32LXD500) TXNDG10LMM (TX-32LX500F) TXNDG10LNM (TX-32LX500P)

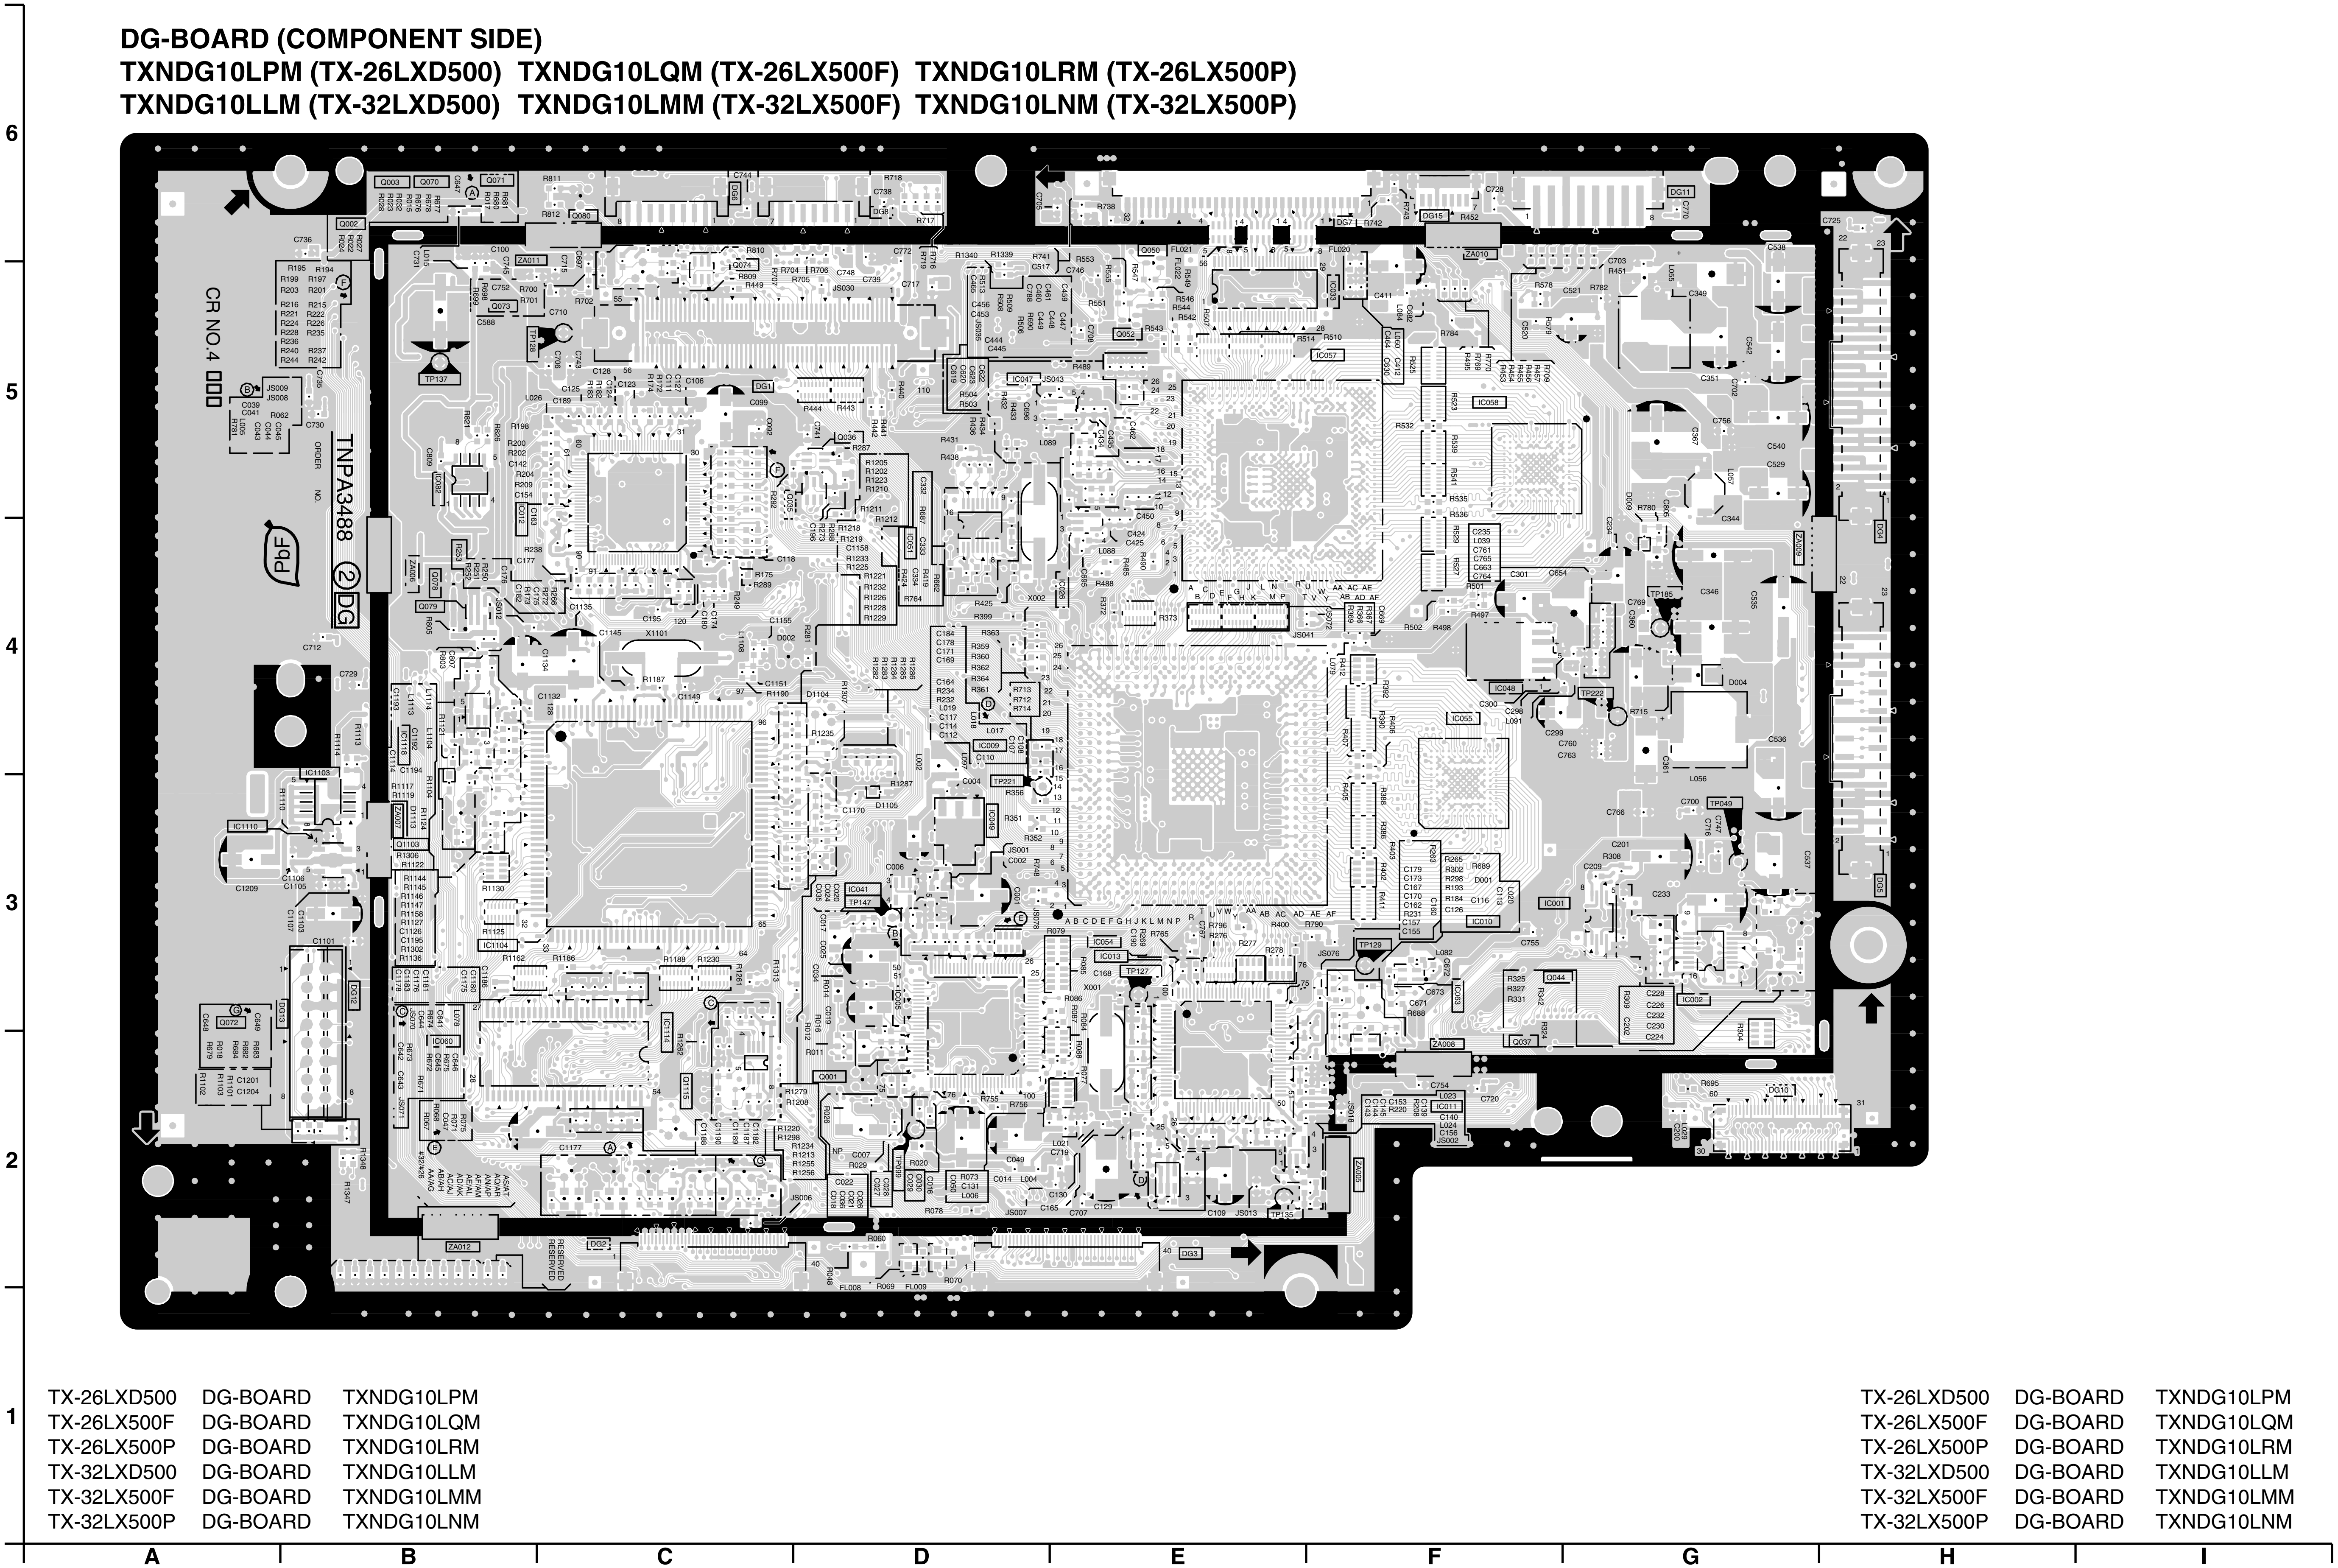

TX-26LXD500	DG-BOARD	TXNDG10LPM
TX-26LX500F	DG-BOARD	TXNDG10LQM
TX-26LX500P	DG-BOARD	TXNDG10LRM
TX-32LXD500	DG-BOARD	TXNDG10LLM
TX-32LX500F	DG-BOARD	TXNDG10LMM
TX-32LX500P	DG-BOARD	TXNDG10LNM

TX-26LXD500	DG-BOARD	TXNDG10LPM
TX-26LX500F	DG-BOARD	TXNDG10LQM
TX-26LX500P	DG-BOARD	TXNDG10LRM
TX-32LXD500	DG-BOARD	TXNDG10LLM
TX-32LX500F	DG-BOARD	TXNDG10LMM
TX-32LX500P	DG-BOARD	TXNDG10LNM

DG-BOARD (FOIL SIDE)

TXNDG10LPM (TX-26LXD500) TXNDG10LQM (TX-26LX500F) TXNDG10LRM (TX-26LX500P)
TXNDG10LLM (TX-32LXD500) TXNDG10LMM (TX-32LX500F) TXNDG10LNM (TX-32LX500P)

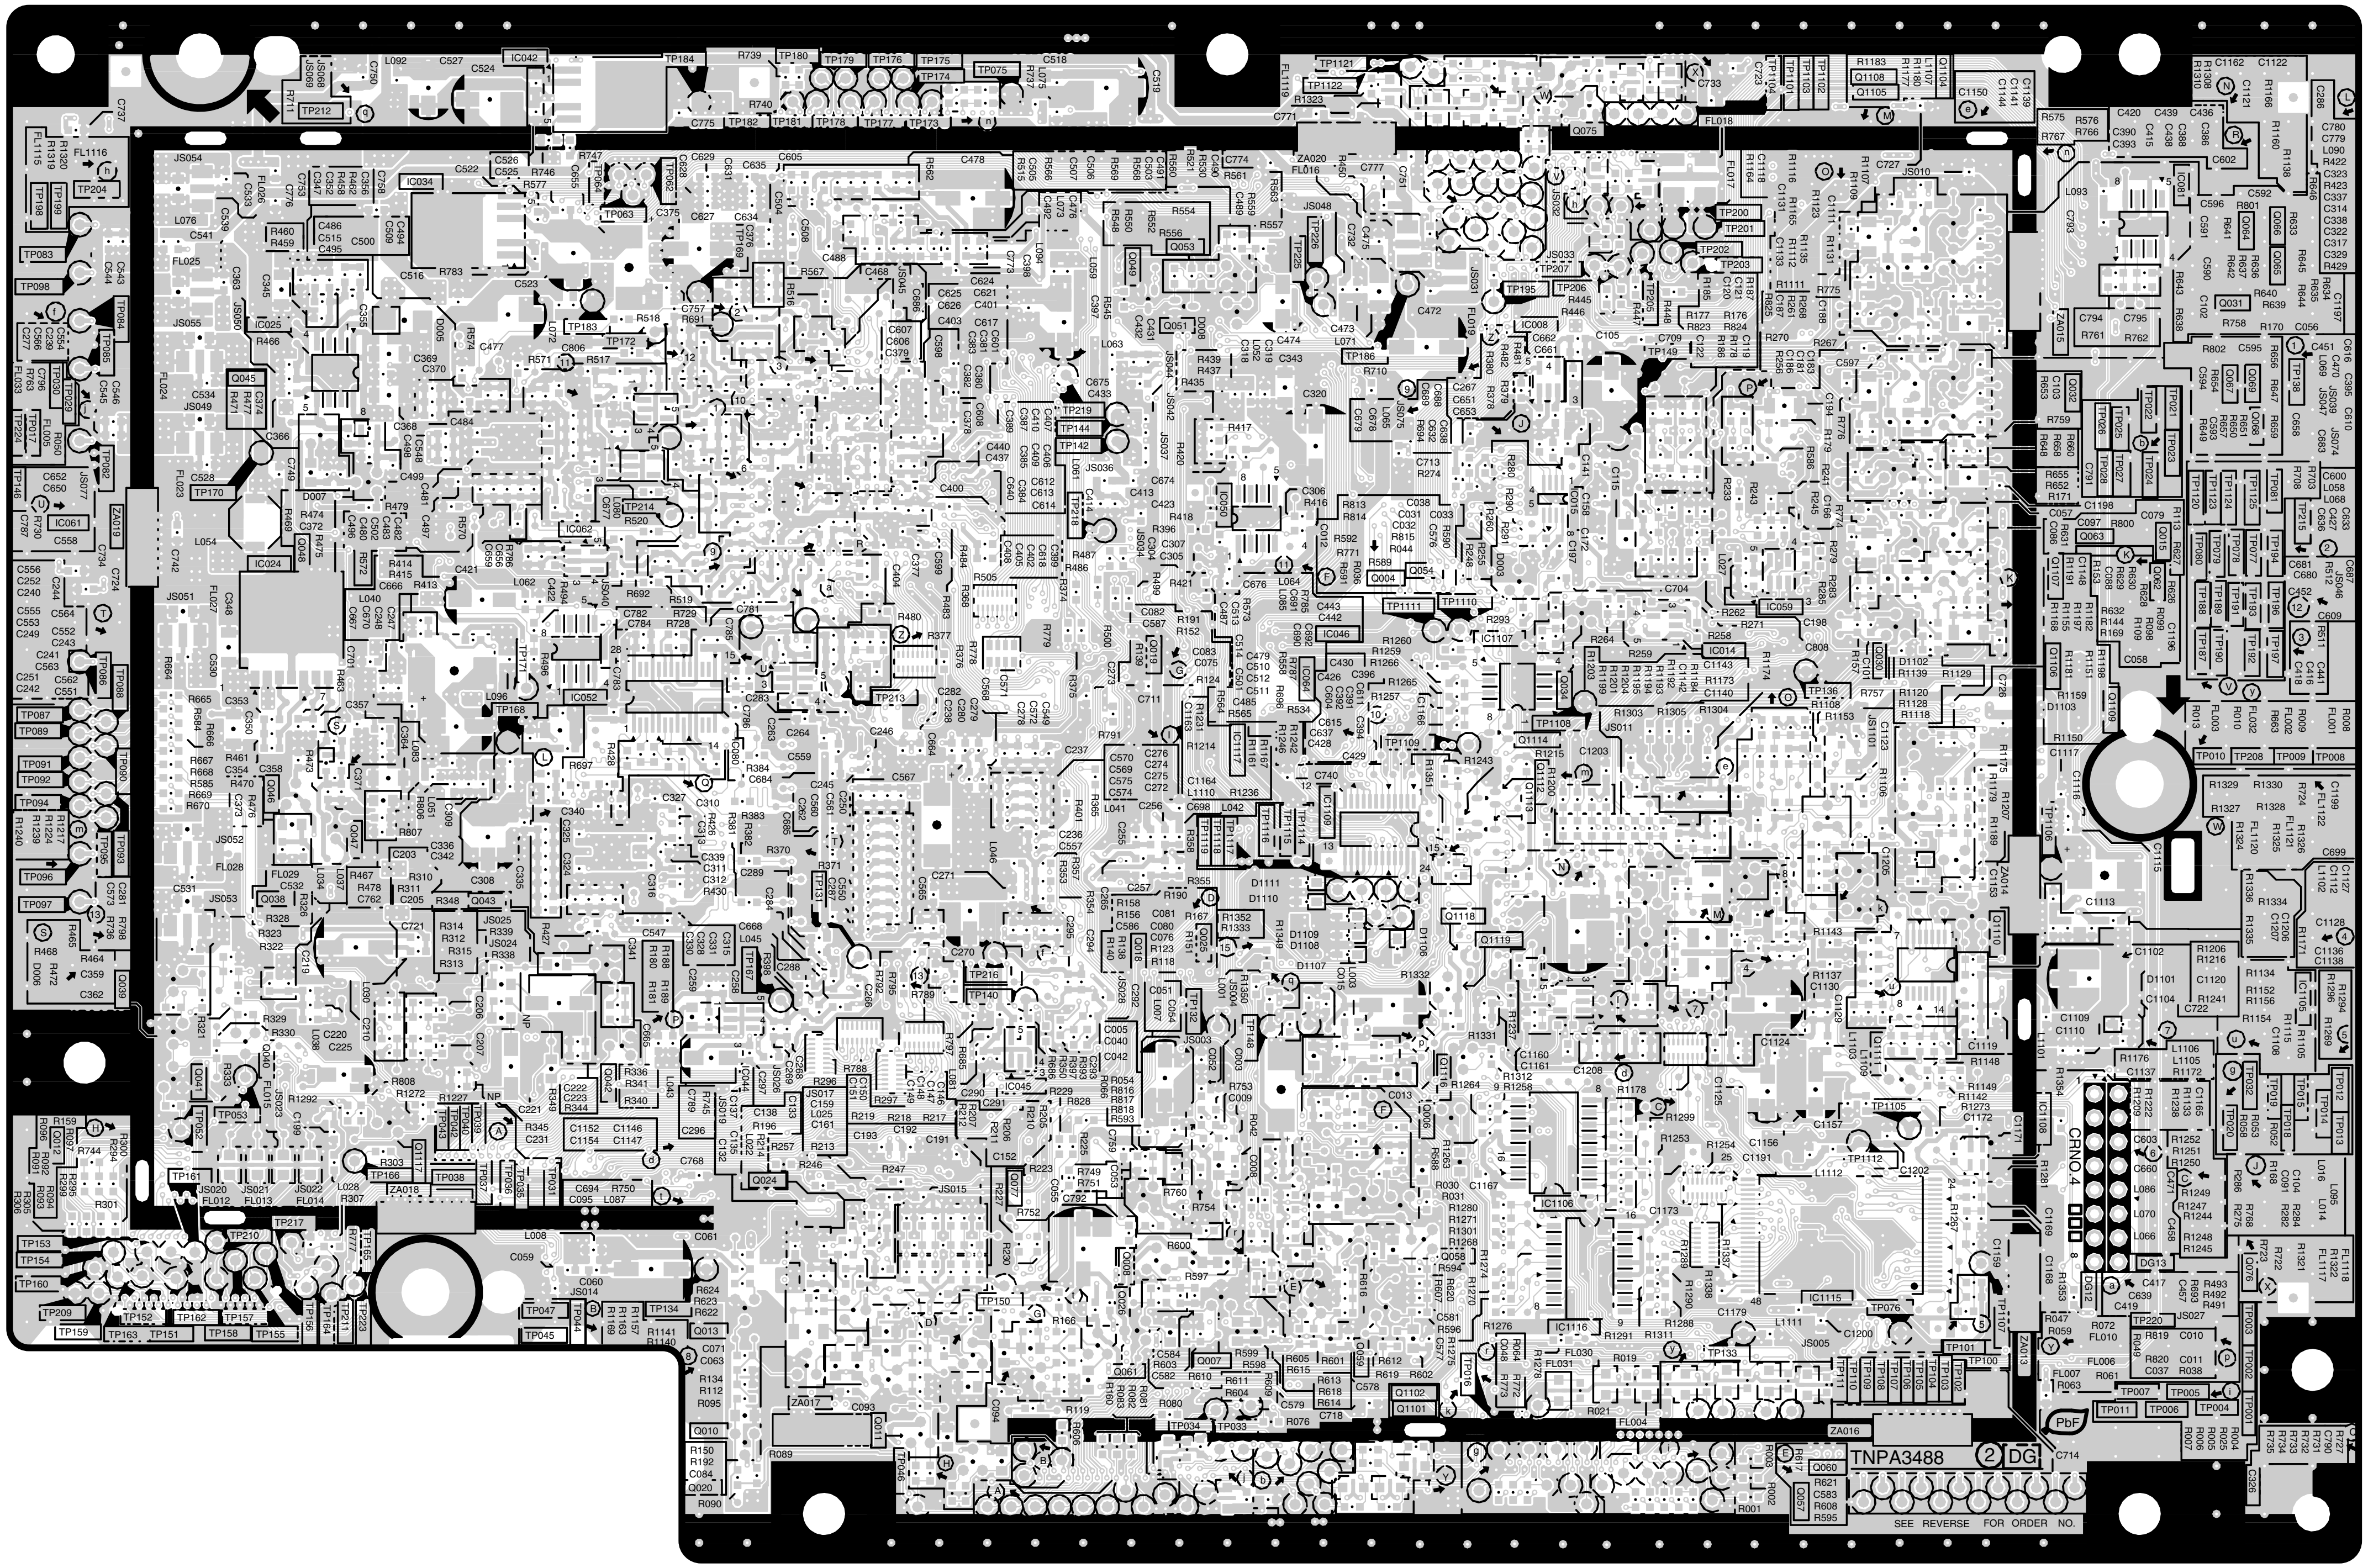

TX-26LXD500	DG-BOARD	TXNDG10LPM
TX-26LX500F	DG-BOARD	TXNDG10LQM
TX-26LX500P	DG-BOARD	TXNDG10LRM
TX-32LXD500	DG-BOARD	TXNDG10LLM
TX-32LX500F	DG-BOARD	TXNDG10LMM
TX-32LX500P	DG-BOARD	TXNDG10LNM

TX-26LXD500	DG-BOARD	TXNDG10LPM
TX-26LX500F	DG-BOARD	TXNDG10LQM
TX-26LX500P	DG-BOARD	TXNDG10LRM
TX-32LXD500	DG-BOARD	TXNDG10LLM
TX-32LX500F	DG-BOARD	TXNDG10LMM
TX-32LX500P	DG-BOARD	TXNDG10LNM

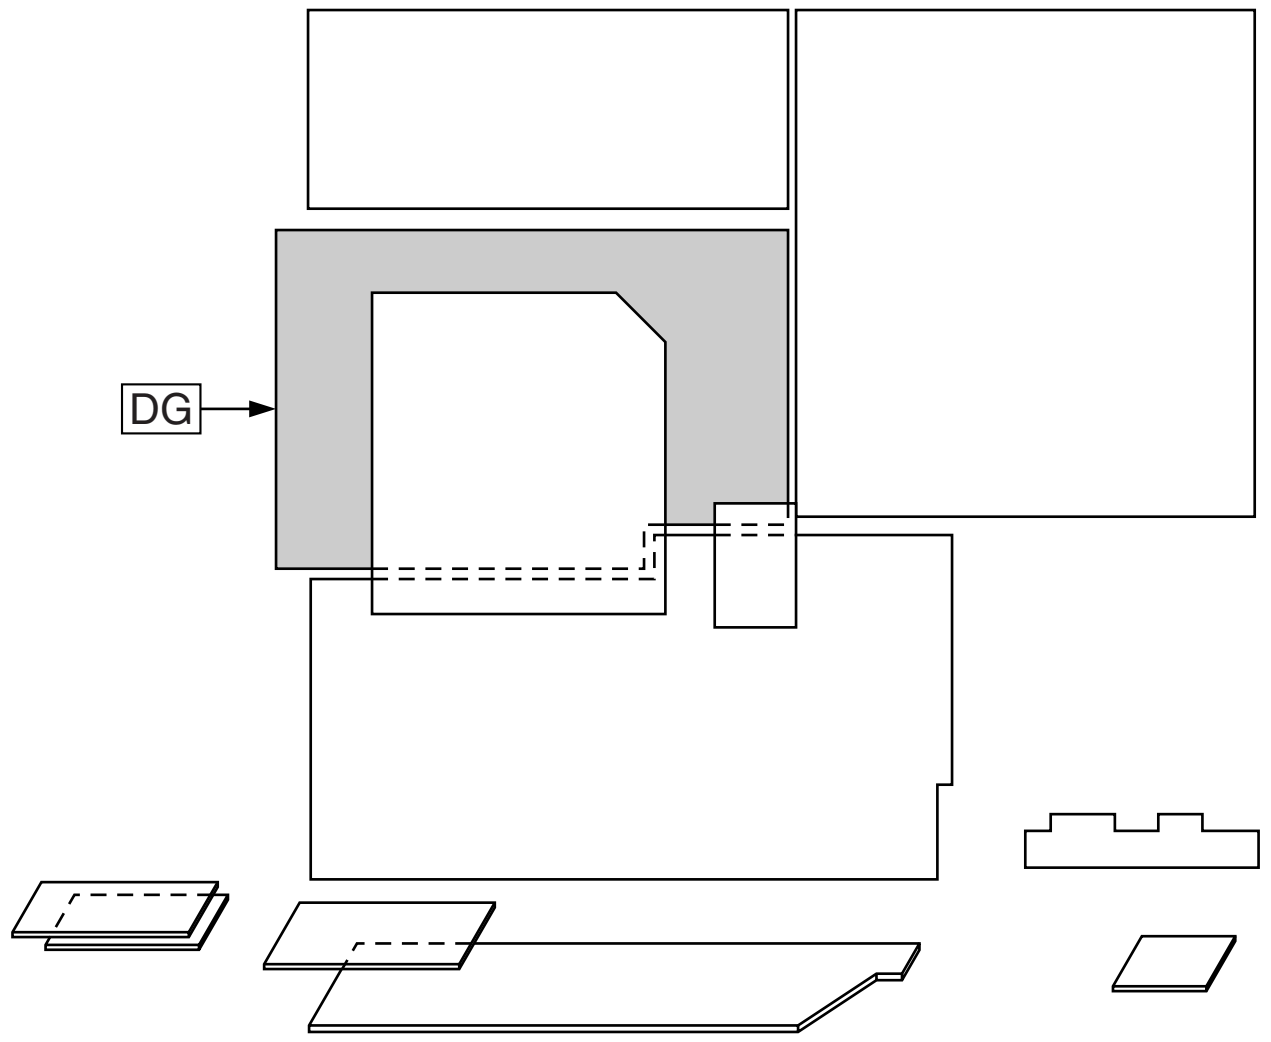

Parts Location

DG-BOARD (COMPONENT SIDE)													
IC		**TRANSISTOR**		**TRANSISTOR**		**TP**		**TP**		**TP**		**TP**	
IC1105	H-3	Q1101	E-2	Q4040	B-3	TP001	H-2	TP040	B-3	TP104	G-2	TP142	D-5	TP186	E-5
IC1106	E-2	Q1102	E-2	Q4041	A-3	TP002	H-2	TP042	B-3	TP105	G-2	TP144	D-5	TP187	G-4
IC1107	E-4	Q1104	G-6	Q4042	C-2	TP003	H-2	TP043	B-3	TP106	G-2	TP146	A-5	TP188	G-4
IC1108	G-3	Q1105	F-6	Q4043	B-3	TP004	G-2	TP044	C-2	TP107	G-2	TP148	E-3	TP189	G-4
IC1109	E-4	Q1106	G-4	Q4045	B-5	TP005	G-2	TP045	B-2	TP108	F-2	TP150	D-2	TP190	G-4
IC1115	F-2	Q1107	G-4	Q4046	B-4	TP006	G-2	TP046	C-2	TP109	F-2	TP151	A-2	TP191	H-4
IC1116	F-2	Q1108	F-6	Q4047	B-3	TP007	G-2	TP047	B-2	TP110	F-2	TP152	A-2	TP192	H-4
IC1117	E-4	Q1109	G-4	Q4048	B-4	TP008	H-4	TP052	A-3	TP1102	F-6	TP153	A-2	TP193	H-4
IC4008	E-5	Q1110	G-3	Q4049	D-5	TP009	H-4	TP053	B-3	TP1103	F-6	TP154	A-2	TP194	H-4
IC4014	F-4	Q1111	F-3	Q4051	D-5	TP010	G-4	TP053	C-5	TP1104	F-6	TP155	B-2	TP195	E-5
IC4015	F-5	Q1112	E-4	Q4053	D-5	TP010	H-4	TP062	C-5	TP1105	F-3	TP156	B-2	TP196	H-4
IC4024	B-4	Q1113	E-4	Q4054	E-4	TP011	G-2	TP064	C-5	TP1105	G-3	TP157	B-2	TP197	H-4
IC4025	B-5	Q1114	E-4	Q4057	F-2	TP012	H-3	TP075	D-6	TP1106	G-3	TP158	A-2	TP198	A-5
IC4034	B-5	Q1116	E-3	Q4058	E-2	TP013	H-3	TP076	G-2	TP1107	G-2	TP158	B-2	TP199	A-5
IC4042	B-6	Q1117	B-3	Q4059	E-2	TP014	H-3	TP077	H-4	TP1108	E-4	TP159	A-2	TP200	F-5
IC4044	C-3	Q1118	E-3	Q4060	F-2	TP015	H-3	TP078	H-4	TP1108	F-4	TP160	A-2	TP201	F-5
IC4045	D-3	Q1119	E-3	Q4061	D-2	TP016	E-2	TP079	G-4	TP111	F-2	TP161	A-2	TP202	F-5
IC4046	E-4	Q4004	E-4	Q4062	G-4	TP017	A-5	TP080	G-4	TP1110	E-4	TP162	A-2	TP203	F-5
IC4050	E-5	Q4006	E-3	Q4063	G-4	TP018	H-3	TP081	H-5	TP1111	E-4	TP163	A-2	TP204	A-5
IC4052	C-4	Q4007	D-2	Q4064	H-5	TP019	H-3	TP082	A-5	TP1112	F-3	TP164	B-2	TP206	F-5
IC4059	F-4	Q4008	D-2	Q4065	H-5	TP020	H-3	TP083	A-5	TP1112	F-3	TP165	B-2	TP207	F-5
IC4061	A-4	Q4010	C-2	Q4066	H-5	TP021	G-5	TP084	A-5	TP1114	E-4	TP166	B-3	TP208	H-4
IC4062	C-4	Q4011	A-3	Q4067	H-5	TP022	G-5	TP085	A-5	TP1115	E-4	TP167	C-3	TP209	A-2
IC4064	E-4	Q4012	A-3	Q4068	H-5	TP023	G-5	TP086	A-4	TP1116	E-4	TP168	B-4	TP210	B-2
IC4080	C-4	Q4013	C-2	Q4069	H-5	TP024	G-5	TP087	A-4	TP1117	E-4	TP169	C-5	TP211	B-2
IC4081	G-5	Q4015	G-4	Q4075	F-6	TP025	G-5	TP088	A-4	TP1118	D-3	TP170	B-5	TP212	B-6
		Q4018	D-3	Q4076	H-2	TP026	G-5	TP089	A-4	TP1119	D-3	TP172	C-5	TP213	C-4
		Q4019	D-4	Q4077	D-2	TP027	G-5	TP090	A-4	TP1120	G-5	TP173	D-6	TP214	C-5
		Q4020	C-2			TP028	G-5	TP091	A-4	TP1121	E-6	TP174	D-6	TP215	H-4
		Q4024	C-2			TP029	A-5	TP092	A-4	TP1122	E-6	TP175	D-6	TP215	H-4
		Q4025	D-3			TP030	A-5	TP093	A-3	TP1123	G-5	TP176	C-6	TP216	D-3
		Q4026	D-2			TP031	B-2	TP094	A-4	TP1124	H-5	TP176	D-6	TP217	B-2
		Q4030	F-4			TP032	H-3	TP095	A-3	TP1125	H-5	TP177	C-6	TP218	D-4
		Q4031	H-5			TP033	E-2	TP096	A-3	TP131	C-3	TP178	C-6	TP219	D-5
		Q4032	G-5			TP034	D-2	TP097	A-3	TP132	D-3	TP179	C-6	TP220	G-2
		Q4034	F-4			TP035	B-2	TP098	A-5	TP133	F-2	TP180	C-6	TP223	B-2
		Q4038	B-3			TP036	B-2	TP100	G-2	TP134	C-2	TP181	C-6	TP224	A-5
		Q4039	A-3			TP037	B-2	TP101	G-2	TP136	F-4	TP182	C-6	TP225	E-5
		Q4040	B-3			TP038	B-2	TP102	G-2	TP138	H-5	TP183	C-5	TP226	E-5
		Q4041	A-3			TP039	B-3	TP103	G-2	TP140	D-3	TP184	C-6		

Parts Location

DG-BOARD (COMPONENT SIDE)			
IC		**TRANSISTOR**	
IC1103	B-3	Q1103	B-3
IC1104	B-3	Q1115	C-2
IC1110	A-3	Q4001	D-2
IC1114	C-2	Q4002	B-6
IC1118	B-4	Q4003	B-6
IC4001	F-3	Q4035	C-5
IC4002	G-3	Q4036	D-5
IC4005	D-3	Q4037	F-2
IC4009	D-4	Q4044	F-3
IC4010	F-3	Q4050	E-6
IC4011	F-1	Q4052	E-5
IC4012	B-4	Q4070	B-6
IC4013	E-3	Q4071	B-6
IC4026	E-4	Q4072	A-2
IC4033	F-5	Q4073	B-5
IC4041	D-3	Q4074	C-5
IC4047	D-5	Q4078	B-4
IC4048	F-4	Q4079	B-4
IC4049	D-3	Q4080	C-6
IC4051	D-4		
IC4054	E-3	**TP**	
IC4055	F-4		
IC4057	F-5	TP009	D-2
IC4058	F-5	TP049	G-3
IC4060	B-2	TP127	E-3
IC4063	F-3	TP128	C-5
IC4082	B-5	TP129	F-3
		TP135	E-2
		TP137	B-5
		TP147	D-3
		TP185	G-5
		TP221	D-3
		TP222	G-4

6

5

4

3

2

1

DV-BOARD (FOIL SIDE)
TXNDV10LLM

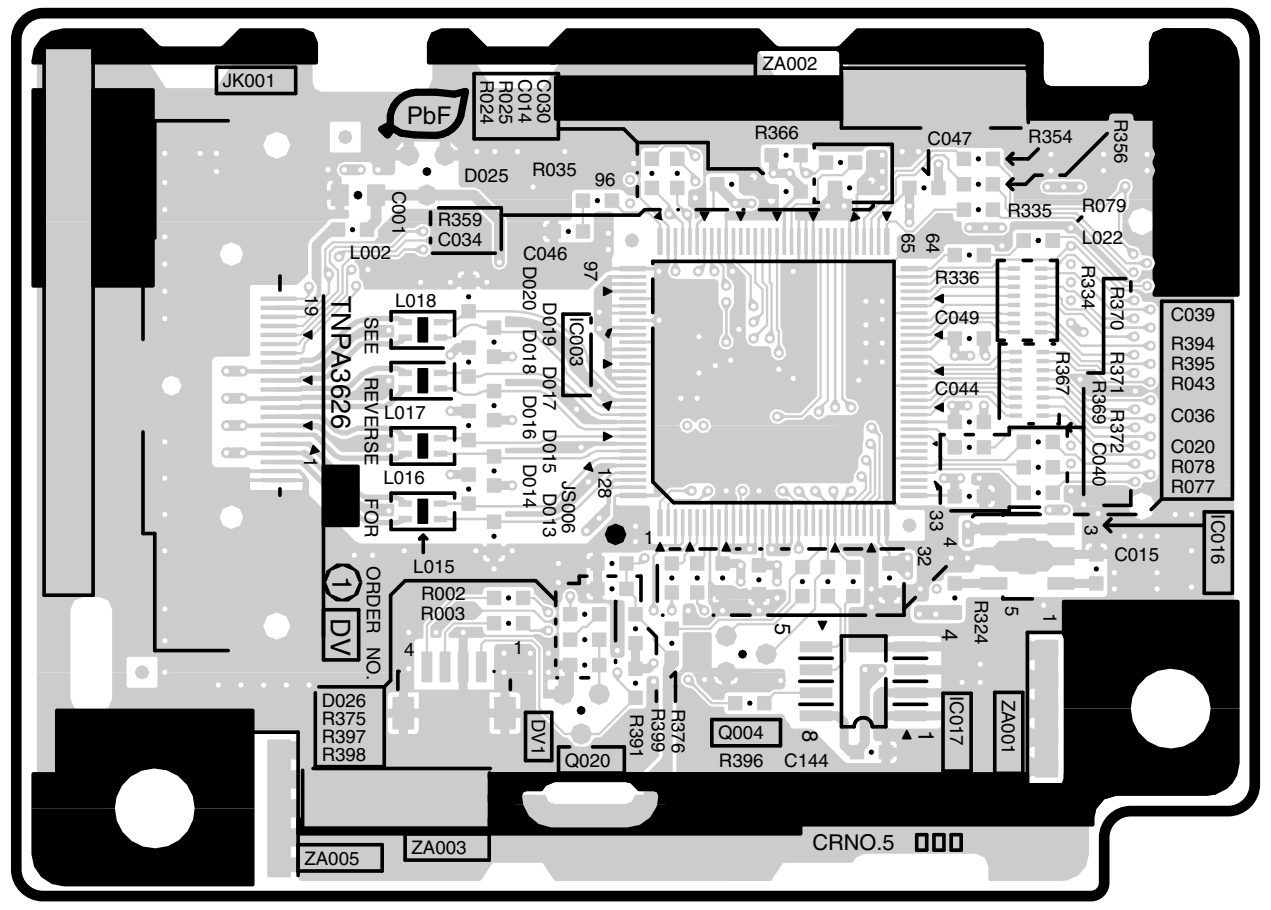
PbF
TNPA3626
SEE REVERSE FOR ORDER NO.
① DV
CRNO.5
JK001
ZA002
ZA005
ZA003
ZA001

DV-BOARD (COMPONENT SIDE)
TXNDV10LLM

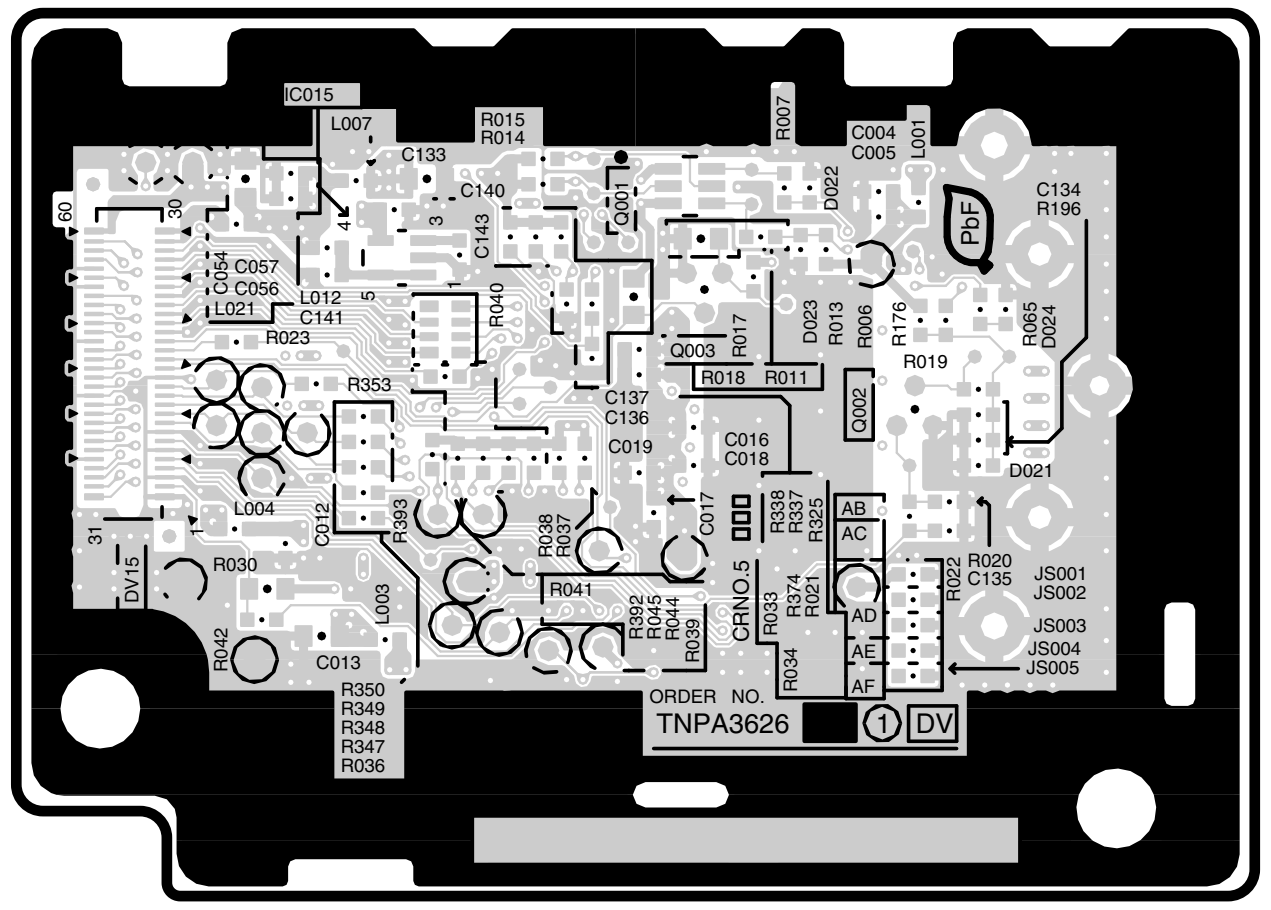
PbF
ORDER NO.
TNPA3626
① DV
CRNO.5
IC015

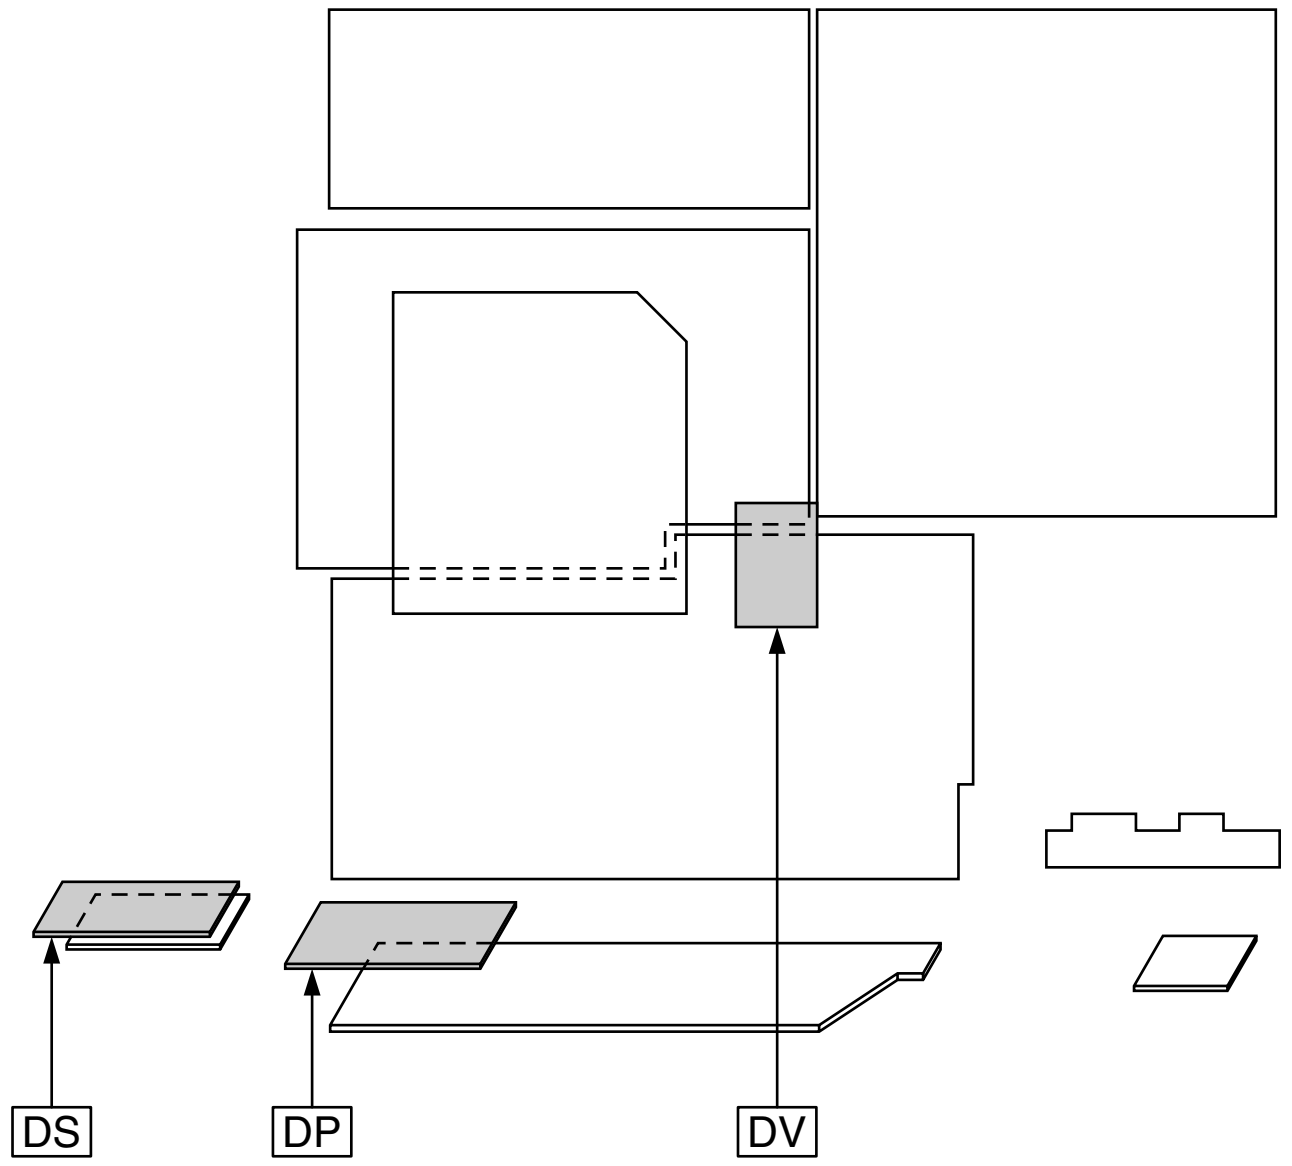

GP-BOARD (FOIL SIDE)
TNPA3491AA

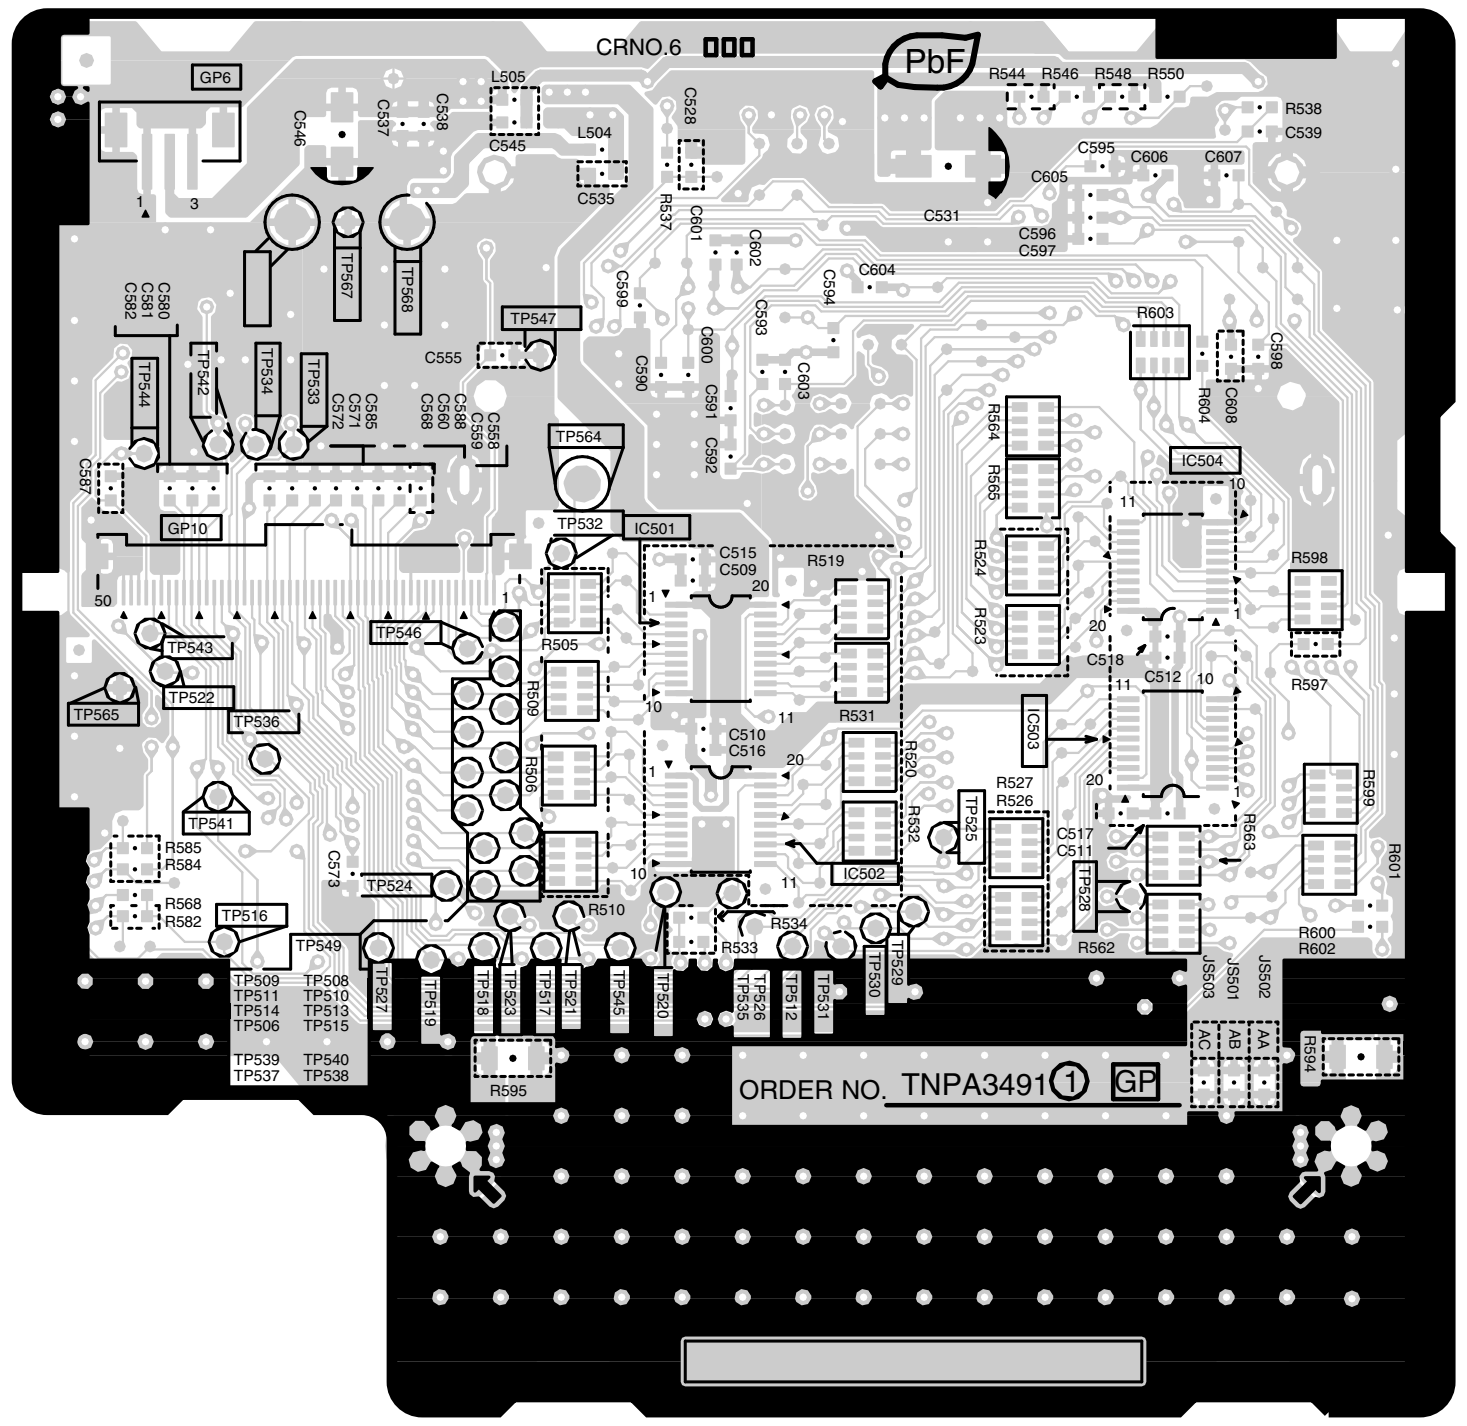
CRNO.6
PbF
ORDER NO.
TNPA3491 ① GP
GP6
GP10

GP-BOARD (COMPONENT SIDE)
TNPA3491AA

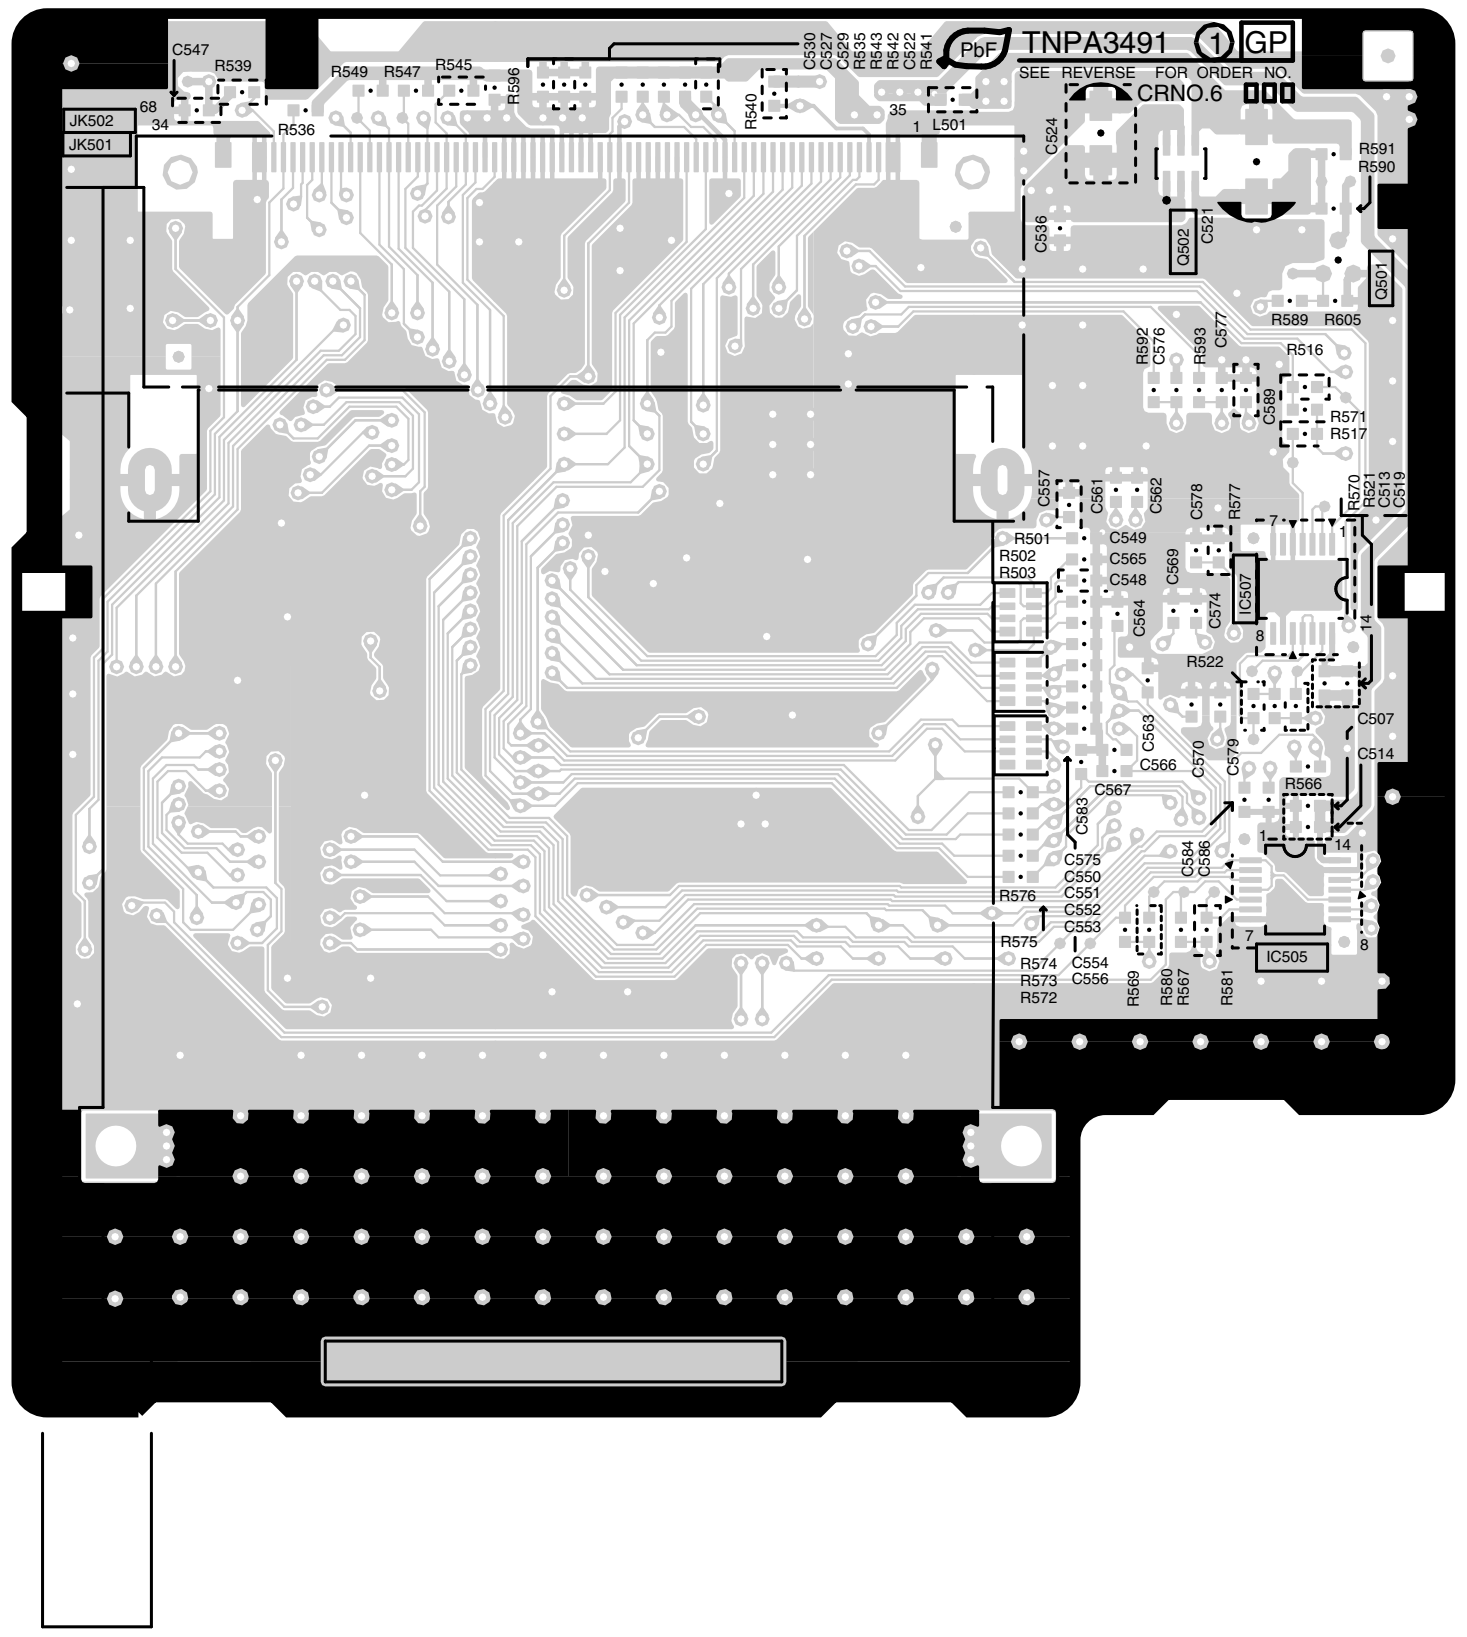
PbF
TNPA3491 ① GP
SEE REVERSE FOR ORDER NO.
CRNO.6
JK502
JK501
IC505

GS-BOARD (FOIL SIDE)
TNPA3651AA

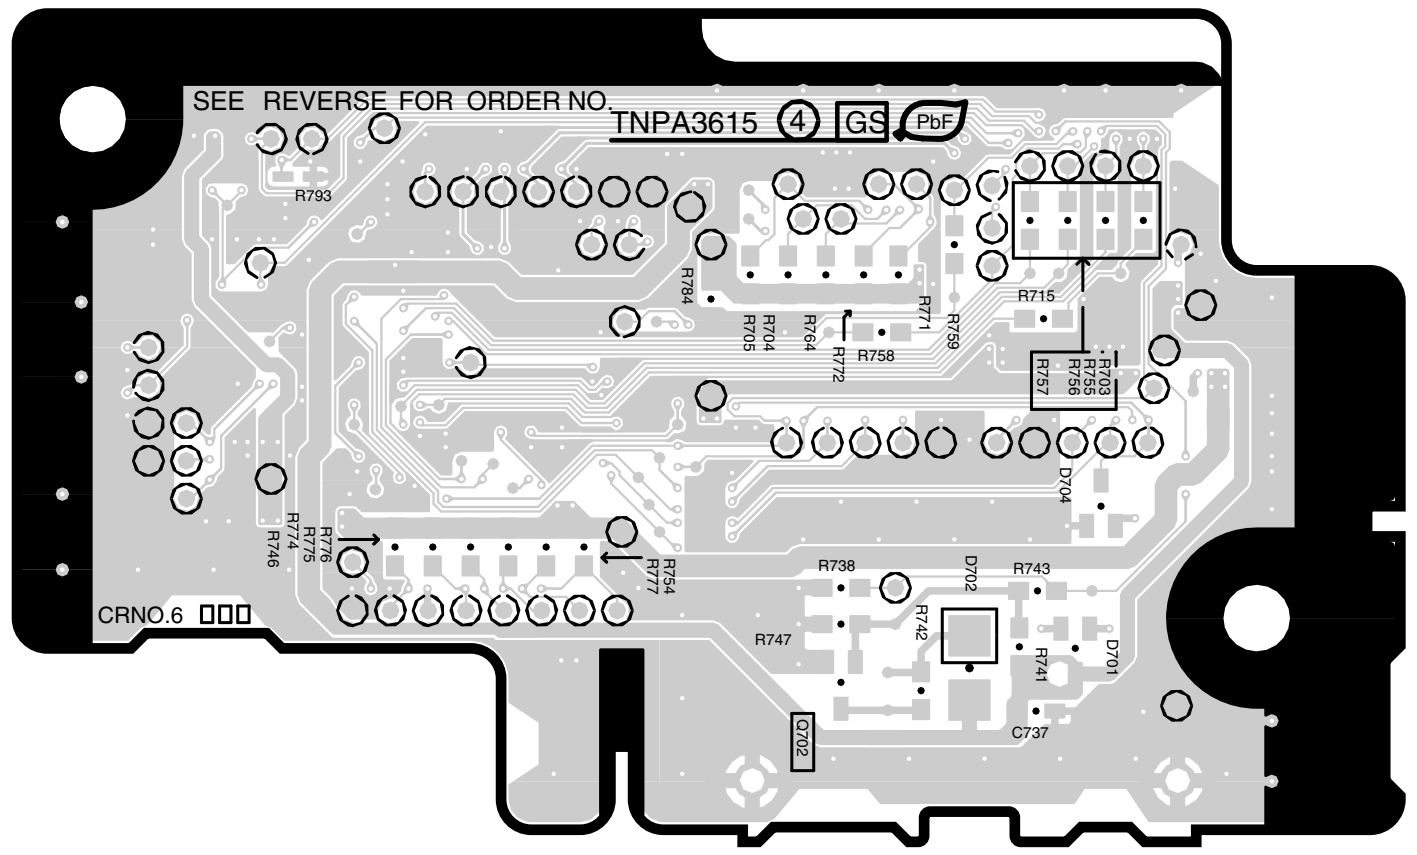
SEE REVERSE FOR ORDER NO.
TNPA3615 ④ GS
PbF
CRNO.6

GS-BOARD (COMPONENT SIDE)
TNPA3651AA

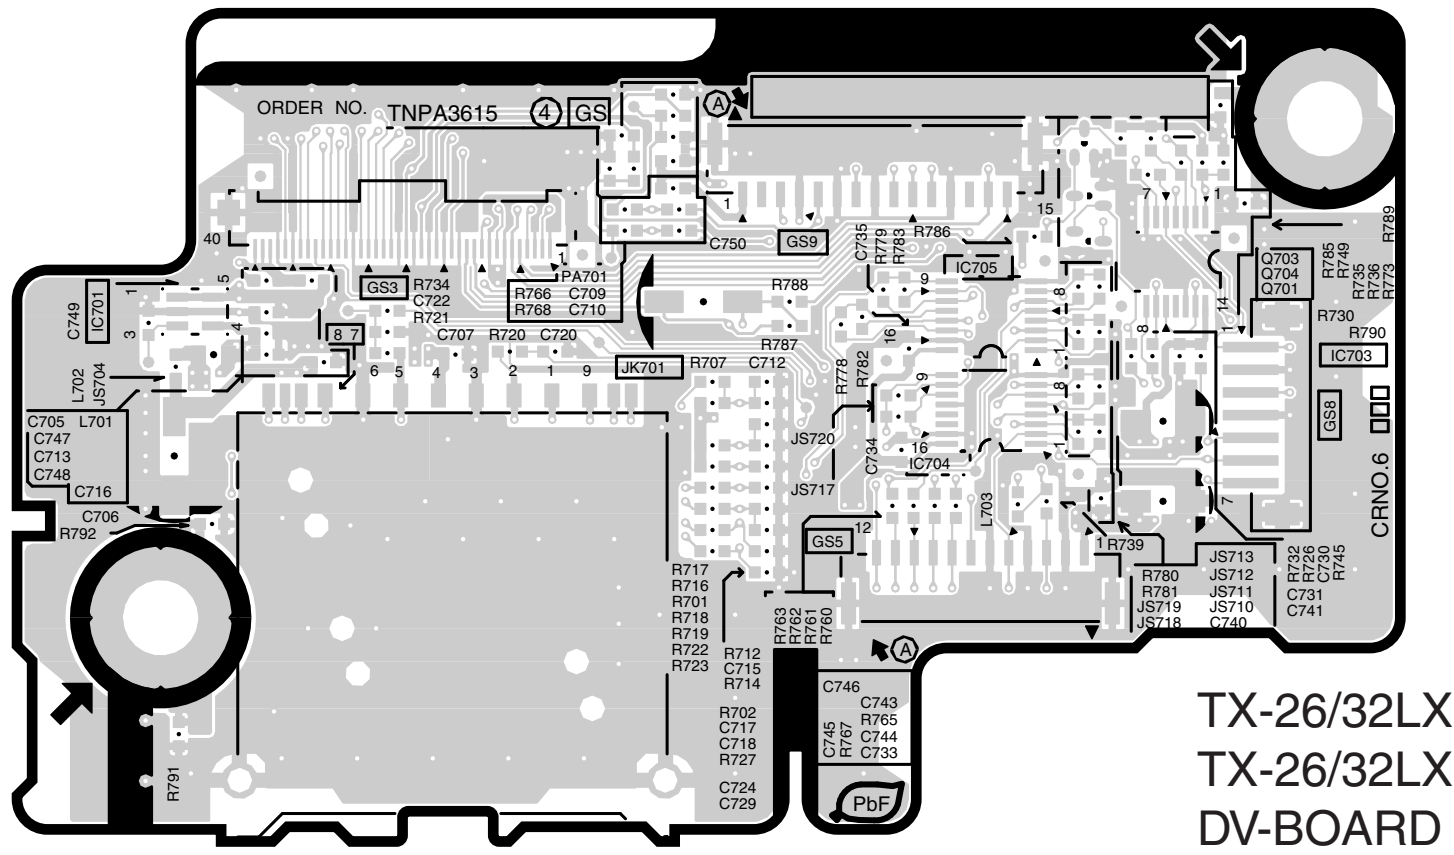
ORDER NO.
TNPA3615 ④ GS
CRNO.6
PbF
IC705
IC703
JK701

TX-26/32LXD500
TX-26/32LX500F/P

DV-BOARD	TXNDV10LLM
GP-BOARD	TNPA3491AA
GS-BOARD	TNPA3615AA

TX-26/32LXD500
TX-26/32LX500F/P
DV-BOARD TXNDV10LLM
GP-BOARD TNPA3491AA
GS-BOARD TNPA3615AA

A B C D E F G H I

G-BOARD (FOIL SIDE)
TNPA3489AB

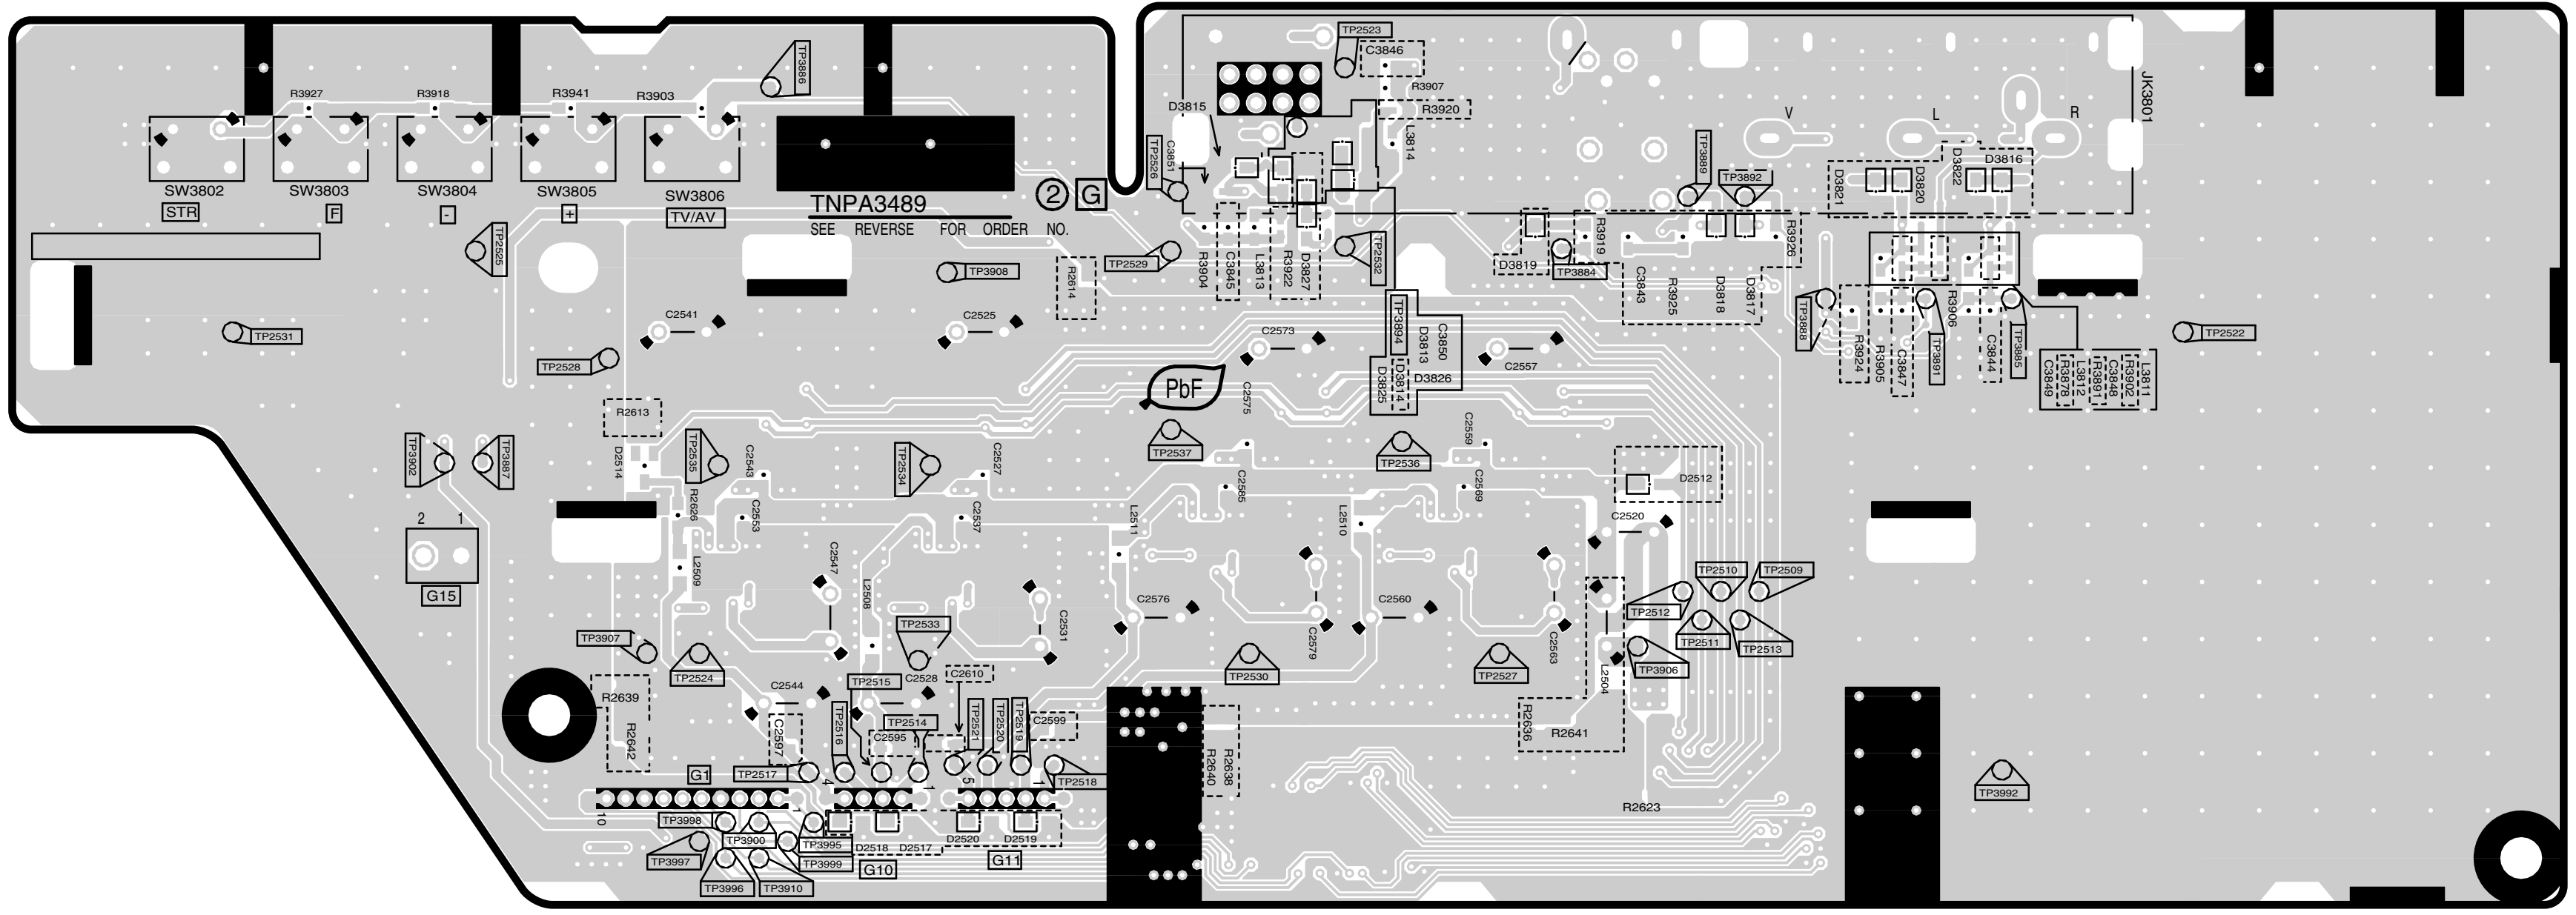
SW3802
STR
SW3803
F
SW3804
-
SW3805
+
SW3806
TV/AV
TNPA3489
SEE REVERSE FOR ORDER NO.
② G
PbF
JK3801
G15
G1
G10
G11
TP2531
TP2528
TP2537
TP2536
TP2522
TP3992
TP2530
TP2527
TP2524
TP3907
R2641
R2623
R2639

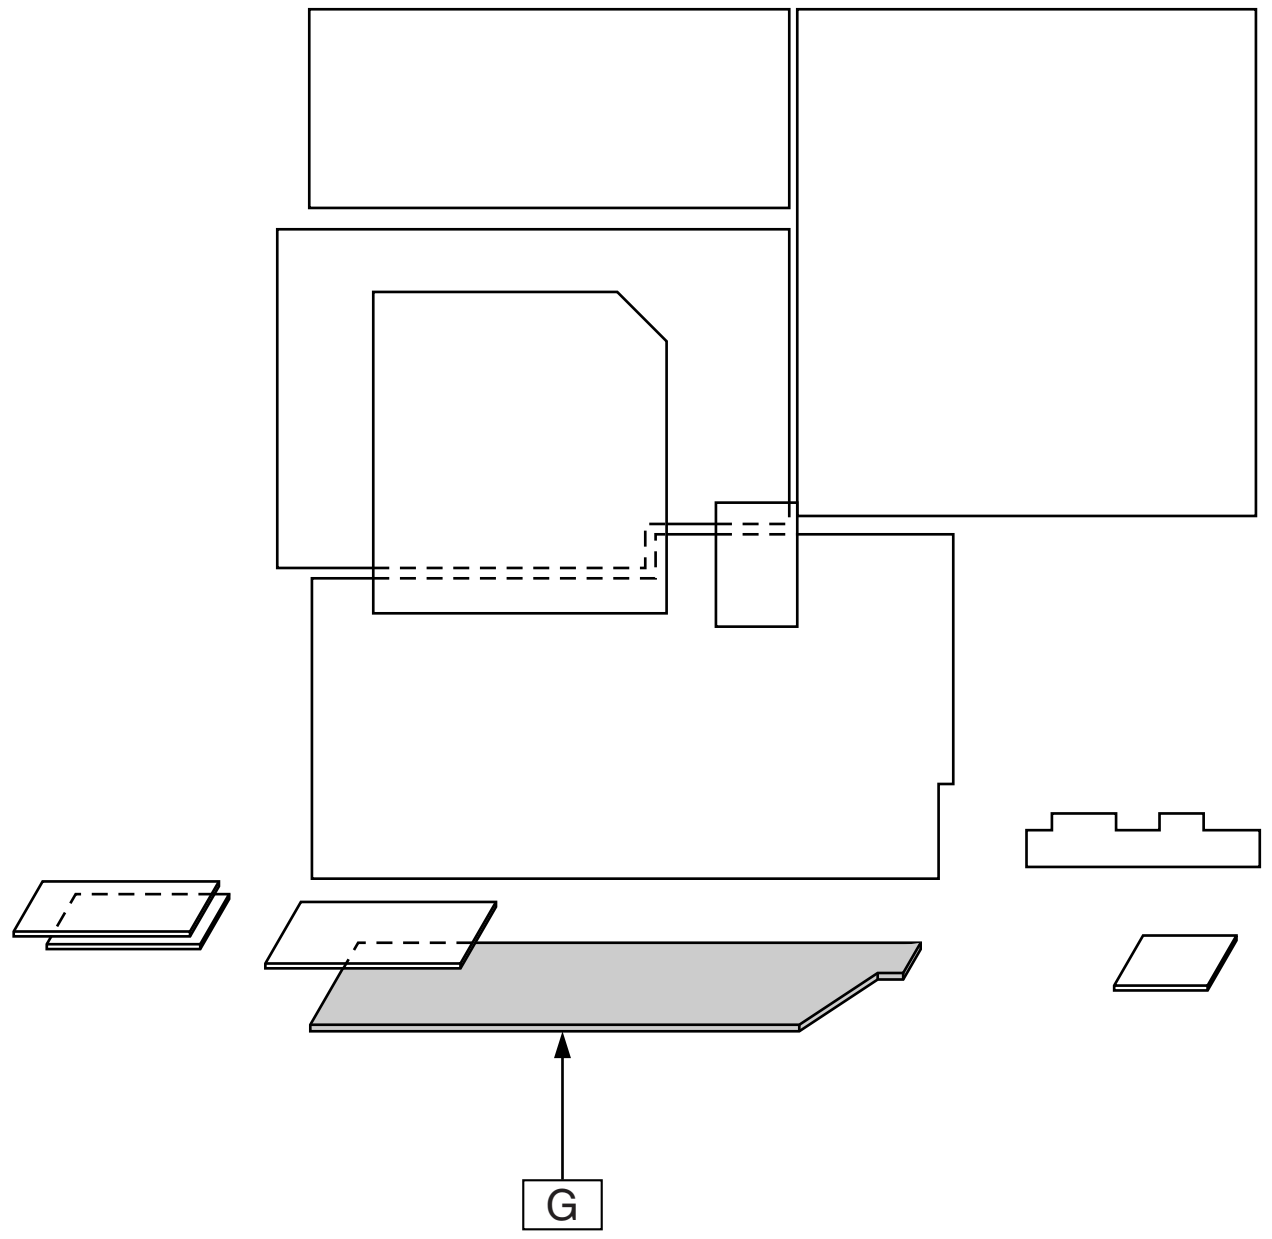

G-BOARD (COMPONENT SIDE)
TNPA3489AB

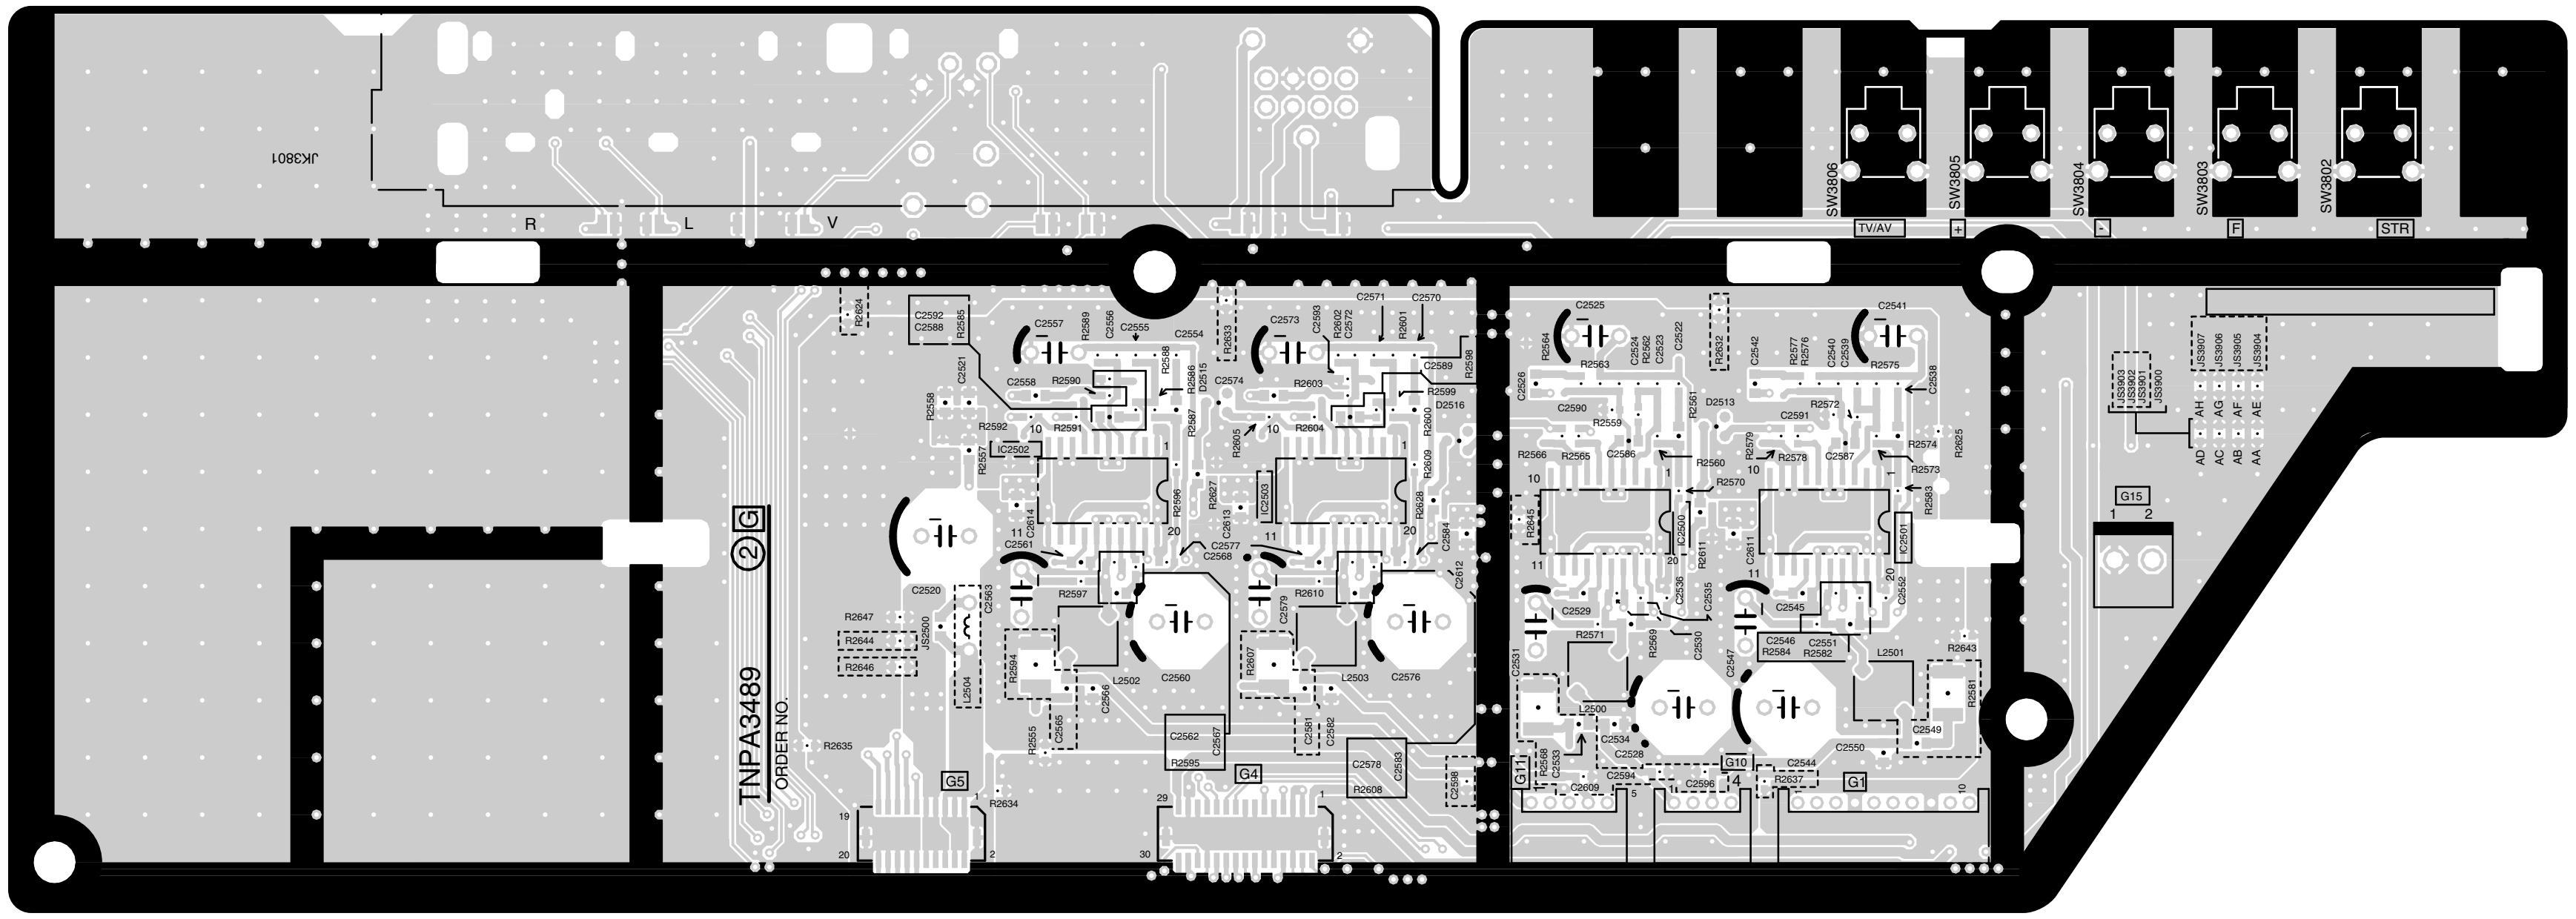
JK3801
R
L
V
SW3806
TV/AV
SW3805
+
SW3804
-
SW3803
F
SW3802
STR
② G
TNPA3489
ORDER NO.
G15
G5
G4
G11
G10
G1
L2502
L2503
L2501
C2560
C2576

Parts Location

G-BOARD					
IC		TP		TP	
IC2500	E-2	TP2509	E-5	TP2534	C-5
IC2501	E-2	TP2510	E-5	TP2535	B-5
IC2502	C-2	TP2511	E-5	TP2536	D-5
IC2503	D-2	TP2512	E-5	TP2537	C-5
		TP2513	E-5	TP3884	D-6
		TP2514	C-4	TP3885	E-5
		TP2515	C-4	TP3886	C-6
		TP2516	C-4	TP3887	B-5
		TP2517	C-4	TP3888	E-5
		TP2518	C-4	TP3889	E-6
		TP2519	C-4	TP3891	E-5
		TP2520	C-4	TP3892	E-6
		TP2521	C-4	TP3894	D-5
		TP2522	F-5	TP3900	C-4
		TP2523	D-6	TP3902	B-5
		TP2524	B-5	TP3906	E-5
		TP2525	B-6	TP3907	B-5
		TP2526	C-6	TP3908	C-6
		TP2527	D-5	TP3910	C-4
		TP2528	B-5	TP3992	E-4
		TP2529	C-6	TP3995	C-4
		TP2530	D-5	TP3996	B-4
		TP2531	A-5	TP3997	B-4
		TP2532	D-6	TP3998	B-4
		TP2533	C-5	TP3999	C-4

TX-26/32LXD500
TX-26/32LX500F/P
G-BOARD TNPA3489AB

H-BOARD (COMPONENT SIDE)
TXN/H10LLM (TX-26/32LXD500)
TXN/H10LMM (TX-26/32LX500F/P)

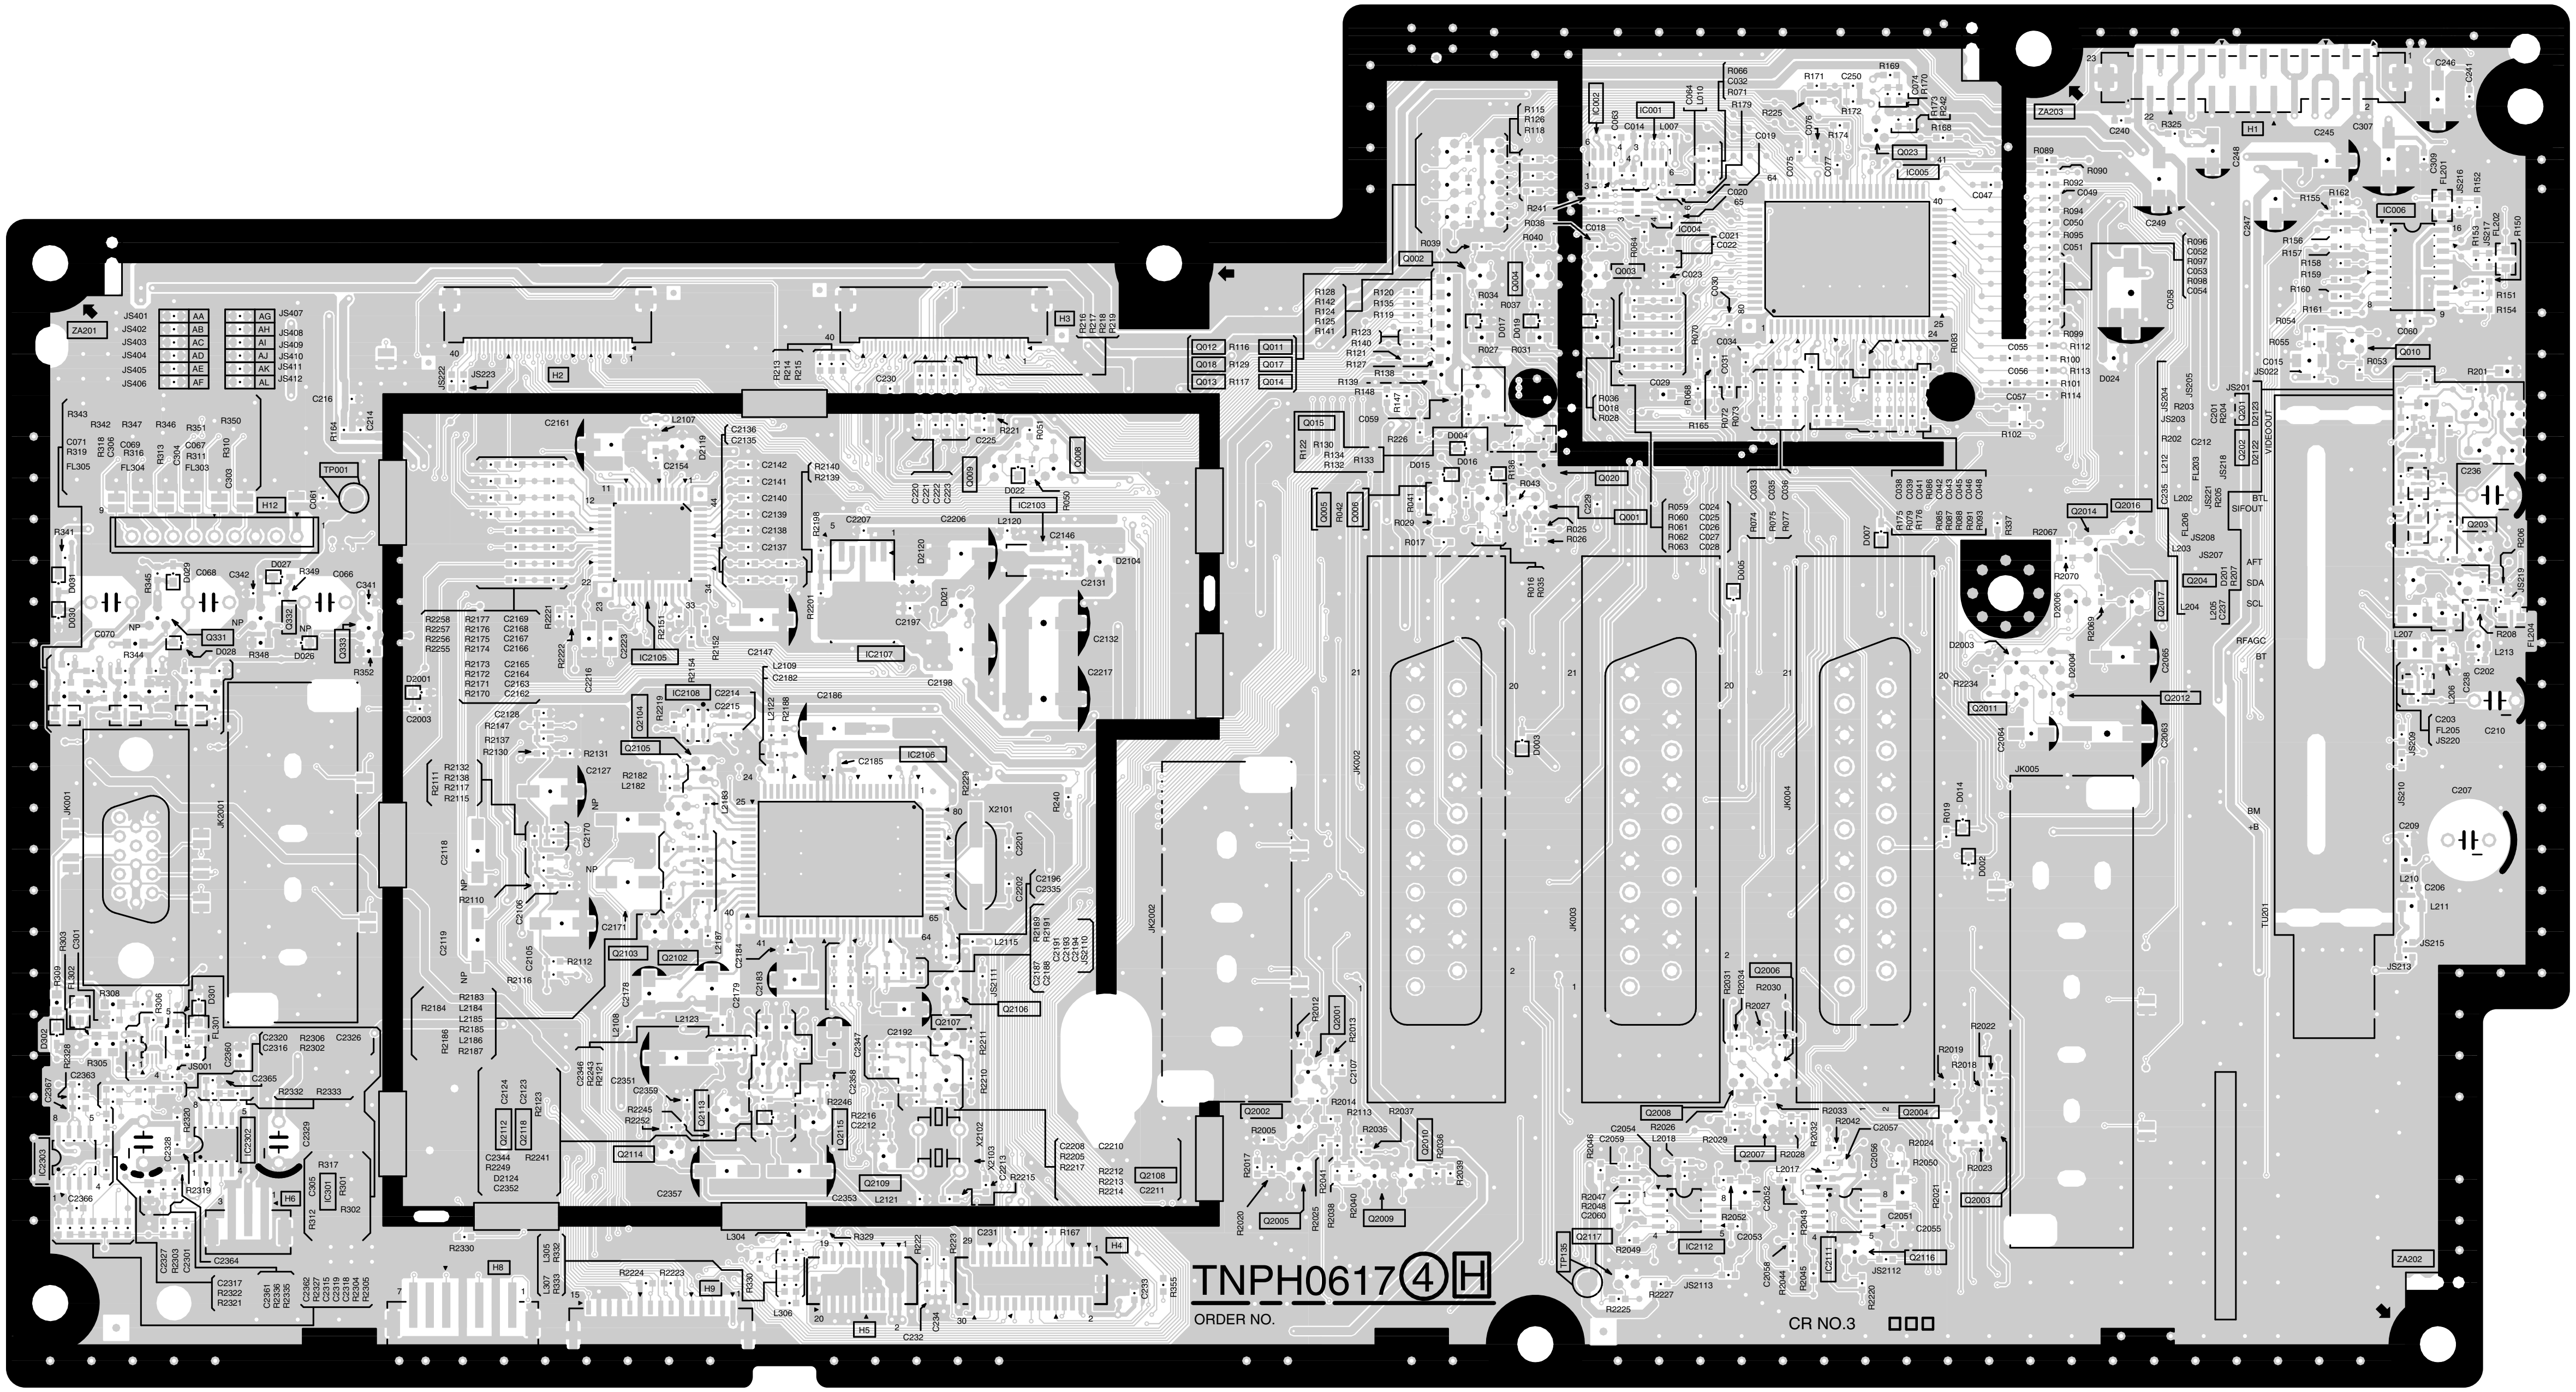
TNPH0617 ④ H
ORDER NO.
CR NO.3
IC2101
IC2105
IC2106
IC2107
IC2108
IC001
IC005
IC006
JK001
JK002
JK003
JK004
JK005
JK2002
JK3001
ZA201
ZA202
ZA203
6
5
4
3
2
1
A
B
C
D
E
F
G
H
I

H-BOARD (FOIL SIDE)
TNH/H10LLM (TX-26/32LXD500)
TNH/H10LMM (TX-26/32LX500F/P)

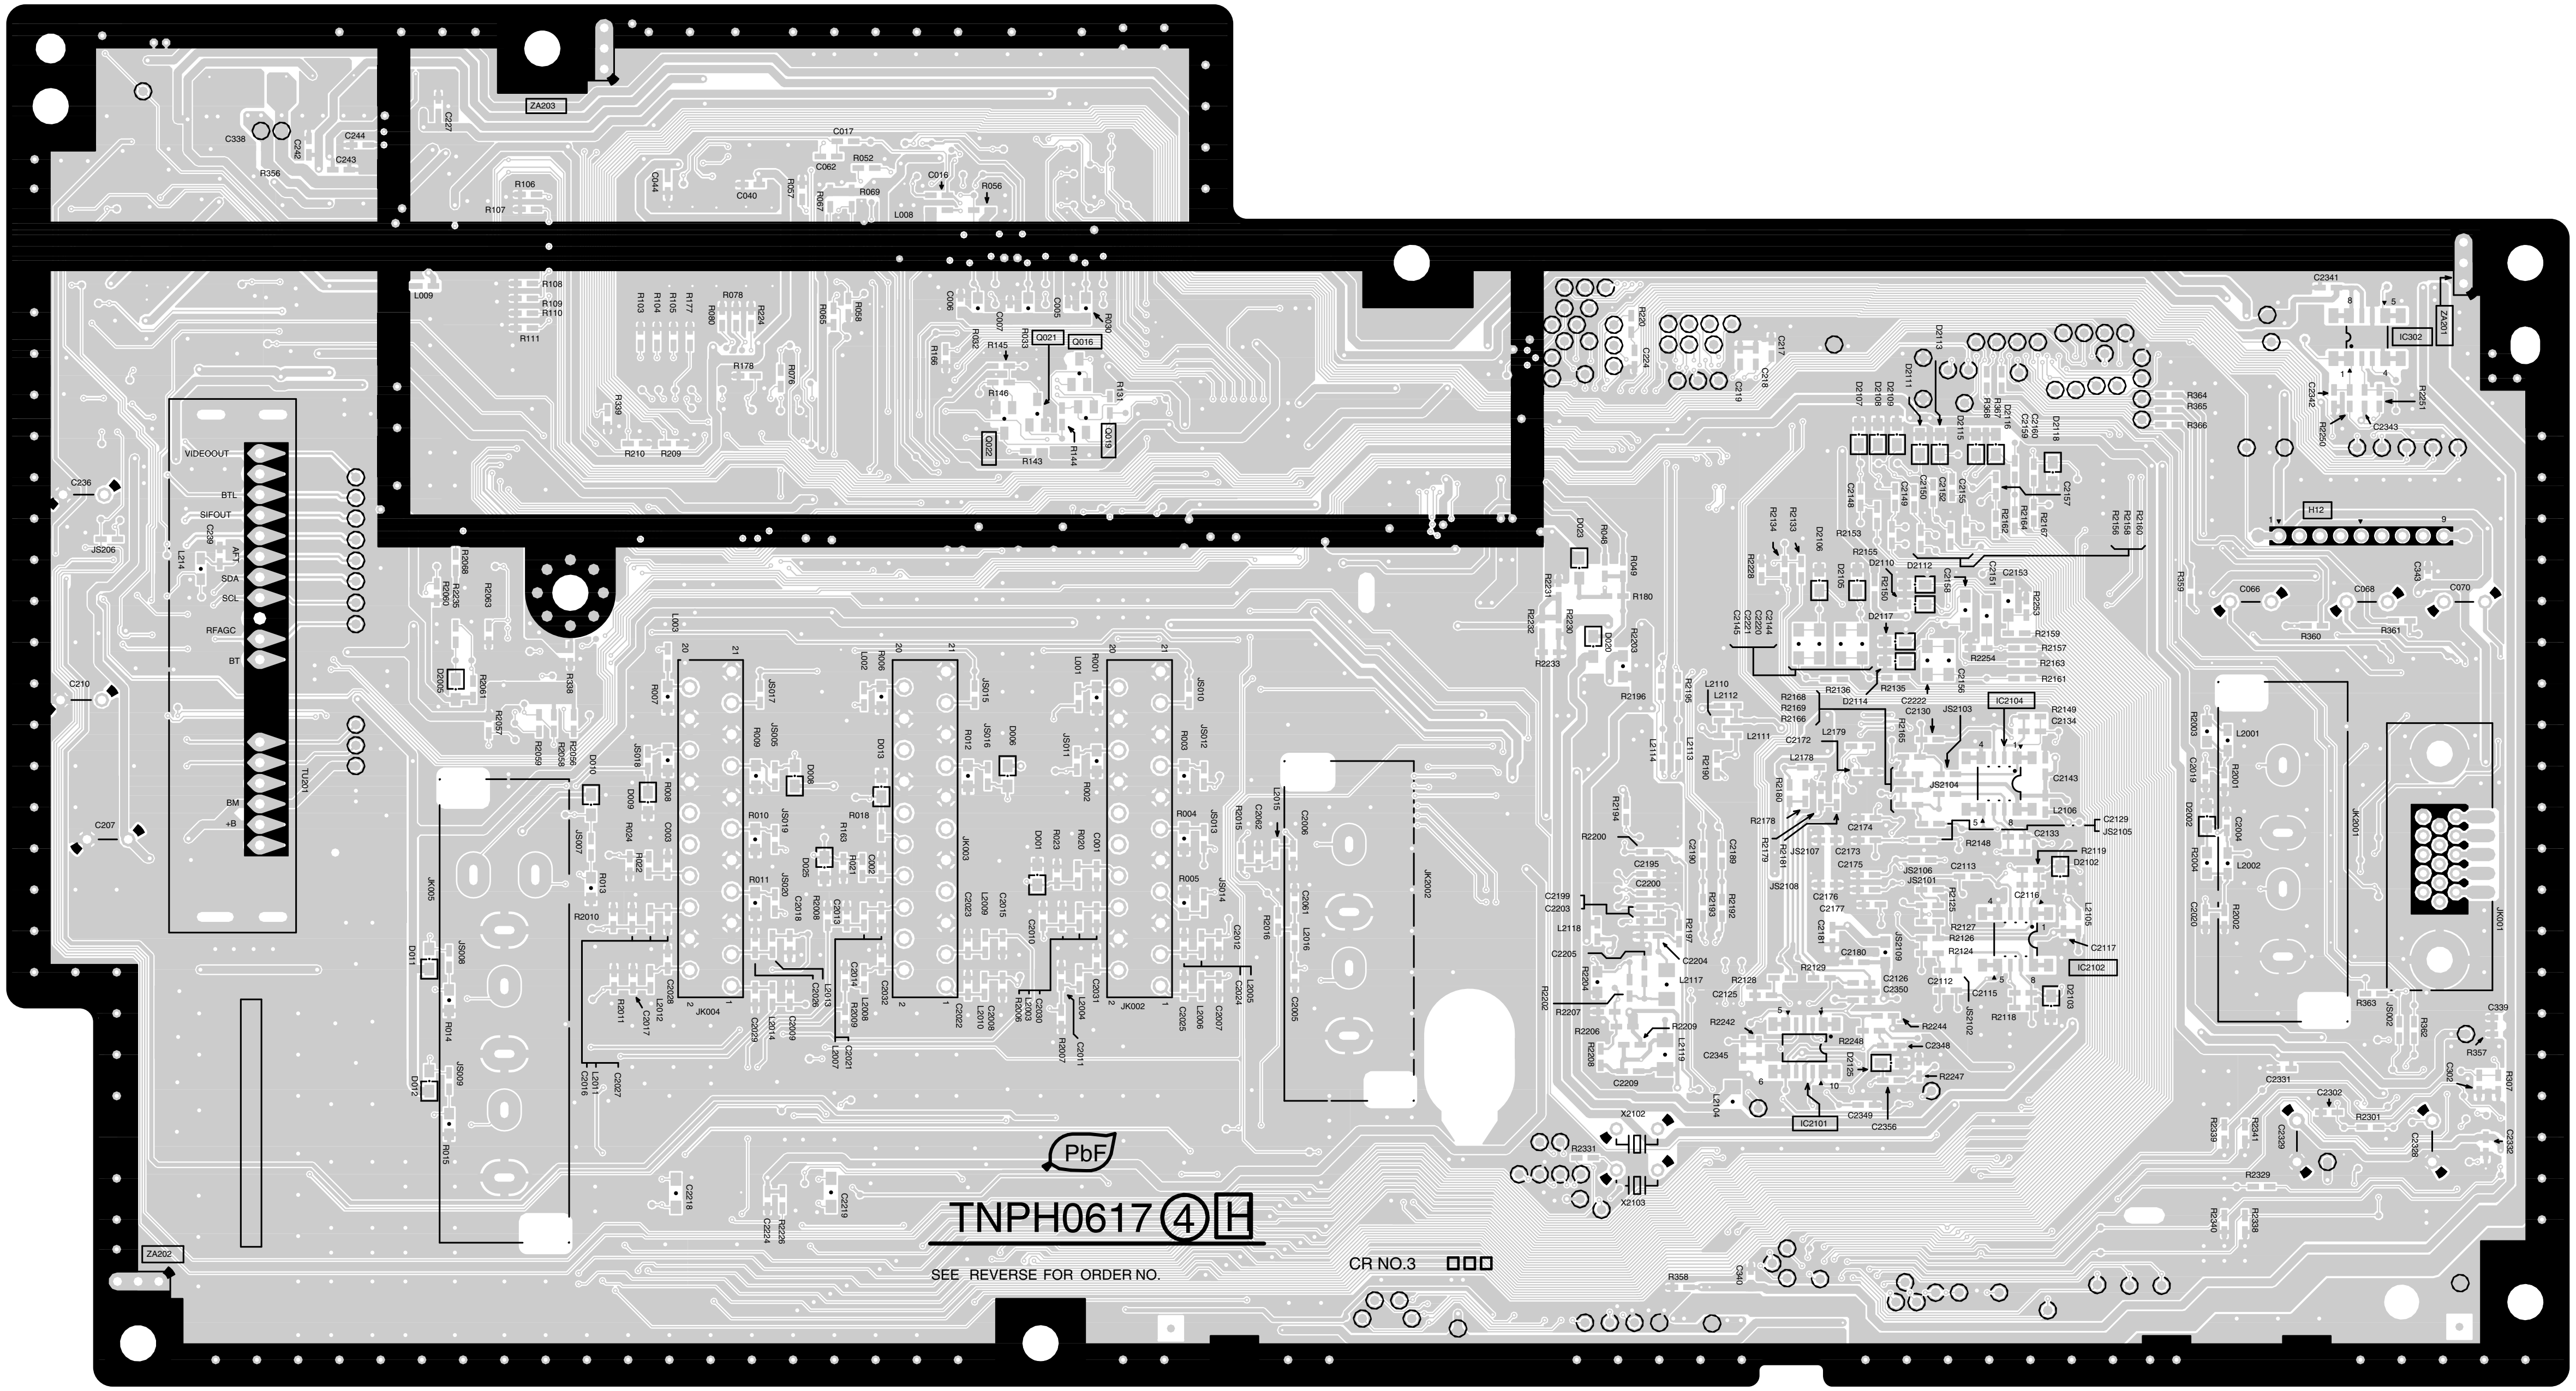
ZA203
ZA202
H12
IC302
IC2101
IC2102
IC2104
JK002
JK003
JK004
JK005
JK2001
JK2002
TU201
VIDEOOUT
BTL
SIFOUT
AFT
SDA
SCL
RFAGC
BT
BM
+B
PbF
TNPH0617 4 H
SEE REVERSE FOR ORDER NO.
CR NO.3

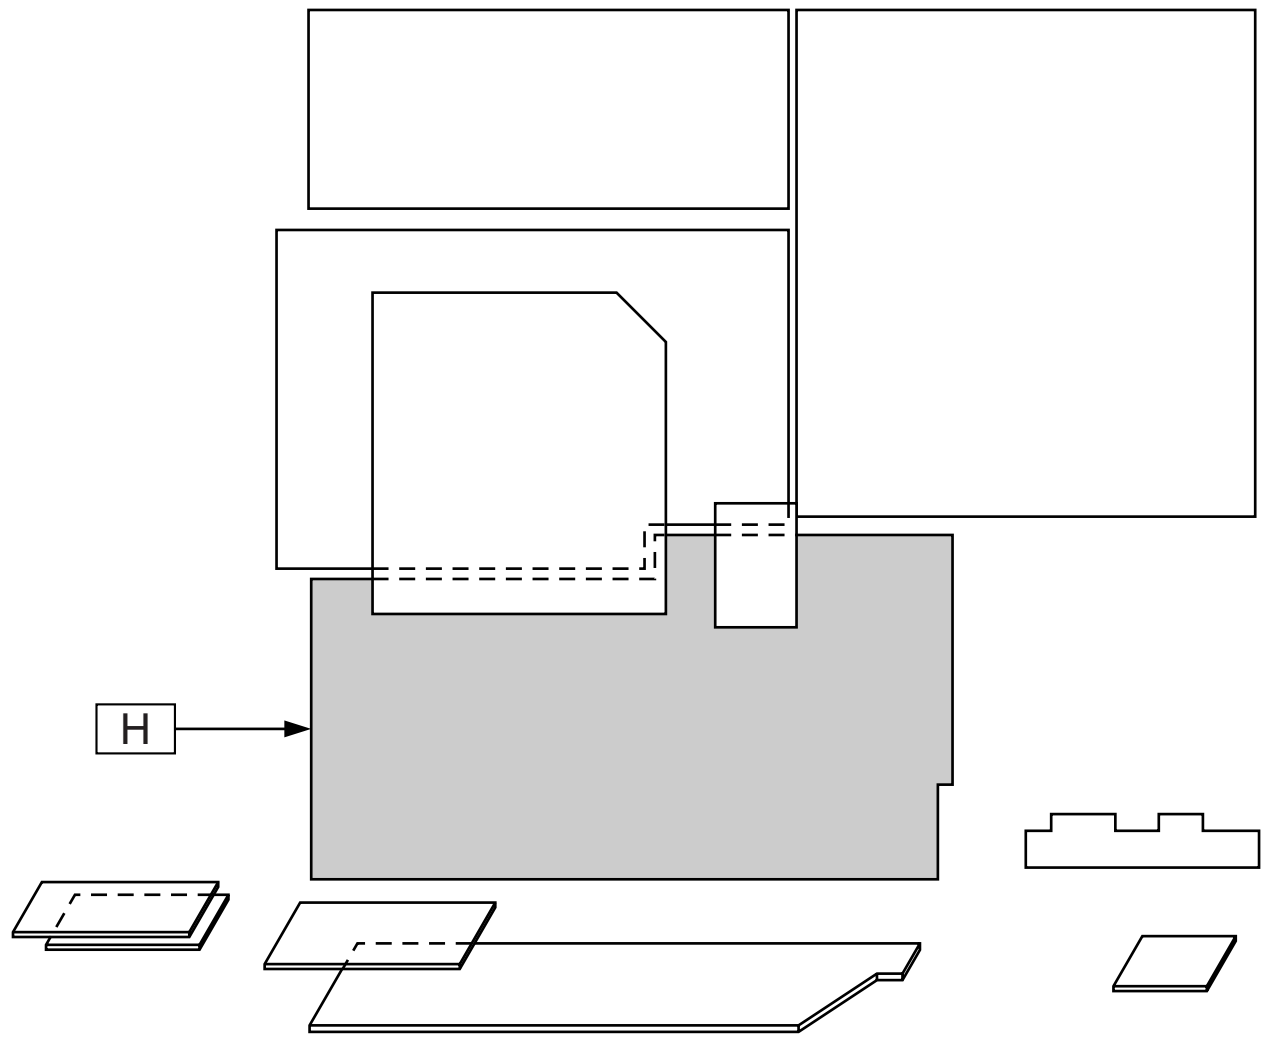

Parts Location

H-BOARD (FOIL SIDE)			
IC		**TRANSISTOR**	
IC2101	F-2	Q3016	D-4
IC2102	G-2	Q3019	D-4
IC2104	G-3	Q3021	D-4
IC3302	H-4	Q3022	D-4

Parts Location

H-BOARD (COMPONENT SIDE)					
IC		**TRANSISTOR**		**TRANSISTOR**	
IC2103	D-4	Q2001	E-2	Q3002	E-4
IC2105	C-3	Q2002	E-2	Q3003	F-4
IC2106	C-3	Q2003	G-1	Q3004	E-4
IC2107	C-3	Q2004	G-2	Q3005	E-4
IC2108	D-3	Q2005	E-1	Q3006	E-4
IC2111	F-1	Q2006	F-2	Q3008	D-4
IC2112	F-1	Q2007	F-2	Q3009	D-4
IC2302	B-2	Q2008	F-2	Q3010	H-4
IC2303	A-2	Q2009	E-1	Q3011	E-4
IC3001	F-5	Q2010	E-2	Q3012	D-4
IC3002	F-5	Q2011	G-3	Q3013	D-4
IC3004	F-4	Q2012	G-3	Q3014	E-4
IC3005	G-5	Q2014	G-4	Q3015	E-4
IC3006	H-4	Q2016	G-4	Q3017	E-4
IC3301	B-1	Q2017	G-3	Q3018	D-4
		Q2102	C-2	Q3020	F-4
		Q2103	C-2	Q3023	G-5
		Q2104	C-3	Q3201	H-4
		Q2105	C-3	Q3202	H-4
		Q2106	D-2	Q3203	H-3
		Q2107	D-2	Q3204	G-3
		Q2108	D-2	Q3331	A-3
		Q2109	C-1	Q3332	B-3
		Q2112	B-2	Q3333	B-3
		Q2113	C-2		
		Q2114	C-2	**TP**	
		Q2115	C-2		
		Q2116	G-1	TP001	B-4
		Q2117	F-1	TP135	F-1
		Q2118	B-2		
		Q3001	F-4		

K-BOARD (FOIL SIDE)
TNPA3492AB

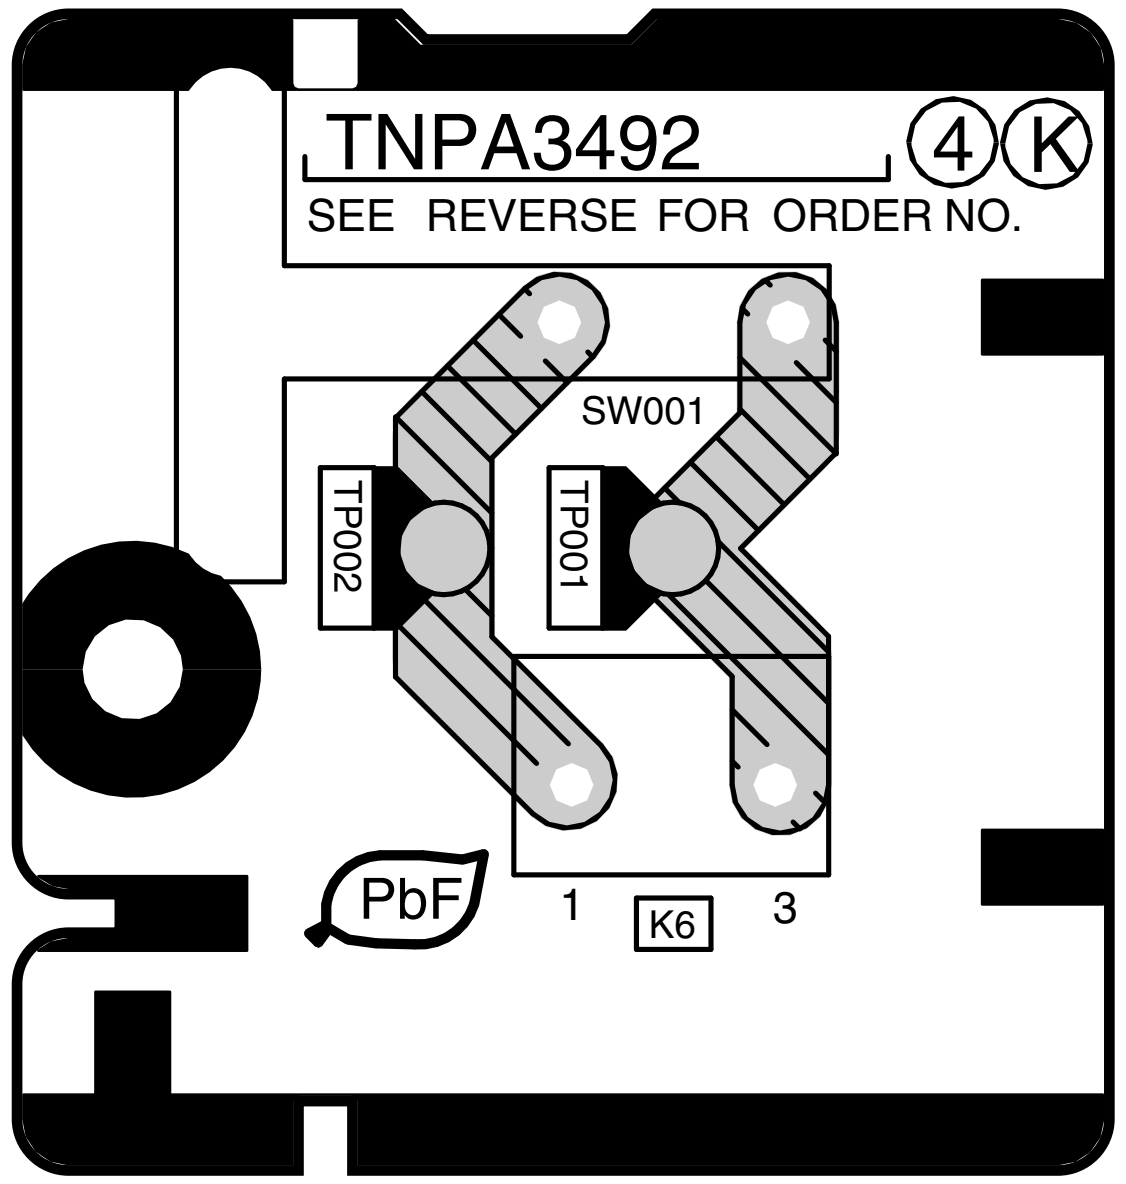
TNPA3492
④Ⓚ
SEE REVERSE FOR ORDER NO.
SW001
TP002
TP001
PbF
1
K6
3

Parts Location

K-BOARD	
TP	
TP001	B-5
TP002	A-4

Parts Location

V-BOARD			
TRANSISTOR		TP	
Q1001	F-4	TP1001	G-4
Q1003	D-4	TP1002	E-4
		TP1003	G-4
		TP1004	H-4
		TP1005	E-4
		TP1006	E-4
		TP1007	E-4
		TP1009	D-4
		TP1010	H-4
		TP1011	E-4
		TP1012	H-4
		TP1013	D-4

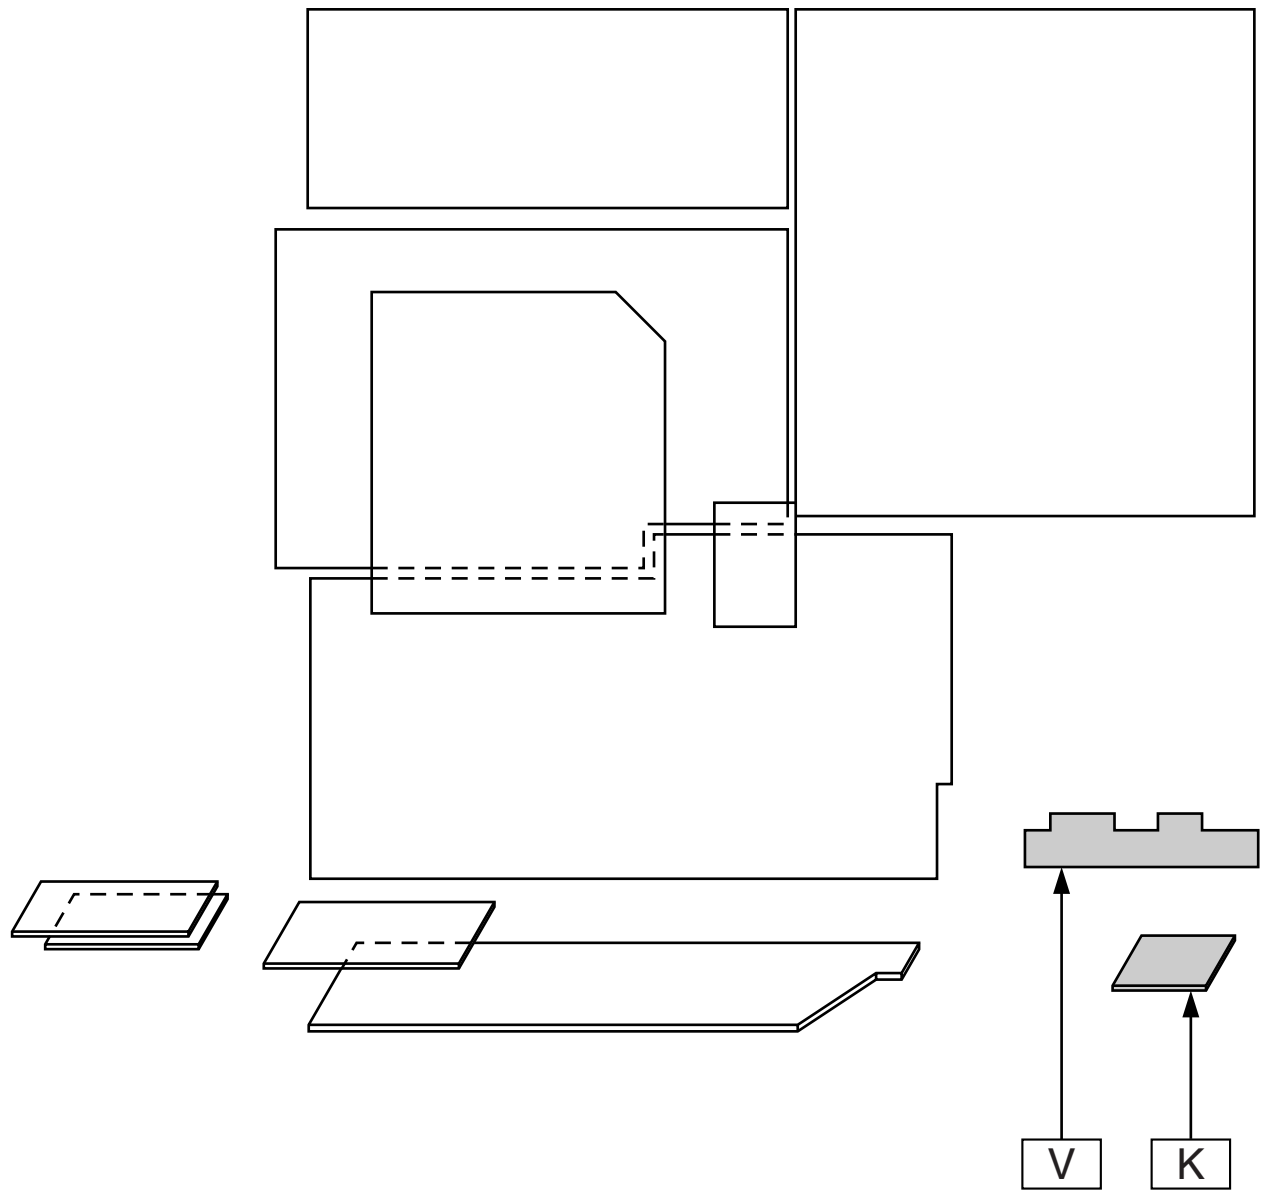

V-BOARD (FOIL SIDE)
TNPA3490AC (TX-26/32LXD500)
TNPA3490AD (TX-26/32LX500F/P)

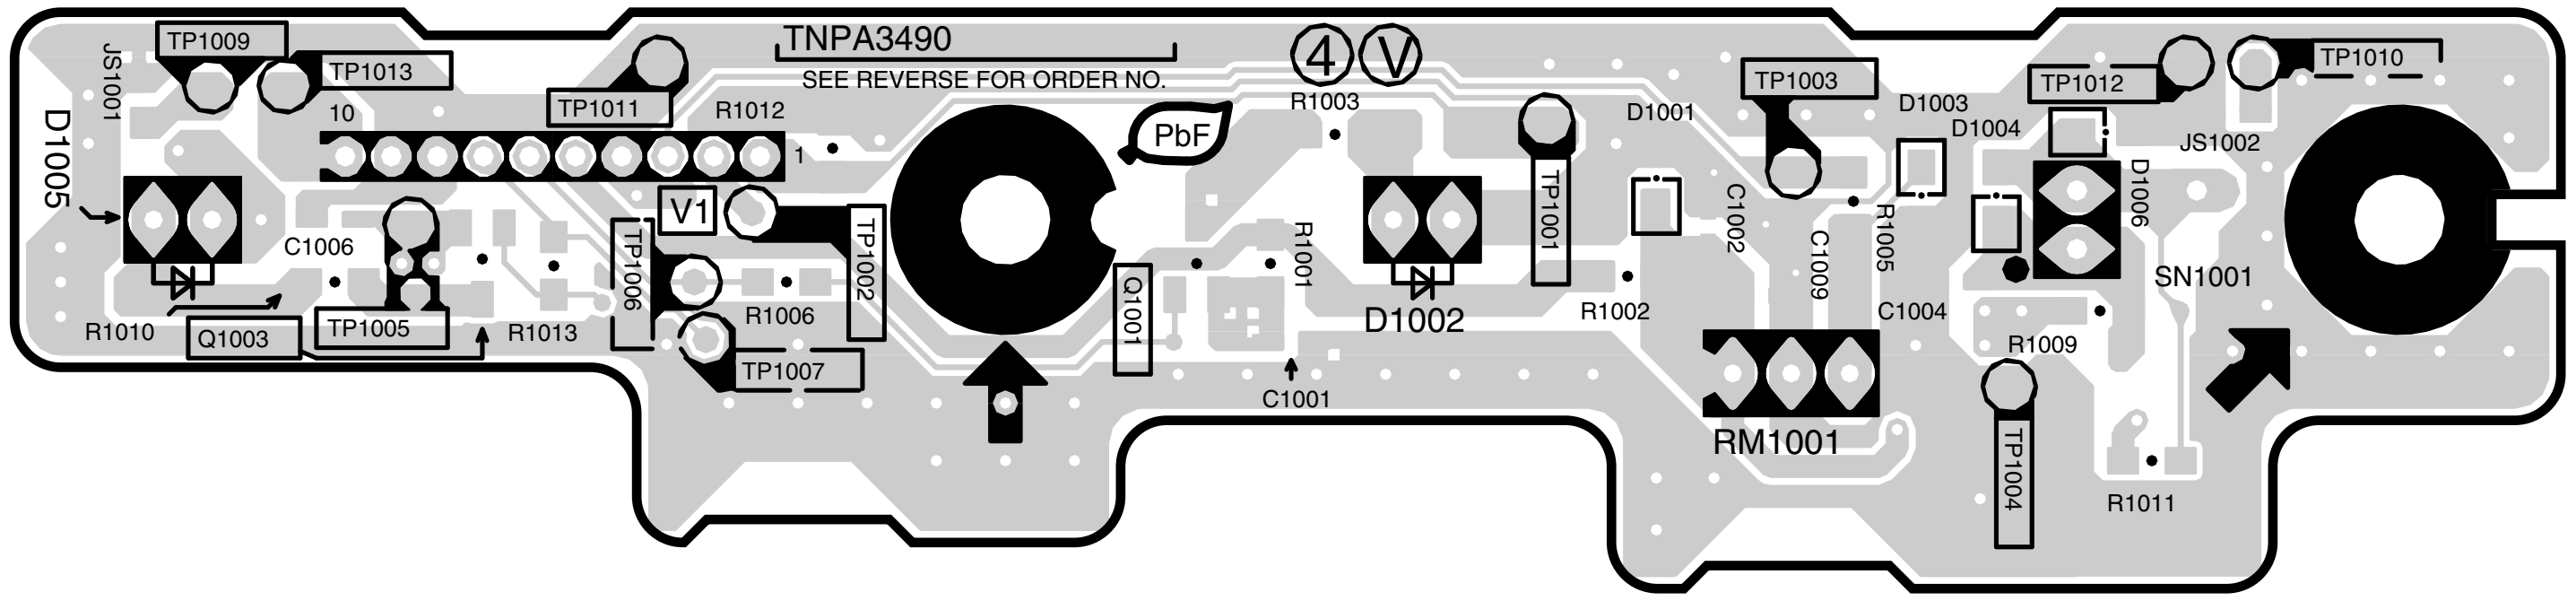
TP1009
JS1001
TP1013
D1005
10
TP1011
R1012
TNPA3490
SEE REVERSE FOR ORDER NO.
④Ⓥ
R1003
PbF
1
V1
C1006
TP1006
TP1002
R1001
Q1001
R1006
R1010
Q1003
TP1005
R1013
TP1007
C1001
D1002
TP1001
D1001
TP1003
R1002
C1002
C1009
R1005
D1003
D1004
C1004
RM1001
R1009
TP1004
TP1012
TP1010
JS1002
D1006
SN1001
R1011

K-BOARD (COMPONENT SIDE)
TNPA3492AB

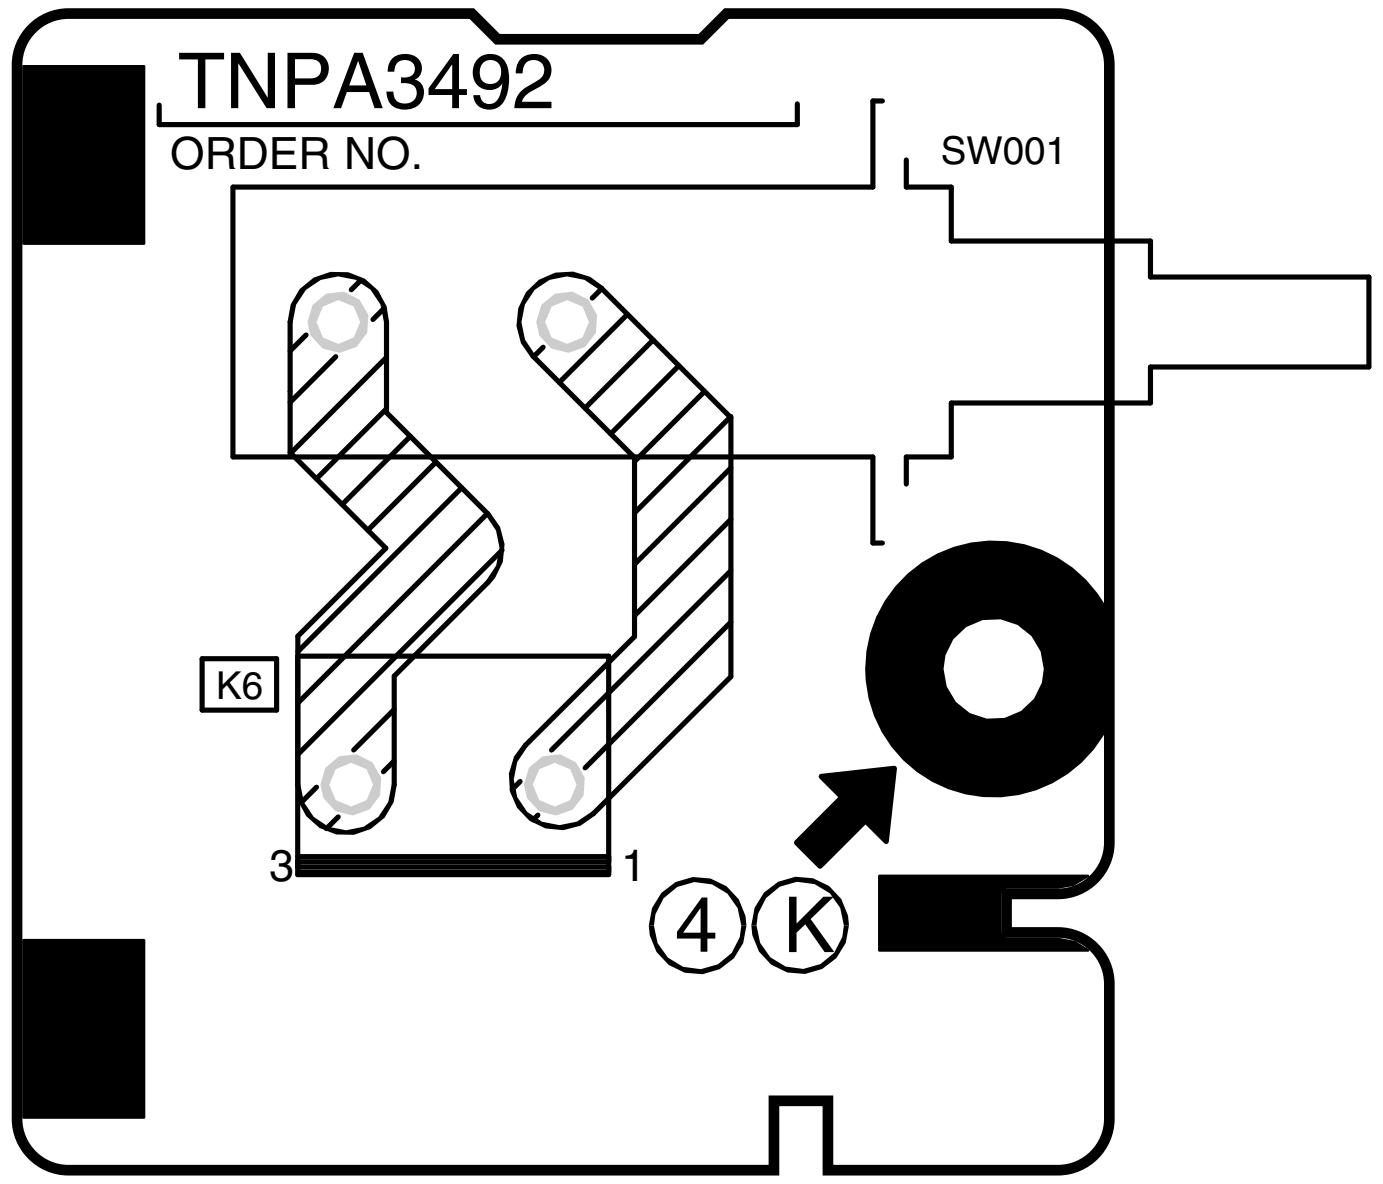
TNPA3492
ORDER NO.
SW001
K6
3
1
④Ⓚ

V-BOARD (COMPONENT SIDE)
TNPA3490AC (TX-26/32LXD500)
TNPA3490AD (TX-26/32LX500F/P)

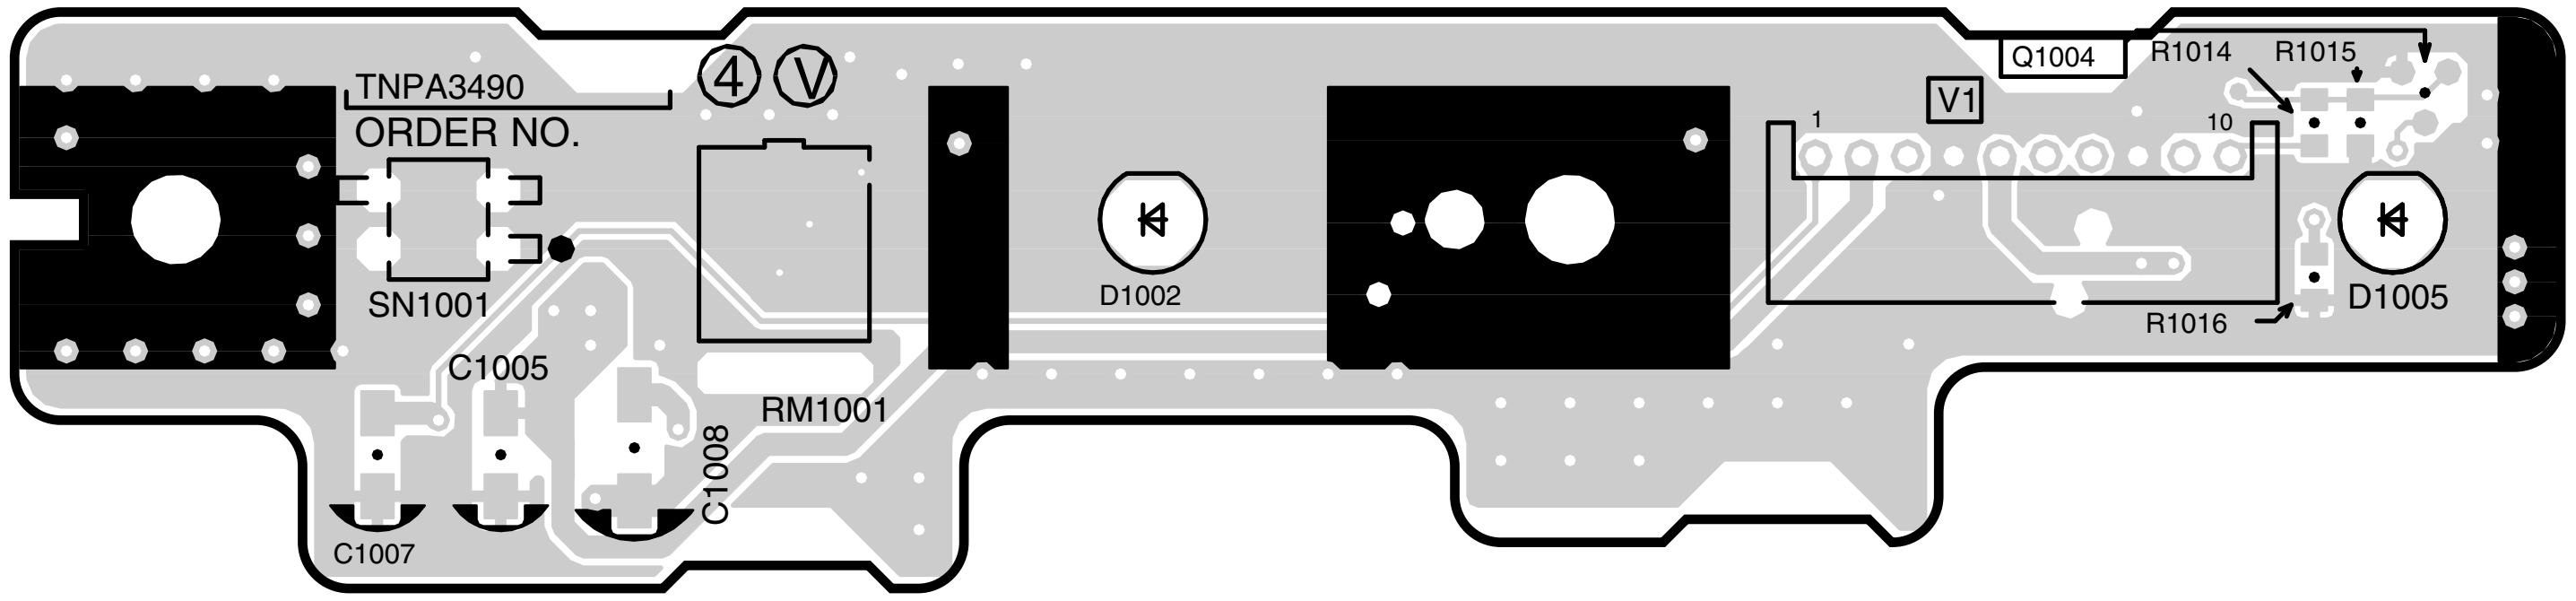
TNPA3490
ORDER NO.
④Ⓥ
SN1001
C1005
C1007
C1008
RM1001
D1002
Q1004
R1014
R1015
V1
1
10
R1016
D1005

TX-26/32LXD500
TX-26/32LX500F/P K-BOARD TNPA3492AB
TX-26/32LXD500 V-BOARD TNPA3490AC
TX-26/32LX500F/P V-BOARD TNPA3490AD

XV-BOARD (COMPONENT SIDE)
TNP0EXV01AD

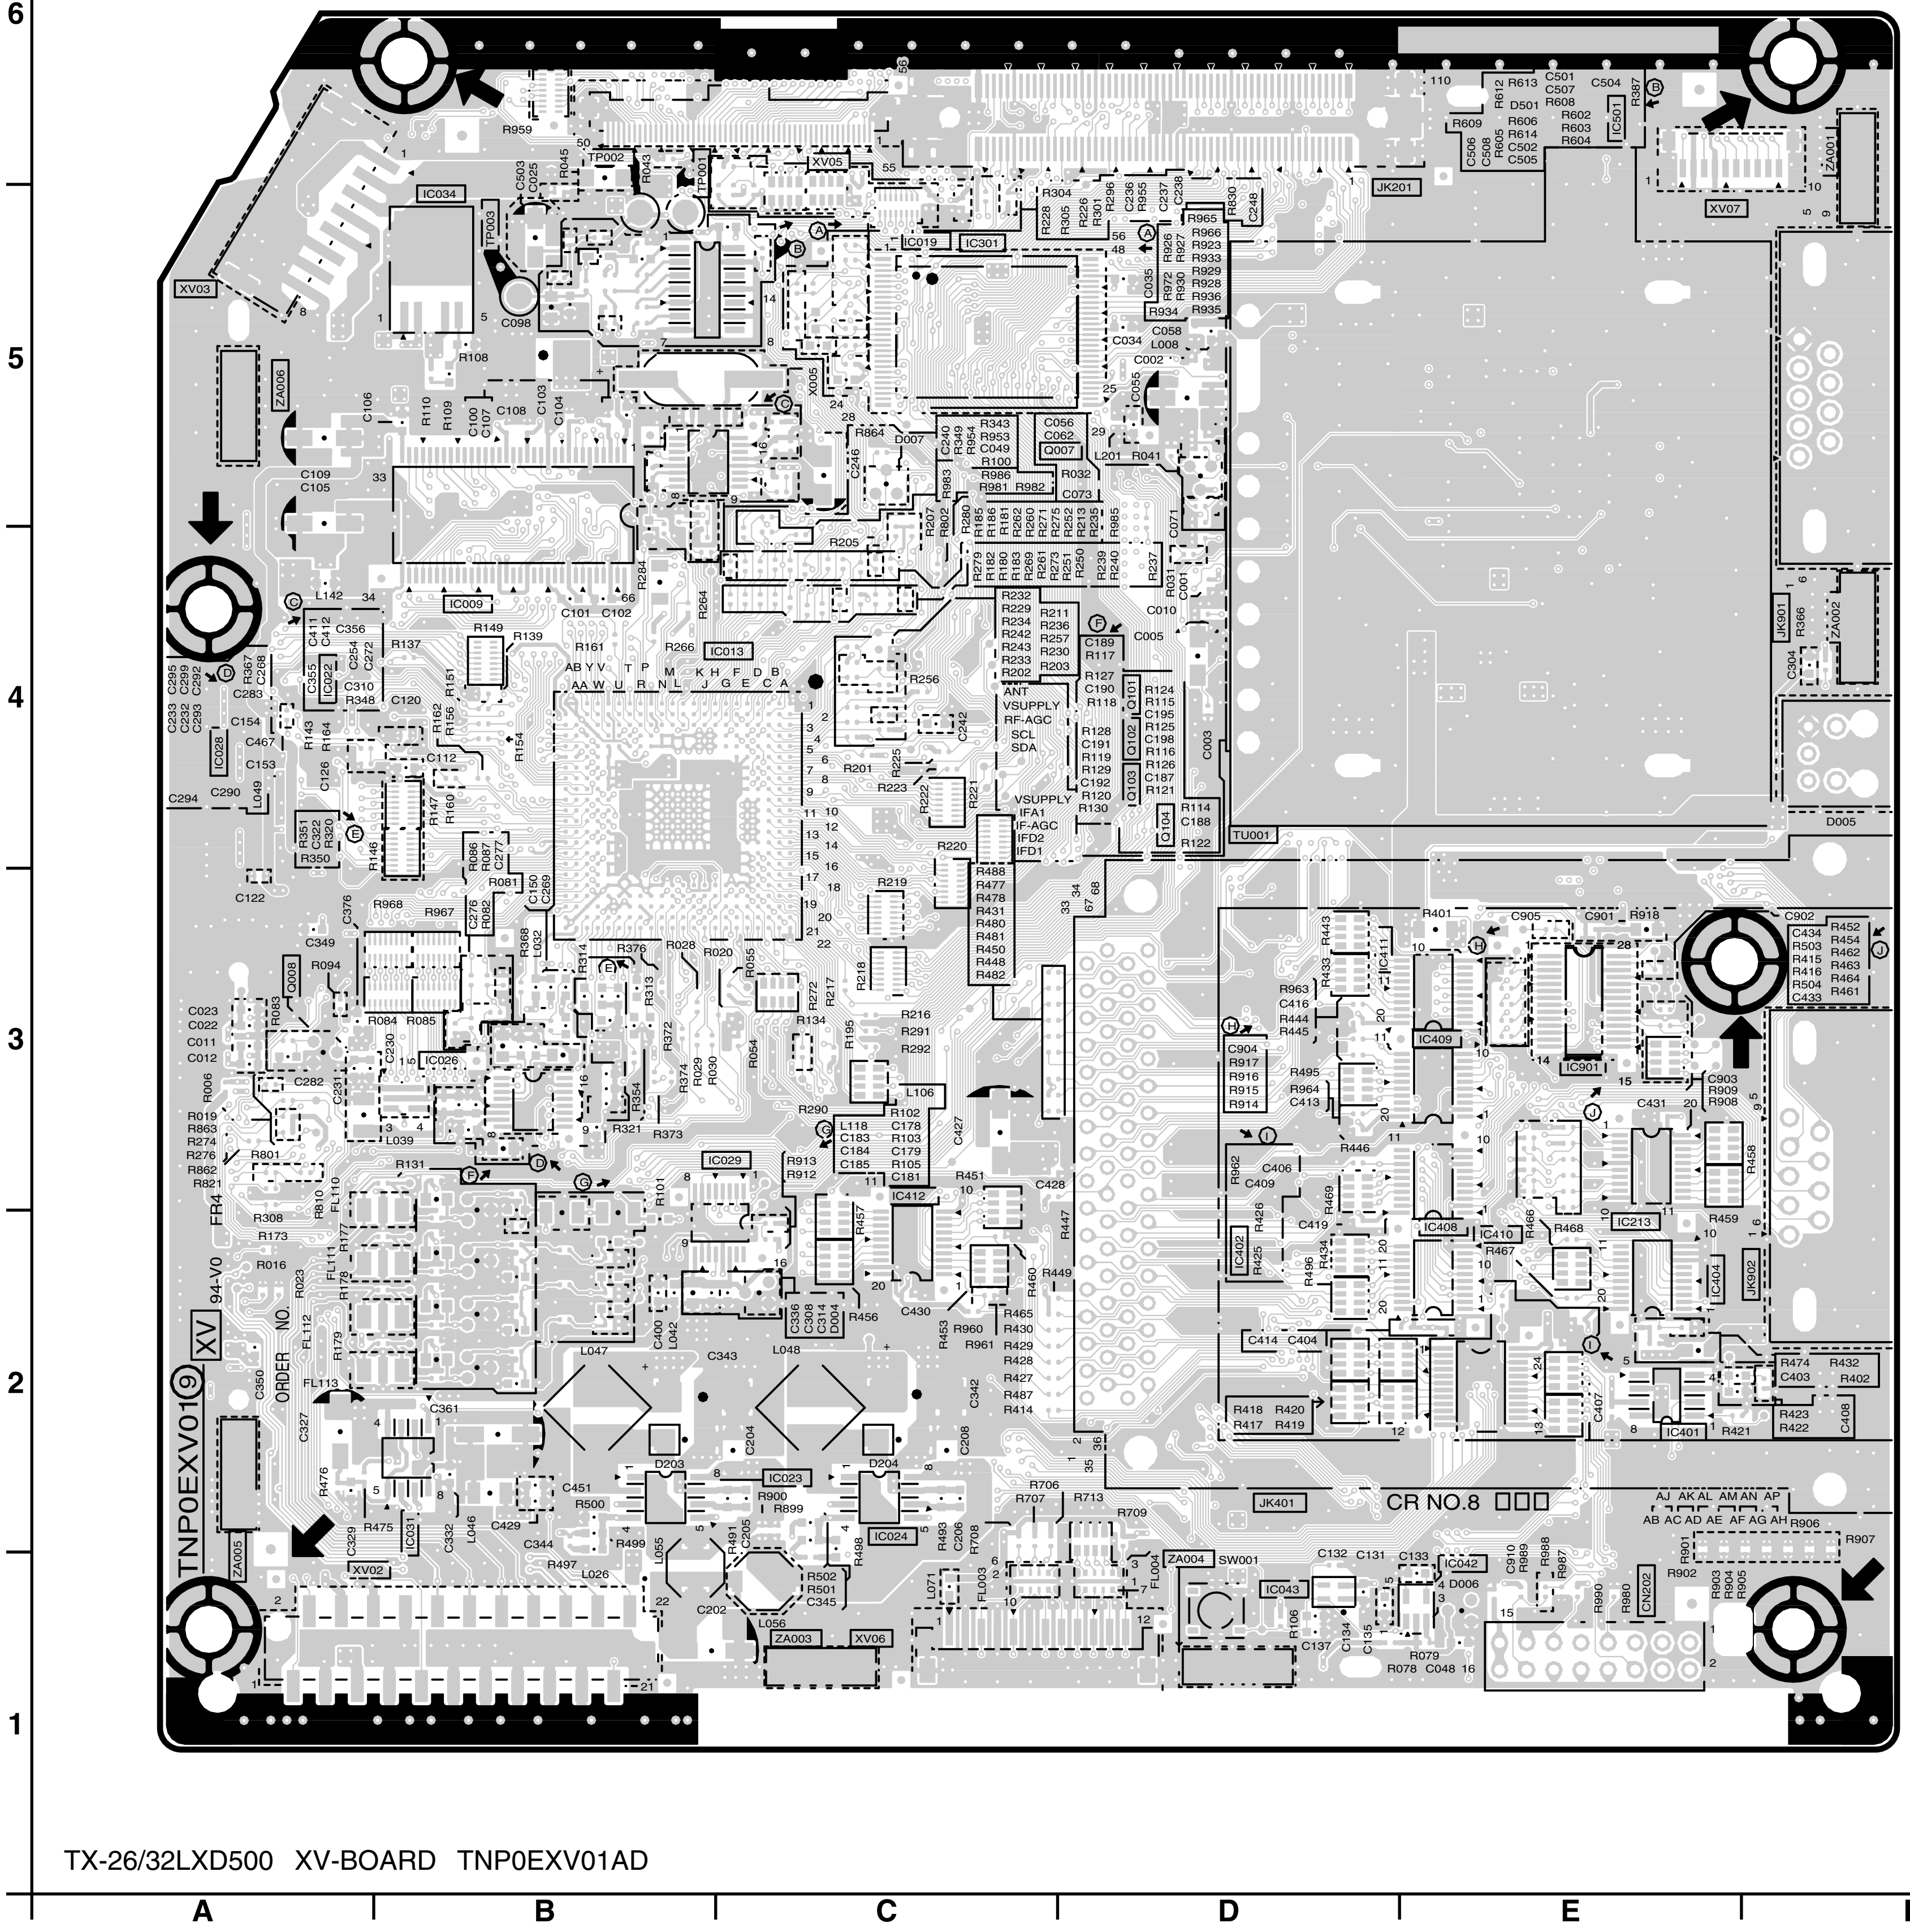
6
5
4
3
2
1
A
B
C
D
E
F
G
H
I
TNP0EXV01⑨
XV 94-V0
ORDER NO.
FR4
CR NO.8
IC034
IC009
IC013
IC022
IC028
IC026
IC029
IC019
IC301
IC412
IC023
IC024
IC031
IC409
IC411
IC901
IC213
IC408
IC410
IC402
IC404
IC401
IC042
IC043
IC501
XV03
XV05
XV07
XV02
XV06
JK201
JK401
JK901
JK902
ZA001
ZA002
ZA003
ZA004
ZA005
ZA006
TU001
TP001
TP002
TP003
SW001
CN202
D005
Q007
Q008
Q101
Q102
Q103
Q104

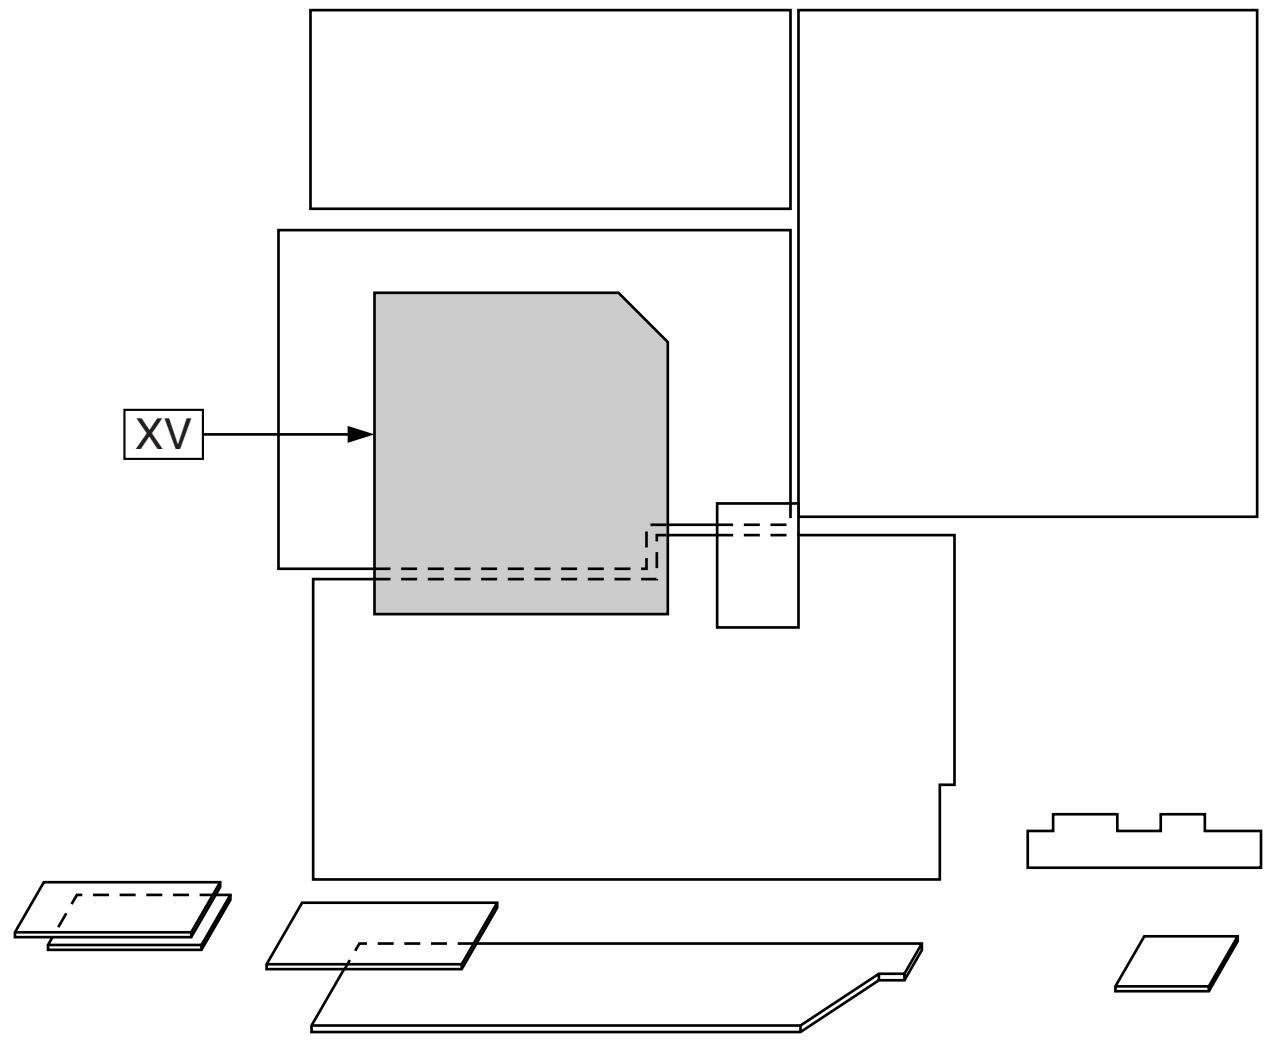

Parts Location

XV-BOARD (COMPONENT SIDE)			
IC		TRANSISTOR	
IC8009	B-4	Q8007	C-5
IC8013	C-4	Q8008	A-3
IC8019	C-5	Q8101	D-4
IC8022	A-4	Q8102	D-4
IC8023	C-2	Q8103	D-4
IC8024	C-2	Q8104	D-4
IC8026	B-3		
IC8028	A-4	TP001	B-6
IC8029	C-3	TP002	B-6
IC8031	B-2	TP003	B-5
IC8034	B-5		
IC8042	E-1		
IC8043	D-1		
IC8213	E-2		
IC8301	C-5		
IC8401	E-2		
IC8402	D-2		
IC8404	E-2		
IC8408	E-2		
IC8409	E-3		
IC8410	E-2		
IC8411	D-3		
IC8412	C-3		
IC8501	E-6		
IC8901	E-3		

XV-BOARD (FOIL SIDE)
TNP0EXV01AD

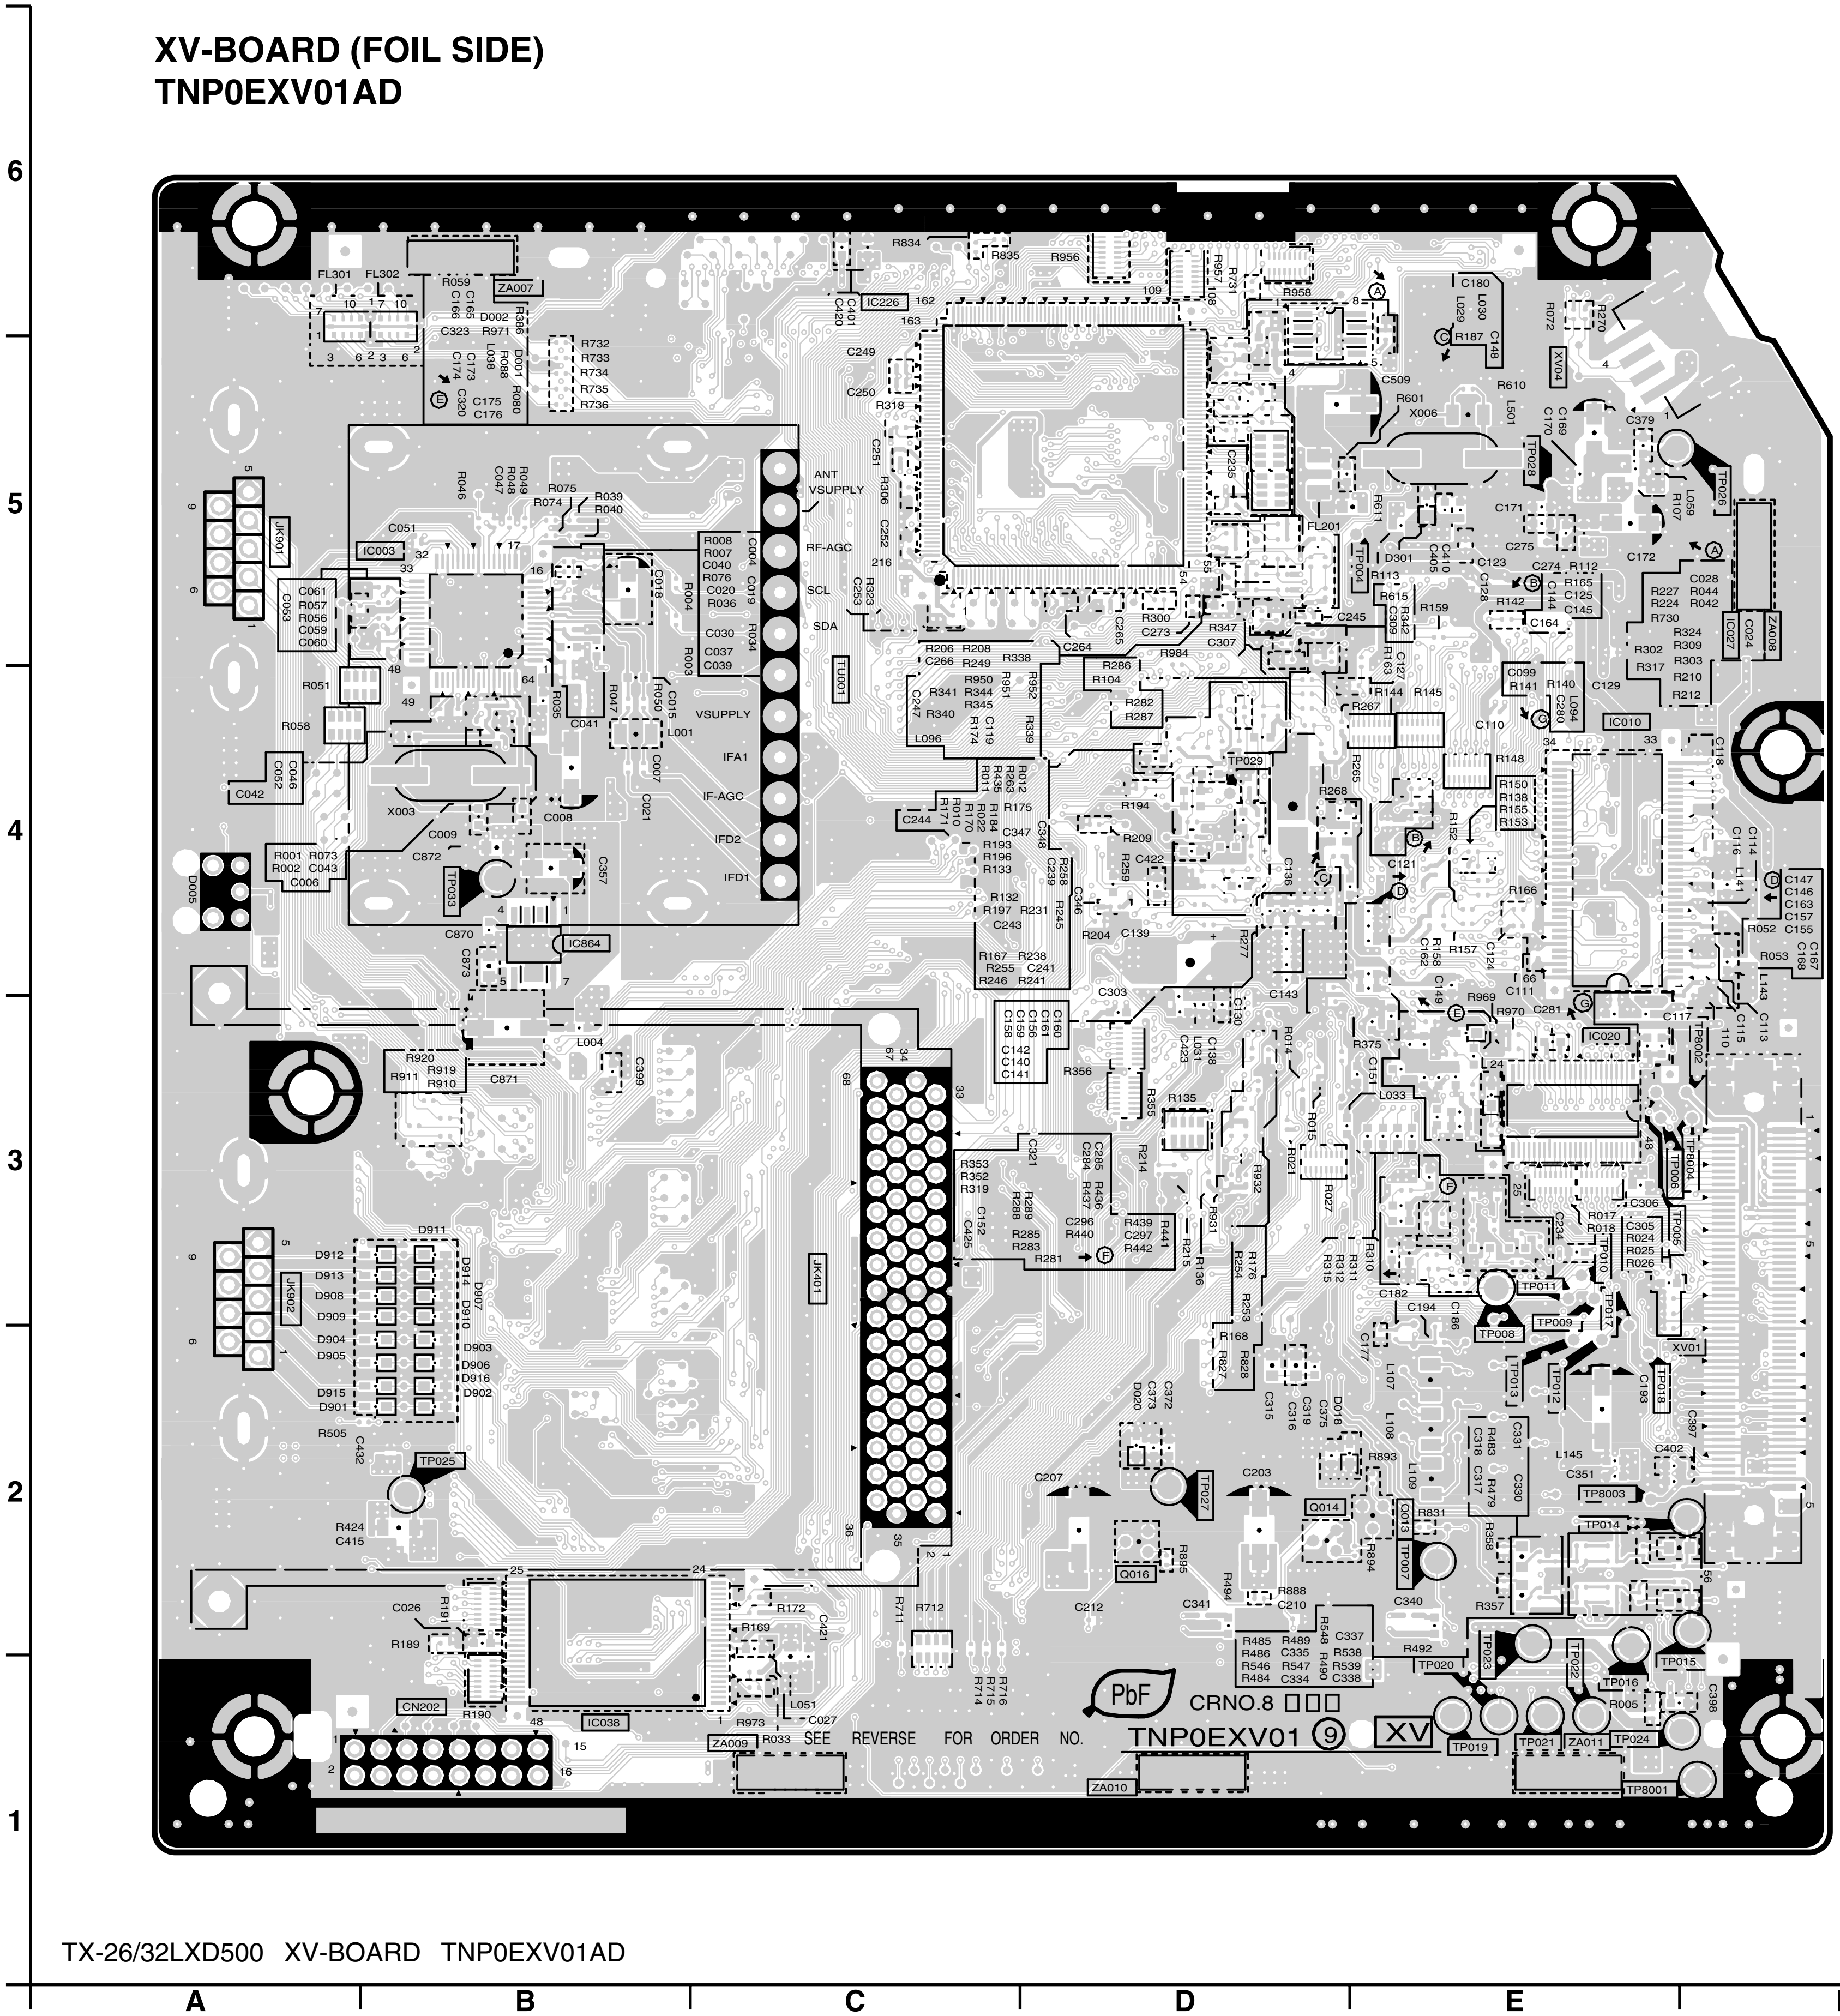

6
5
4
3
2
1
A
B
C
D
E
F
G
H
I
ANT
VSUPPLY
RF-AGC
SCL
SDA
VSUPPLY
IFA1
IF-AGC
IFD2
IFD1
JK901
JK902
JK401
TU001
IC003
IC864
IC226
IC010
IC020
IC027
IC038
CN202
ZA007
ZA008
ZA009
ZA010
ZA011
XV01
XV04
TP004
TP005
TP006
TP007
TP008
TP009
TP010
TP011
TP012
TP013
TP014
TP015
TP016
TP017
TP018
TP019
TP020
TP021
TP022
TP023
TP024
TP025
TP026
TP027
TP028
TP029
TP033
TP8001
TP8002
TP8003
TP8004
Q014
Q016
SEE REVERSE FOR ORDER NO.
PbF
CRNO.8
TNP0EXV01
9
XV

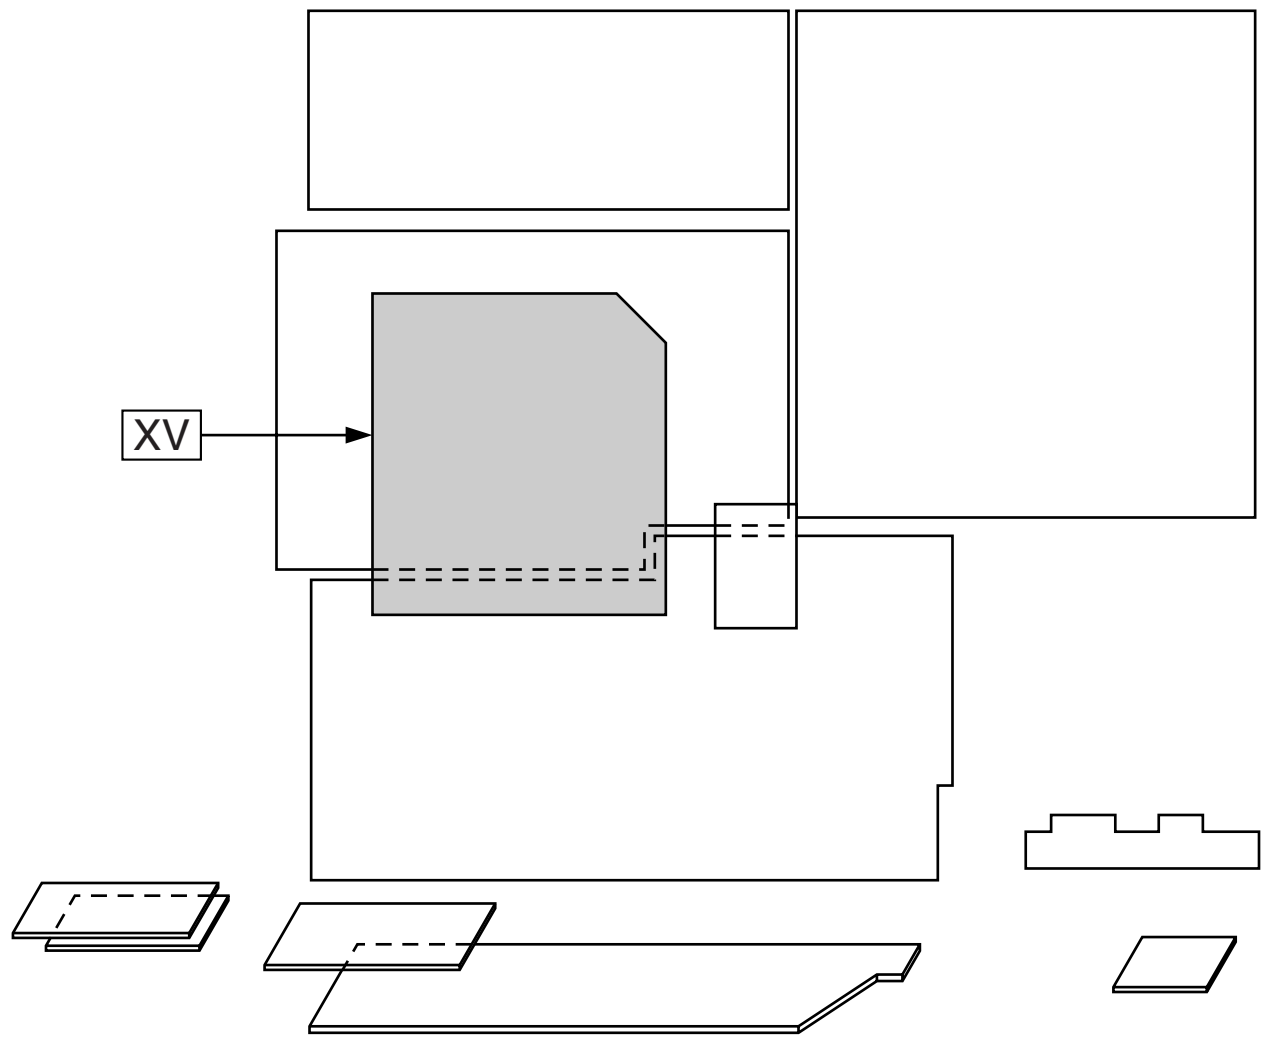

Parts Location

XV-BOARD (FOIL SIDE)					
IC		TRANSISTOR		TRANSISTOR	
IC8003	B-5	Q8013	E-2	TP018	E-2
IC8010	E-4	Q8014	D-2	TP019	E-1
IC8020	E-3	Q8016	D-2	TP020	E-1
IC8027	F-5			TP021	E-1
IC8038	B-1	TP004	E-4	TP022	E-1
IC8226	C-6	TP005	E-2	TP023	E-1
IC8864	B-4	TP006	E-2	TP024	E-1
		TP007	E-2	TP025	B-2
		TP008	E-2	TP026	F-5
		TP009	E-2	TP027	D-2
		TP010	E-3	TP028	E-5
		TP011	E-2	TP029	D-4
		TP012	E-2	TP033	B-4
		TP013	E-2	TP8001	E-1
		TP014	E-2	TP8002	E-2
		TP015	F-2	TP8003	E-2
		TP016	E-1	TP8004	F-3
		TP017	E-2		

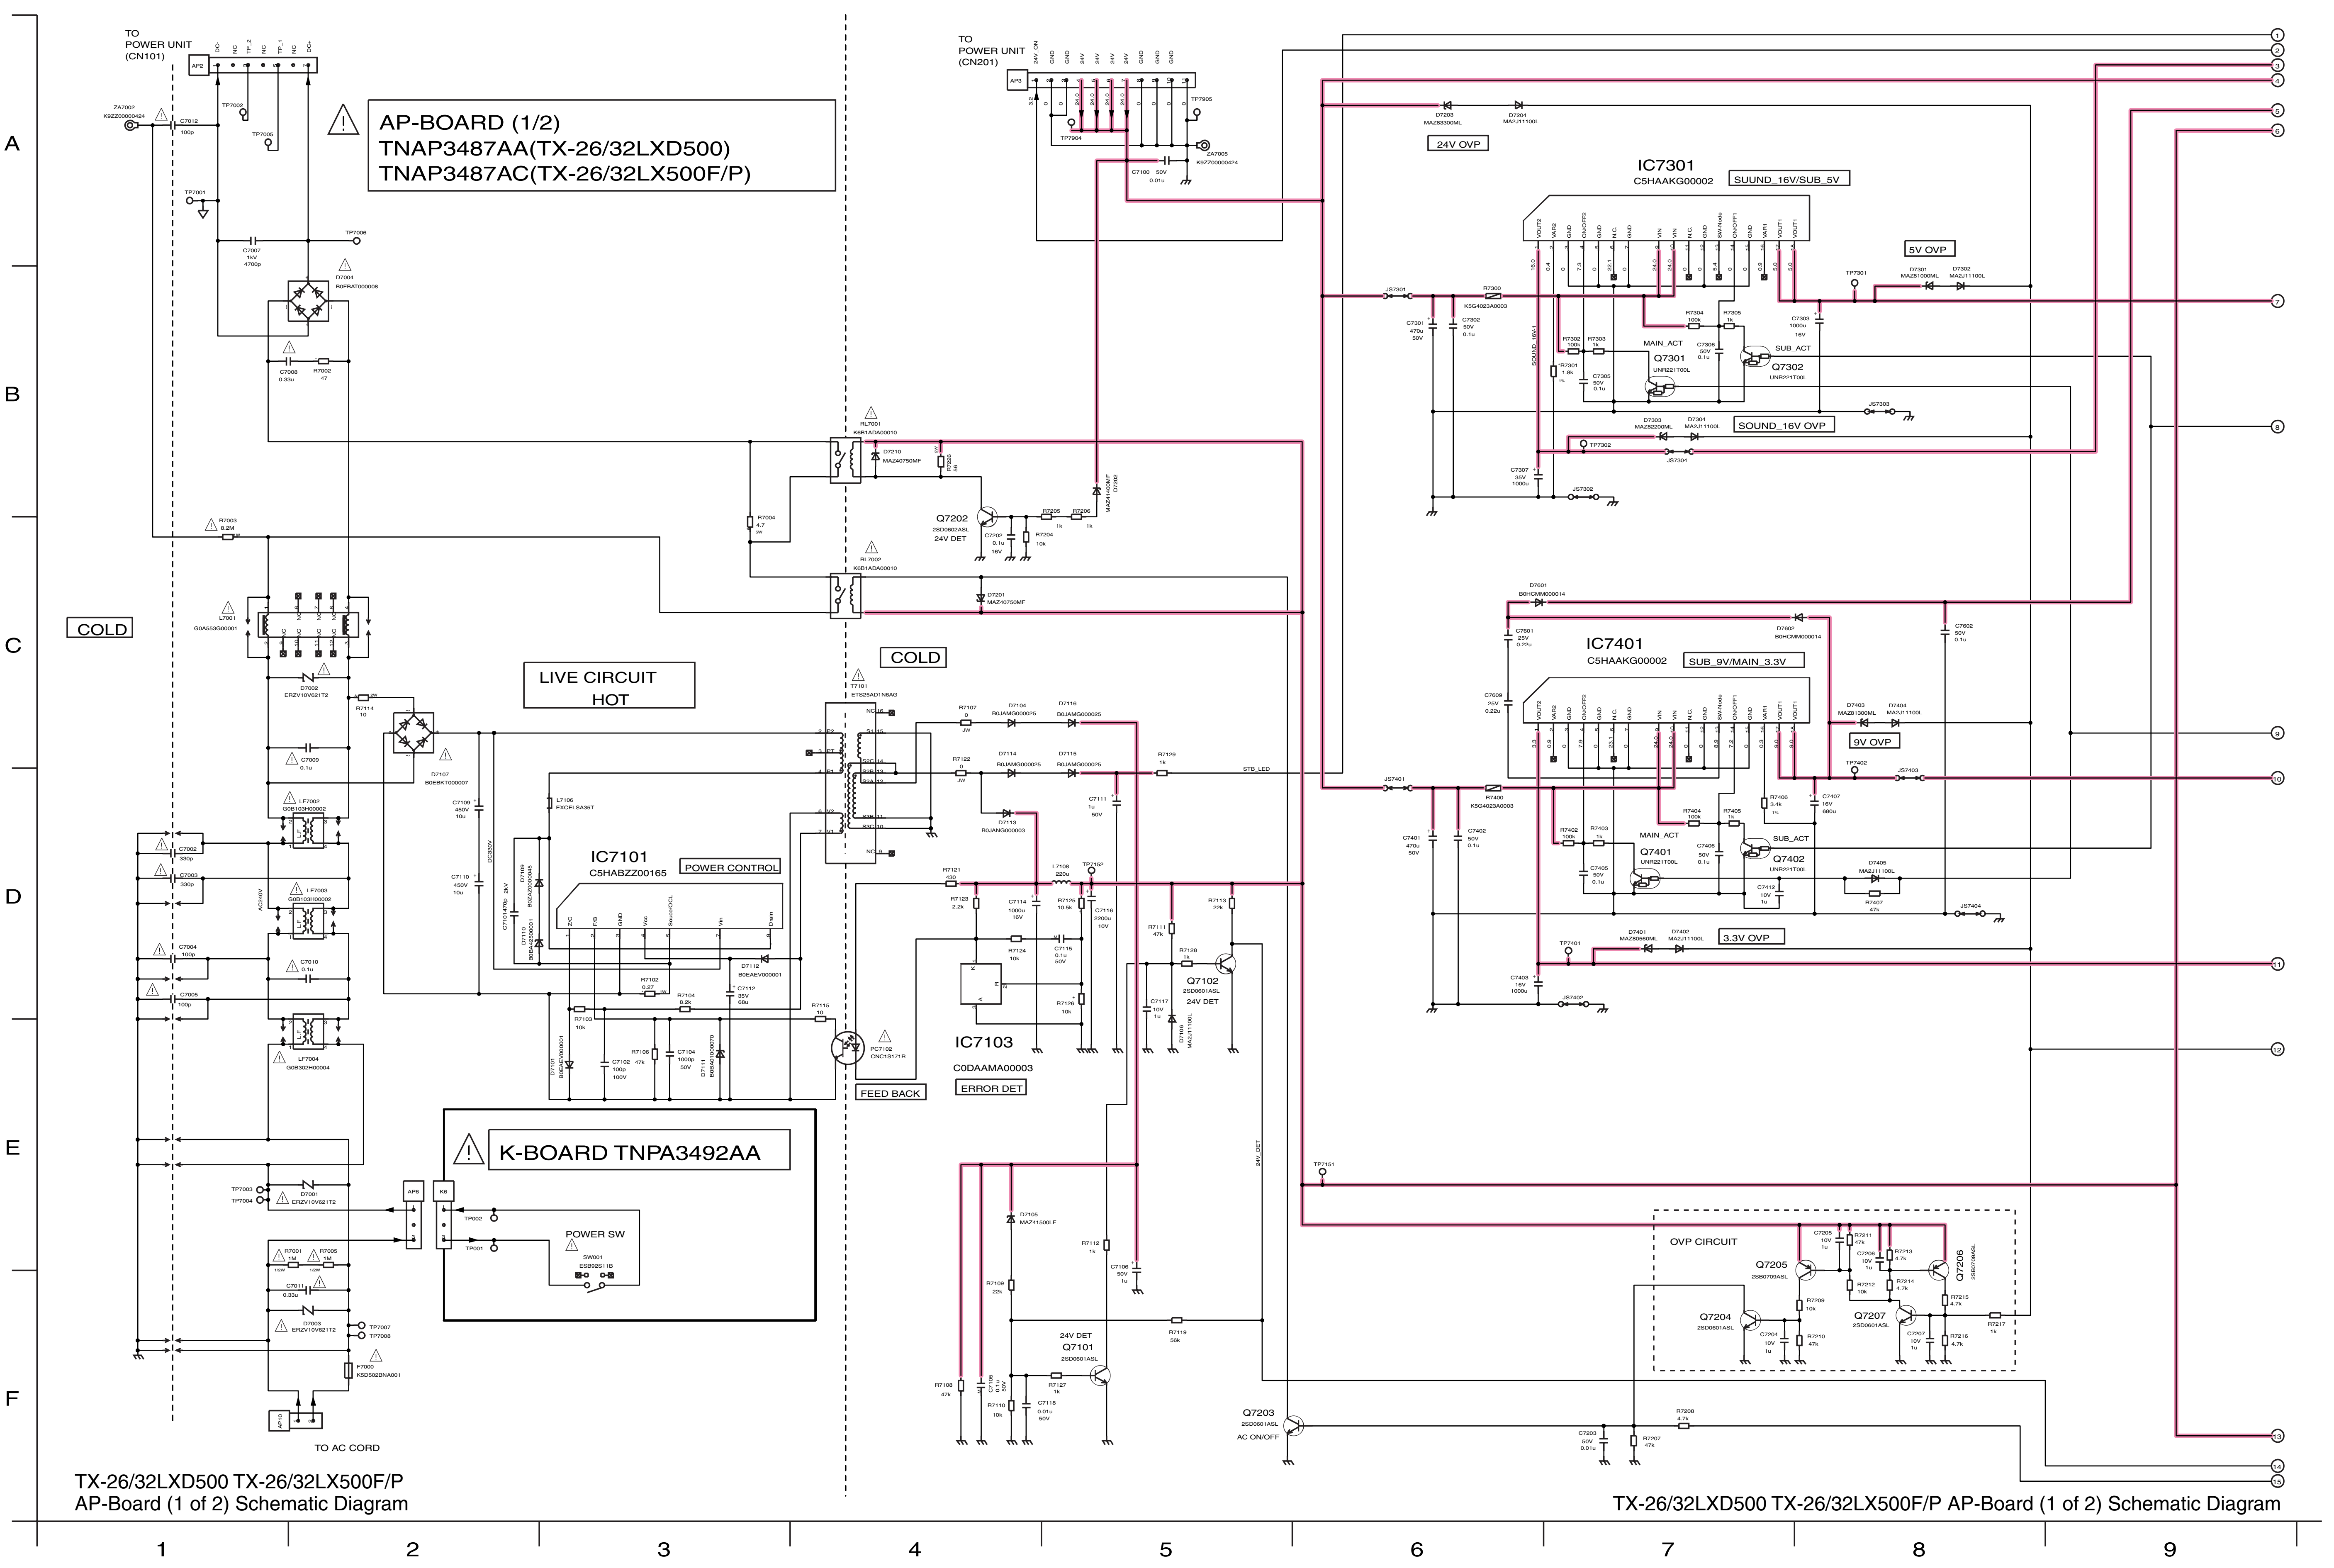
AP-BOARD (1/2)
TNAP3487AA(TX-26/32LXD500)
TNAP3487AC(TX-26/32LX500F/P)
TO POWER UNIT (CN101)
TO POWER UNIT (CN201)
COLD
LIVE CIRCUIT HOT
COLD
IC7101
C5HABZZ00165
POWER CONTROL
IC7103
C0DAAMA00003
ERROR DET
FEED BACK
PC7102 CNC1S171R
T7101 ETS25AD1N6AG
K-BOARD TNPA3492AA
POWER SW
SW001 ESB92S11B
TO AC CORD
F7000 K5D502BNA001
RL7001 K6B1ADA00010
RL7002 K6B1ADA00010
Q7202 2SD0602ASL 24V DET
Q7102 2SD0601ASL 24V DET
Q7101 2SD0601ASL 24V DET
Q7203 2SD0601ASL AC ON/OFF
24V OVP
IC7301
C5HAAKG00002
SUUND_16V/SUB_5V
5V OVP
MAIN_ACT
Q7301 UNR221T00L
SUB_ACT
Q7302 UNR221T00L
SOUND_16V OVP
IC7401
C5HAAKG00002
SUB_9V/MAIN_3.3V
9V OVP
MAIN_ACT
Q7401 UNR221T00L
SUB_ACT
Q7402 UNR221T00L
3.3V OVP
OVP CIRCUIT
Q7205 2SB0709ASL
Q7206 2SB0709ASL
Q7204 2SD0601ASL
Q7207 2SD0601ASL
STB_LED
24V_DET
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9

TX-26/32LXD500 TX-26/32LX500F/P
AP-Board (1 of 2) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (1 of 2) Schematic Diagram

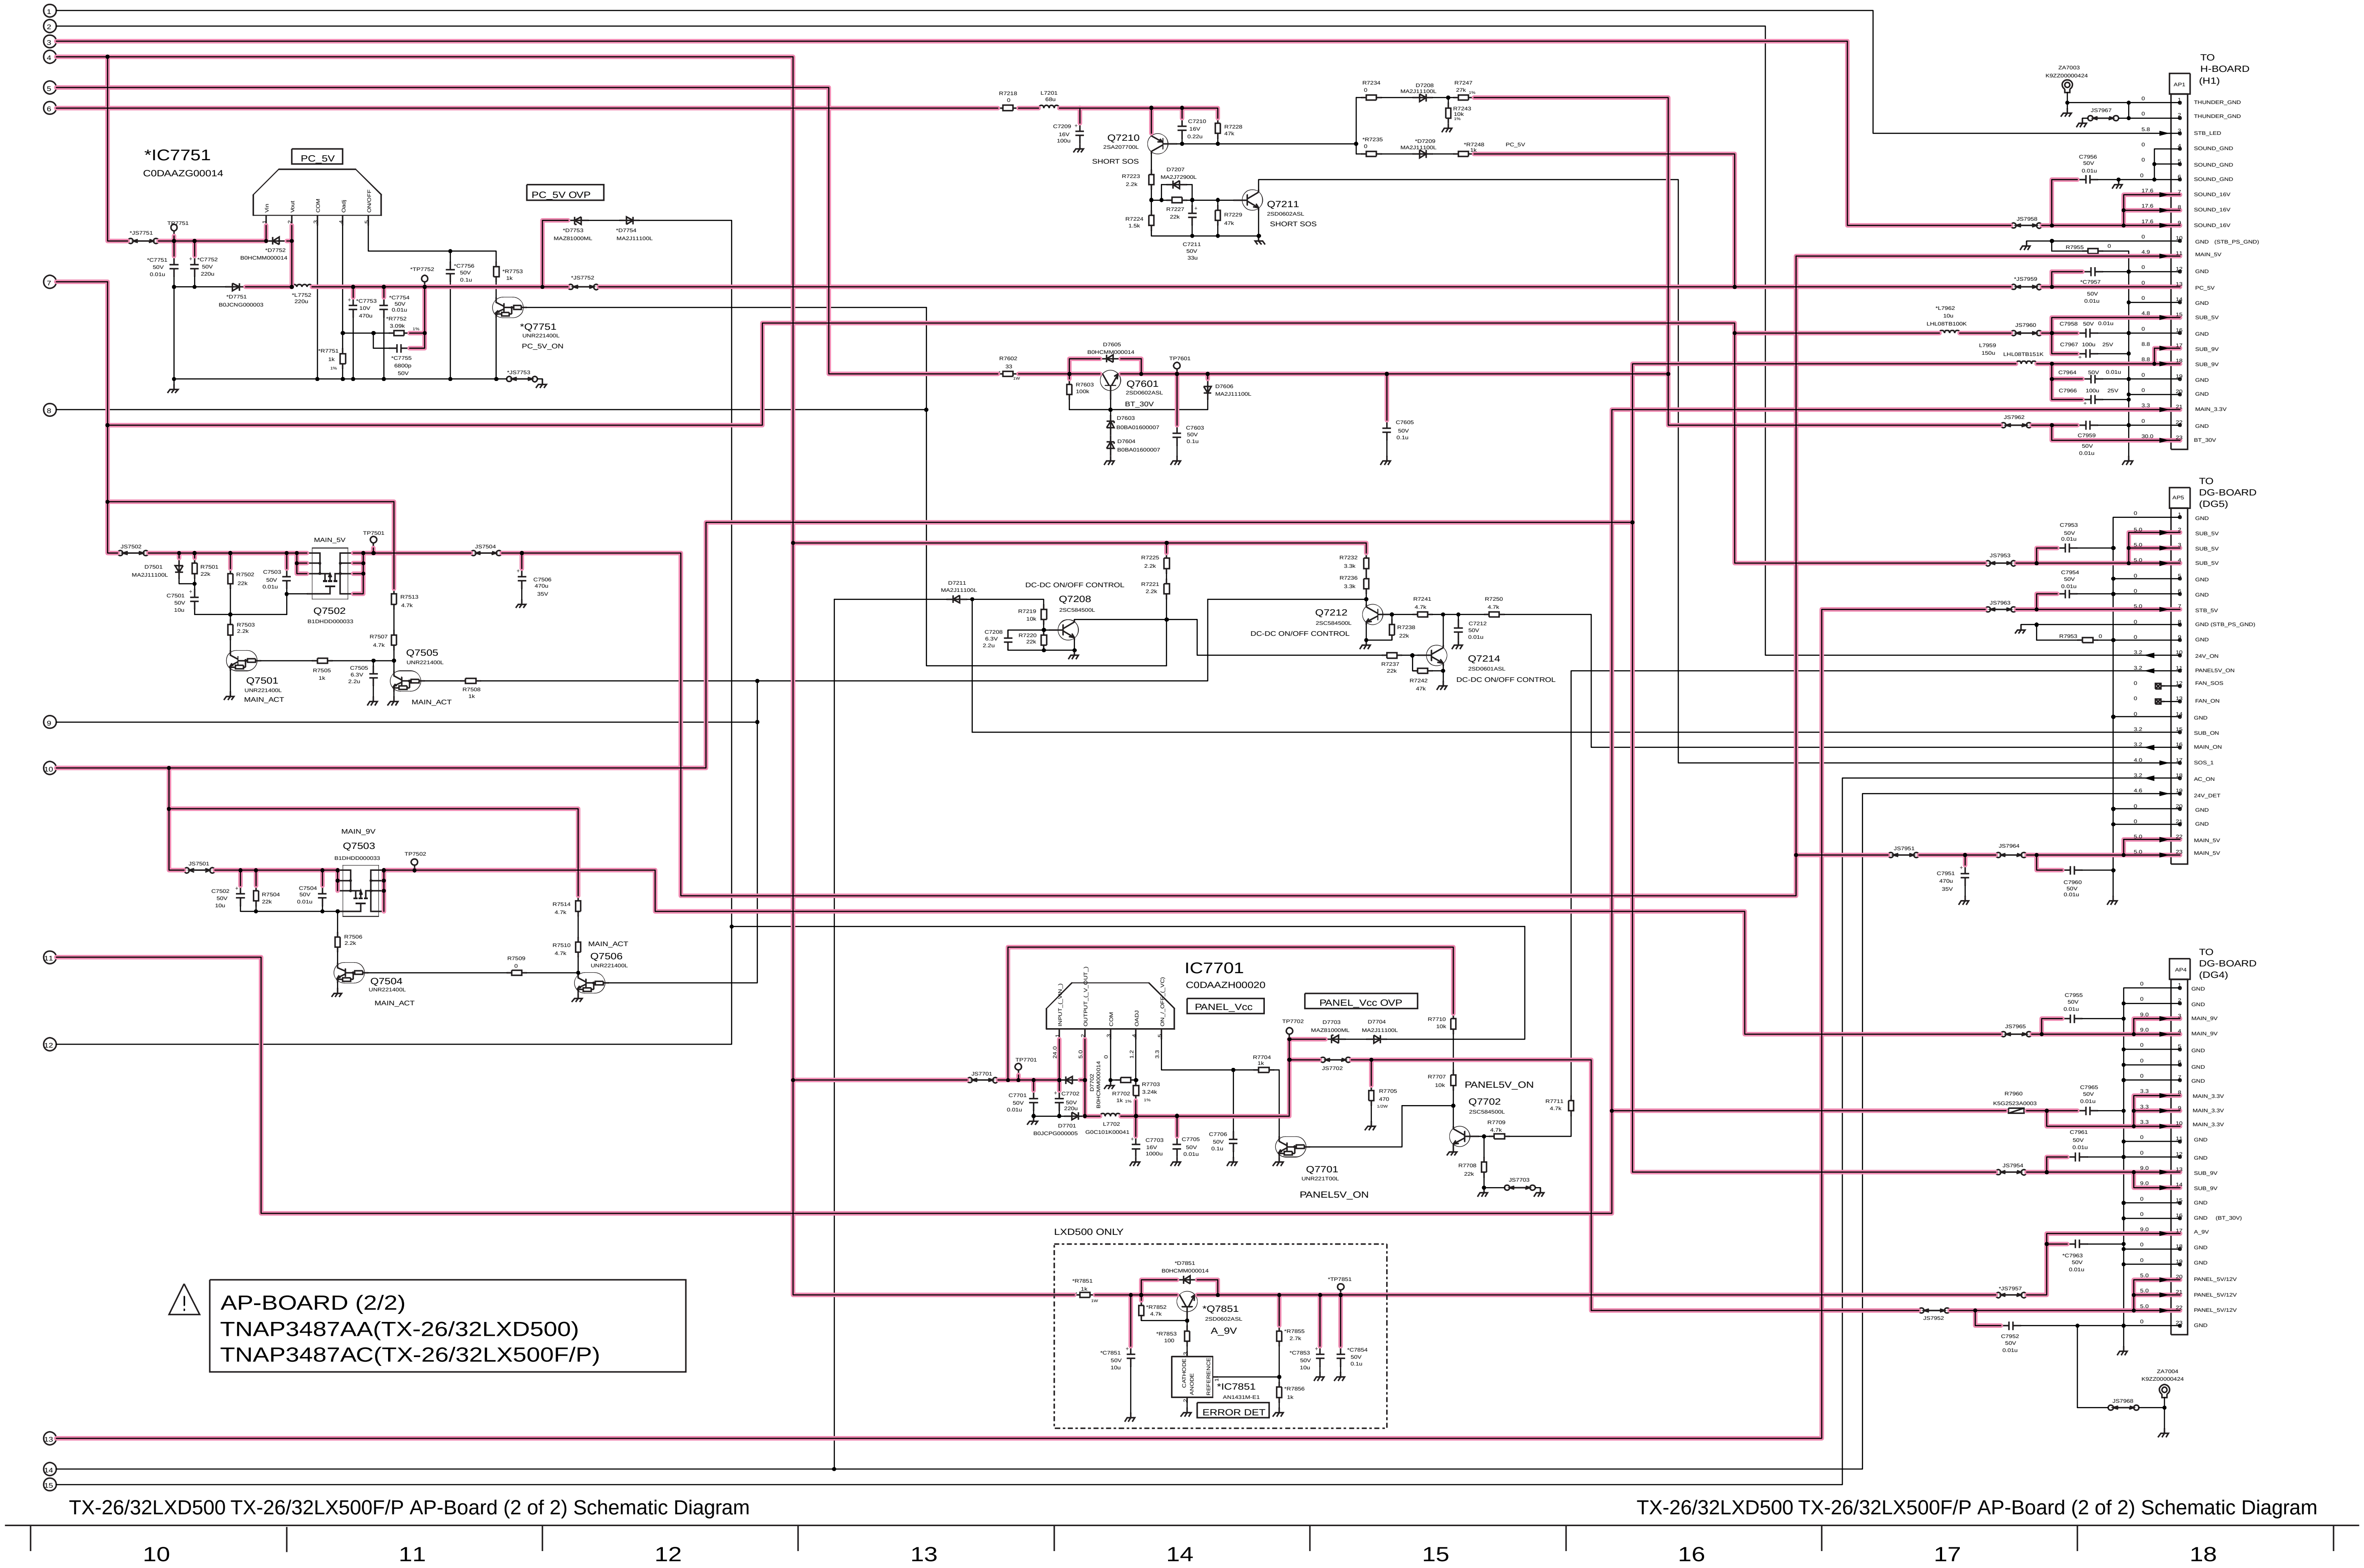
*IC7751
C0DAAZG00014
PC_5V
PC_5V OVP
*Q7751
UNR221400L
PC_5V_ON
Q7210
2SA2077000L
SHORT SOS
Q7211
2SD0602ASL
SHORT SOS
Q7601
2SD0602ASL
BT_30V
TO
H-BOARD
(H1)
AP1
THUNDER_GND
STB_LED
SOUND_GND
SOUND_16V
GND (STB_PS_GND)
MAIN_5V
GND
PC_5V
SUB_5V
SUB_9V
MAIN_3.3V
BT_30V
MAIN_5V
Q7502
B1DHDD000033
Q7501
UNR221400L
MAIN_ACT
Q7505
UNR221400L
MAIN_ACT
DC-DC ON/OFF CONTROL
Q7208
2SC584500L
Q7212
2SC584500L
DC-DC ON/OFF CONTROL
Q7214
2SD0601ASL
DC-DC ON/OFF CONTROL
TO
DG-BOARD
(DG5)
AP5
GND
SUB_5V
STB_5V
GND (STB_PS_GND)
24V_ON
PANEL5V_ON
FAN_SOS
FAN_ON
SUB_ON
MAIN_ON
SOS_1
AC_ON
24V_DET
MAIN_5V
MAIN_9V
Q7503
B1DHDD000033
Q7504
UNR221400L
MAIN_ACT
MAIN_ACT
Q7506
UNR221400L
IC7701
C0DAAZH00020
PANEL_Vcc
PANEL_Vcc OVP
PANEL5V_ON
Q7702
2SC584500L
Q7701
UNR221T00L
PANEL5V_ON
TO
DG-BOARD
(DG4)
AP4
GND
MAIN_9V
MAIN_3.3V
SUB_9V
GND (BT_30V)
A_9V
PANEL_5V/12V
LXD500 ONLY
*Q7851
2SD0602ASL
A_9V
*IC7851
AN1431M-E1
ERROR DET
AP-BOARD (2/2)
TNAP3487AA(TX-26/32LXD500)
TNAP3487AC(TX-26/32LX500F/P)
10
11
12
13
14
15
16
17
18

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (2 of 2) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P AP-Board (2 of 2) Schematic Diagram

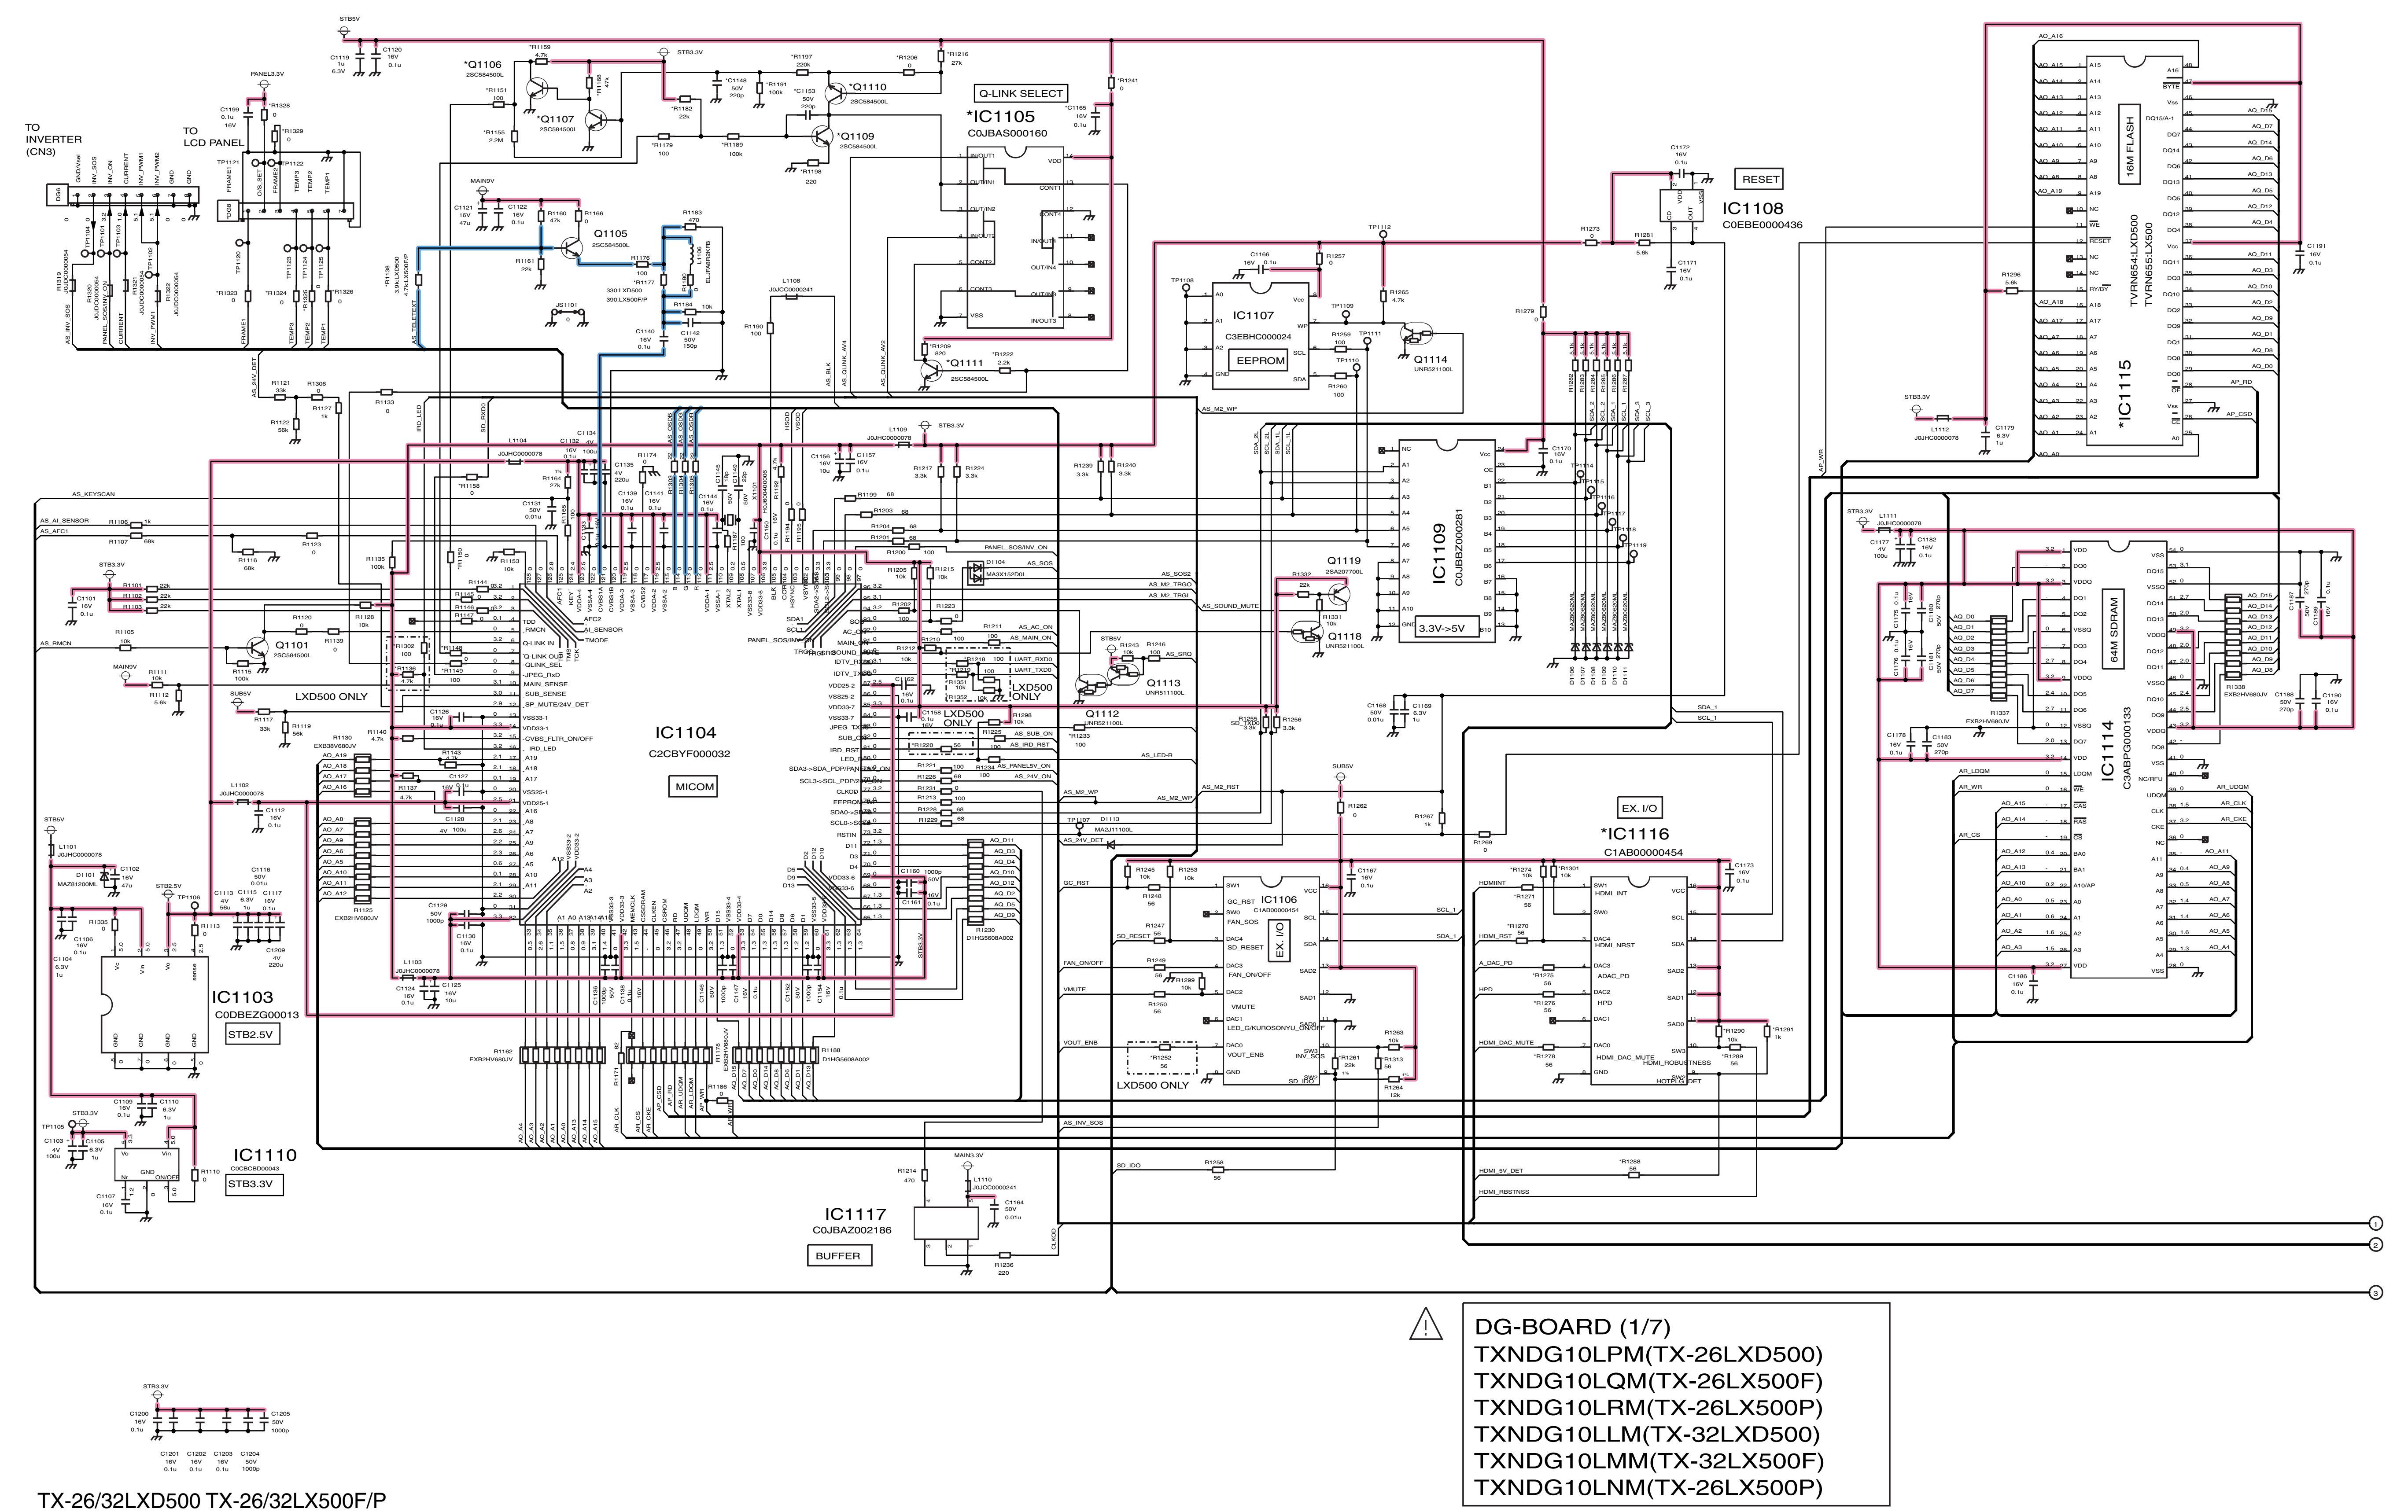

A
B
C
D
E
F
1
2
3
4
5
6
7
8
9
TO INVERTER (CN3)
TO LCD PANEL
STB5V
STB3.3V
PANEL3.3V
MAIN9V
SUB5V
STB2.5V
MAIN3.3V
*Q1106
*Q1107
*Q1110
*Q1109
Q1105
Q1101
*Q1111
Q1119
Q1118
Q1113
Q1112
Q1114
Q-LINK SELECT
*IC1105
C0JBAS000160
IC1104
C2CBYF000032
MICOM
IC1103
C0DBEZG00013
STB2.5V
IC1110
C0CBCBD00043
STB3.3V
IC1117
C0JBAZ002186
BUFFER
IC1107
C3EBHC000024
EEPROM
IC1108
C0EBE0000436
RESET
IC1109
C0JBBZ000281
3.3V->5V
IC1106
C1AB00000454
EX I/O
*IC1116
C1AB00000454
EX. I/O
*IC1115
TVRN654:LXD500
TVRN655:LX500
16M FLASH
IC1114
C3ABPG000133
64M SDRAM
LXD500 ONLY

DG-BOARD (1/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

TX-26/32LXD500 TX-26/32LX500F/P
DG-Board (1 of 7) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (1 of 7) Schematic Diagram

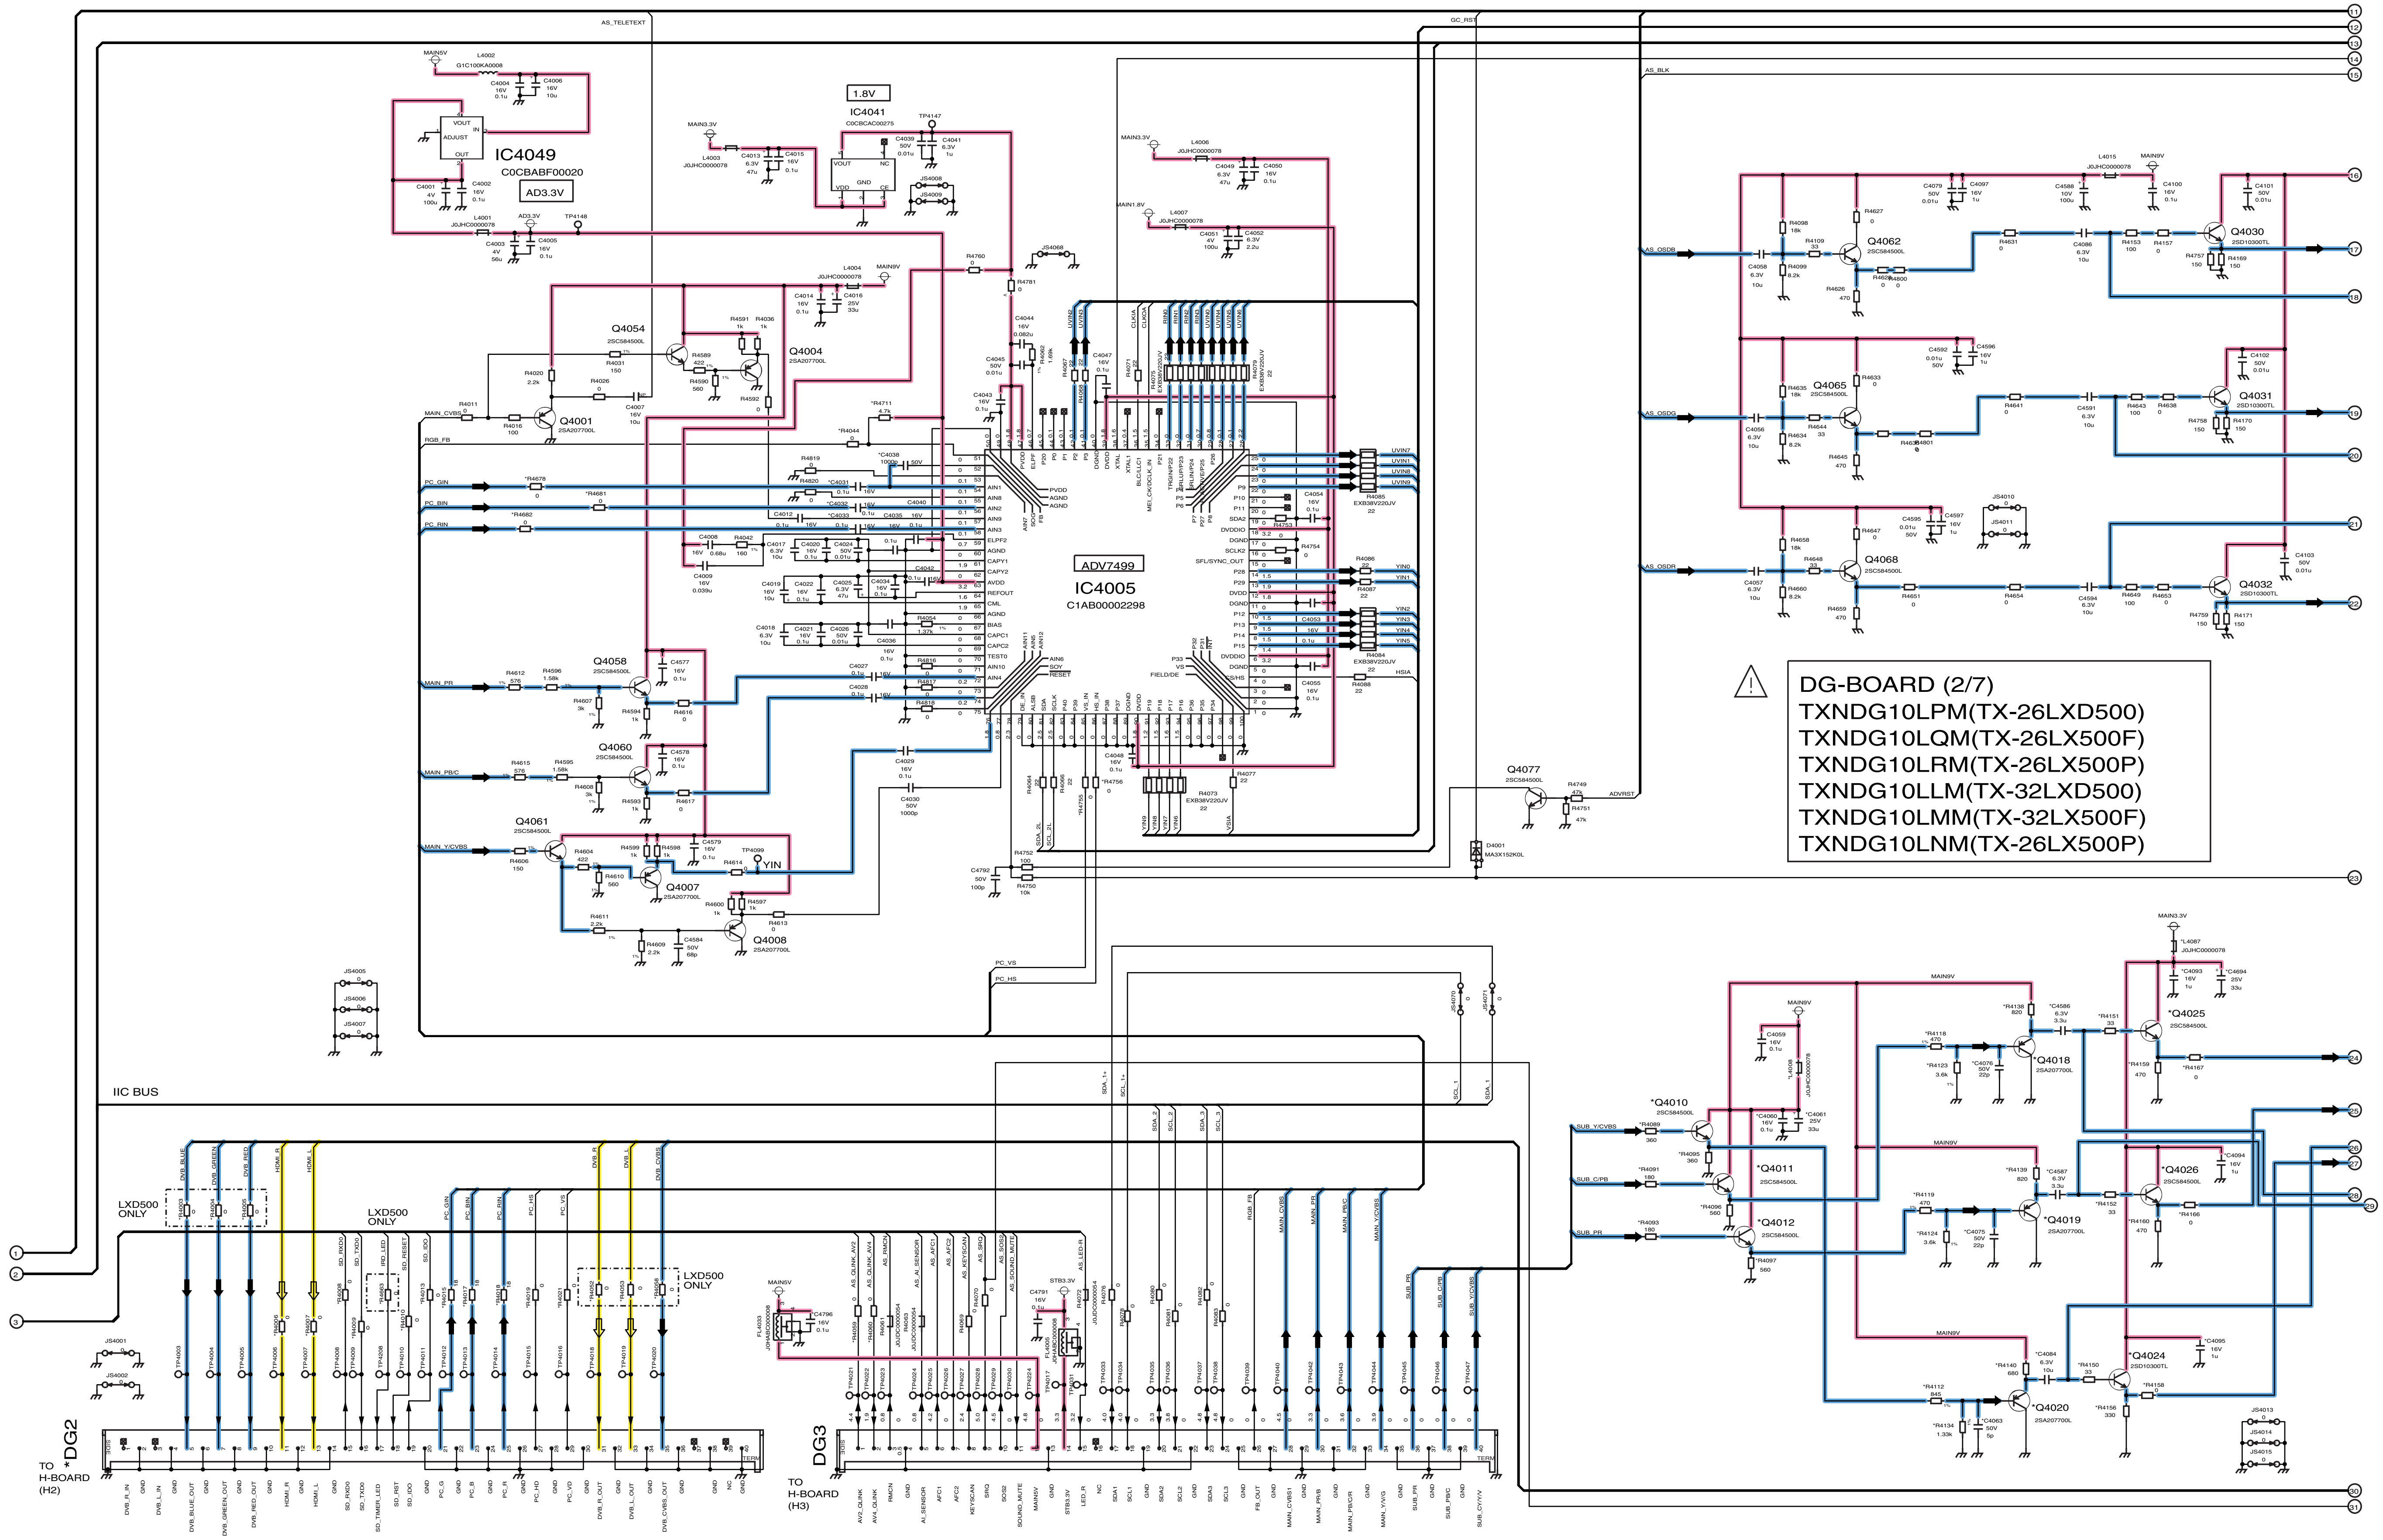
IC4049
C0CBABF00020
AD3.3V
1.8V
IC4041
C0CBCAC00275
ADV7499
IC4005
C1AB00002298
Q4054
Q4004
Q4001
Q4058
Q4060
Q4061
Q4007
Q4008
Q4062
Q4065
Q4068
Q4030
Q4031
Q4032
Q4077
Q4010
Q4011
Q4012
Q4018
Q4019
Q4020
Q4024
Q4025
Q4026
D4001
MA3X152K0L
MAIN5V
MAIN3.3V
MAIN1.8V
MAIN9V
AS_TELETEXT
GC_RST
AS_BLK
AS_OSDB
AS_OSDG
AS_OSDR
ADVRST
MAIN_CVBS
RGB_FB
PC_GIN
PC_BIN
PC_RIN
MAIN_PR
MAIN_PB/C
MAIN_Y/CVBS
SUB_Y/CVBS
SUB_C/PB
SUB_PR
PC_VS
PC_HS
IIC BUS
LXD500 ONLY
*DG2
TO H-BOARD (H2)
DG3
TO H-BOARD (H3)
YIN
DG-BOARD (2/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (2 of 7) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (2 of 7) Schematic Diagram

10 11 12 13 14 15 16 17 18

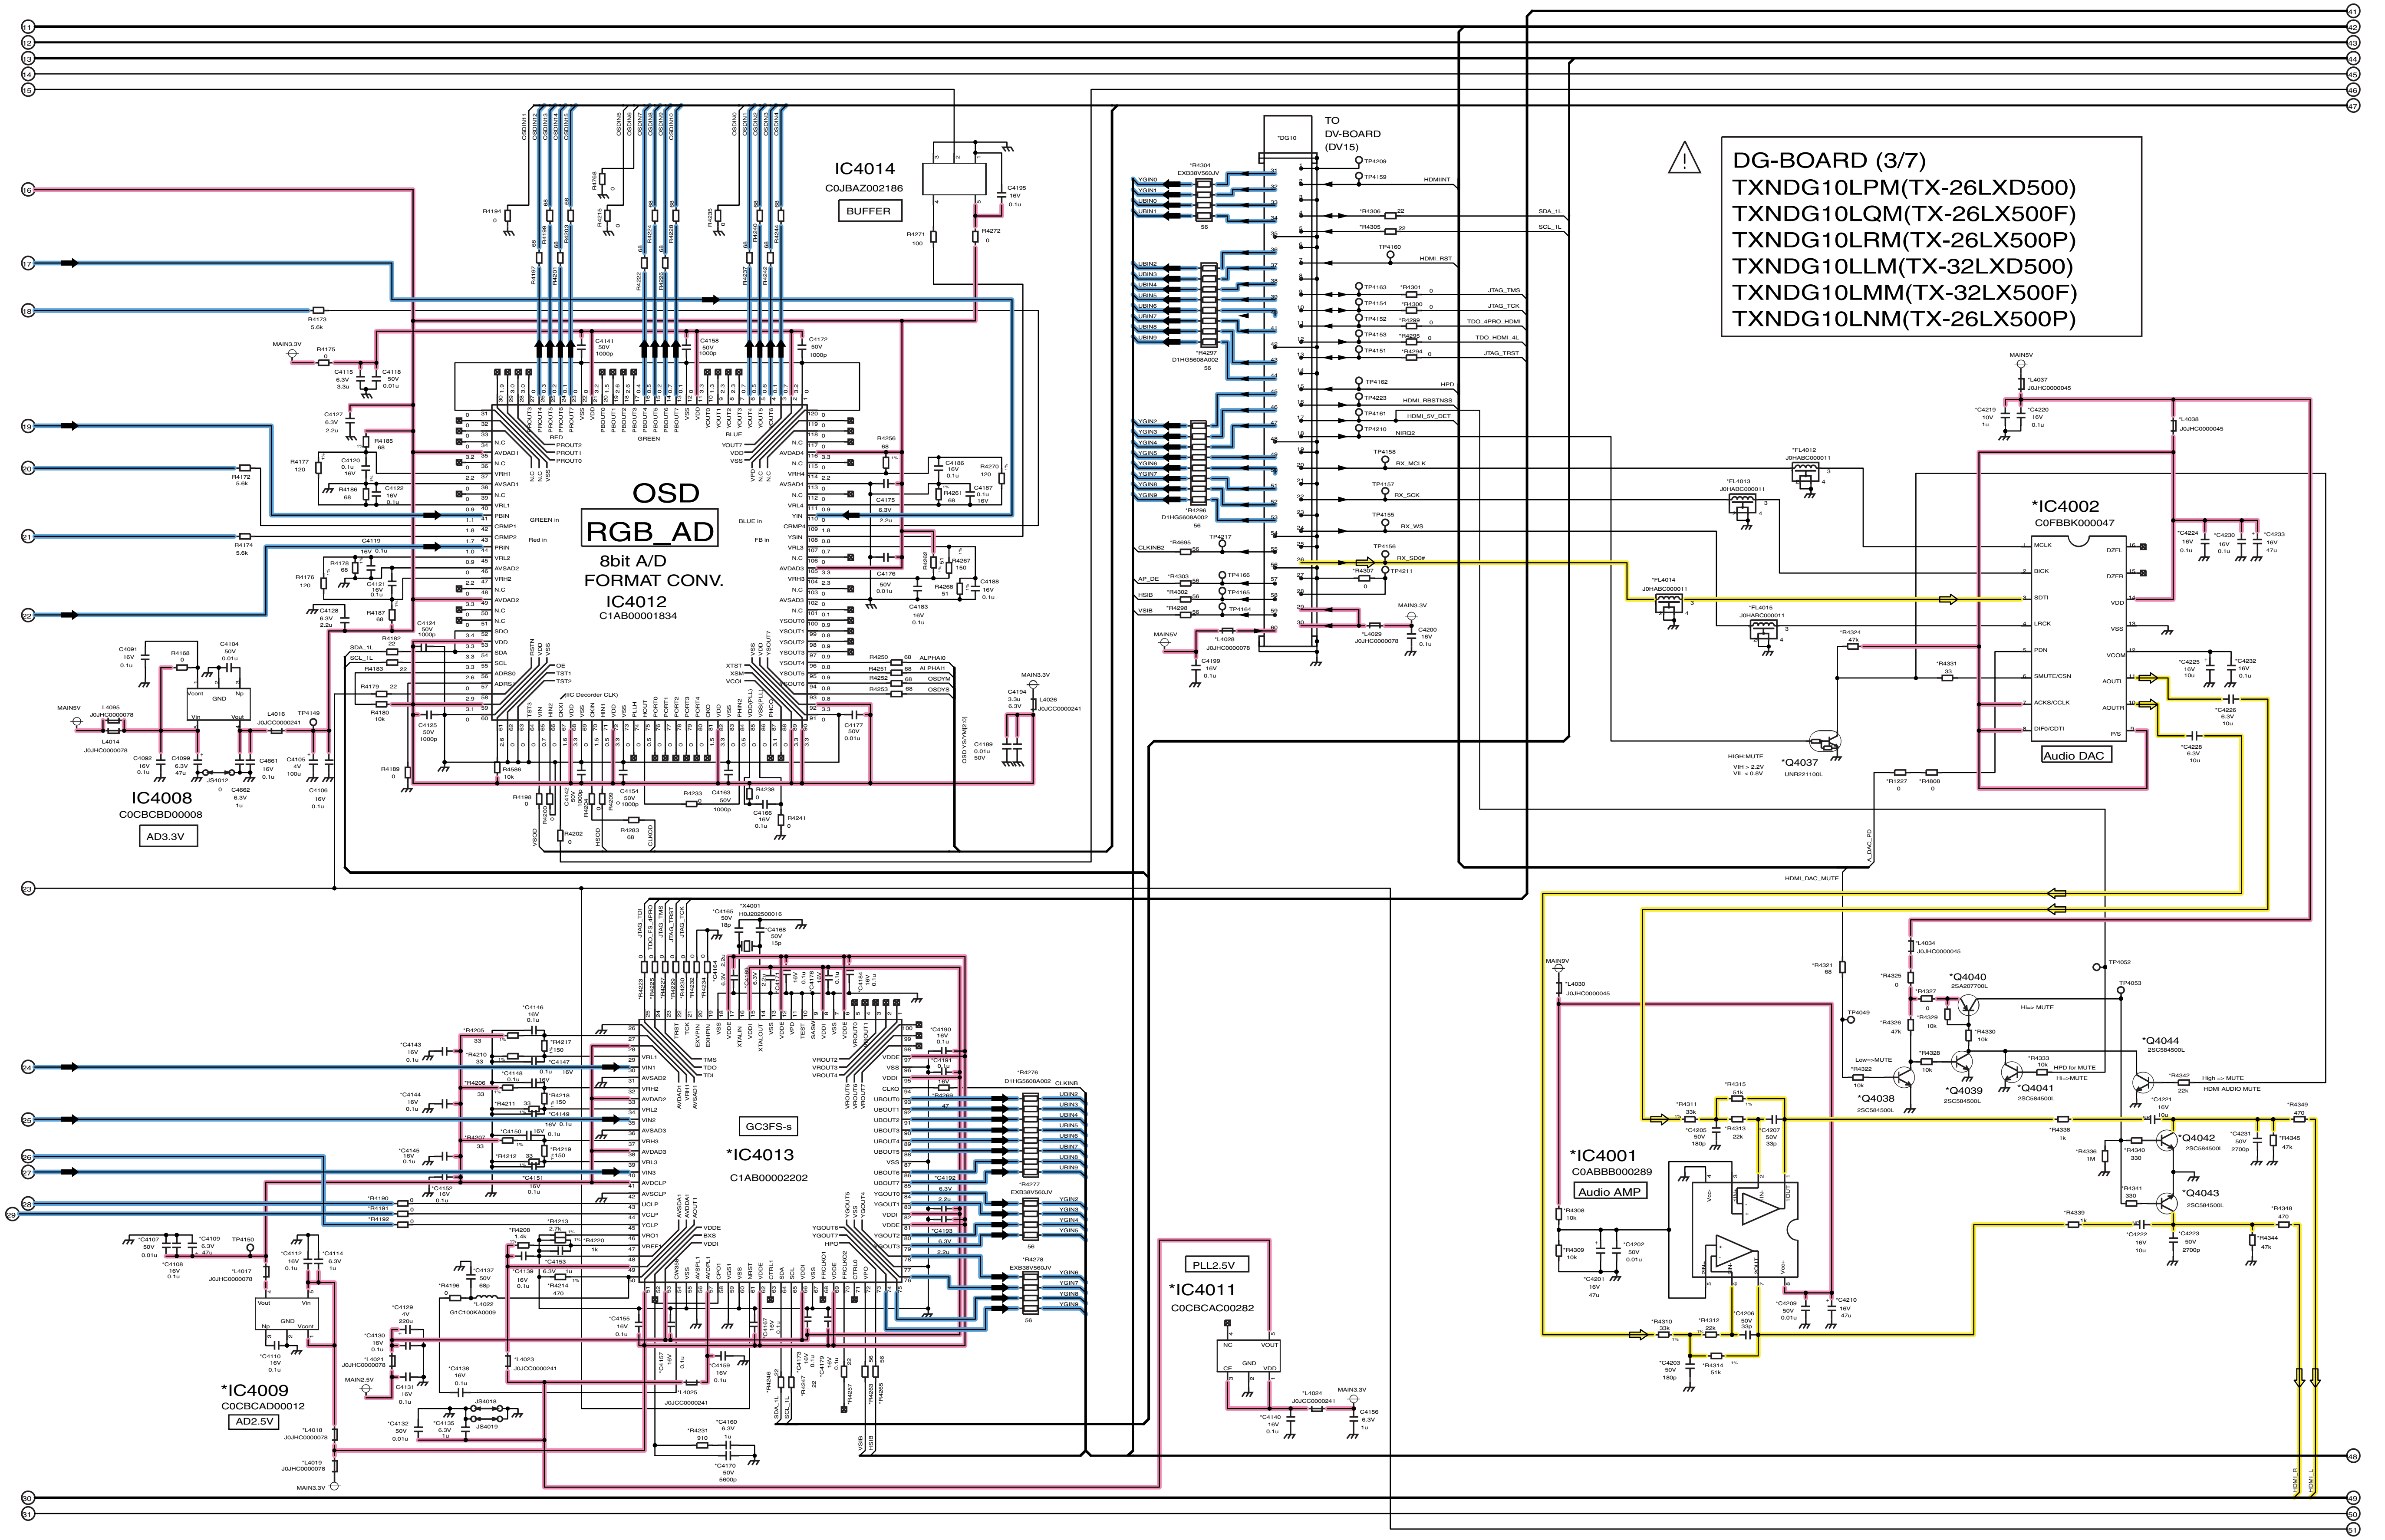
DG-BOARD (3/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
IC4014
C0JBAZ002186
BUFFER
OSD
RGB_AD
8bit A/D
FORMAT CONV.
IC4012
C1AB00001834
IC4008
C0CBCBD00008
AD3.3V
TO
DV-BOARD
(DV15)
*IC4002
C0FBBK000047
Audio DAC
*Q4037
UNR221100L
HIGH:MUTE
VIH > 2.2V
VIL < 0.8V
GC3FS-s
*IC4013
C1AB00002202
*IC4009
C0CBCAD00012
AD2.5V
PLL2.5V
*IC4011
C0CBCAC00282
*IC4001
C0ABBB000289
Audio AMP
*Q4040
2SA2077000L
*Q4038
2SC584500L
*Q4039
2SC584500L
*Q4041
2SC584500L
*Q4044
2SC584500L
*Q4042
2SC584500L
*Q4043
2SC584500L
Low=>MUTE
Hi=> MUTE
HPD for MUTE
High => MUTE
HDMI AUDIO MUTE
HDMI_DAC_MUTE
MAIN3.3V
MAIN5V
MAIN9V
HDMI_R
HDMI_L
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
30
31
41
42
43
44
45
46
47
48
49
50
51
19
20
21
22
23
24
25
26
27

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (3 of 7) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (3 of 7) Schematic Diagram

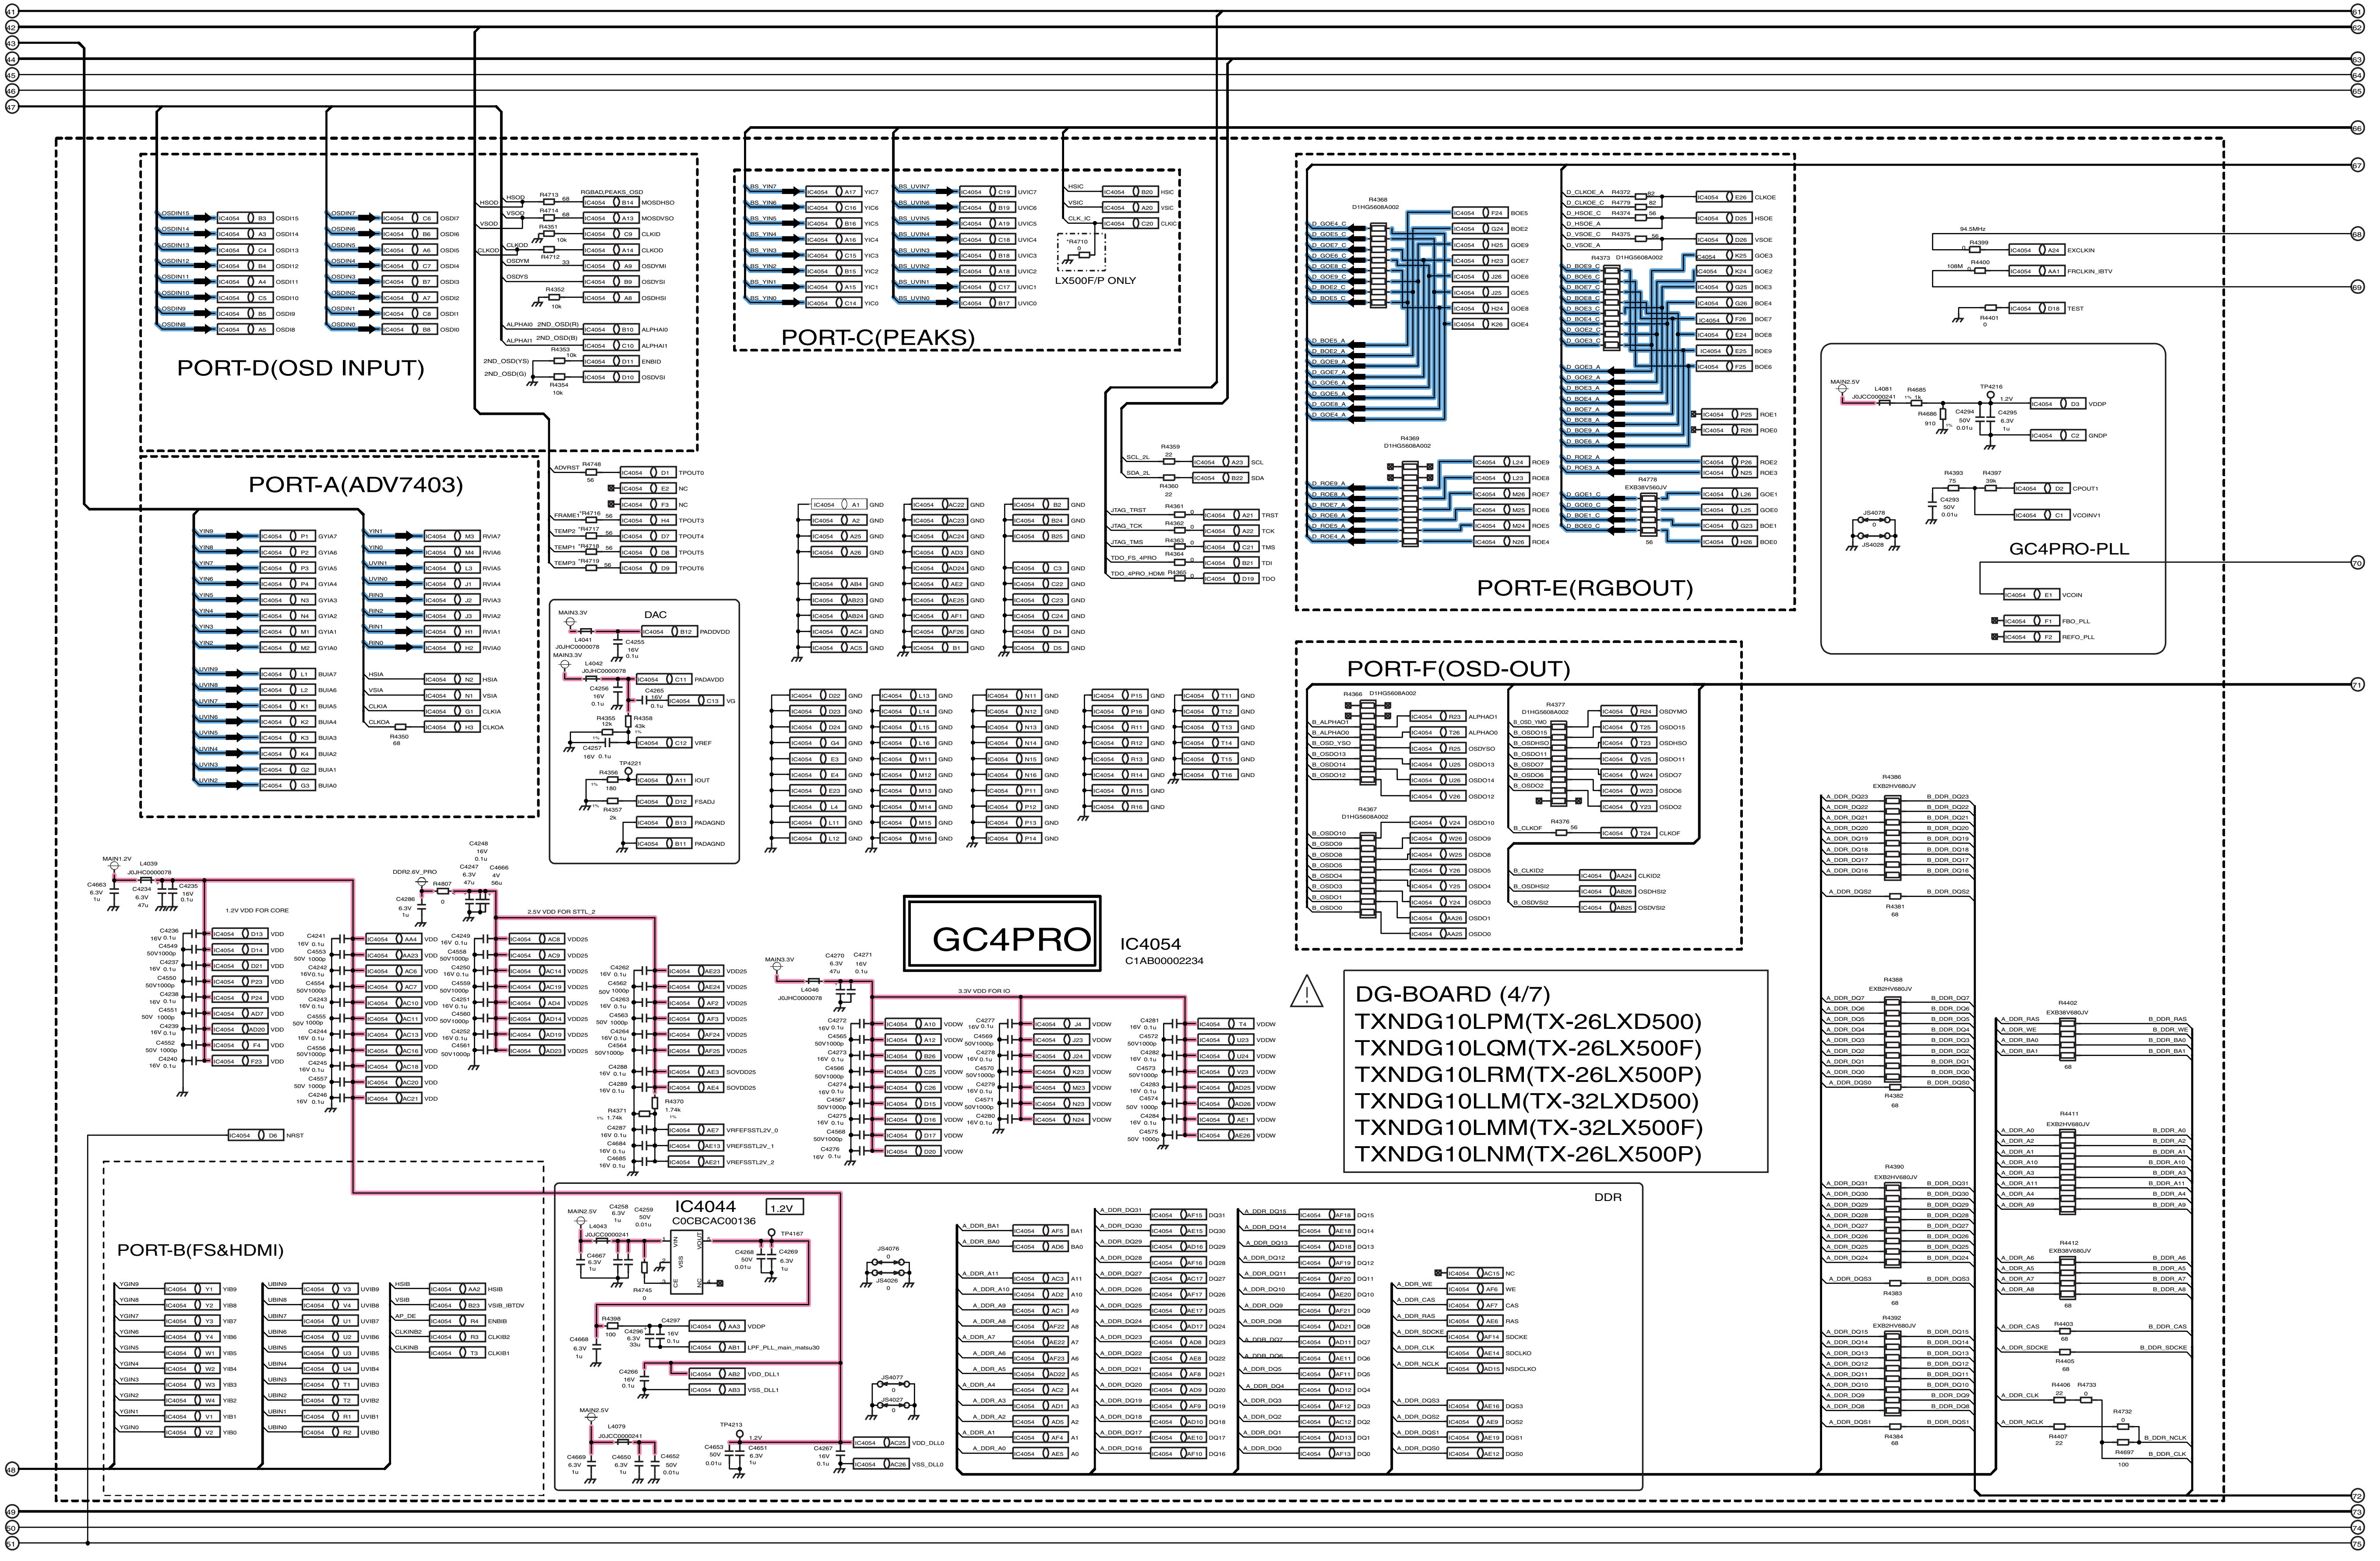
PORT-D(OSD INPUT)
PORT-C(PEAKS)
LX500F/P ONLY
PORT-E(RGBOUT)
GC4PRO-PLL
PORT-A(ADV7403)
DAC
PORT-F(OSD-OUT)
GC4PRO
IC4054
C1AB00002234
1.2V VDD FOR CORE
2.5V VDD FOR SSTL_2
3.3V VDD FOR IO
DG-BOARD (4/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
PORT-B(FS&HDMI)
IC4044
C0CBCAC00136
1.2V
DDR
LPF_PLL_main_matsu30
94.5MHz
108M
EXCLKIN
FRCLKIN_IBTV
TEST
VDDP
GNDP
CPOUT1
VCOINV1
VCOIN
FBO_PLL
REFO_PLL

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (4 of 7) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (4 of 7) Schematic Diagram

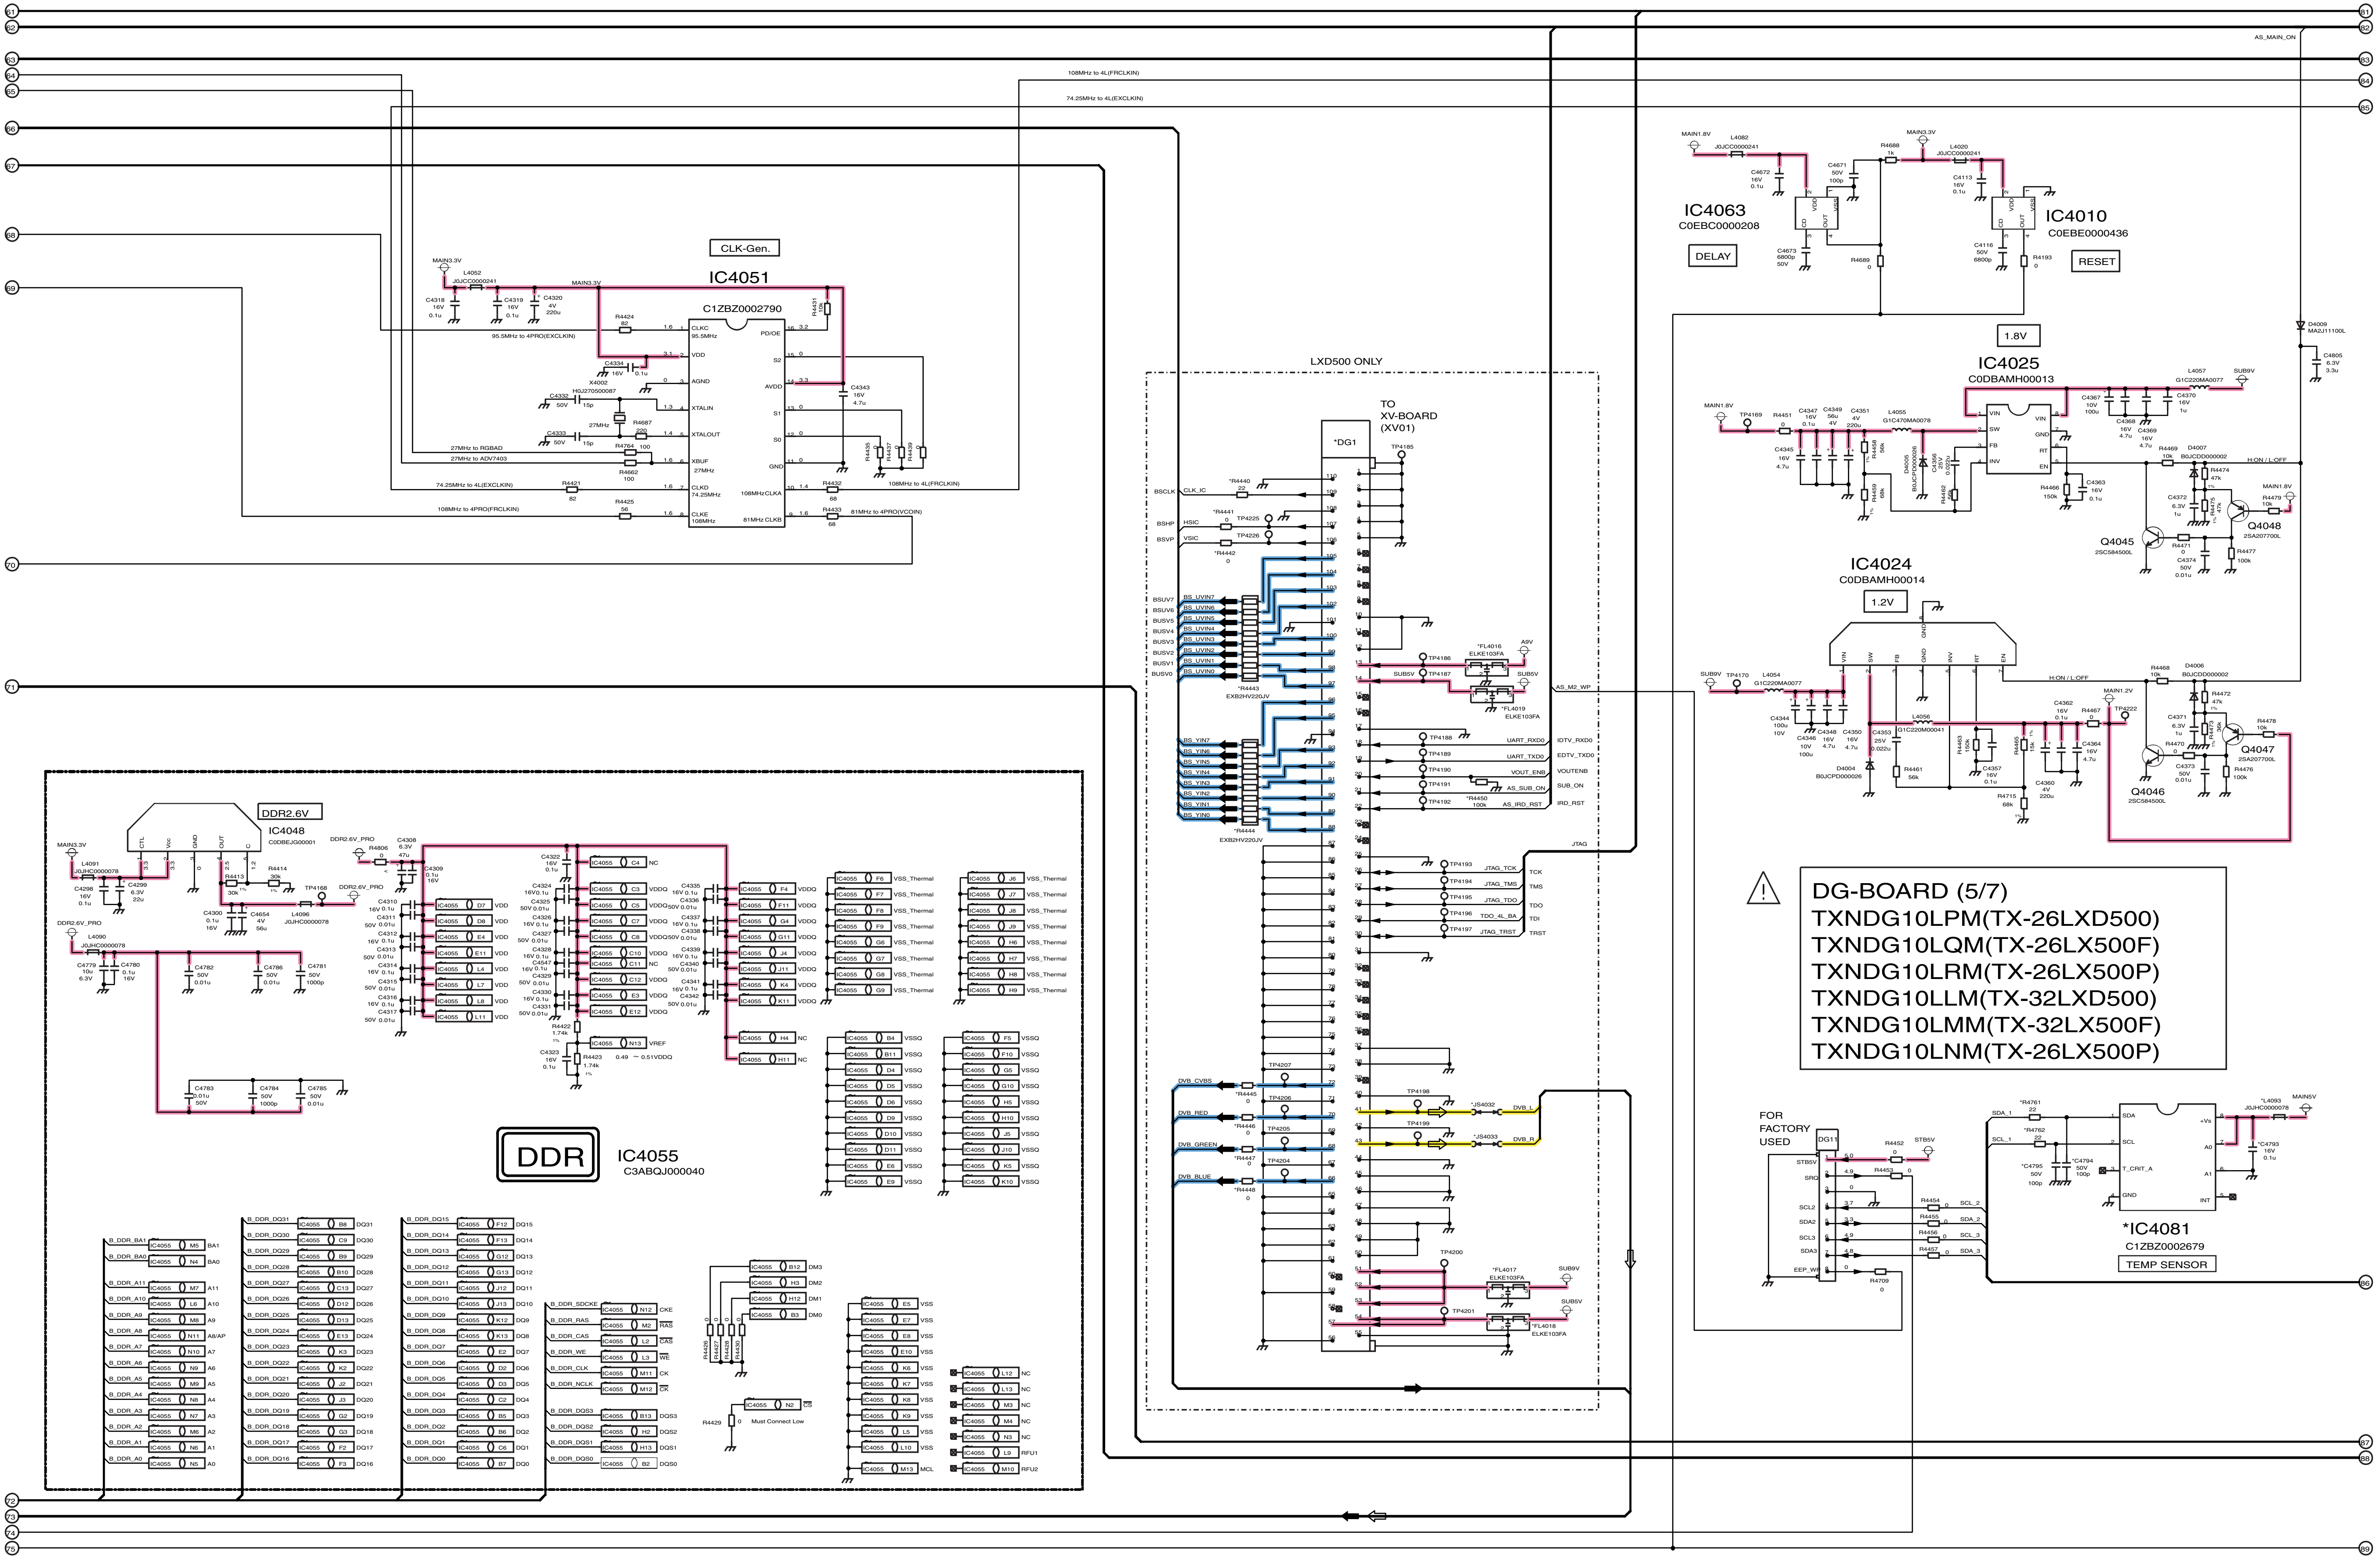
CLK-Gen.
IC4051
C1ZBZ0002790
IC4063
C0EBC0000208
DELAY
IC4010
C0EBE0000436
RESET
1.8V
IC4025
C0DBAMH00013
IC4024
C0DBAMH00014
1.2V
LXD500 ONLY
TO XV-BOARD (XV01)
*DG1
DDR2.6V
IC4048
C0DBEJG00001
DDR
IC4055
C3ABQJ000040
DG-BOARD (5/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
FOR FACTORY USED
DG11
*IC4081
C1ZBZ0002679
TEMP SENSOR
108MHz to 4L(FRCLKIN)
74.25MHz to 4L(EXCLKIN)
95.5MHz to 4PRO(EXCLKIN)
27MHz to RGBAD
27MHz to ADV7403
74.25MHz to 4L(EXCLKIN)
108MHz to 4PRO(FRCLKIN)
81MHz to 4PRO(VCOIN)
AS_MAIN_ON
AS_M2_WP
H:ON / L:OFF
MAIN1.8V
MAIN3.3V
MAIN1.2V
SUB9V
SUB5V
STB5V
MAIN5V
DDR2.6V_PRO
Must Connect Low

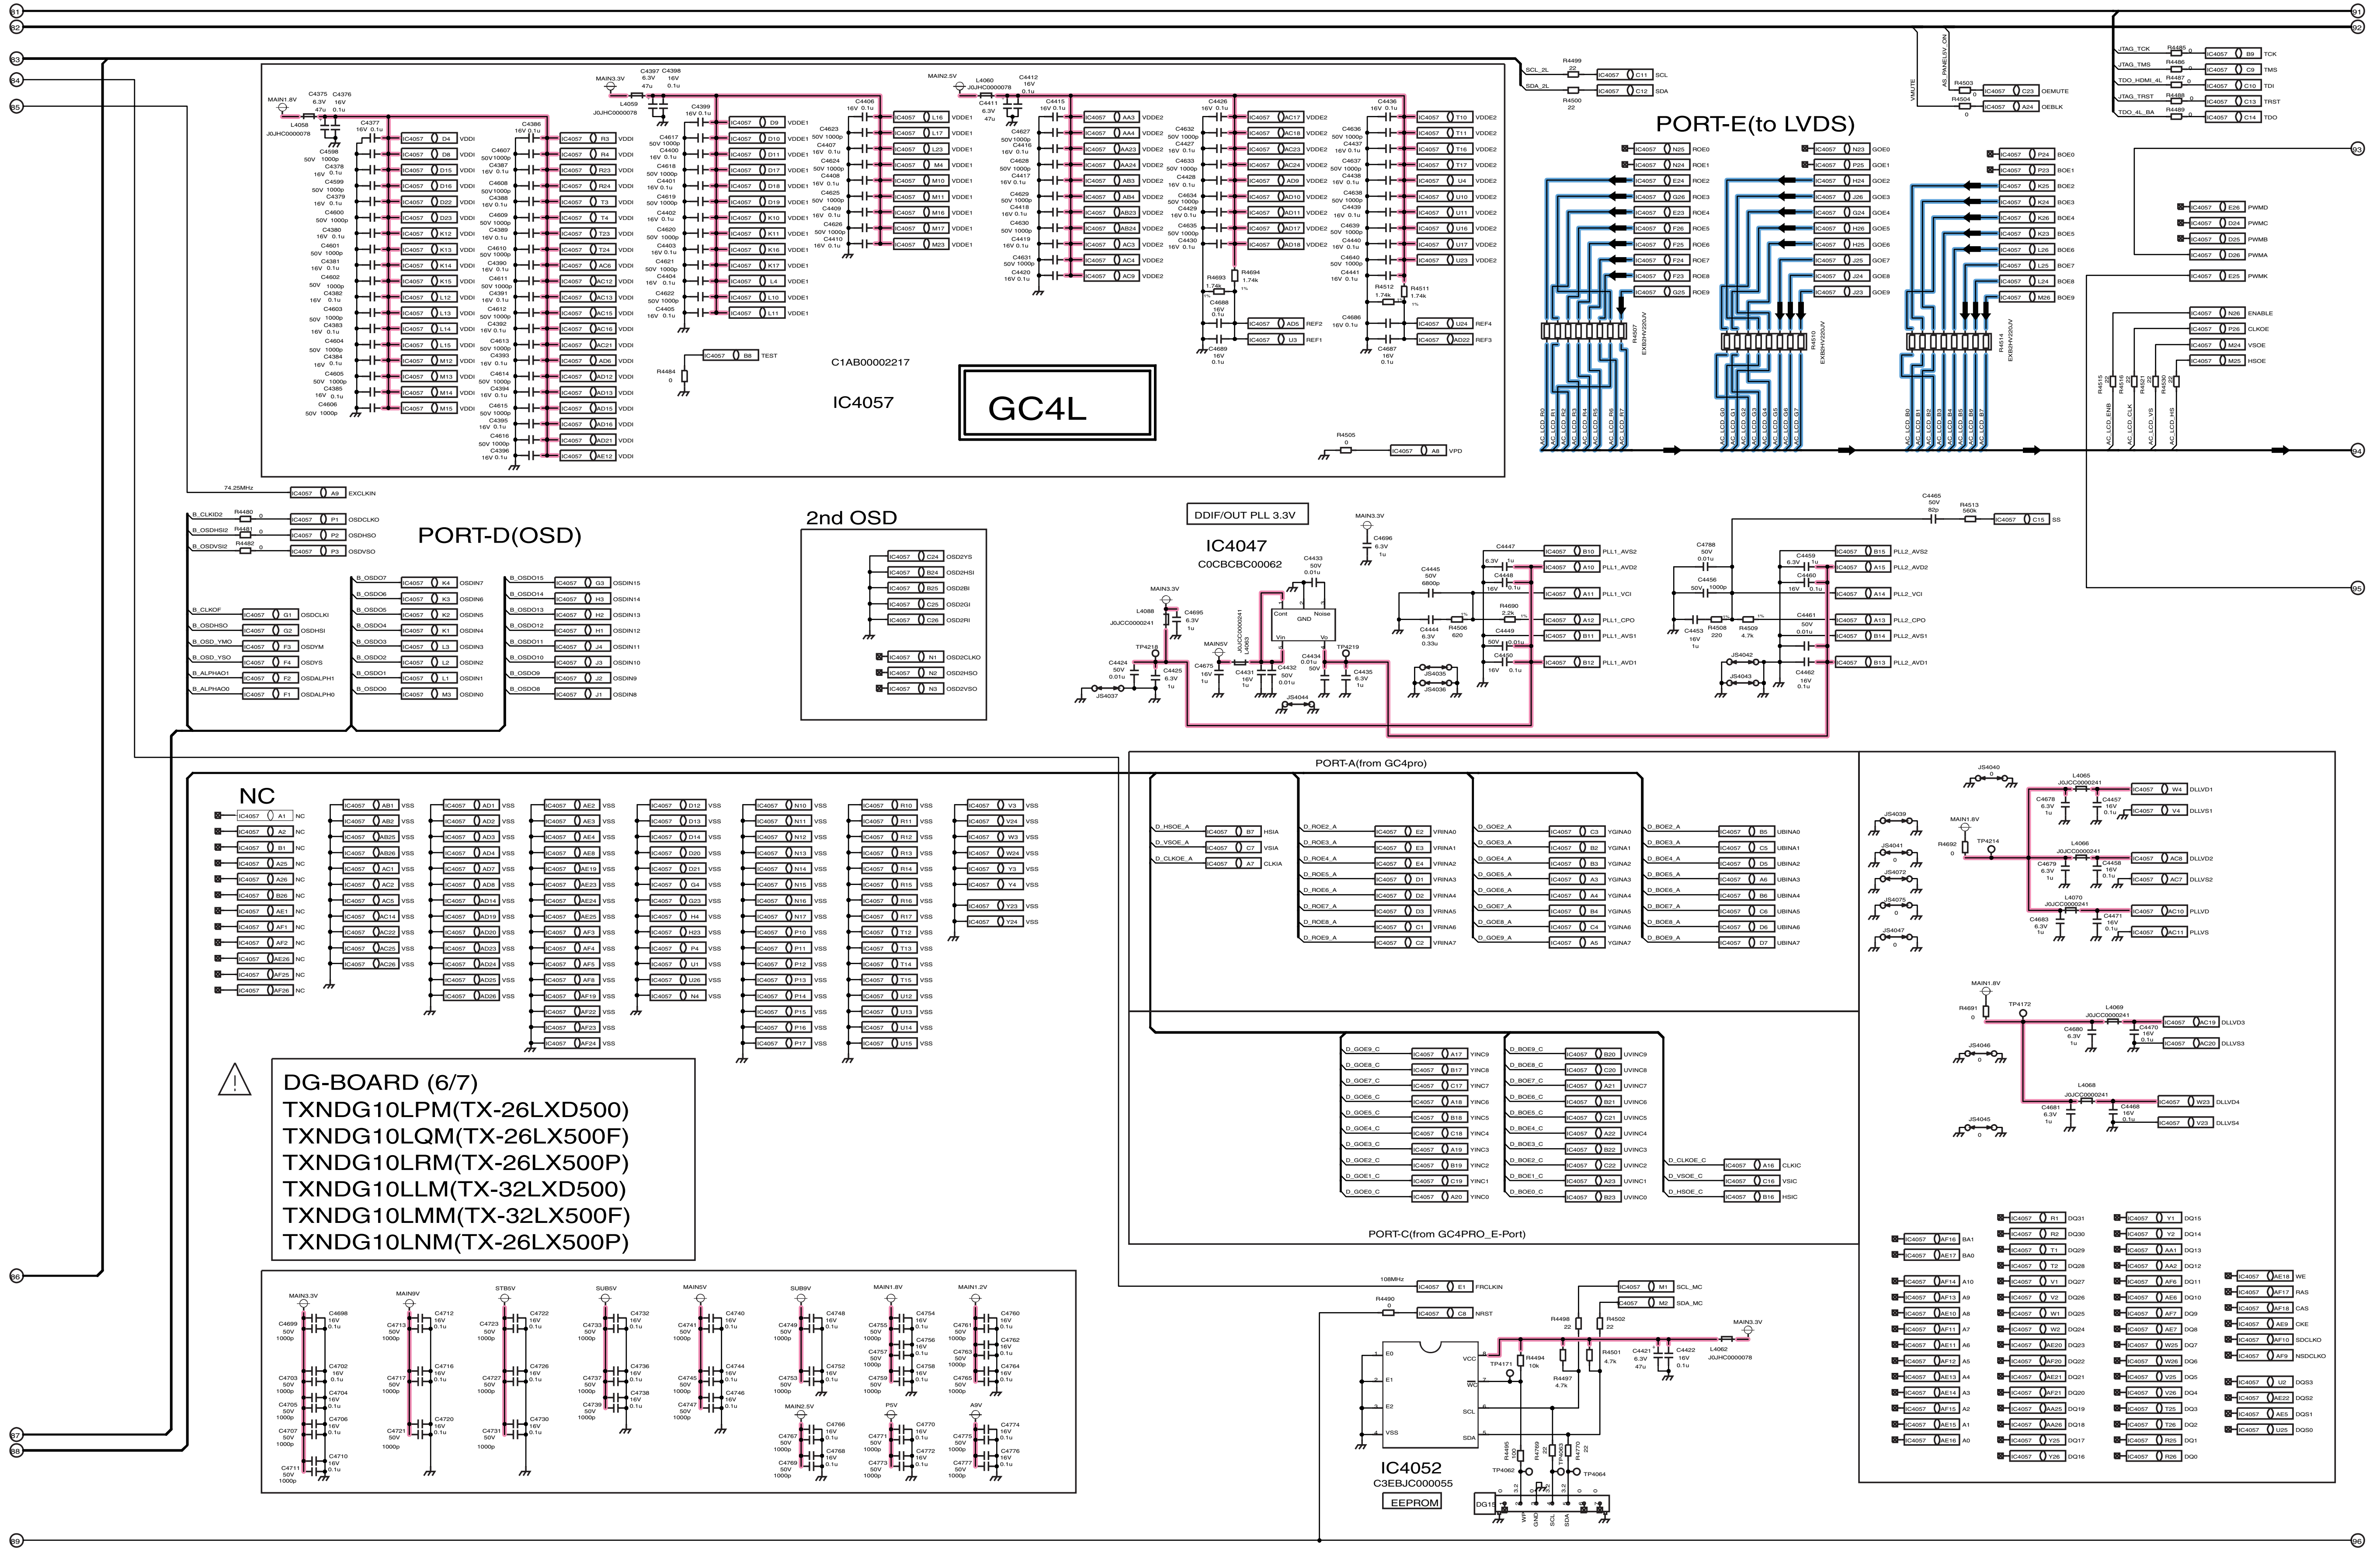
GC4L
IC4057
C1AB00002217
PORT-E(to LVDS)
PORT-D(OSD)
2nd OSD
DDIF/OUT PLL 3.3V
IC4047
C0CBCBC00062
NC
PORT-A(from GC4pro)
PORT-C(from GC4PRO_E-Port)
IC4052
C3EBJC000055
EEPROM
DG-BOARD (6/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)
MAIN1.8V
MAIN3.3V
MAIN2.5V
MAIN5V
MAIN9V
STB5V
SUB5V
SUB9V
MAIN1.2V
P5V
A9V
74.25MHz
108MHz

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (6 of 7) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P DG-Board (6 of 7) Schematic Diagram

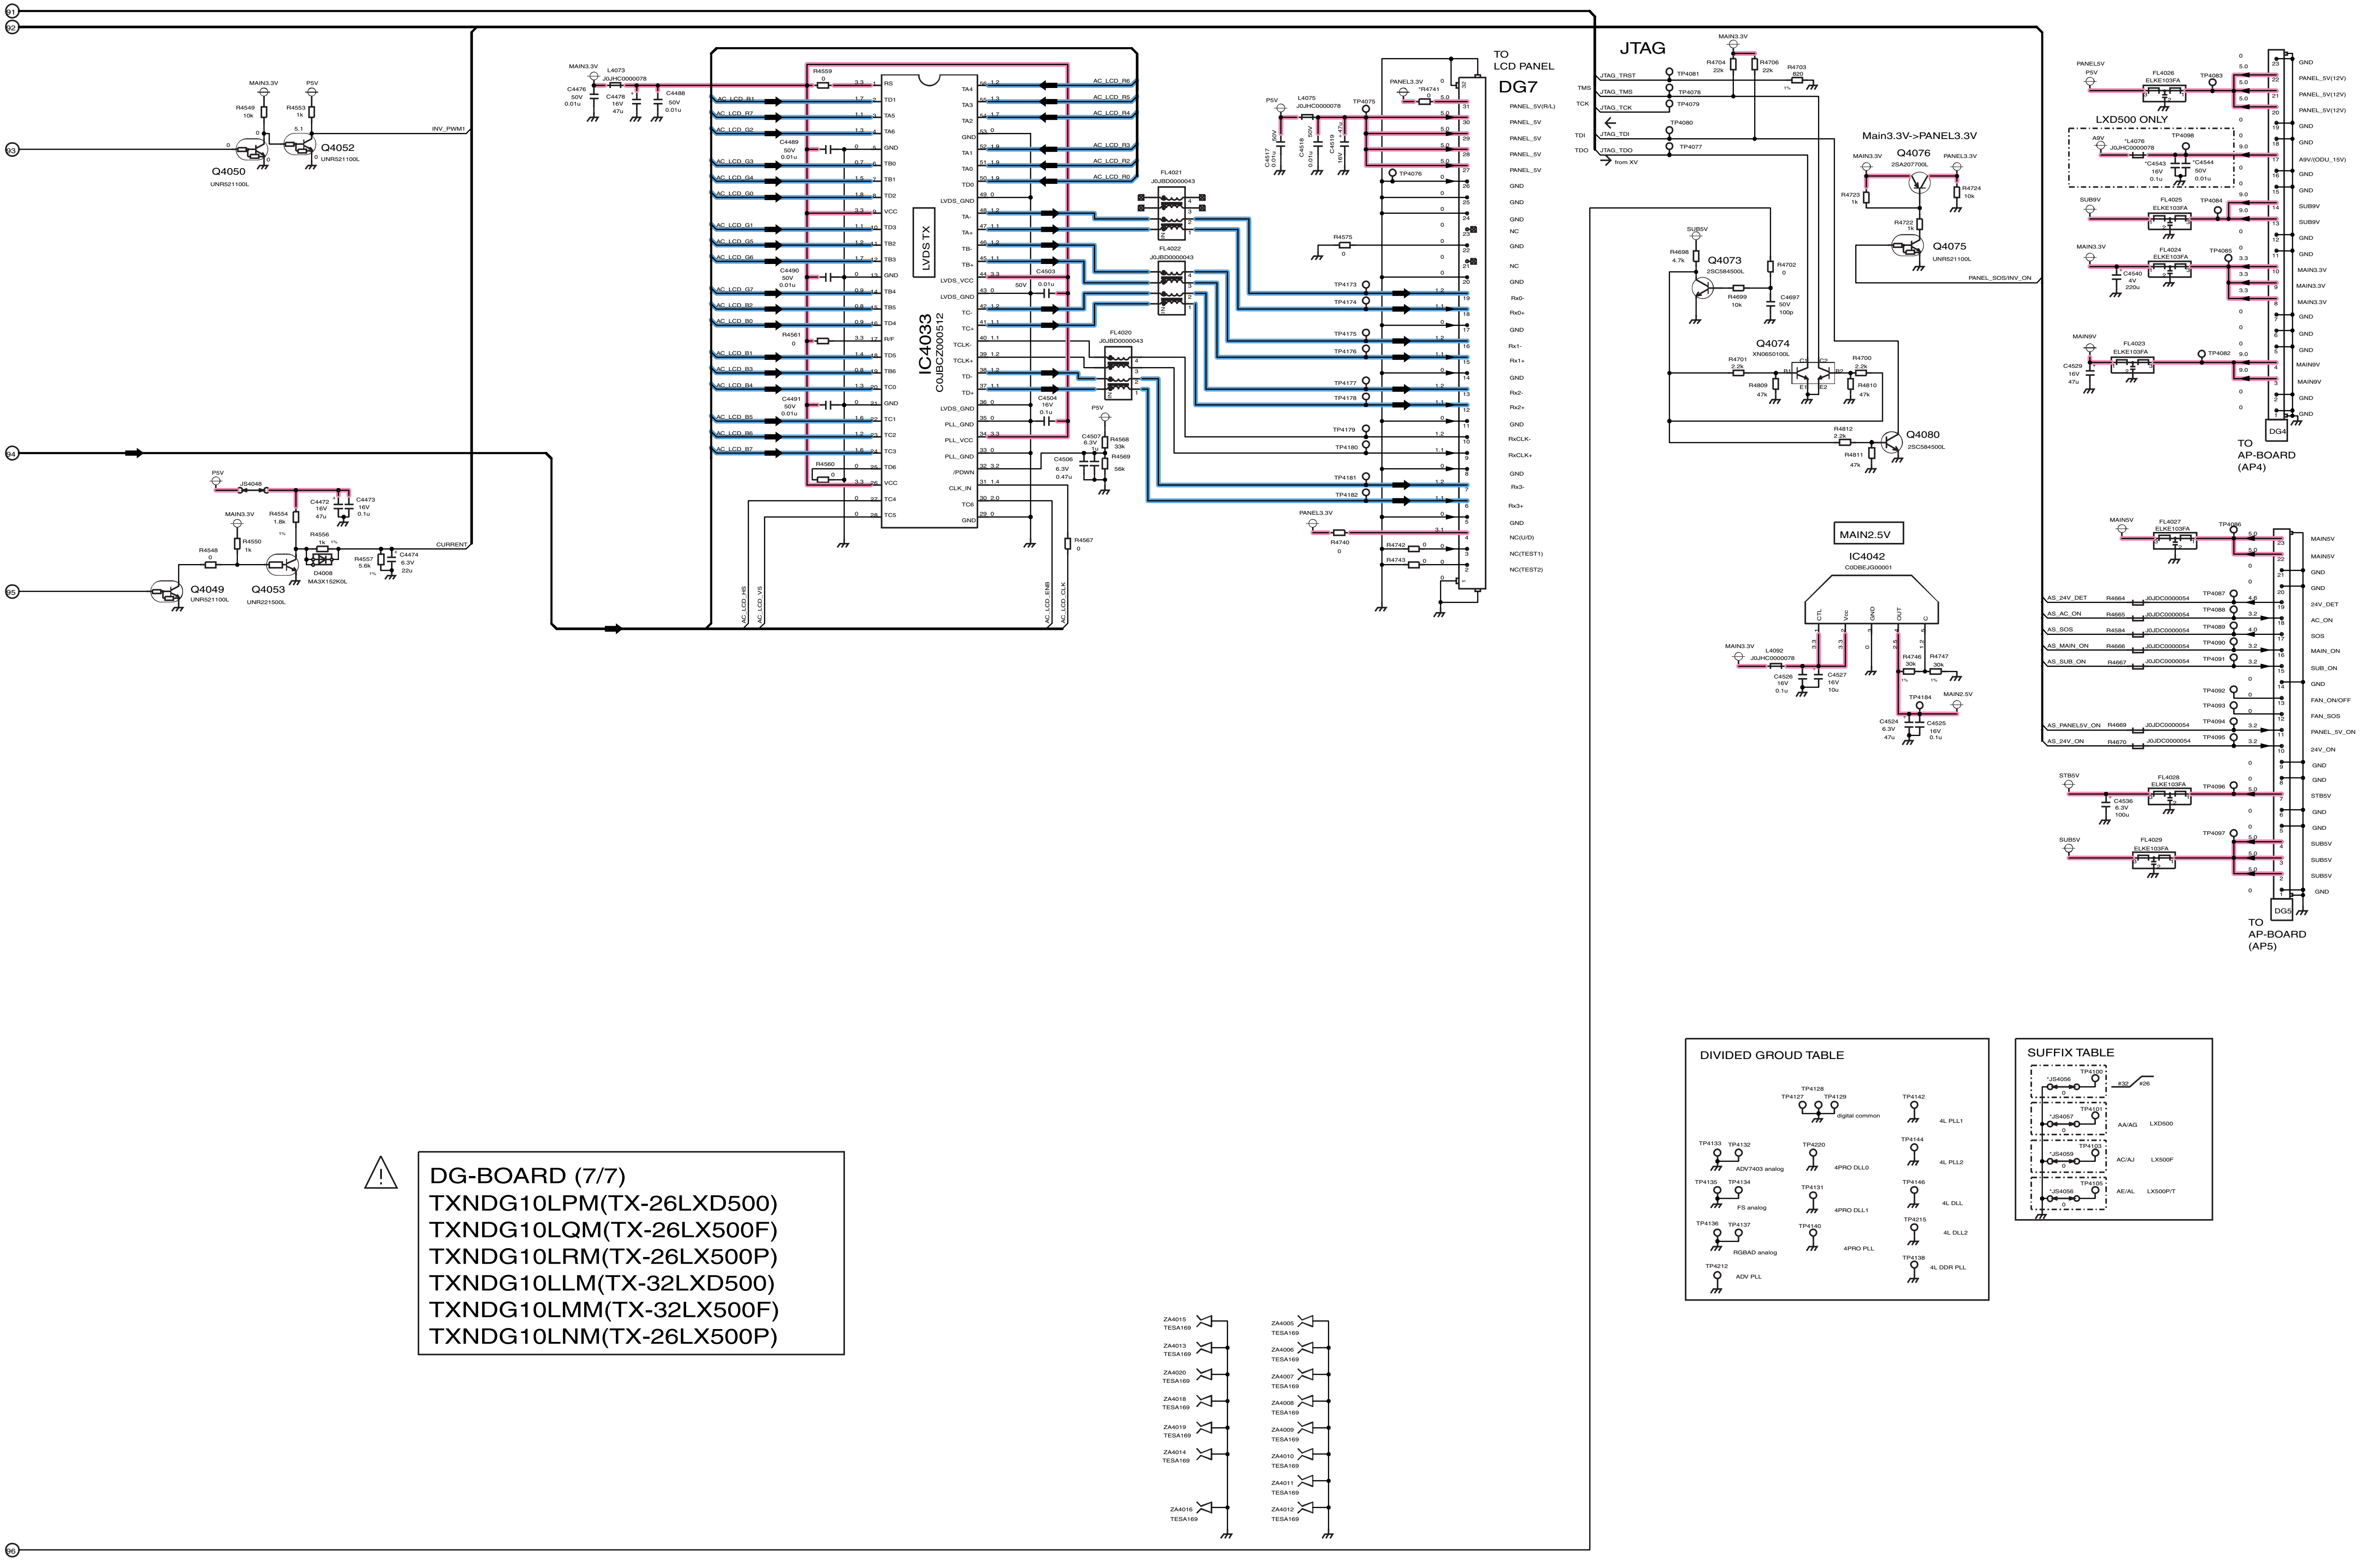
IC4033
C0JBCZ000512
LVDS TX
TO LCD PANEL
DG7
JTAG
Main3.3V->PANEL3.3V
Q4076
Q4075
Q4073
Q4074
Q4080
MAIN2.5V
IC4042
C0DBEJG00001
LXD500 ONLY
TO AP-BOARD (AP4)
DG4
TO AP-BOARD (AP5)
DG5
Q4050
Q4052
Q4049
Q4053
DIVIDED GROUD TABLE
SUFFIX TABLE

⚠

DG-BOARD (7/7)
TXNDG10LPM(TX-26LXD500)
TXNDG10LQM(TX-26LX500F)
TXNDG10LRM(TX-26LX500P)
TXNDG10LLM(TX-32LXD500)
TXNDG10LMM(TX-32LX500F)
TXNDG10LNM(TX-26LX500P)

⚠ DV-BOARD TXNDV10LLM

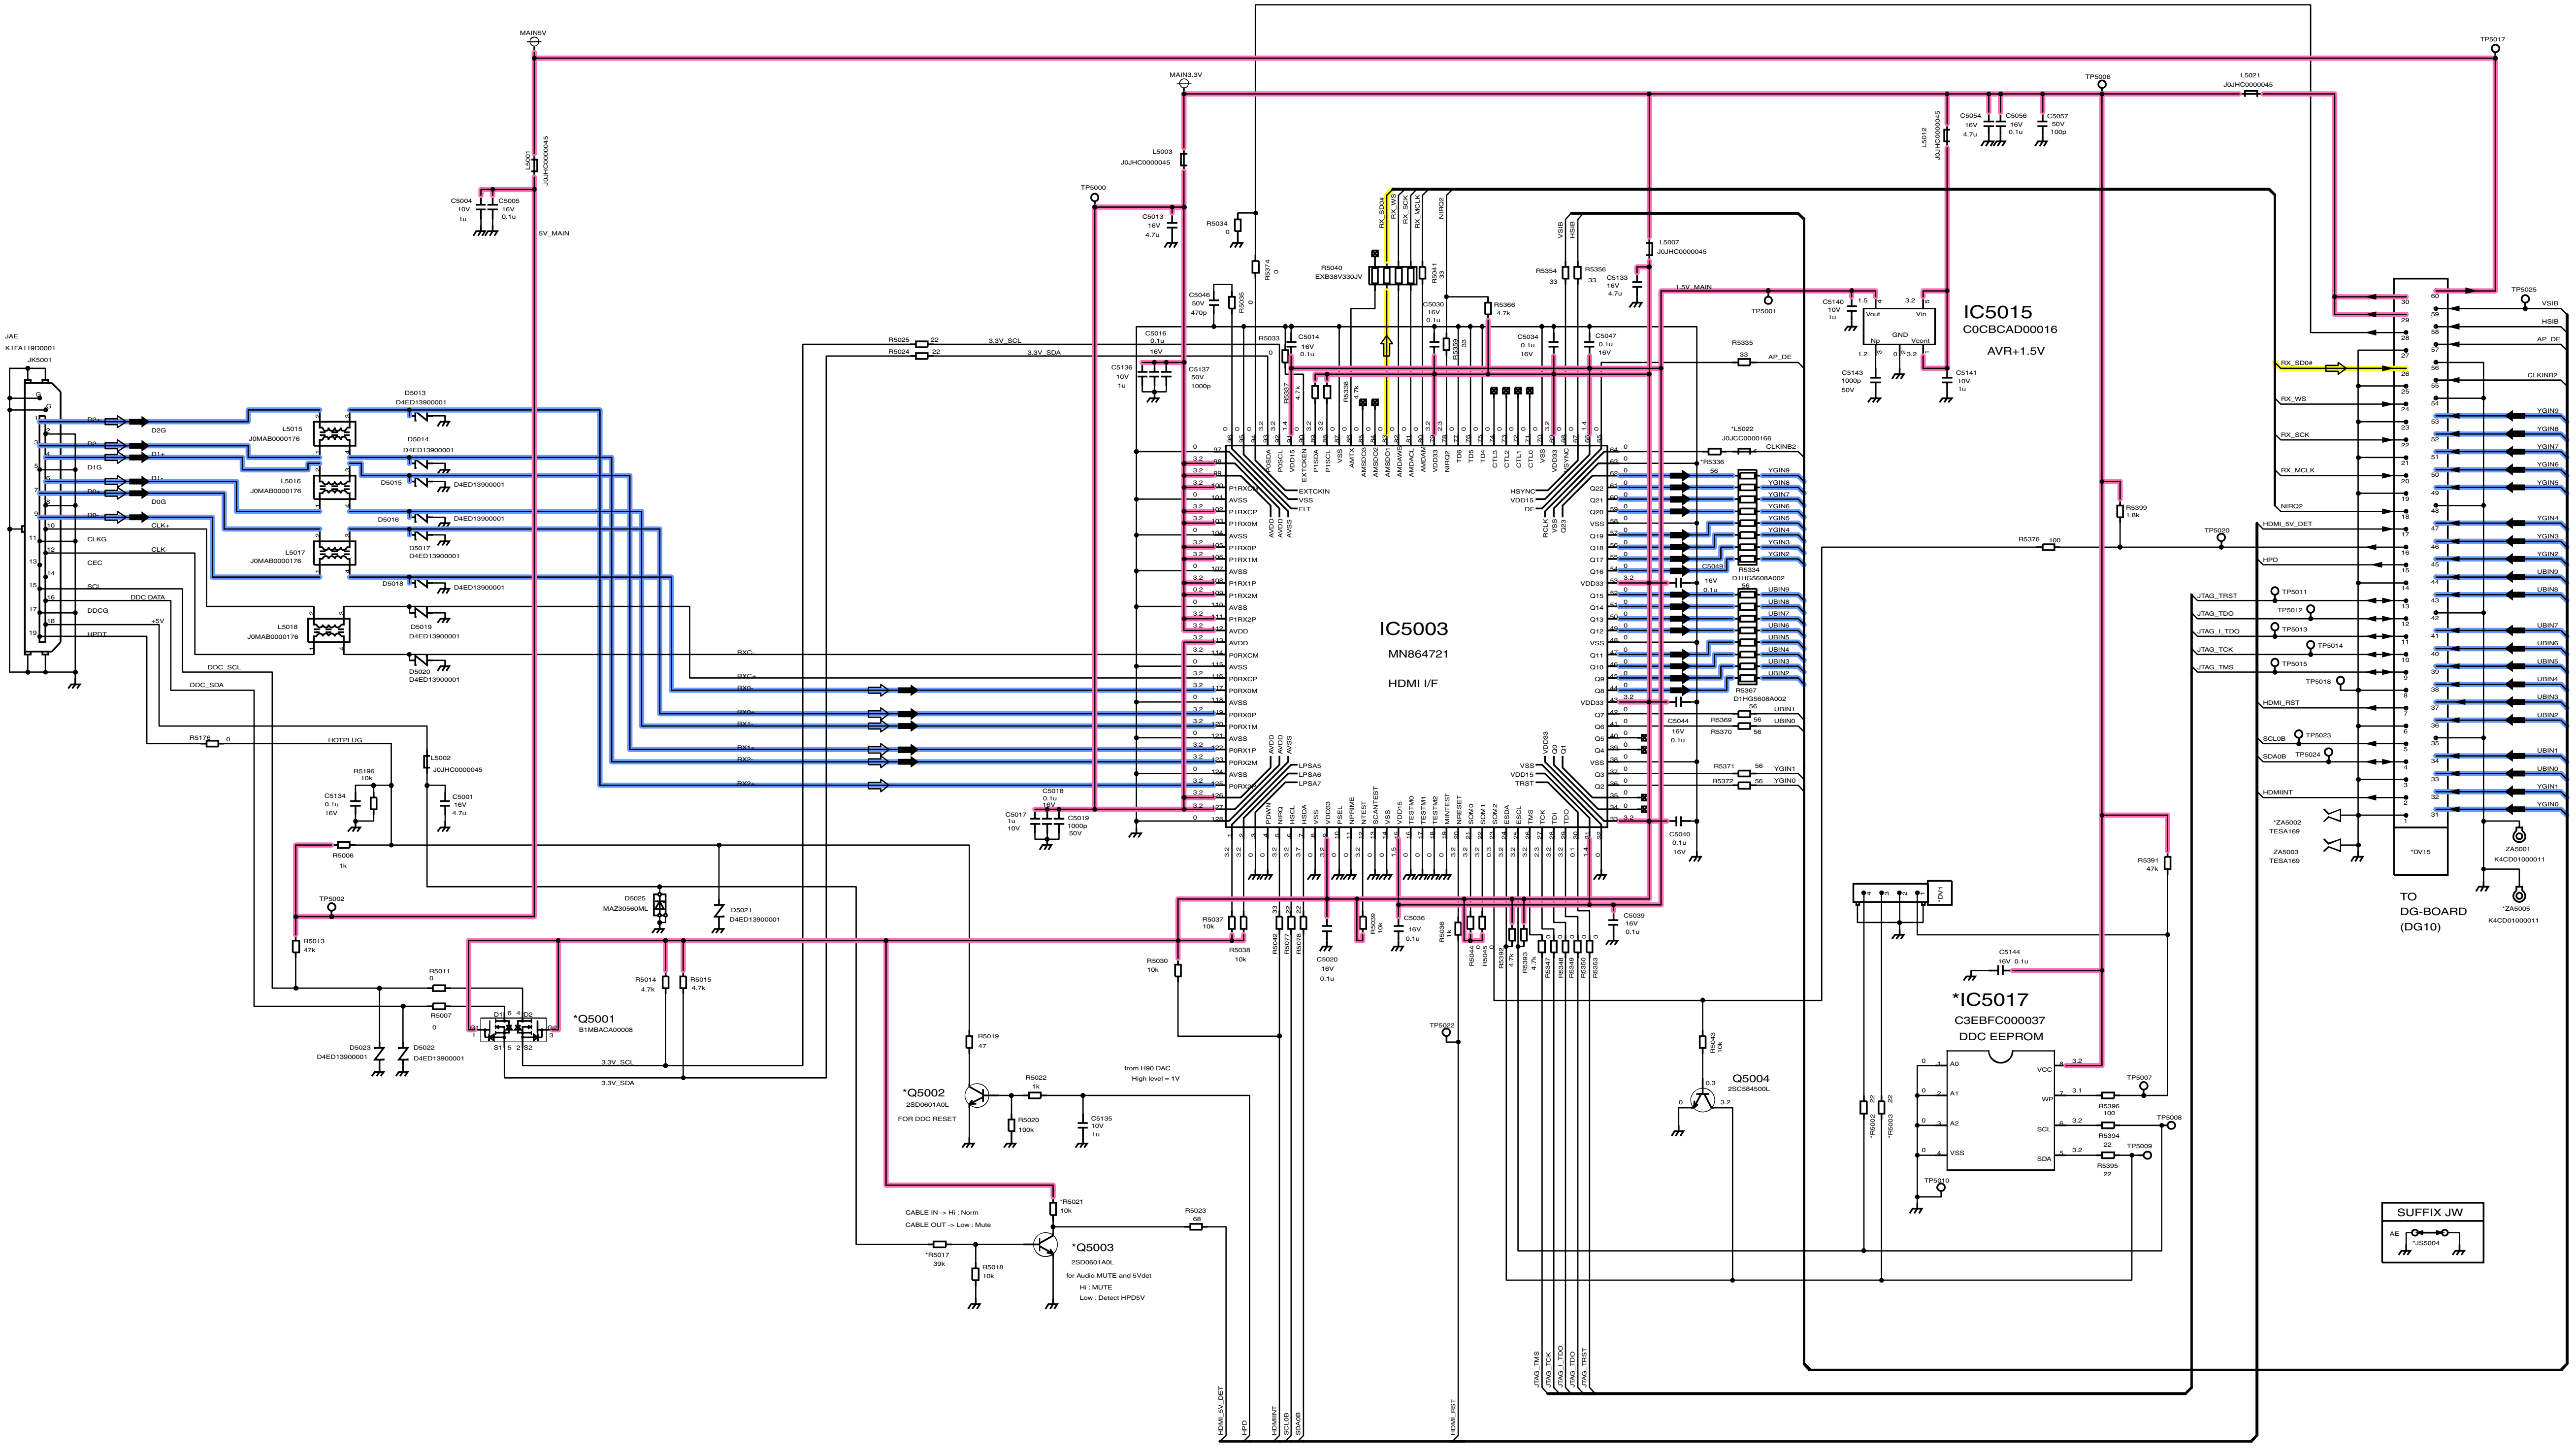
MAIN5V
MAIN3.3V
5V_MAIN
JAE
K1FA119D0001
JK5001
D2G
D1G
D0G
CLK+
CLK-
CLKG
CEC
SCL
DDC DATA
DDCG
+5V
HPDT
DDC_SCL
DDC_SDA
HOTPLUG
L5015
L5016
L5017
L5018
J0MAB0000176
D5013
D5014
D5015
D5016
D5017
D5018
D5019
D5020
D4ED13900001
L5001
L5002
L5003
J0JHC0000045
C5004
C5005
C5134
C5001
R5176
R5196
R5006
R5013
TP5002
TP5000
D5025
MAZ30560ML
D5021
D5022
D5023
R5011
R5007
*Q5001
B1MBACA00008
R5014
R5015
3.3V_SCL
3.3V_SDA
R5019
*Q5002
2SD0601A0L
FOR DDC RESET
R5020
R5022
C5135
from H90 DAC
High level = 1V
CABLE IN -> Hi : Norm
CABLE OUT -> Low : Mute
*R5017
R5018
*R5021
R5023
*Q5003
2SD0601A0L
for Audio MUTE and 5Vdet
Hi : MUTE
Low : Detect HPD5V
R5025
R5024
IC5003
MN864721
HDMI I/F
R5040
EXB38V330JV
RX_SD0#
RX_WS
RX_SCK
RX_MCLK
NIRQ2
L5007
1.5V_MAIN
TP5001
IC5015
C0CBCAD00016
AVR+1.5V
Vout
Vin
GND
Vcont
L5012
L5021
TP5006
TP5017
TP5025
C5054
C5056
C5057
C5140
C5141
C5143
R5335
AP_DE
*L5022
J0JCC0000168
CLKIN2
YGIN0–YGIN9
UBIN0–UBIN9
R5334
R5367
D1HG5608A002
R5376
R5399
TP5020
HDMI_5V_DET
HPD
JTAG_TRST
JTAG_TDO
JTAG_I_TDO
JTAG_TCK
JTAG_TMS
TP5011
TP5012
TP5013
TP5014
TP5015
TP5018
HDMI_RST
SCL0B
SDA0B
TP5023
TP5024
HDMINT
*ZA5002
*ZA5003
TESA169
*DV15
ZA5001
*ZA5005
K4CD01000011
TO
DG-BOARD
(DG10)
VSIB
HSIB
CLKIN2
*IC5017
C3EBFC000037
DDC EEPROM
A0
A1
A2
VSS
VCC
WP
SCL
SDA
C5144
R5396
R5394
R5395
TP5007
TP5008
TP5009
TP5010
*R5002
*R5003
Q5004
2SC5845000L
R5043
TP5022
R5030
R5037
R5038
C5020
C5036
C5039
C5040
C5044
SUFFIX JW
*JS5004
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9

TX-26/32LXD500 TX-26/32LX500F/P
DV-Board Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P
DV-Board Schematic Diagram

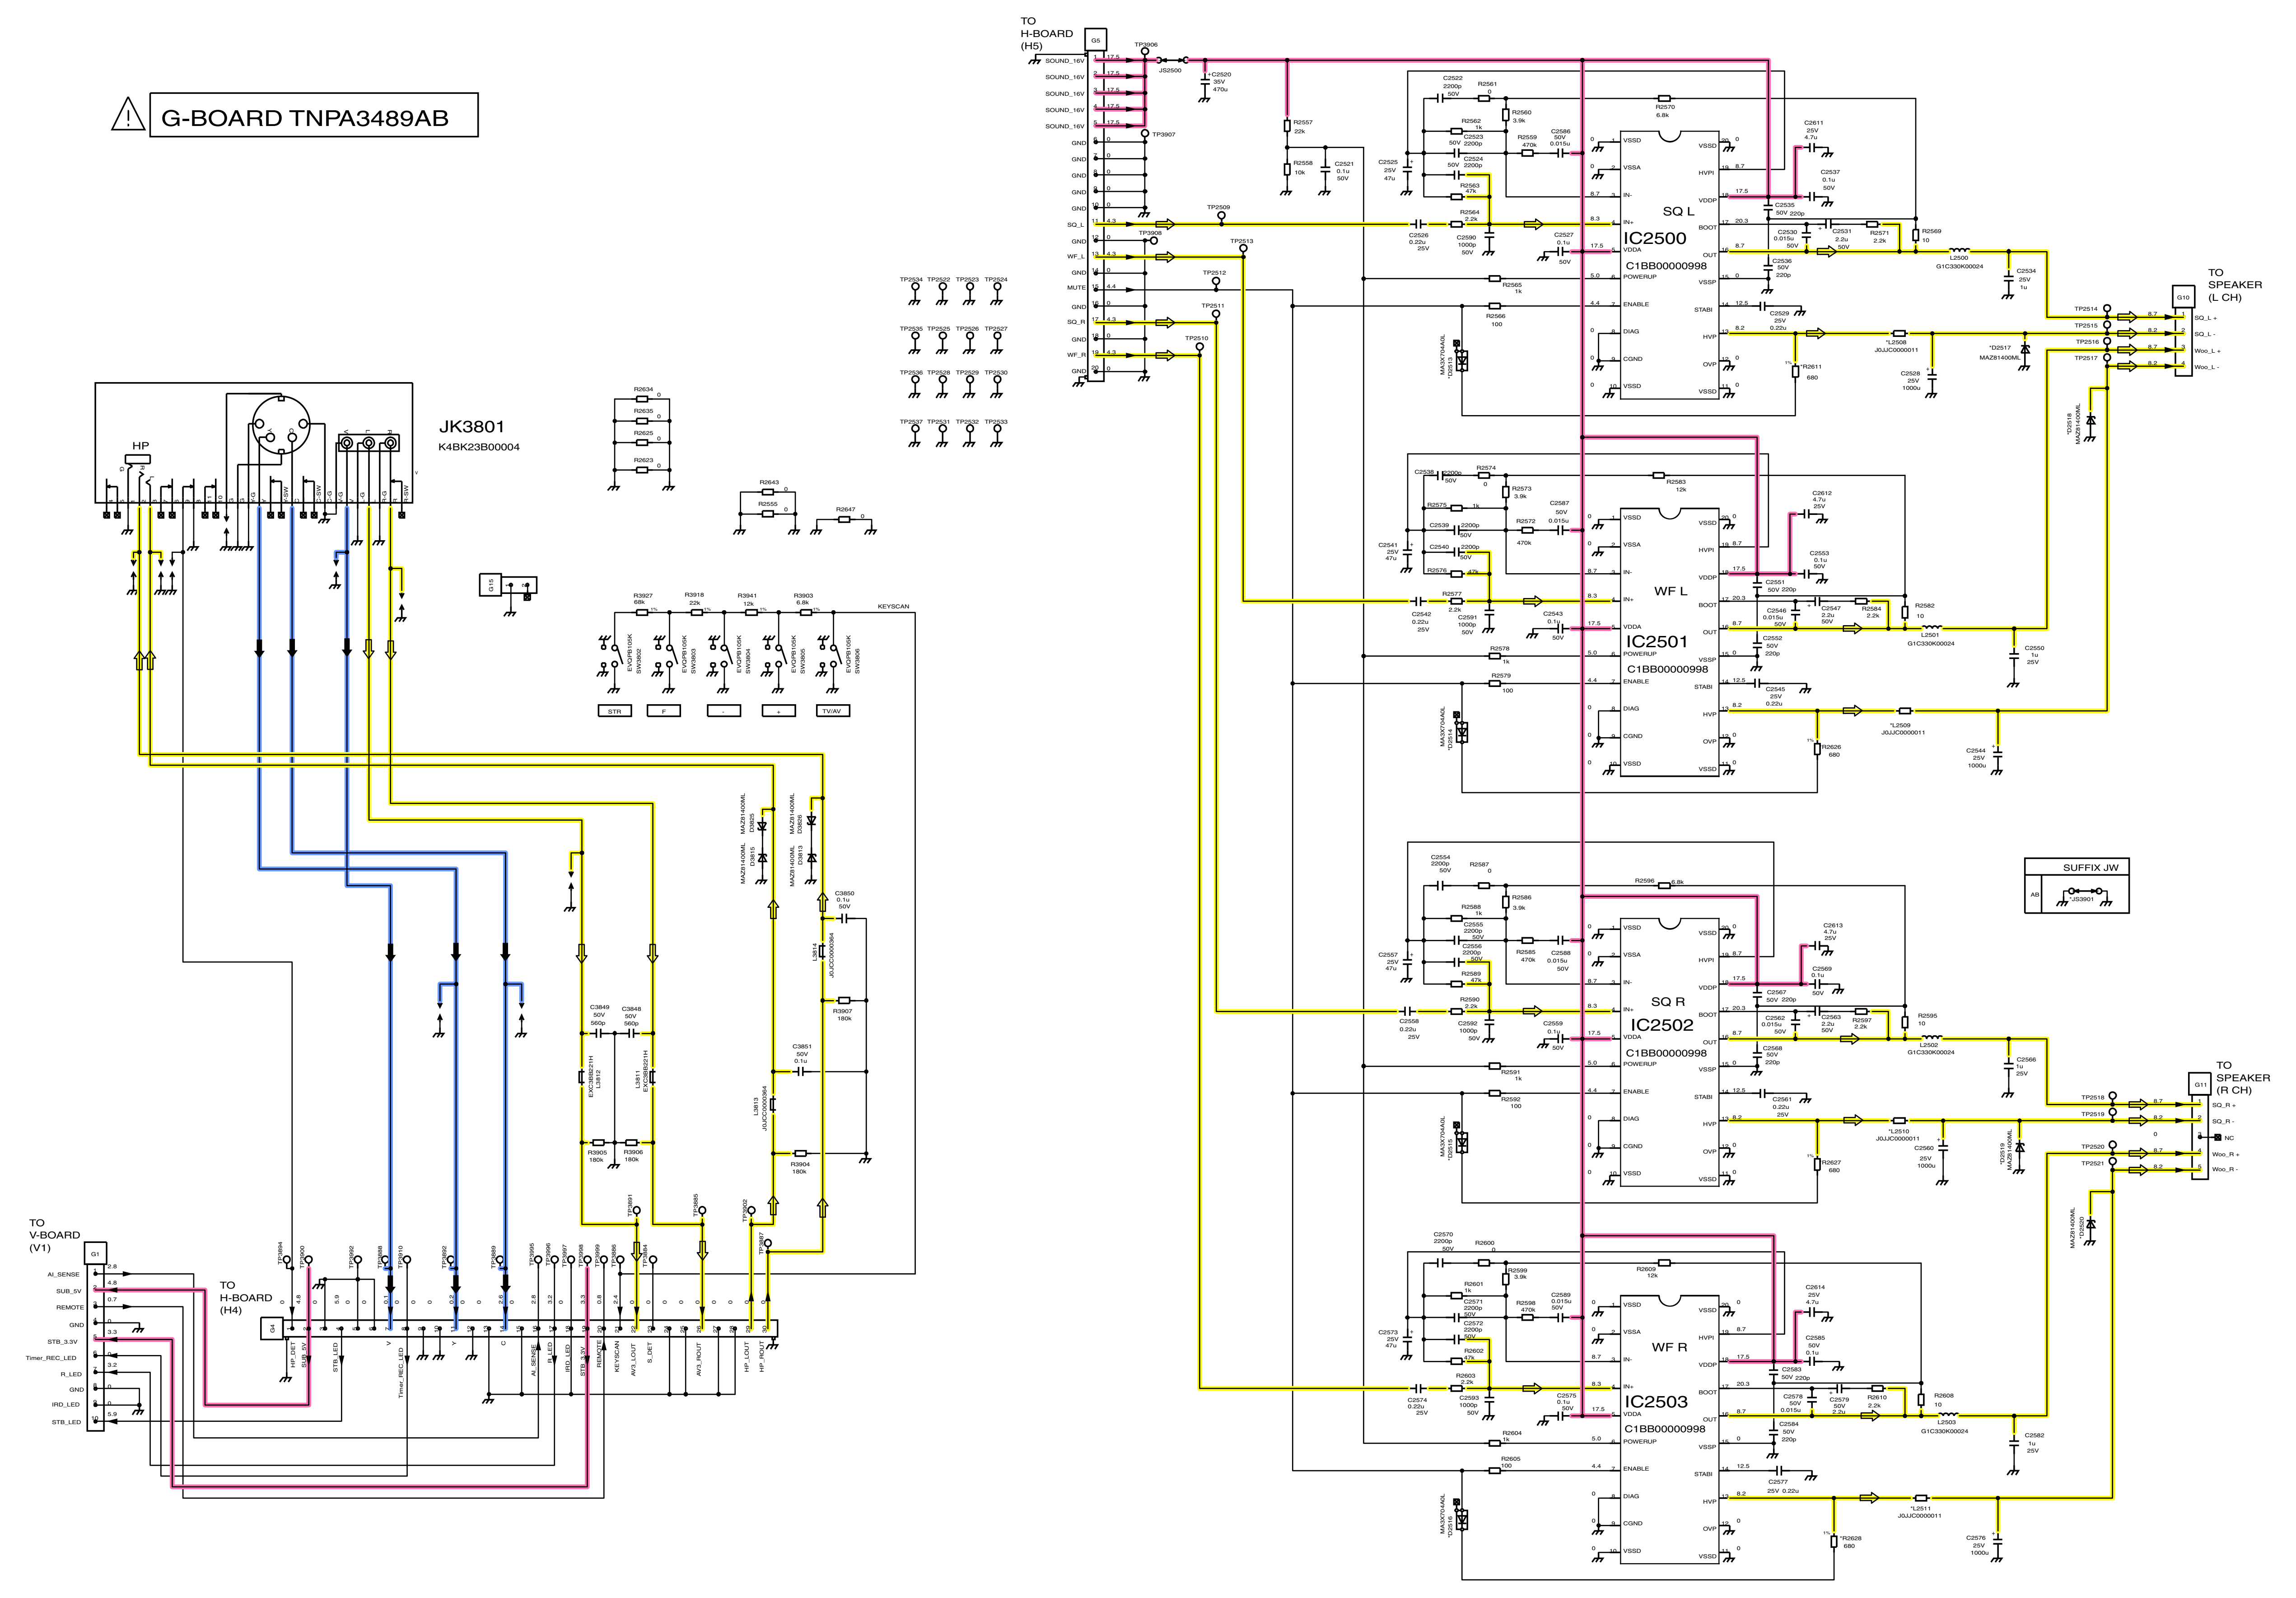
G-BOARD TNPA3489AB
JK3801
K4BK23B00004
HP
TO H-BOARD (H5)
G5
SOUND_16V
GND
SQ_L
WF_L
MUTE
SQ_R
WF_R
JS2500
C2520 35V 470u
TO H-BOARD (H4)
G4
TO V-BOARD (V1)
G1
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
IRD_LED
STB_LED
G15
KEYSCAN
STR
F
-
+
TV/AV
SQ L
IC2500
C1BB00000998
WF L
IC2501
C1BB00000998
SQ R
IC2502
C1BB00000998
WF R
IC2503
C1BB00000998
VSSD
VSSA
IN-
IN+
VDDA
POWERUP
ENABLE
DIAG
CGND
HVPI
VDDP
BOOT
OUT
VSSP
STABI
HVP
OVP
TO SPEAKER (L CH)
G10
SQ_L +
SQ_L -
Woo_L +
Woo_L -
TO SPEAKER (R CH)
G11
SQ_R +
SQ_R -
NC
Woo_R +
Woo_R -
SUFFIX JW
AB
JS3901
L2500 G1C330K00024
L2501 G1C330K00024
L2502 G1C330K00024
L2503 G1C330K00024
L2508 J0JJC0000011
L2509 J0JJC0000011
L2510 J0JJC0000011
L2511 J0JJC0000011
MAZ81400ML
MA3X704A0L
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9

TX-26/32LXD500 TX-26/32LX500F/P G-Board Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P G-Board Schematic Diagram

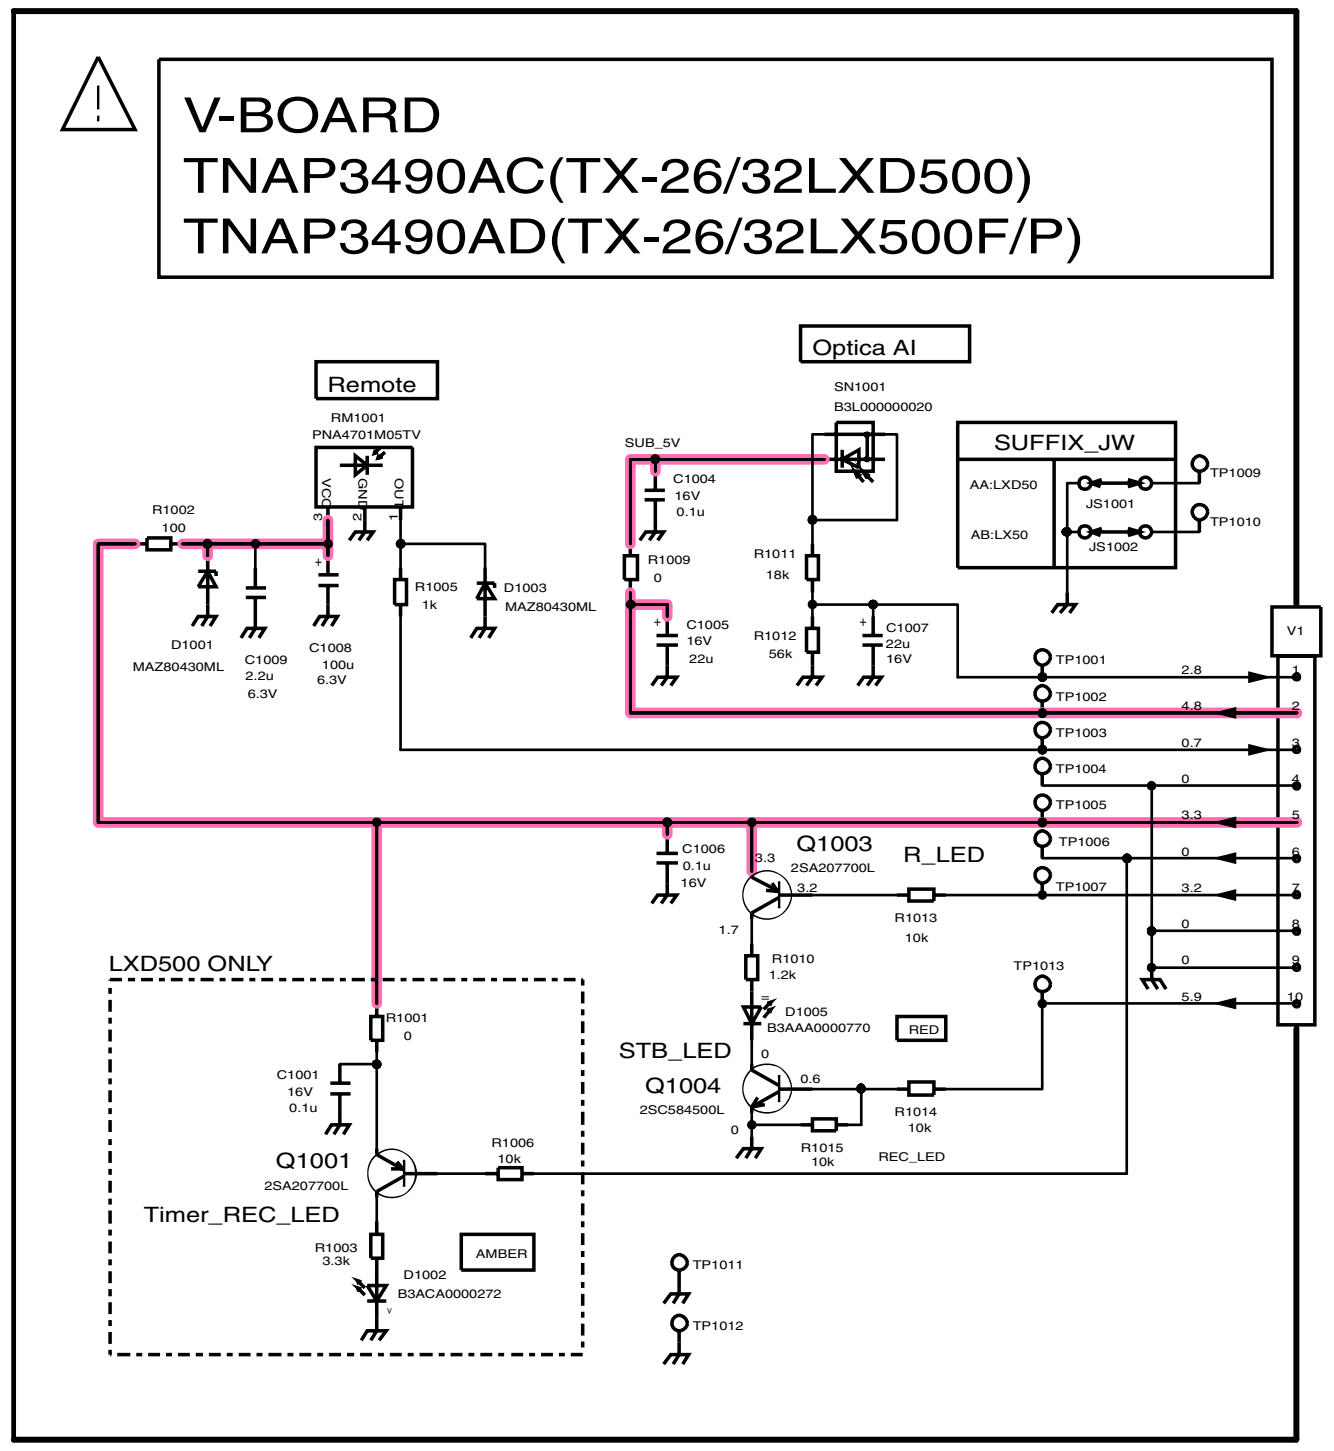
V-BOARD
TNAP3490AC(TX-26/32LXD500)
TNAP3490AD(TX-26/32LX500F/P)
Remote
Optica AI
SUFFIX_JW
TO G-BOARD (G1)
LXD500 ONLY
Q1001
Timer_REC_LED
Q1003
R_LED
STB_LED
Q1004
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
GND
IRD_LED
STB_LED
AMBER
RED

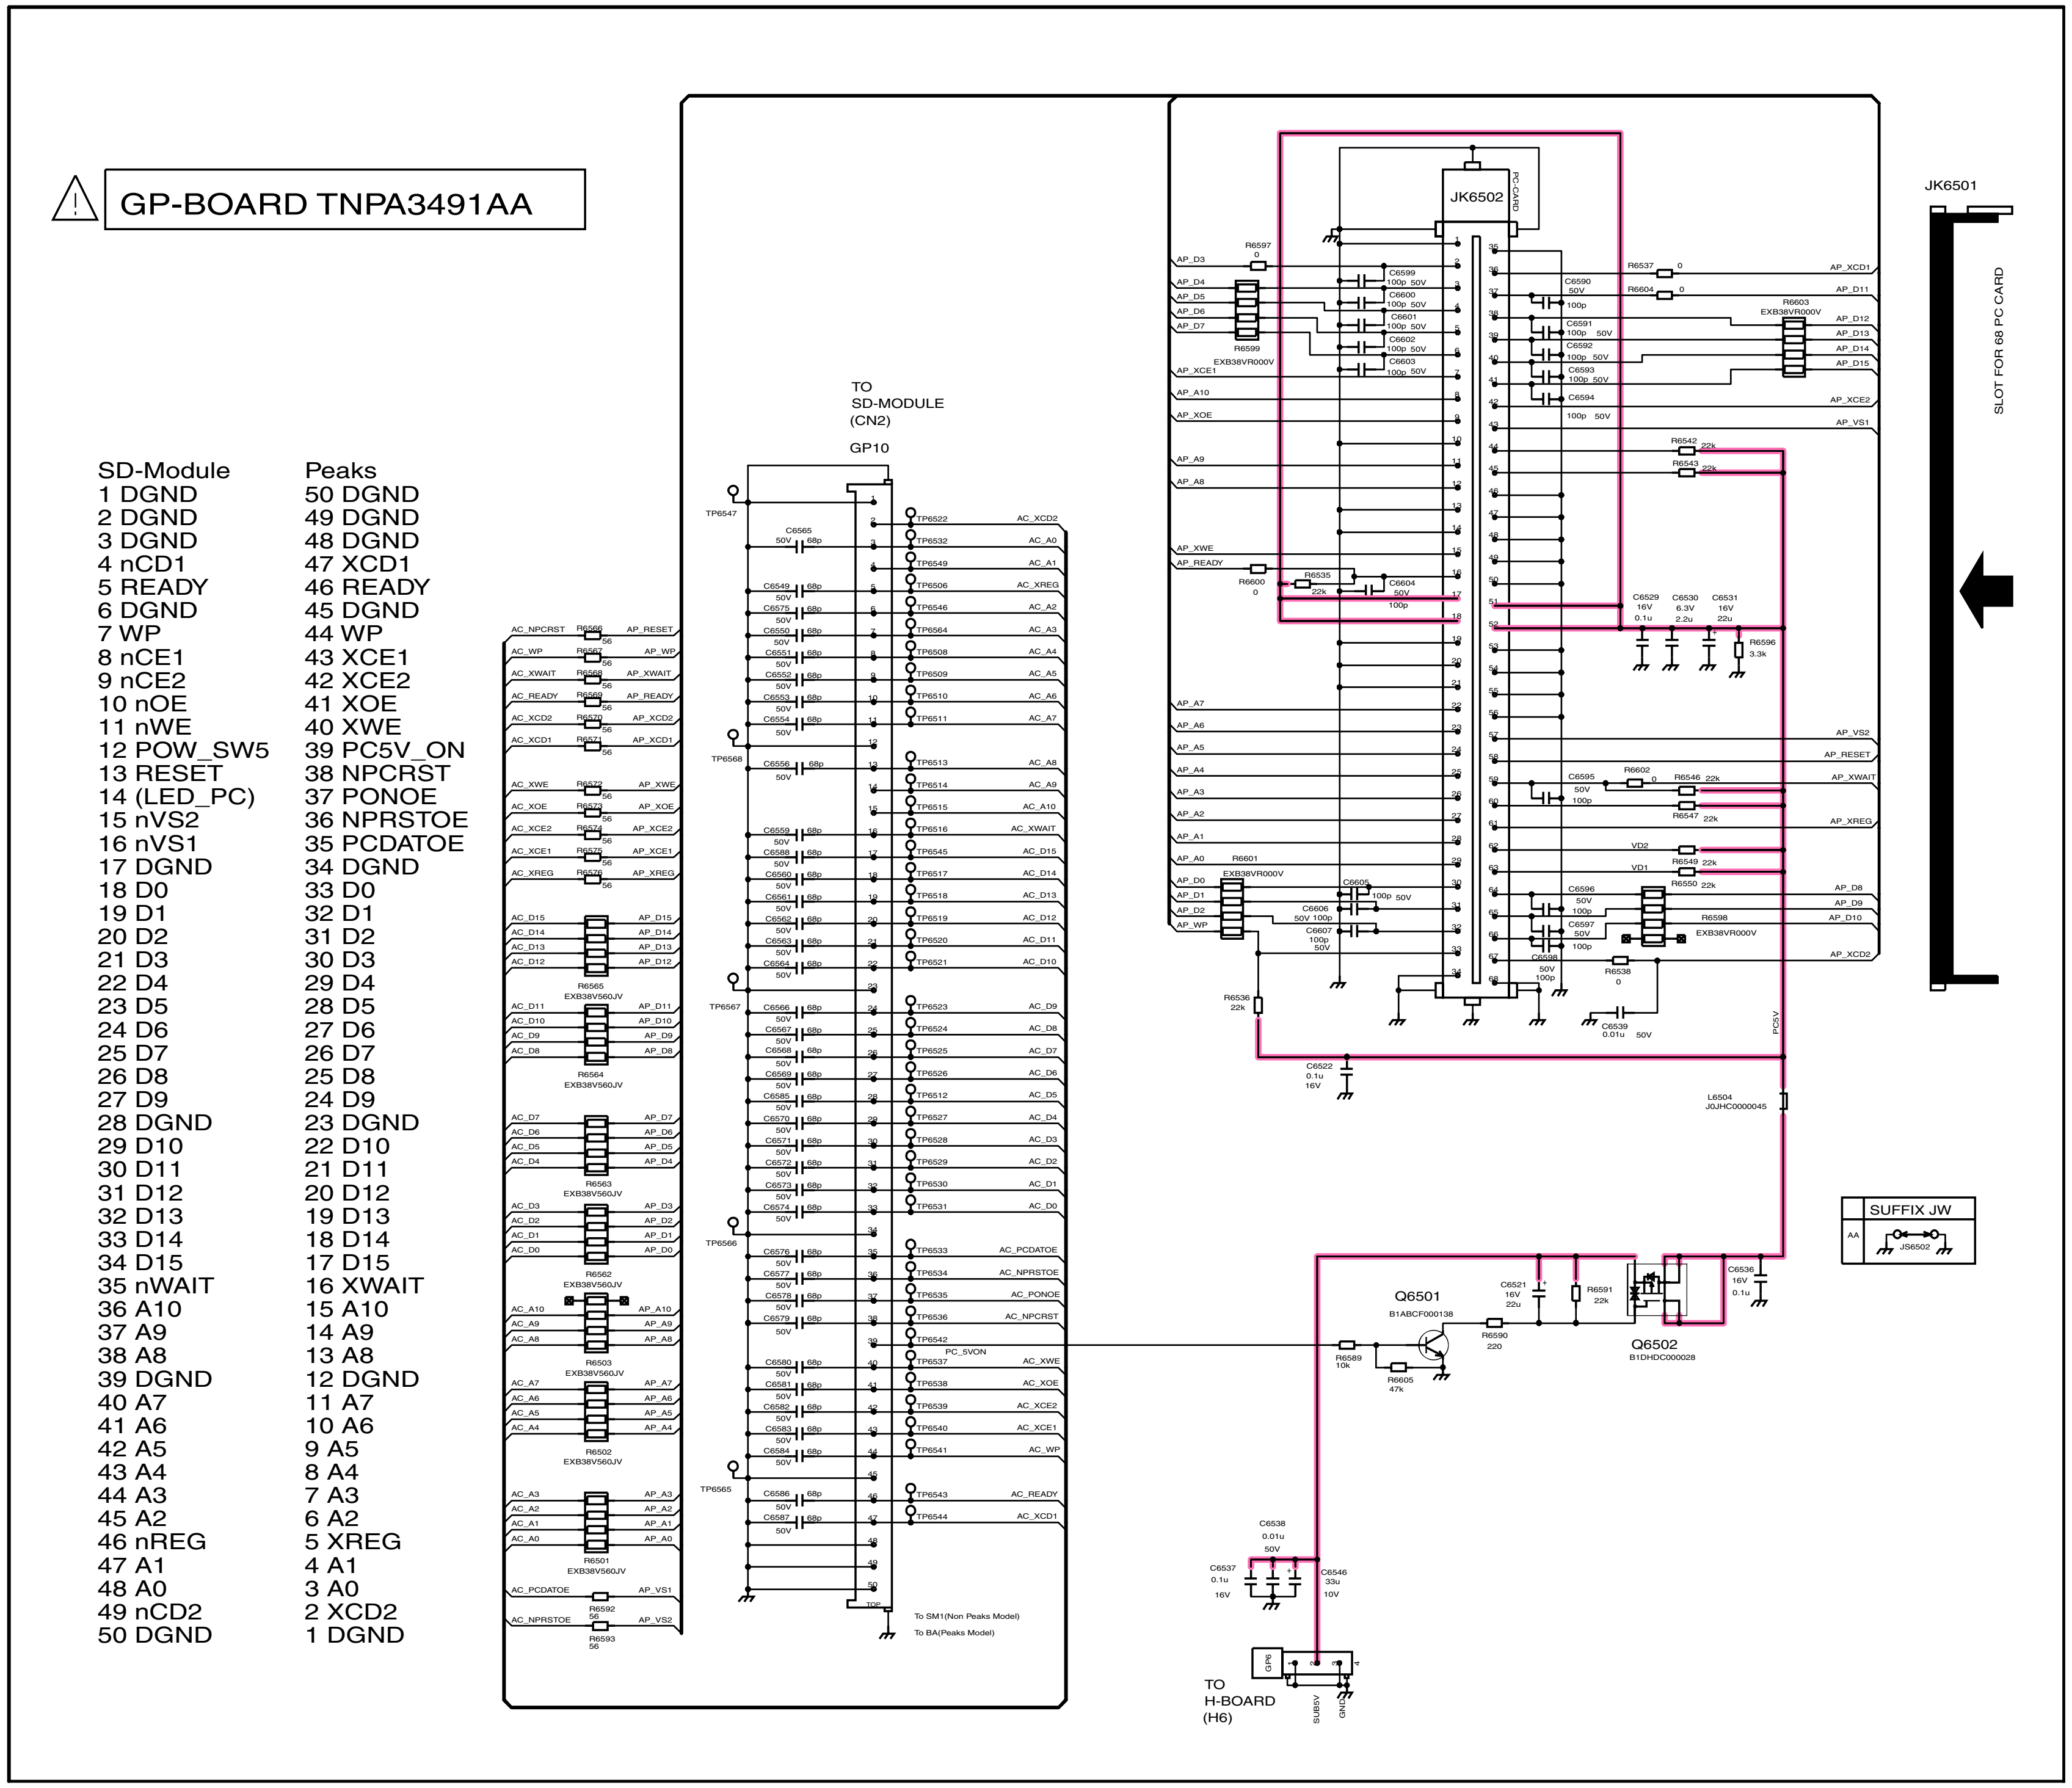
GP-BOARD TNPA3491AA
TO SD-MODULE (CN2)
GP10
JK6502
JK6501
SLOT FOR 68 PC CARD
SUFFIX JW
Q6501
Q6502
TO H-BOARD (H6)
To SM1(Non Peaks Model)
To BA(Peaks Model)

SD-Module	Peaks
1 DGND	50 DGND
2 DGND	49 DGND
3 DGND	48 DGND
4 nCD1	47 XCD1
5 READY	46 READY
6 DGND	45 DGND
7 WP	44 WP
8 nCE1	43 XCE1
9 nCE2	42 XCE2
10 nOE	41 XOE
11 nWE	40 XWE
12 POW_SW5	39 PC5V_ON
13 RESET	38 NPCRST
14 (LED_PC)	37 PONOE
15 nVS2	36 NPRSTOE
16 nVS1	35 PCDATOE
17 DGND	34 DGND
18 D0	33 D0
19 D1	32 D1
20 D2	31 D2
21 D3	30 D3
22 D4	29 D4
23 D5	28 D5
24 D6	27 D6
25 D7	26 D7
26 D8	25 D8
27 D9	24 D9
28 DGND	23 DGND
29 D10	22 D10
30 D11	21 D11
31 D12	20 D12
32 D13	19 D13
33 D14	18 D14
34 D15	17 D15
35 nWAIT	16 XWAIT
36 A10	15 A10
37 A9	14 A9
38 A8	13 A8
39 DGND	12 DGND
40 A7	11 A7
41 A6	10 A6
42 A5	9 A5
43 A4	8 A4
44 A3	7 A3
45 A2	6 A2
46 nREG	5 XREG
47 A1	4 A1
48 A0	3 A0
49 nCD2	2 XCD2
50 DGND	1 DGND

⚠ GS-BOARD TNPA3615AA

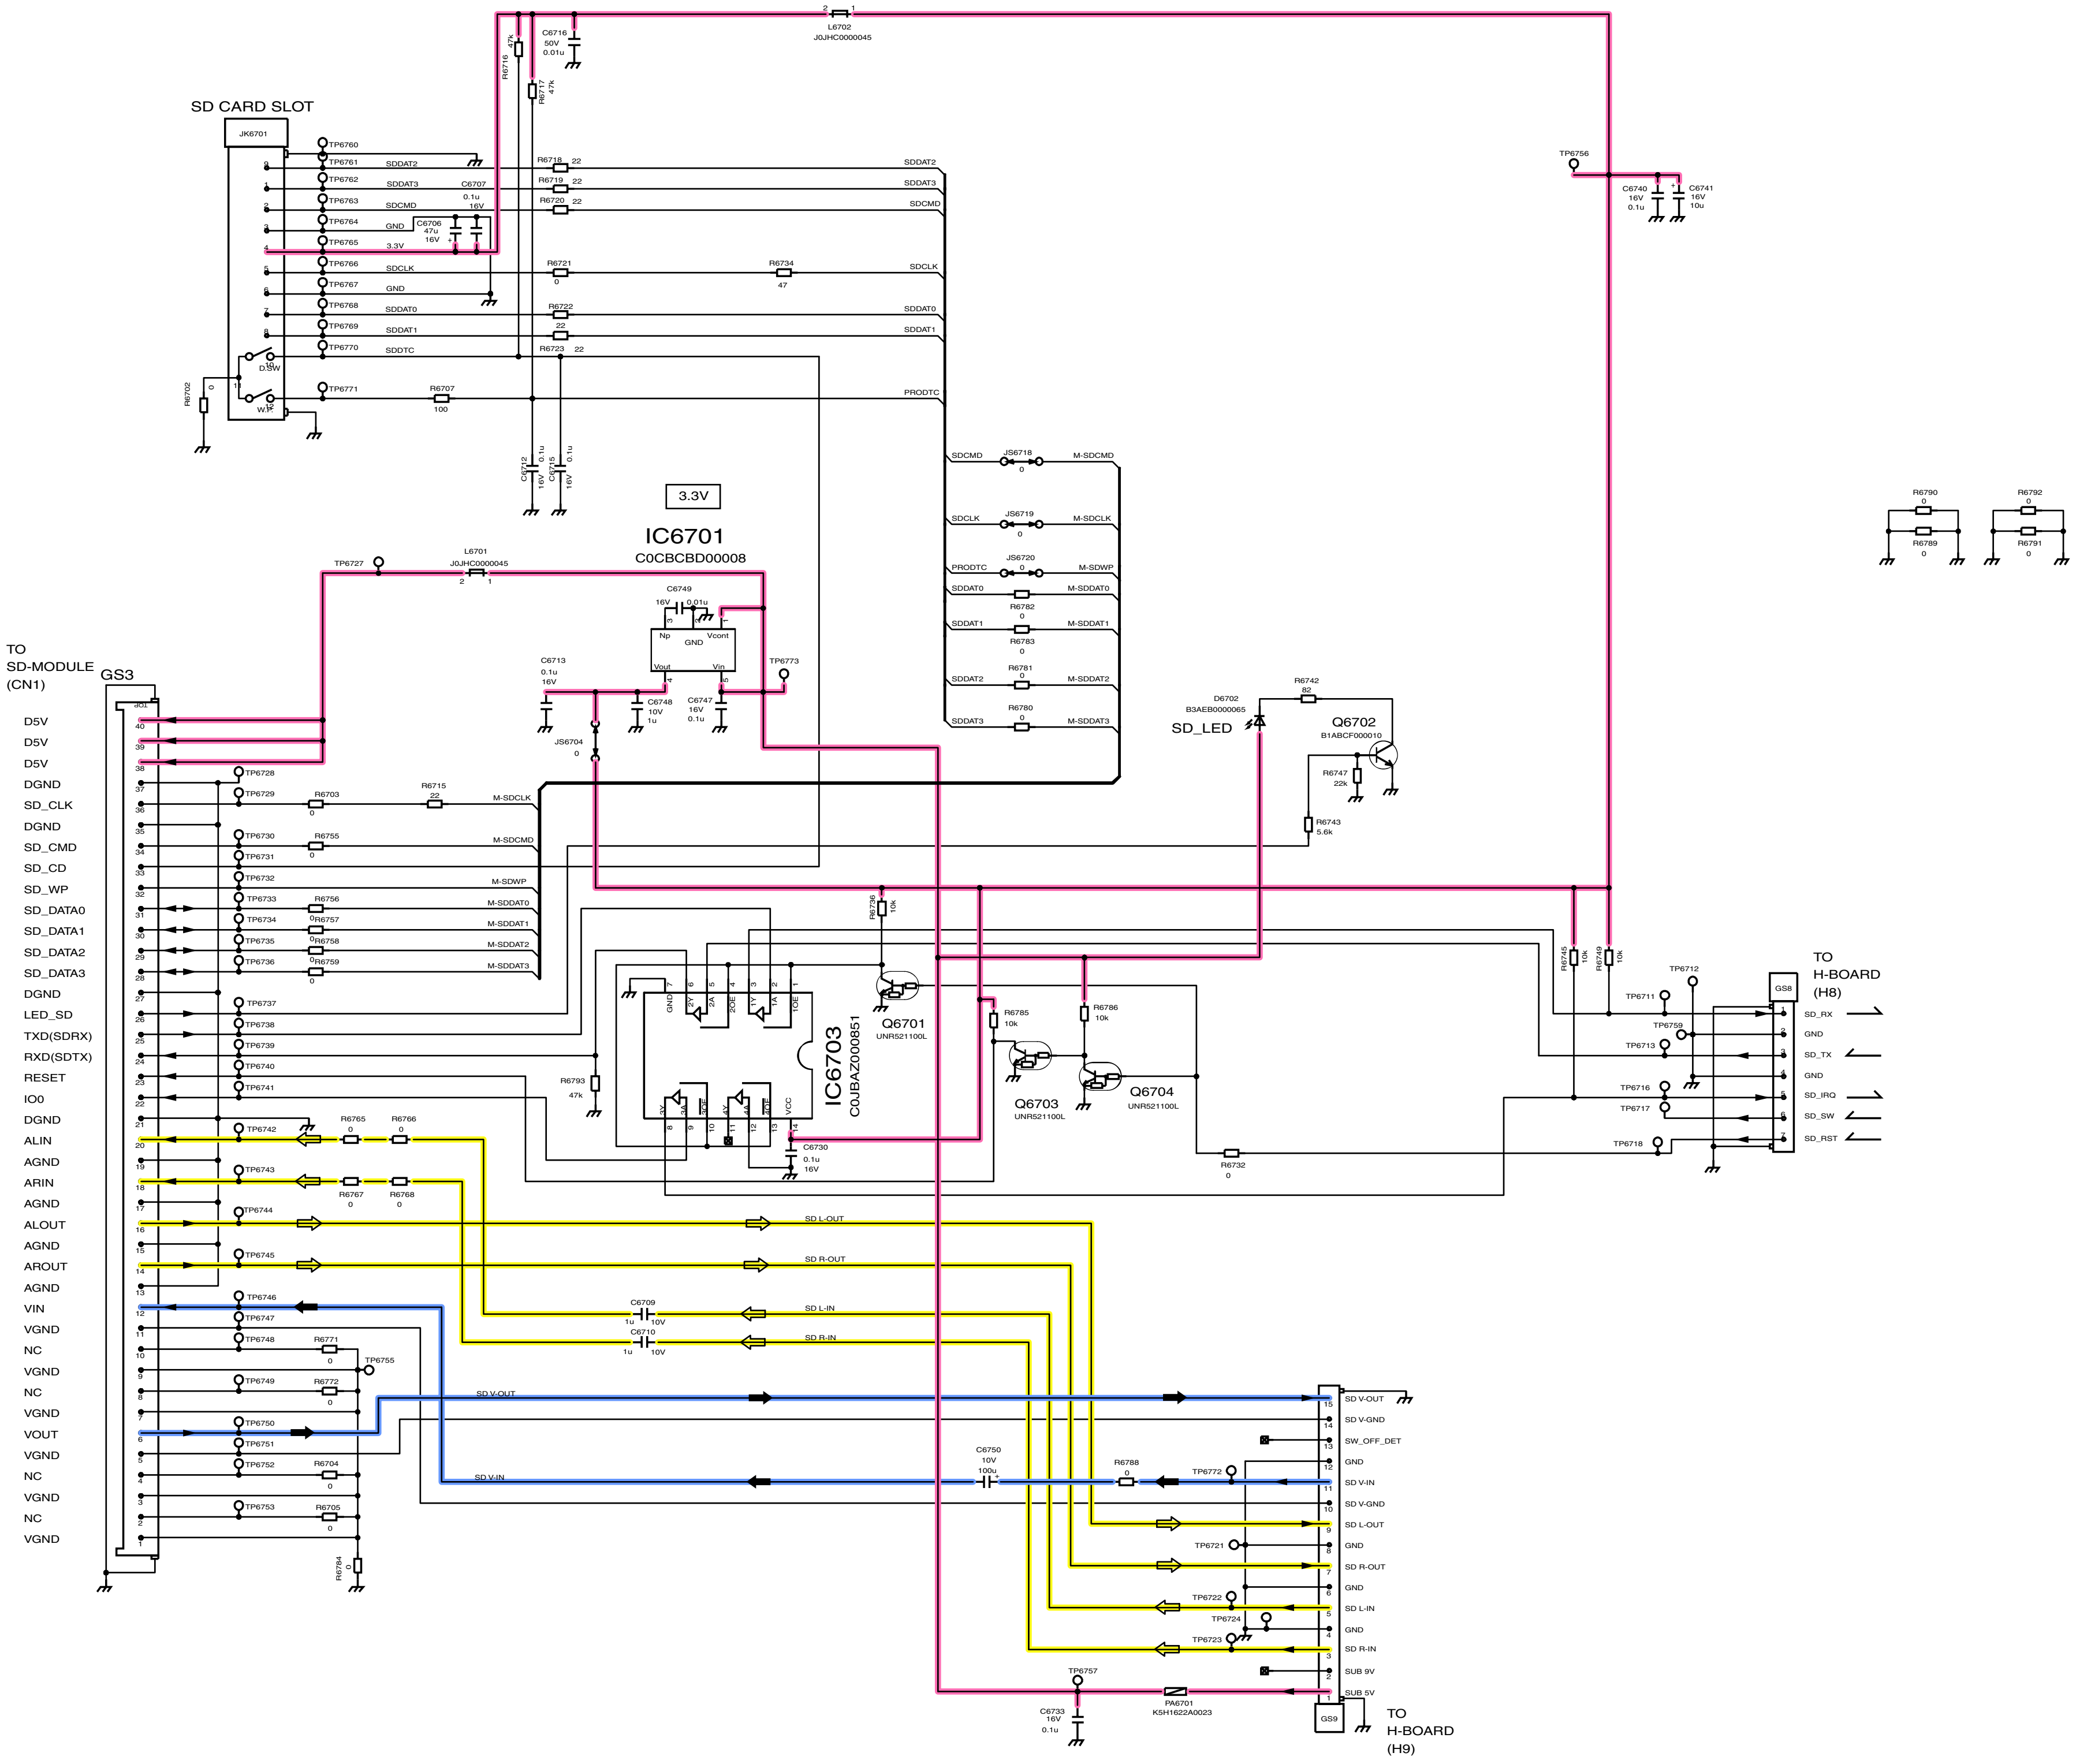
SD CARD SLOT
JK6701
D.SW
W.P
TP6760
TP6761
TP6762
TP6763
TP6764
TP6765
TP6766
TP6767
TP6768
TP6769
TP6770
TP6771
SDDAT2
SDDAT3
SDCMD
GND
3.3V
SDCLK
GND
SDDAT0
SDDAT1
SDDTC
PRODTC
C6706 47u 16V
C6707 0.1u 16V
R6702 0
R6707 100
R6716 47k
R6717 47k
C6716 50V 0.01u
L6702 J0JHC0000045
R6718 22
R6719 22
R6720 22
R6721 0
R6734 47
R6722 22
R6723 22
C6712 0.1u 16V
C6715 0.1u 16V
JS6718 0
JS6719 0
JS6720 0
M-SDCMD
M-SDCLK
M-SDWP
M-SDDAT0
M-SDDAT1
M-SDDAT2
M-SDDAT3
R6782 0
R6783 0
R6781 0
R6780 0
3.3V
IC6701
C0CBCBD00008
C6749 16V 0.01u
Np
Vcont
GND
Vout
Vin
TP6727
L6701 J0JHC0000045
C6713 0.1u 16V
C6748 10V 1u
C6747 16V 0.1u
TP6773
JS6704 0
TO SD-MODULE (CN1)
GS3
D5V
D5V
D5V
DGND
SD_CLK
DGND
SD_CMD
SD_CD
SD_WP
SD_DATA0
SD_DATA1
SD_DATA2
SD_DATA3
DGND
LED_SD
TXD(SDRX)
RXD(SDTX)
RESET
IO0
DGND
ALIN
AGND
ARIN
AGND
ALOUT
AGND
AROUT
AGND
VIN
VGND
NC
VGND
NC
VGND
VOUT
VGND
NC
VGND
NC
VGND
TP6728
TP6729
R6703 0
R6715 22
TP6730
TP6731
R6755 0
TP6732
TP6733
R6756 0
TP6734
R6757 0
TP6735
R6758 0
TP6736
R6759 0
TP6737
TP6738
TP6739
TP6740
TP6741
TP6742
R6765 0
R6766 0
TP6743
R6767 0
R6768 0
TP6744
TP6745
TP6746
TP6747
TP6748
R6771 0
TP6749
R6772 0
TP6755
TP6750
TP6751
TP6752
R6704 0
TP6753
R6705 0
R6764 0
R6793 47k
IC6703
C0JBAZ000851
C6730 0.1u 16V
R6736 10k
Q6701
UNR521100L
R6785 10k
R6786 10k
Q6703
UNR521100L
Q6704
UNR521100L
R6732 0
D6702
B3AEB0000065
SD_LED
R6742 82
Q6702
B1ABCF000010
R6747 22k
R6743 5.6k
TP6756
C6740 16V 0.1u
C6741 16V 10u
R6745 10k
R6749 10k
TP6712
TP6711
TP6759
TP6713
TP6716
TP6717
TP6718
GS8
TO H-BOARD (H8)
SD_RX
GND
SD_TX
GND
SD_IRQ
SD_SW
SD_RST
R6790 0
R6789 0
R6792 0
R6791 0
SD L-OUT
SD R-OUT
SD L-IN
SD R-IN
C6709 1u 10V
C6710 1u 10V
SD V-OUT
SD V-IN
C6750 10V 100u
R6788 0
TP6772
TP6721
TP6722
TP6724
TP6723
TP6757
C6733 16V 0.1u
PA6701 K5H1622A0023
GS9
TO H-BOARD (H9)
SD V-OUT
SD V-GND
SW_OFF_DET
GND
SD V-IN
SD V-GND
SD L-OUT
GND
SD R-OUT
GND
SD L-IN
GND
SD R-IN
SUB 9V
SUB 5V
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9

H-BOARD (1/4)

TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)

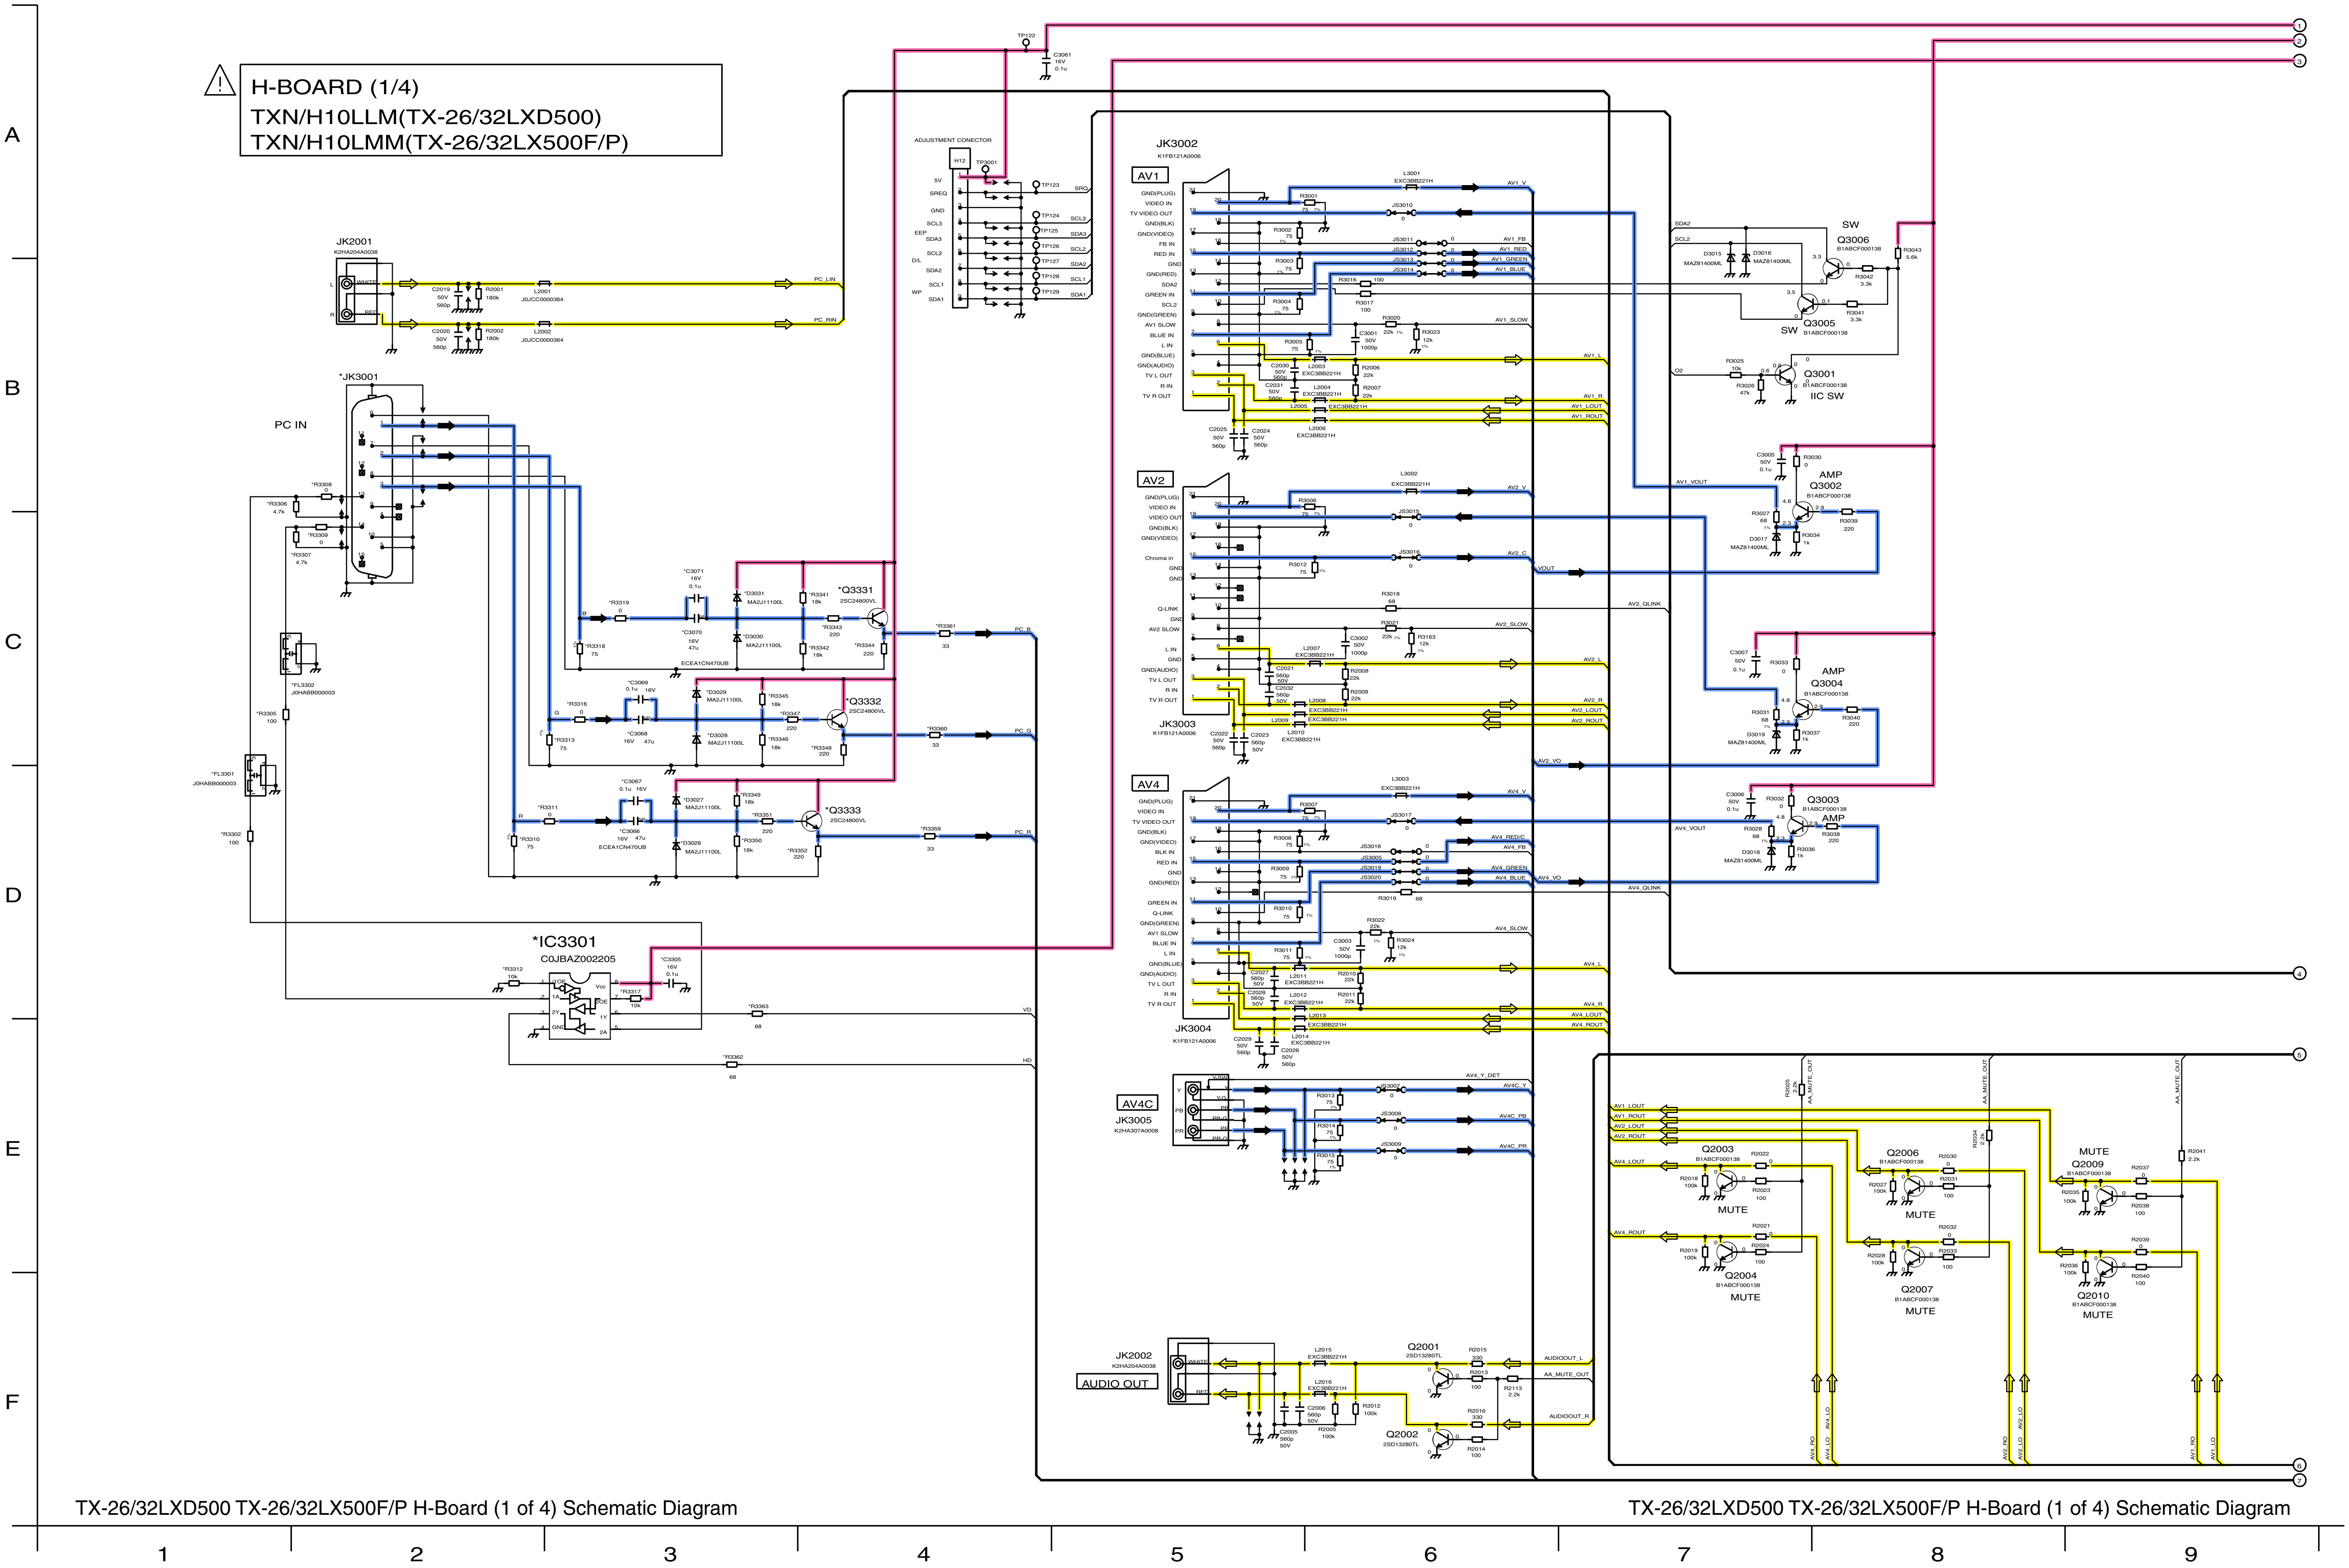

A
B
C
D
E
F
1
2
3
4
5
6
7
8
9
JK2001
K2HA204A0038
PC IN
*JK3001
*IC3301
C0JBAZ002205
*Q3331
2SC2480VL
*Q3332
2SC2480VL
*Q3333
2SC2480VL
ADJUSTMENT CONECTOR
TP122
TP3001
JK3002
K1FB121A0006
AV1
AV2
JK3003
K1FB121A0006
AV4
JK3004
K1FB121A0006
AV4C
JK3005
K2HA307A0006
JK2002
K2HA204A0038
AUDIO OUT
Q2001
2SD1328OTL
Q2002
2SD1328OTL
SW
Q3006
B1ABCF000138
SW
Q3005
B1ABCF000138
Q3001
IIC SW
AMP
Q3002
B1ABCF000138
AMP
Q3004
B1ABCF000138
Q3003
B1ABCF000138
AMP
Q2003
B1ABCF000138
MUTE
Q2004
B1ABCF000138
MUTE
Q2006
B1ABCF000138
MUTE
Q2007
B1ABCF000138
MUTE
MUTE
Q2009
B1ABCF000138
Q2010
B1ABCF000138
MUTE
PC_LIN
PC_RIN
PC_B
PC_G
PC_R
VD
HD
AV1_V
AV1_FB
AV1_RED
AV1_GREEN
AV1_BLUE
AV1_SLOW
AV1_L
AV1_R
AV1_LOUT
AV1_ROUT
AV2_V
AV2_C
AV2_QLINK
AV2_SLOW
AV2_L
AV2_R
AV2_LOUT
AV2_ROUT
AV2_VO
AV4_V
AV4_RED/C
AV4_FB
AV4_GREEN
AV4_BLUE
AV4_VO
AV4_QLINK
AV4_SLOW
AV4_L
AV4_R
AV4_LOUT
AV4_ROUT
AV4_Y_DET
AV4C_Y
AV4C_PB
AV4C_PR
AV1_VOUT
AV4_VOUT
AUDIOOUT_L
AA_MUTE_OUT
AUDIOOUT_R
AV1_RO
AV1_LO
AV2_RO
AV2_LO
AV4_RO
AV4_LO
①
②
③
④
⑤
⑥
⑦

TX-26/32LXD500 TX-26/32LX500F/P H-Board (1 of 4) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P H-Board (1 of 4) Schematic Diagram

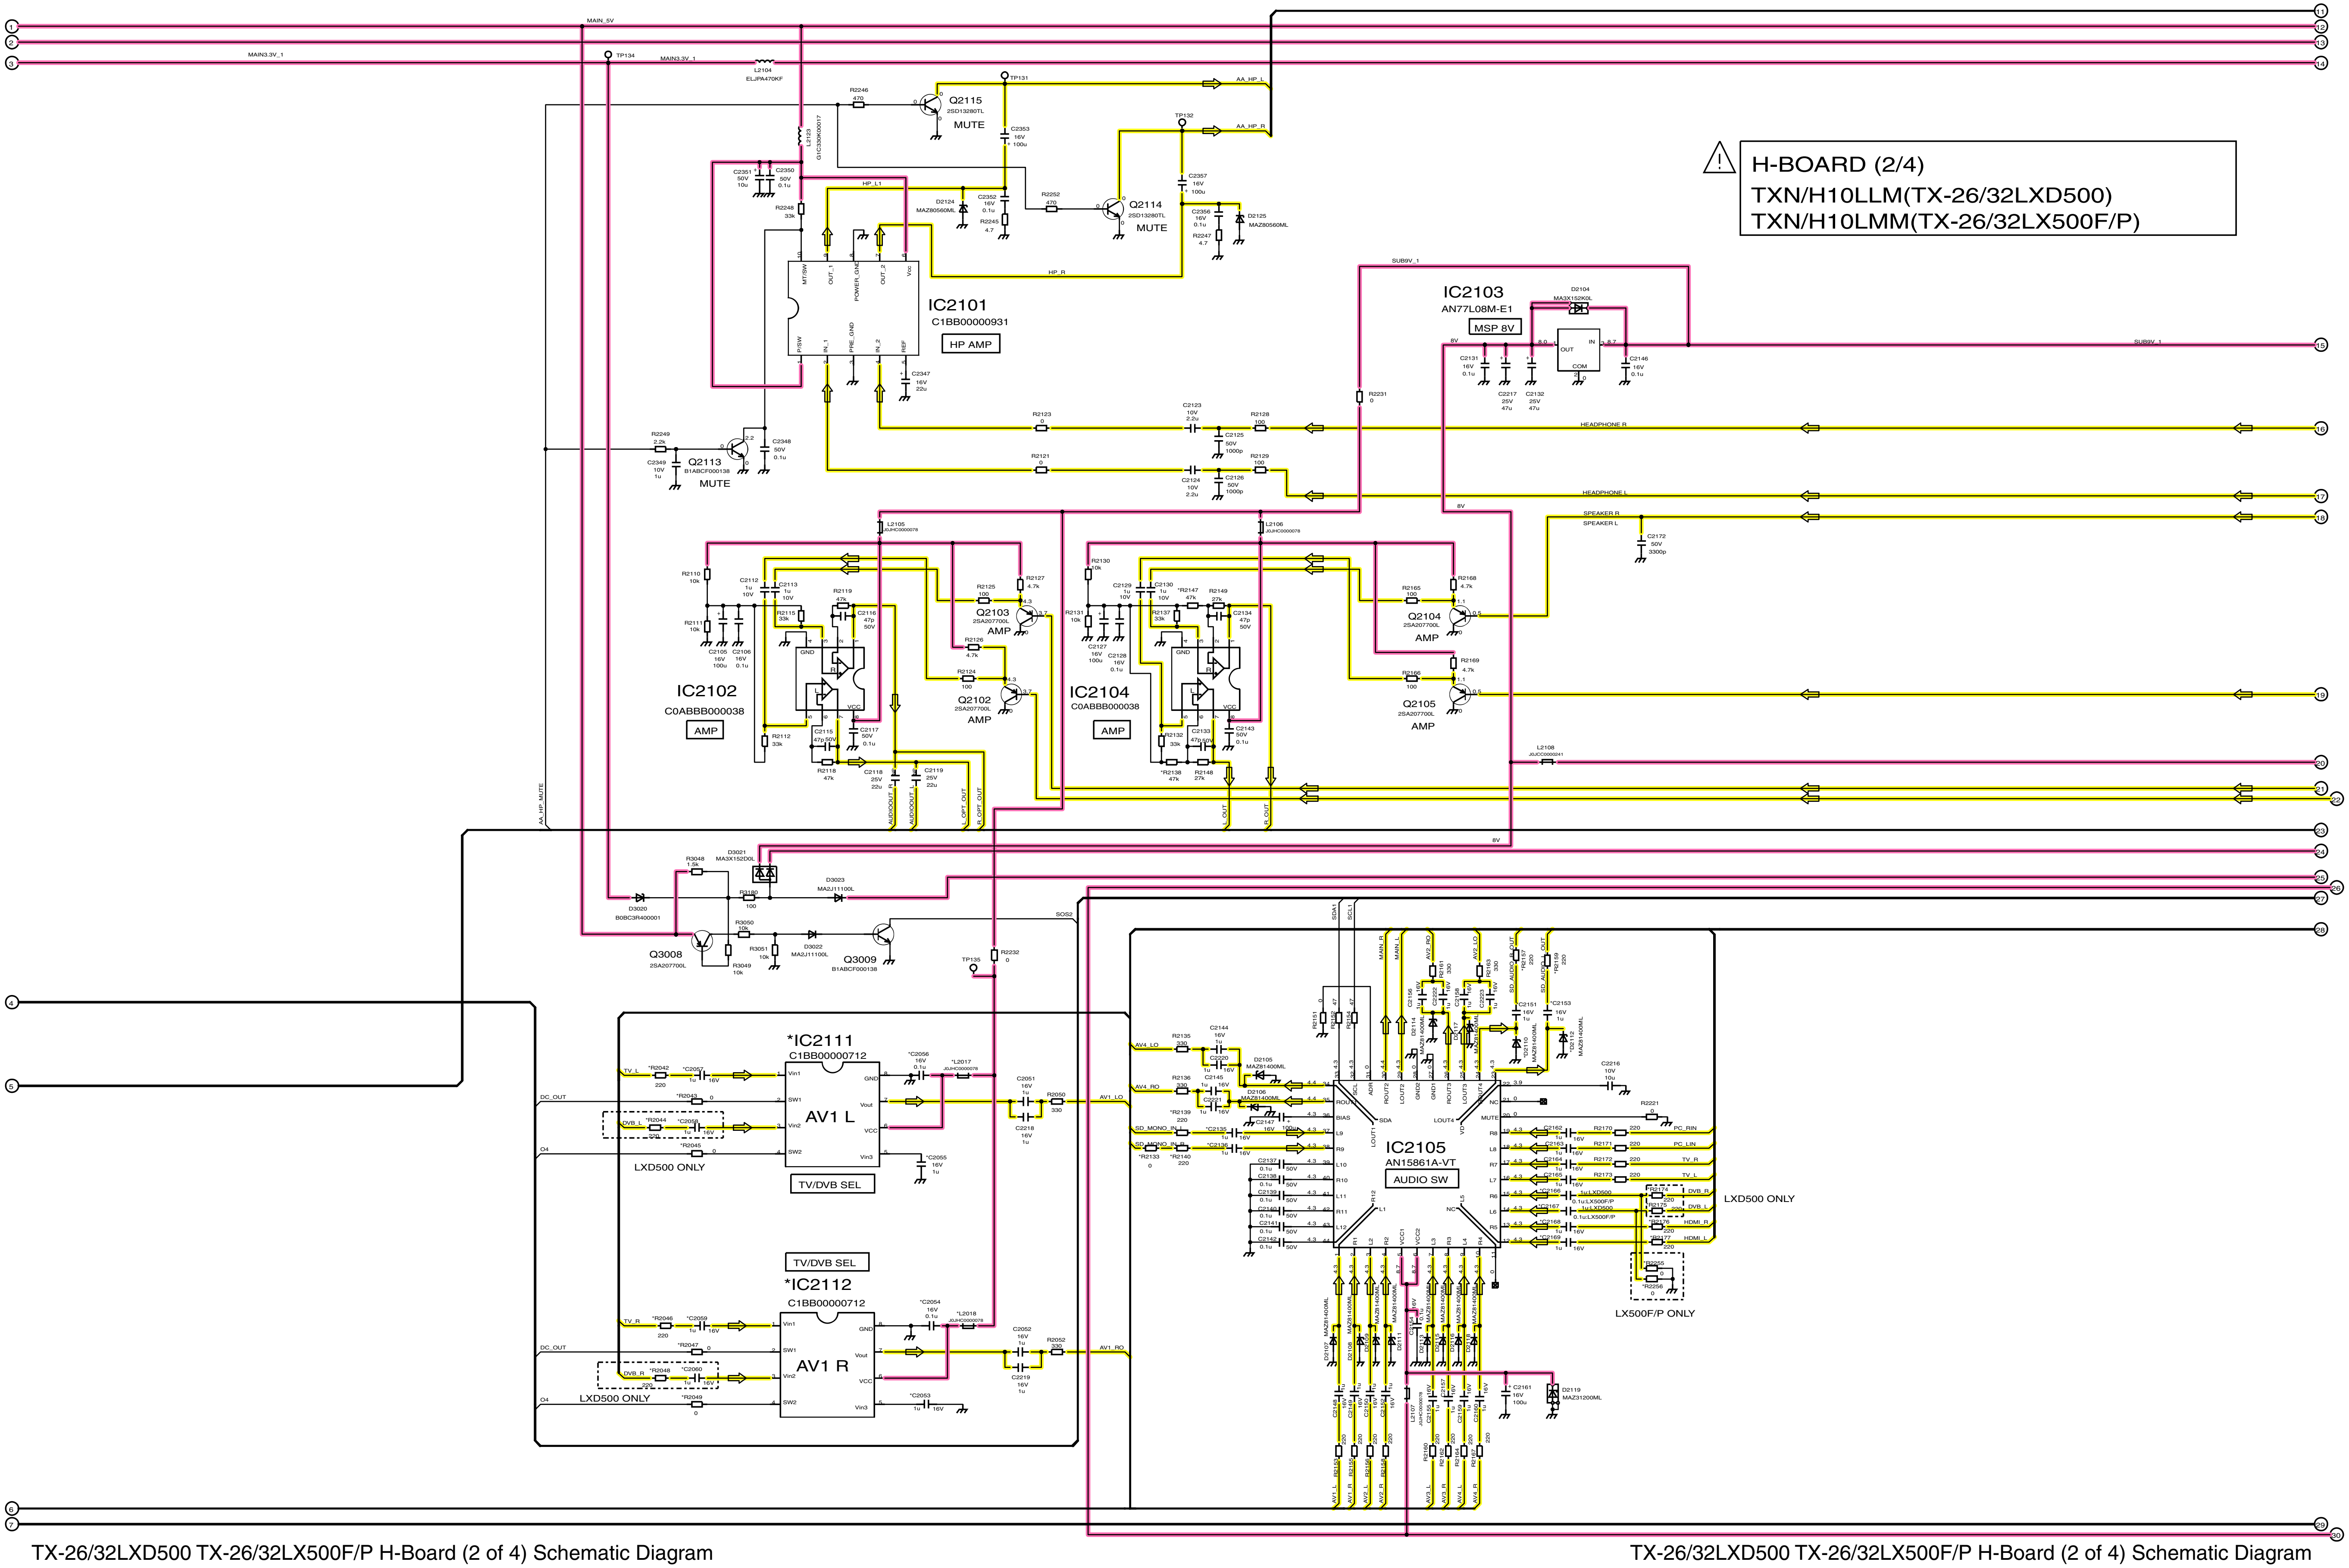
MAIN_5V
MAIN3.3V_1
TP134
L2104
ELJPA470KF
R2246
470
Q2115
2SD1328OTL
MUTE
TP131
AA_HP_L
TP132
AA_HP_R
C2353
16V
100u
Q2114
2SD1328OTL
MUTE
C2357
16V
100u
D2124
MAZ80560ML
D2125
MAZ80560ML
R2252
470
HP_L1
HP_R
IC2101
C1BB00000931
HP AMP
MT/SW
OUT_1
POWER_GND
OUT_2
Vcc
P/SW
IN_1
PRE_GND
IN_2
REF
C2347
16V
22u
R2249
2.2k
Q2113
B1ABCF000138
MUTE
C2348
50V
0.1u
C2349
10V
1u
R2248
33k
IC2103
AN77L08M-E1
MSP 8V
D2104
MA3X152K0L
OUT
IN
COM
C2131
C2217
C2132
C2146
SUB9V_1
R2231
0
R2123
R2121
C2123
C2124
C2125
C2126
R2128
100
R2129
100
HEADPHONE R
HEADPHONE L
SPEAKER R
SPEAKER L
C2172
50V
3300p
8V
L2105
L2106
IC2102
C0ABBB000038
AMP
Q2103
2SA2077O0L
AMP
Q2102
2SA2077O0L
AMP
IC2104
C0ABBB000038
AMP
Q2104
2SA2077O0L
AMP
Q2105
2SA2077O0L
AMP
GND
VCC
AUDIOOUT_L
AUDIOOUT_R
L_OPT_OUT
R_OPT_OUT
L_OUT
R_OUT
L2108
AA_HP_MUTE
R3048
1.5k
D3021
MA3X152D0L
D3023
MA2J1110OL
D3020
B0BC3R400001
R3180
100
R3050
10k
R3051
10k
D3022
MA2J1110OL
Q3008
2SA2077O0L
Q3009
B1ABCF000138
R3049
10k
SOS2
TP135
R2232
0
*IC2111
C1BB00000712
AV1 L
TV/DVB SEL
TV_L
DVB_L
DC_OUT
O4
Vin1
SW1
Vin2
SW2
GND
Vout
VCC
Vin3
LXD500 ONLY
*IC2112
C1BB00000712
AV1 R
TV/DVB SEL
TV_R
DVB_R
LXD500 ONLY
*L2017
*L2018
C2051
C2052
R2050
330
R2052
330
AV1_LO
AV1_RO
IC2105
AN15861A-VT
AUDIO SW
SDA1
SCL1
MAIN_R
MAIN_L
AV2_RO
AV2_LO
SD_AUDIO_ROUT
SD_AUDIO_LOUT
AV4_LO
AV4_RO
SD_MONO_IN
SD_MONO_IN
ROUT1
LOUT1
BIAS
L9
R9
L10
R10
L11
R11
L12
LOUT4
MUTE
NC
R8
L8
R7
L7
R6
L6
R5
L5
PC_RIN
PC_LIN
TV_R
TV_L
DVB_R
DVB_L
HDMI_L
HDMI_R
LXD500 ONLY
LX500F/P ONLY
D2119
MAZ31200ML
C2161
16V
100u
AV1_L
AV1_R
AV2_L
AV2_R
AV3_L
AV3_R
AV4_L
AV4_R
1
2
3
4
5
6
7
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30

H-BOARD (2/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)

TX-26/32LXD500 TX-26/32LX500F/P H-Board (2 of 4) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P H-Board (2 of 4) Schematic Diagram

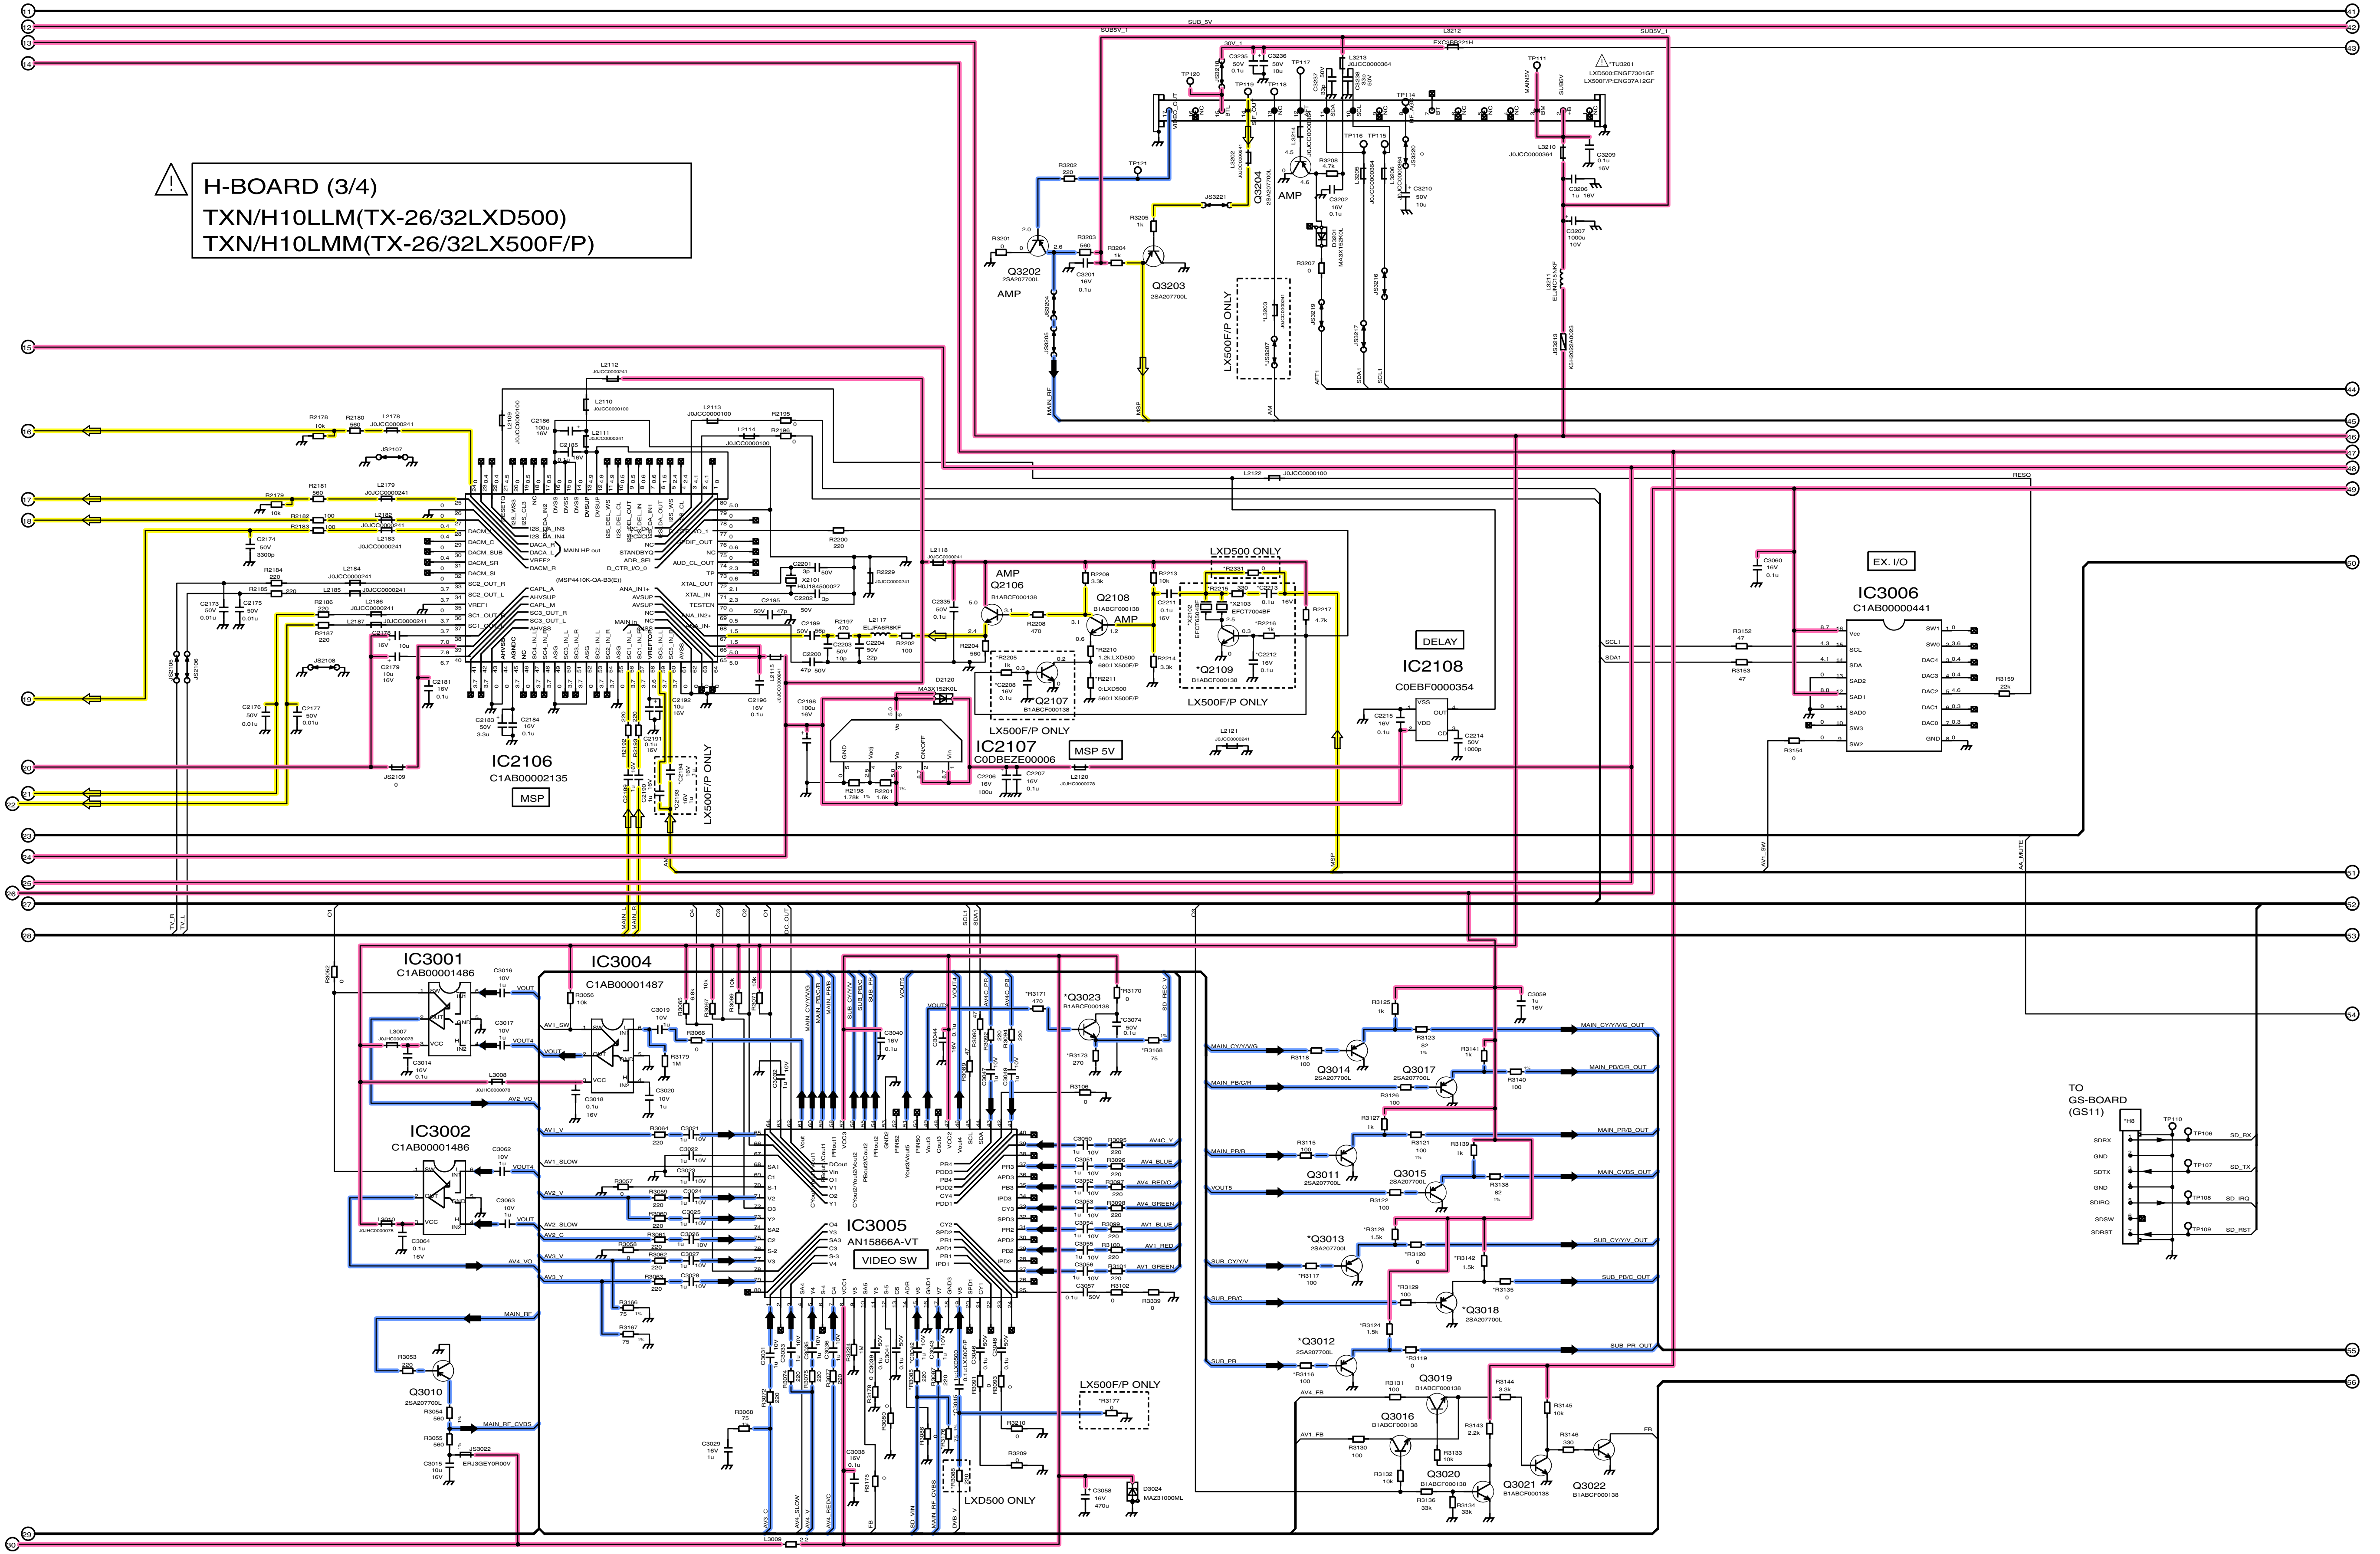
H-BOARD (3/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)
IC2106
C1AB00002135
MSP
IC2107
C0DBEZE00006
MSP 5V
IC2108
C0EBF0000354
DELAY
IC3006
C1AB00000441
EX. I/O
IC3001
C1AB00001486
IC3002
C1AB00001486
IC3004
C1AB00001487
IC3005
AN15866A-VT
VIDEO SW
Q3202
Q3203
Q3204
AMP
Q2106
Q2107
Q2108
Q2109
LXD500 ONLY
LX500F/P ONLY
Q3010
Q3011
Q3012
Q3013
Q3014
Q3015
Q3016
Q3017
Q3018
Q3019
Q3020
Q3021
Q3022
Q3023
TO
GS-BOARD
(GS11)

TX-26/32LXD500 TX-26/32LX500F/P H-Board (3 of 4) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P H-Board (3 of 4) Schematic Diagram

19 20 21 22 23 24 25 26 27

H-BOARD (4/4)
TXN/H10LLM(TX-26/32LXD500)
TXN/H10LMM(TX-26/32LX500F/P)

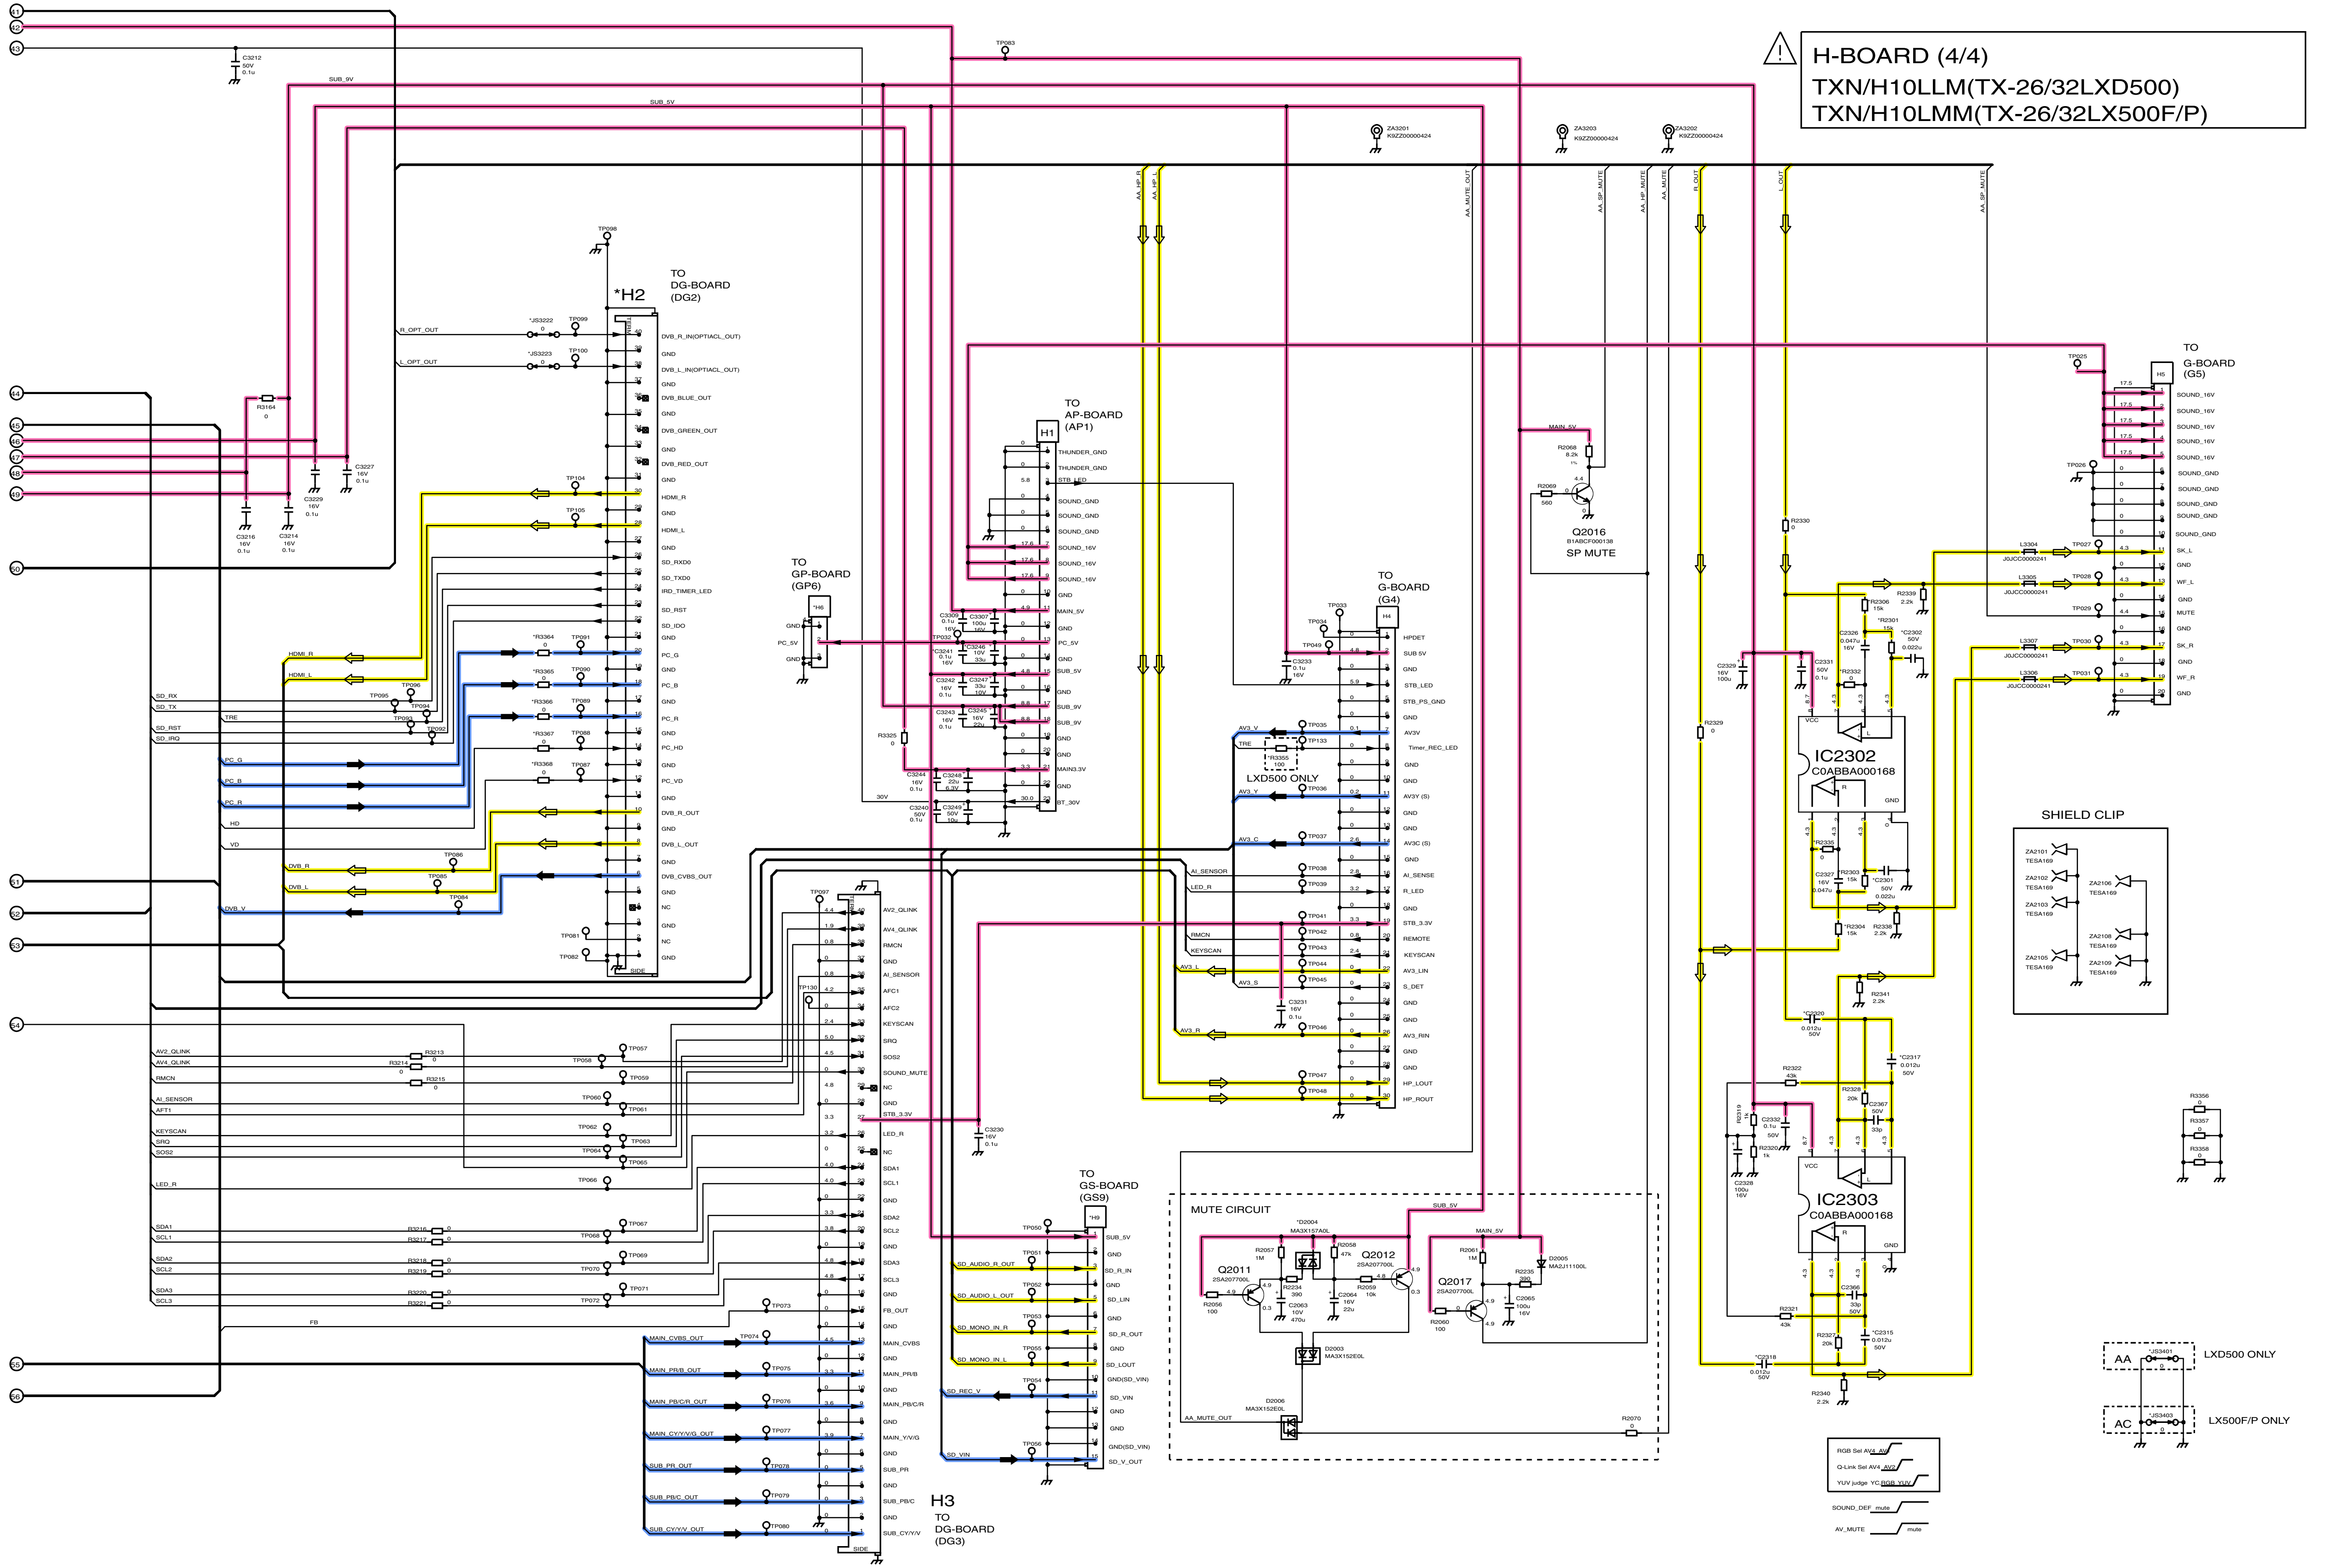

*H2
TO DG-BOARD (DG2)
H1
TO AP-BOARD (AP1)
*H6
TO GP-BOARD (GP6)
H4
TO G-BOARD (G4)
H5
TO G-BOARD (G5)
*H9
TO GS-BOARD (GS9)
H3
TO DG-BOARD (DG3)
Q2016
B1ABCF000138
SP MUTE
IC2302
C0ABBA000168
IC2303
C0ABBA000168
MUTE CIRCUIT
Q2011
2SA2077OOL
Q2012
2SA2077OOL
Q2017
2SA2077OOL
LXD500 ONLY
SHIELD CLIP
AA
LXD500 ONLY
AC
LX500F/P ONLY
SUB_9V
SUB_5V
MAIN_5V
R_OPT_OUT
L_OPT_OUT
HDMI_R
HDMI_L
DVB_R
DVB_L
DVB_V
PC_G
PC_B
PC_R
SD_RX
SD_TX
SD_RST
SD_IRQ
TRE
HD
VD
AA_HP_R
AA_HP_L
AA_MUTE_OUT
AA_SP_MUTE
R_OUT
L_OUT
AA_MUTE_OUT
RGB Sel AV4 AV
Q-Link Sel AV4 AV2
YUV judge YC RGB YUV
SOUND_DEF_mute
AV_MUTE mute

TX-26/32LXD500 TX-26/32LX500F/P H-Board (4 of 4) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P H-Board (4 of 4) Schematic Diagram

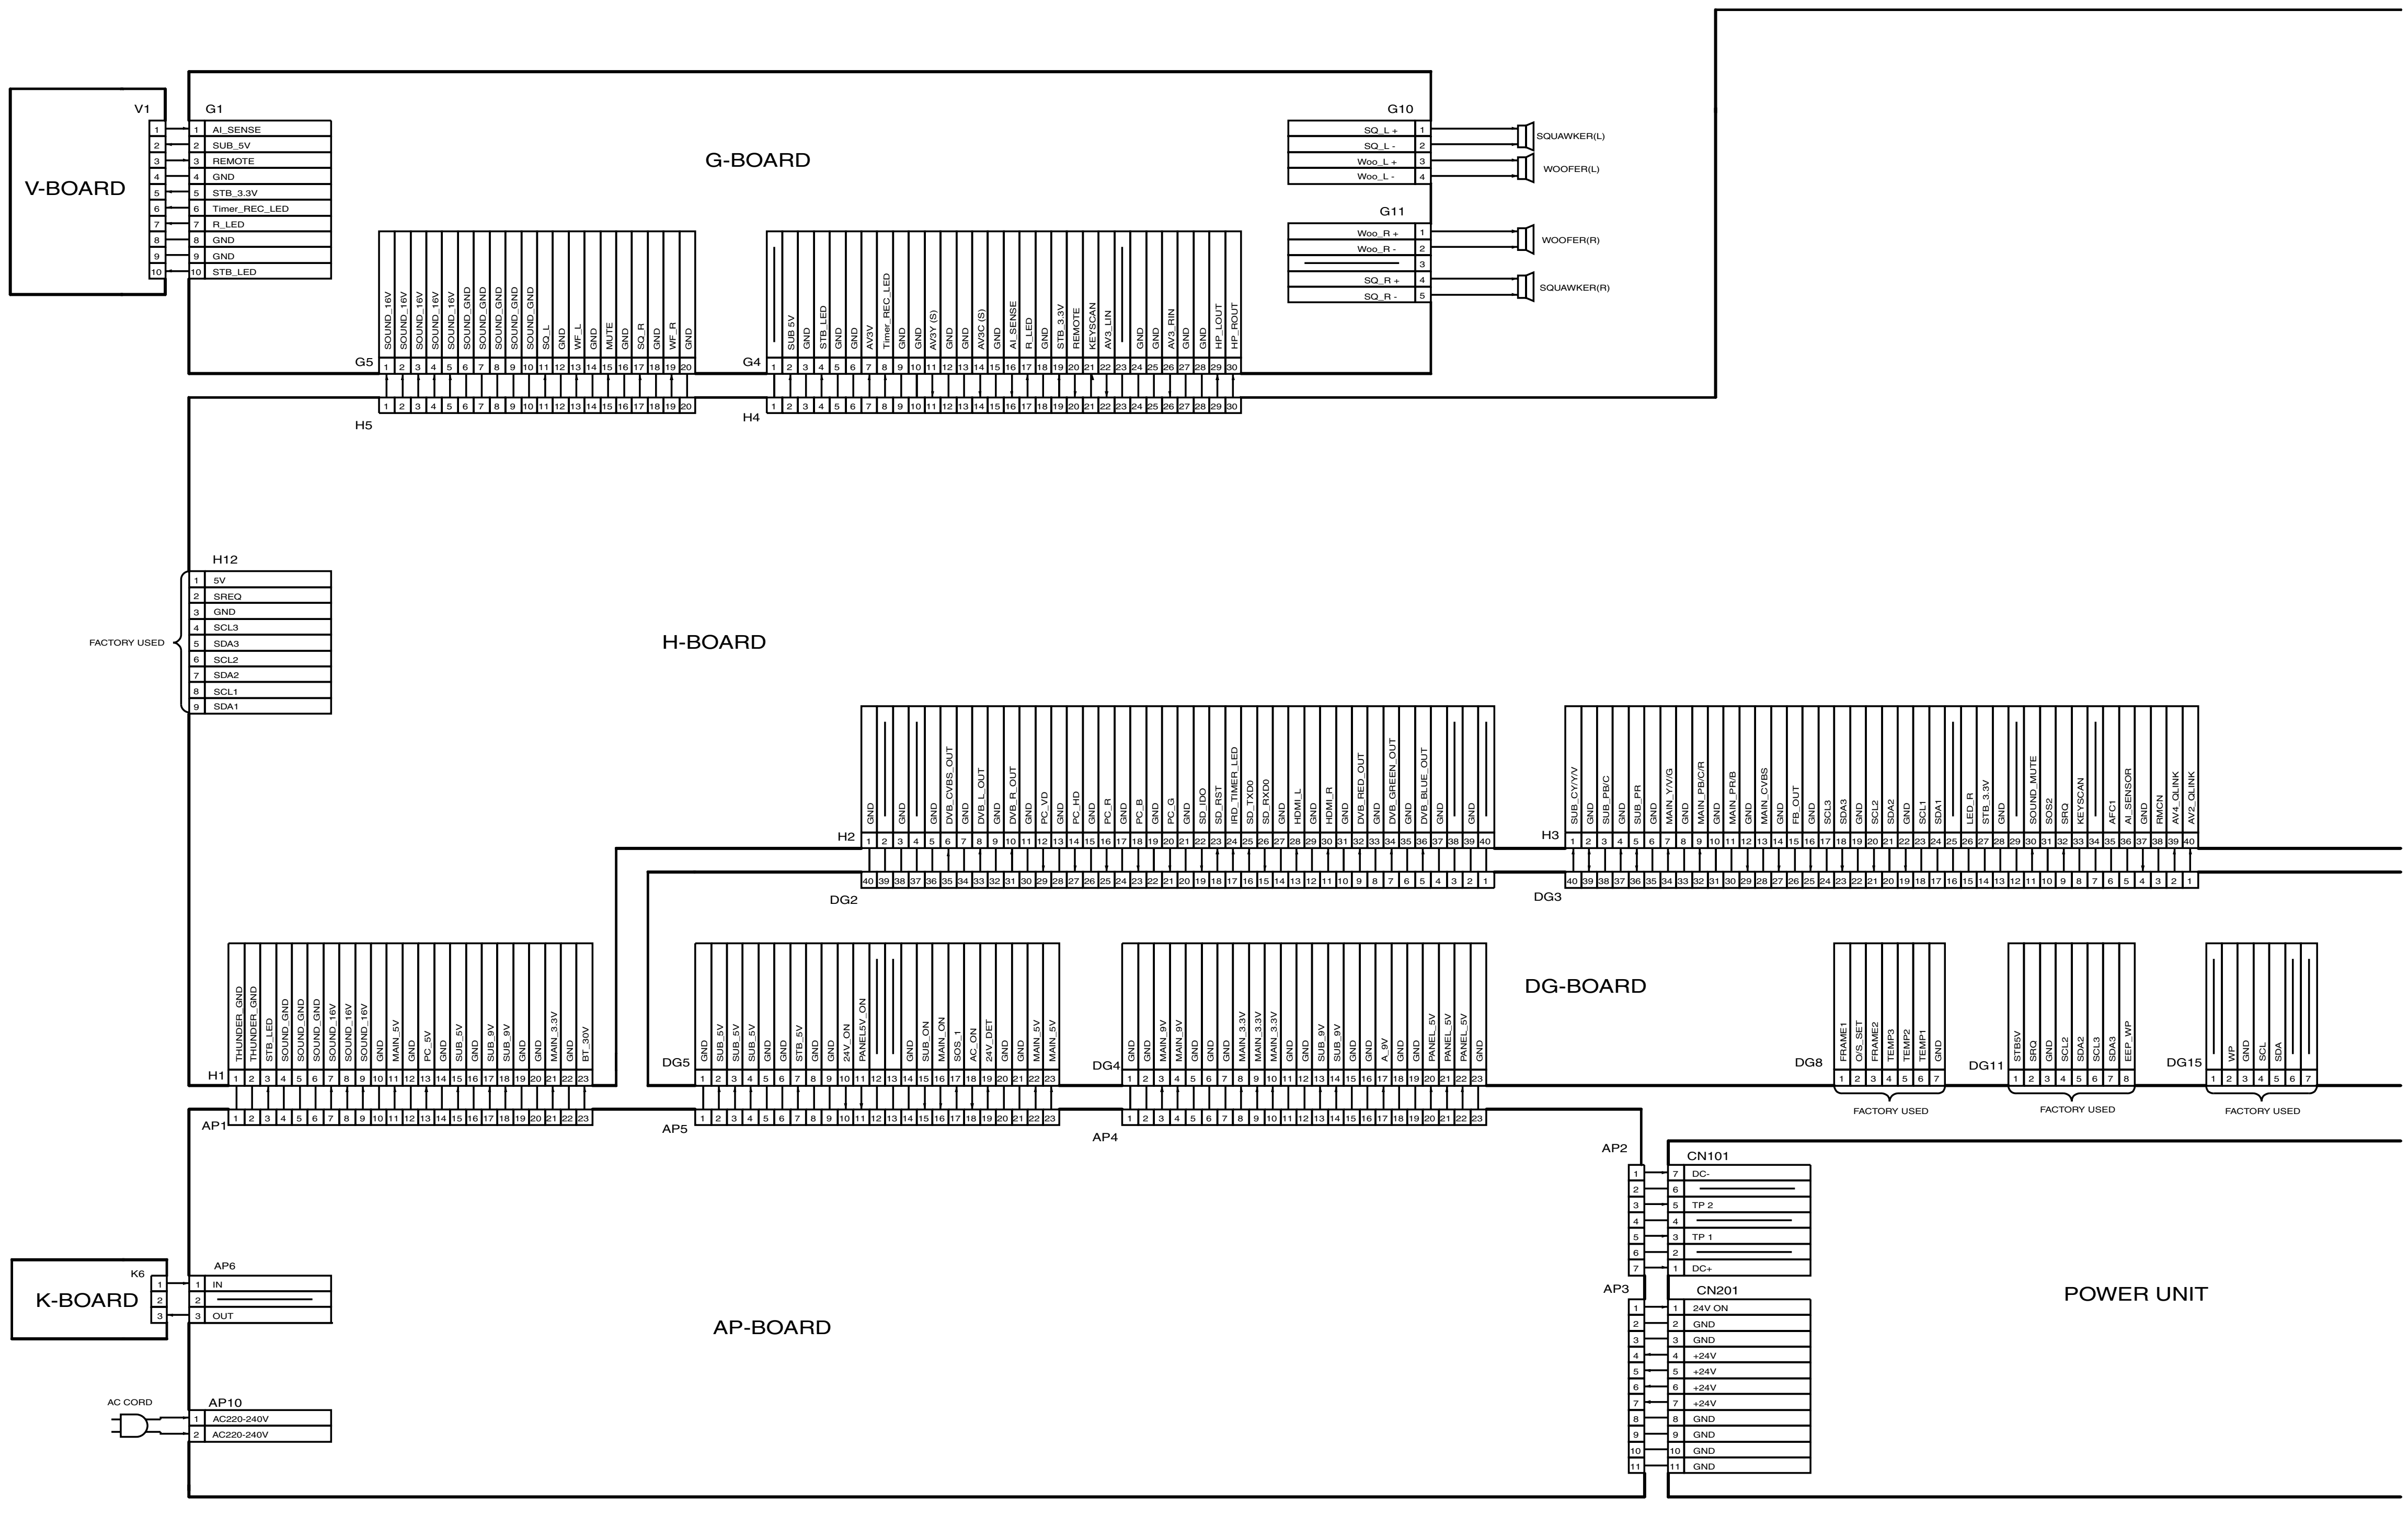
V-BOARD
V1
G1
AI_SENSE
SUB_5V
REMOTE
GND
STB_3.3V
Timer_REC_LED
R_LED
GND
GND
STB_LED
G-BOARD
G10
SQ_L +
SQ_L -
Woo_L +
Woo_L -
SQUAWKER(L)
WOOFER(L)
G11
Woo_R +
Woo_R -
SQ_R +
SQ_R -
WOOFER(R)
SQUAWKER(R)
G5
SOUND_16V
SOUND_16V
SOUND_16V
SOUND_16V
SOUND_16V
SOUND_GND
SOUND_GND
SOUND_GND
SOUND_GND
SOUND_GND
SQ_L
GND
WF_L
GND
MUTE
GND
SQ_R
GND
WF_R
GND
H5
G4
SUB 5V
GND
STB_LED
GND
GND
AV3V
Timer_REC_LED
GND
GND
AV3Y (S)
GND
GND
AV3C (S)
GND
AI_SENSE
R_LED
GND
STB_3.3V
REMOTE
KEYSCAN
AV3_LIN
GND
GND
AV3_RIN
GND
GND
HP_LOUT
HP_ROUT
H4
H12
5V
SREQ
GND
SCL3
SDA3
SCL2
SDA2
SCL1
SDA1
FACTORY USED
H-BOARD
H2
GND
GND
GND
DVB_CVBS_OUT
GND
DVB_L_OUT
GND
DVB_R_OUT
GND
PC_VD
GND
PC_HD
GND
PC_R
GND
PC_B
GND
PC_G
GND
SD_IDO
SD_RST
IRD_TIMER_LED
SD_TXD0
SD_RXD0
GND
HDMI_L
GND
HDMI_R
GND
DVB_RED_OUT
GND
DVB_GREEN_OUT
GND
DVB_BLUE_OUT
GND
GND
DG2
H3
SUB_CY/Y/V
GND
SUB_PB/C
GND
SUB_PR
GND
MAIN_Y/V/G
GND
MAIN_PB/C/R
GND
MAIN_PR/B
GND
MAIN_CVBS
GND
FB_OUT
GND
SCL3
SDA3
GND
SCL2
SDA2
GND
SCL1
SDA1
LED_R
STB_3.3V
GND
SOUND_MUTE
SOS2
SRQ
KEYSCAN
AFC1
AI_SENSOR
GND
RMCN
AV4_QLINK
AV2_QLINK
DG3
DG-BOARD
H1
THUNDER_GND
THUNDER_GND
STB_LED
SOUND_GND
SOUND_GND
SOUND_GND
SOUND_16V
SOUND_16V
SOUND_16V
GND
MAIN_5V
GND
PC_5V
GND
SUB_5V
GND
SUB_9V
SUB_9V
GND
GND
MAIN_3.3V
GND
BT_30V
AP1
DG5
GND
SUB_5V
SUB_5V
SUB_5V
GND
GND
STB_5V
GND
GND
24V_ON
PANEL5V_ON
GND
SUB_ON
MAIN_ON
SOS_1
AC_ON
24V_DET
GND
GND
MAIN_5V
MAIN_5V
AP5
DG4
GND
GND
MAIN_9V
MAIN_9V
GND
GND
GND
MAIN_3.3V
MAIN_3.3V
MAIN_3.3V
GND
GND
SUB_9V
SUB_9V
GND
GND
A_9V
GND
GND
PANEL_5V
PANEL_5V
PANEL_5V
GND
AP4
DG8
FRAME1
O/S_SET
FRAME2
TEMP3
TEMP2
TEMP1
GND
FACTORY USED
DG11
STB5V
SRQ
GND
SCL2
SDA2
SCL3
SDA3
EEP_WP
FACTORY USED
DG15
WP
GND
SCL
SDA
FACTORY USED
AP2
CN101
DC-
TP 2
TP 1
DC+
AP3
CN201
24V ON
GND
GND
+24V
+24V
+24V
+24V
GND
GND
GND
GND
POWER UNIT
K-BOARD
K6
AP6
IN
OUT
AP-BOARD
AC CORD
AP10
AC220-240V
AC220-240V

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (1 of 2) Schematic Diagram

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (1 of 2) Schematic Diagram

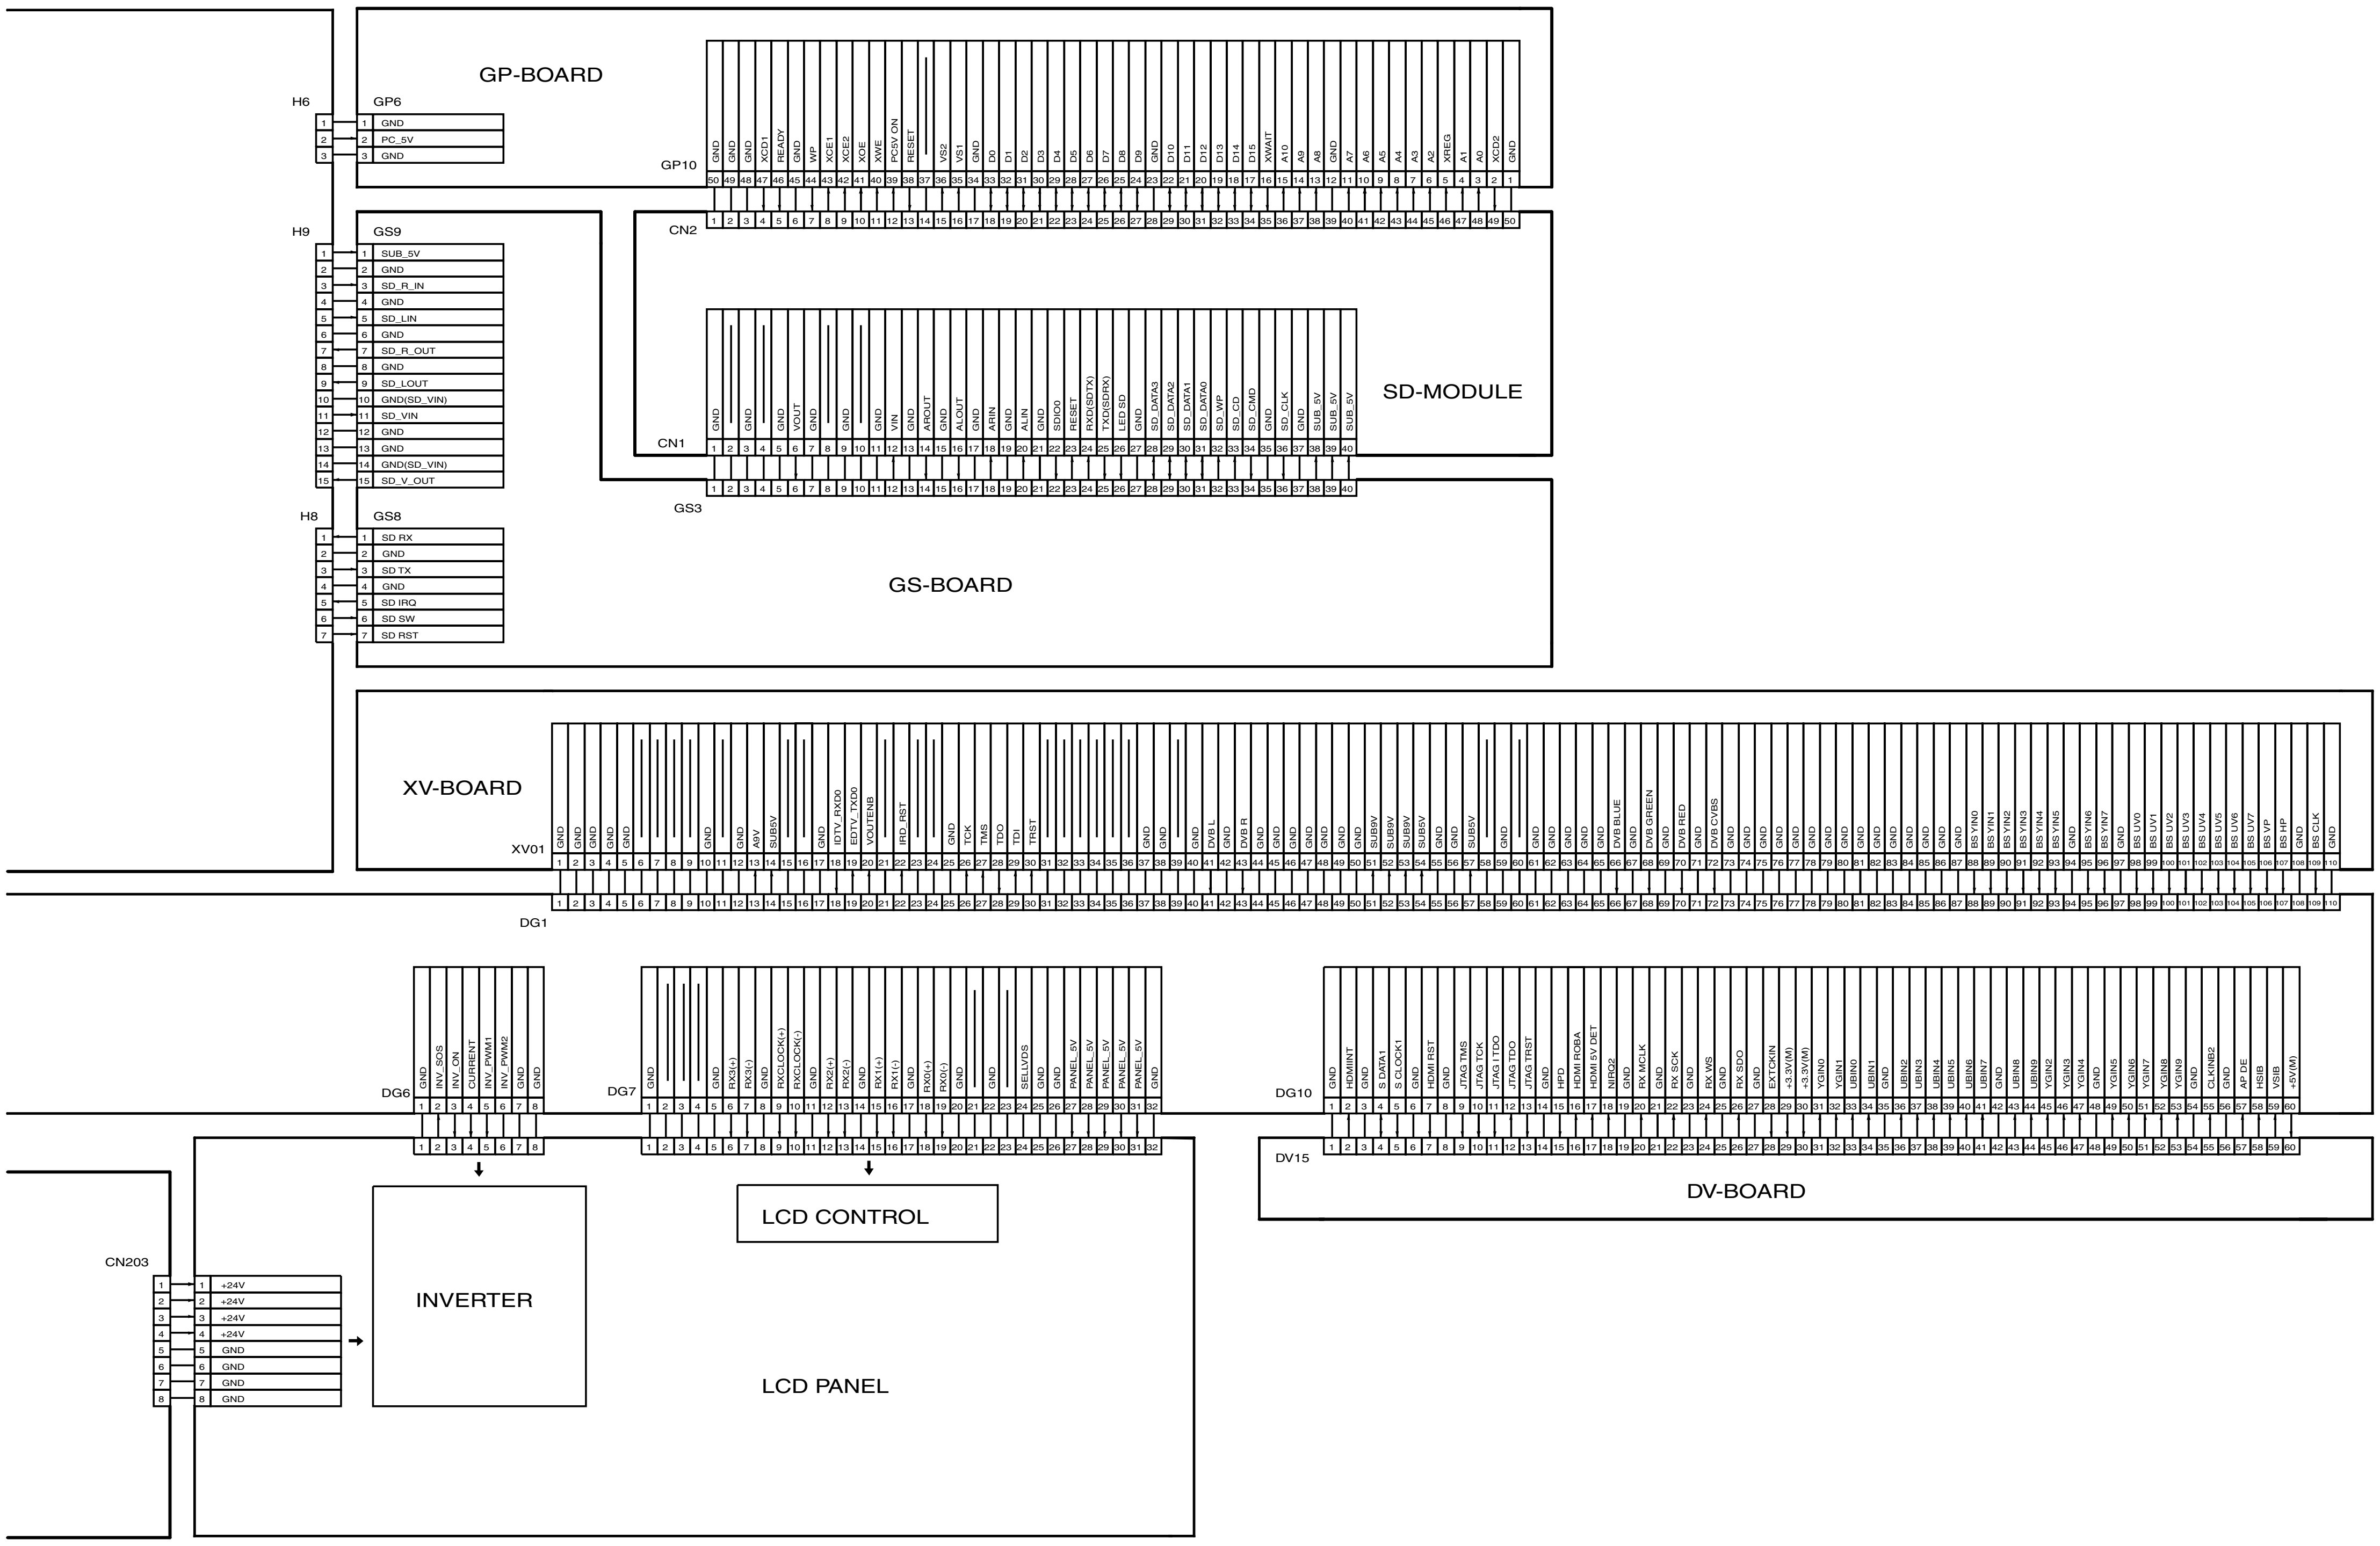
GP-BOARD
GP6
H6
1 GND
2 PC_5V
3 GND
GP10
CN2
SD-MODULE
CN1
GS3
GS-BOARD
H9
GS9
1 SUB_5V
2 GND
3 SD_R_IN
4 GND
5 SD_LIN
6 GND
7 SD_R_OUT
8 GND
9 SD_LOUT
10 GND(SD_VIN)
11 SD_VIN
12 GND
13 GND
14 GND(SD_VIN)
15 SD_V_OUT
H8
GS8
1 SD RX
2 GND
3 SD TX
4 GND
5 SD IRQ
6 SD SW
7 SD RST
XV-BOARD
XV01
DG1
DG6
DG7
DG10
DV15
DV-BOARD
INVERTER
LCD CONTROL
LCD PANEL
CN203
1 +24V
2 +24V
3 +24V
4 +24V
5 GND
6 GND
7 GND
8 GND

TX-26/32LXD500 TX-26/32LX500F/P Interconnection (2 of 2) Schematic Diagram

⚠ XV-BOARD TNP0EXV01AD (1/5)
(TX-32/26LXD500 ONLY)

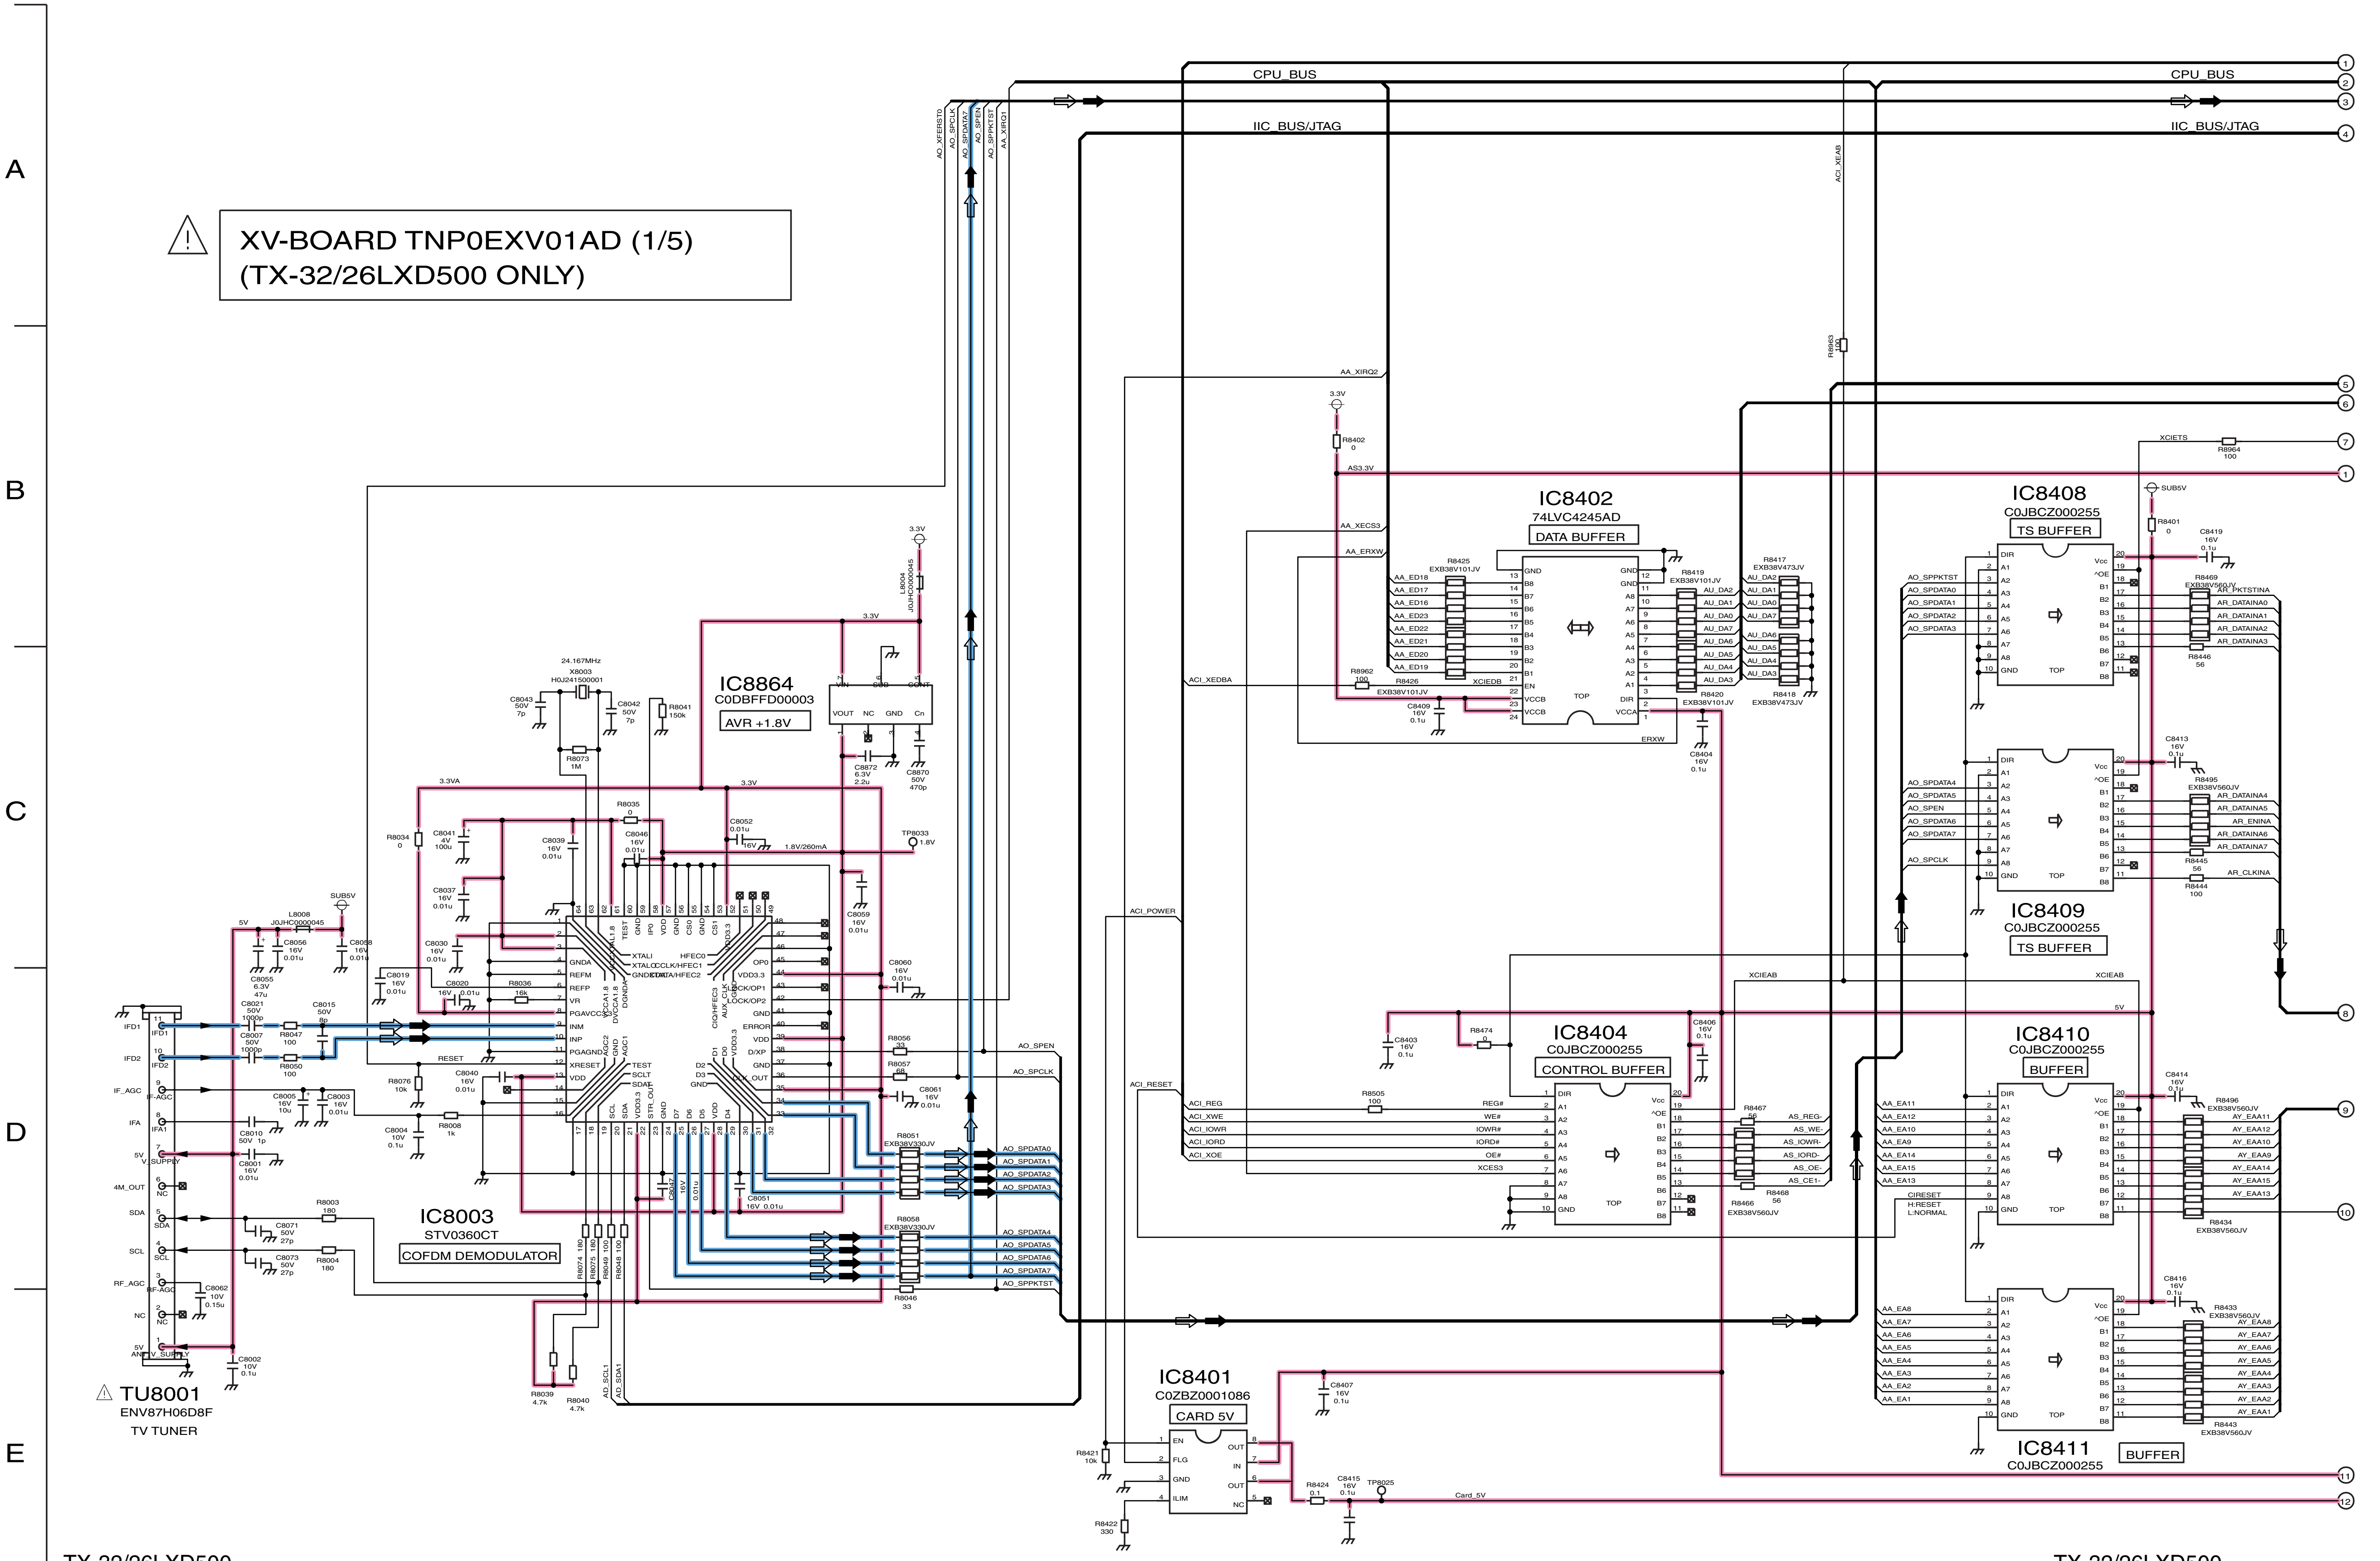
A
B
C
D
E
1
2
3
4
5
6
7
8
CPU_BUS
IIC_BUS/JTAG
AO_XFERST0
AO_SPCLK
AO_SPDATA7
AO_SPEN
AO_PKTST
AA_XIRQ1
AA_XIRQ2
AA_XECS3
AA_ERXW
ACI_XEDBA
ACI_POWER
ACI_RESET
AO_XEAB
XCIETS
SUB5V
3.3V
AS3.3V
IC8402
74LVC4245AD
DATA BUFFER
IC8408
C0JBCZ000255
TS BUFFER
IC8409
C0JBCZ000255
TS BUFFER
IC8864
C0DBFFD00003
AVR +1.8V
IC8003
STV0360CT
COFDM DEMODULATOR
IC8404
C0JBCZ000255
CONTROL BUFFER
IC8410
C0JBCZ000255
BUFFER
IC8411
C0JBCZ000255
BUFFER
IC8401
C0ZBZ0001086
CARD 5V
⚠ TU8001
ENV87H06D8F
TV TUNER
24.167MHz
X8003
H0J241500001
1.8V/260mA
TP8033
TP8025
Card_5V
AO_SPDATA0
AO_SPDATA1
AO_SPDATA2
AO_SPDATA3
AO_SPDATA4
AO_SPDATA5
AO_SPDATA6
AO_SPDATA7
AO_SPPKTST
AO_SPEN
AO_SPCLK
AR_PKTSTINA
AR_DATAINA0
AR_DATAINA1
AR_DATAINA2
AR_DATAINA3
AR_DATAINA4
AR_DATAINA5
AR_DATAINA6
AR_DATAINA7
AR_ENINA
AR_CLKINA
AS_REG-
AS_WE-
AS_IOWR-
AS_IORD-
AS_OE-
AS_CE1-
ACI_REG
ACI_XWE
ACI_IOWR
ACI_IORD
ACI_XOE
XCIEAB
5V
XCIEDB
ERXW
C/RESET
H:RESET
L:NORMAL
AA_ED16
AA_ED17
AA_ED18
AA_ED19
AA_ED20
AA_ED21
AA_ED22
AA_ED23
AU_DA0
AU_DA1
AU_DA2
AU_DA3
AU_DA4
AU_DA5
AU_DA6
AU_DA7
AA_EA1
AA_EA2
AA_EA3
AA_EA4
AA_EA5
AA_EA6
AA_EA7
AA_EA8
AA_EA9
AA_EA10
AA_EA11
AA_EA12
AA_EA13
AA_EA14
AA_EA15
AY_EAA1
AY_EAA2
AY_EAA3
AY_EAA4
AY_EAA5
AY_EAA6
AY_EAA7
AY_EAA8
AY_EAA9
AY_EAA10
AY_EAA11
AY_EAA12
AY_EAA13
AY_EAA14
AY_EAA15
IFD1
IFD2
IF_AGC
IFA
5V SUPPLY
4M_OUT
SDA
SCL
RF_AGC
NC
ANT 5V SUPPLY
AD_SCL1
AD_SDA1
RESET
3.3VA
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫

TX-32/26LXD500
XV-Board (1 of 5) Schematic Diagram

TX-32/26LXD500
XV-Board (1 of 5) Schematic Diagram

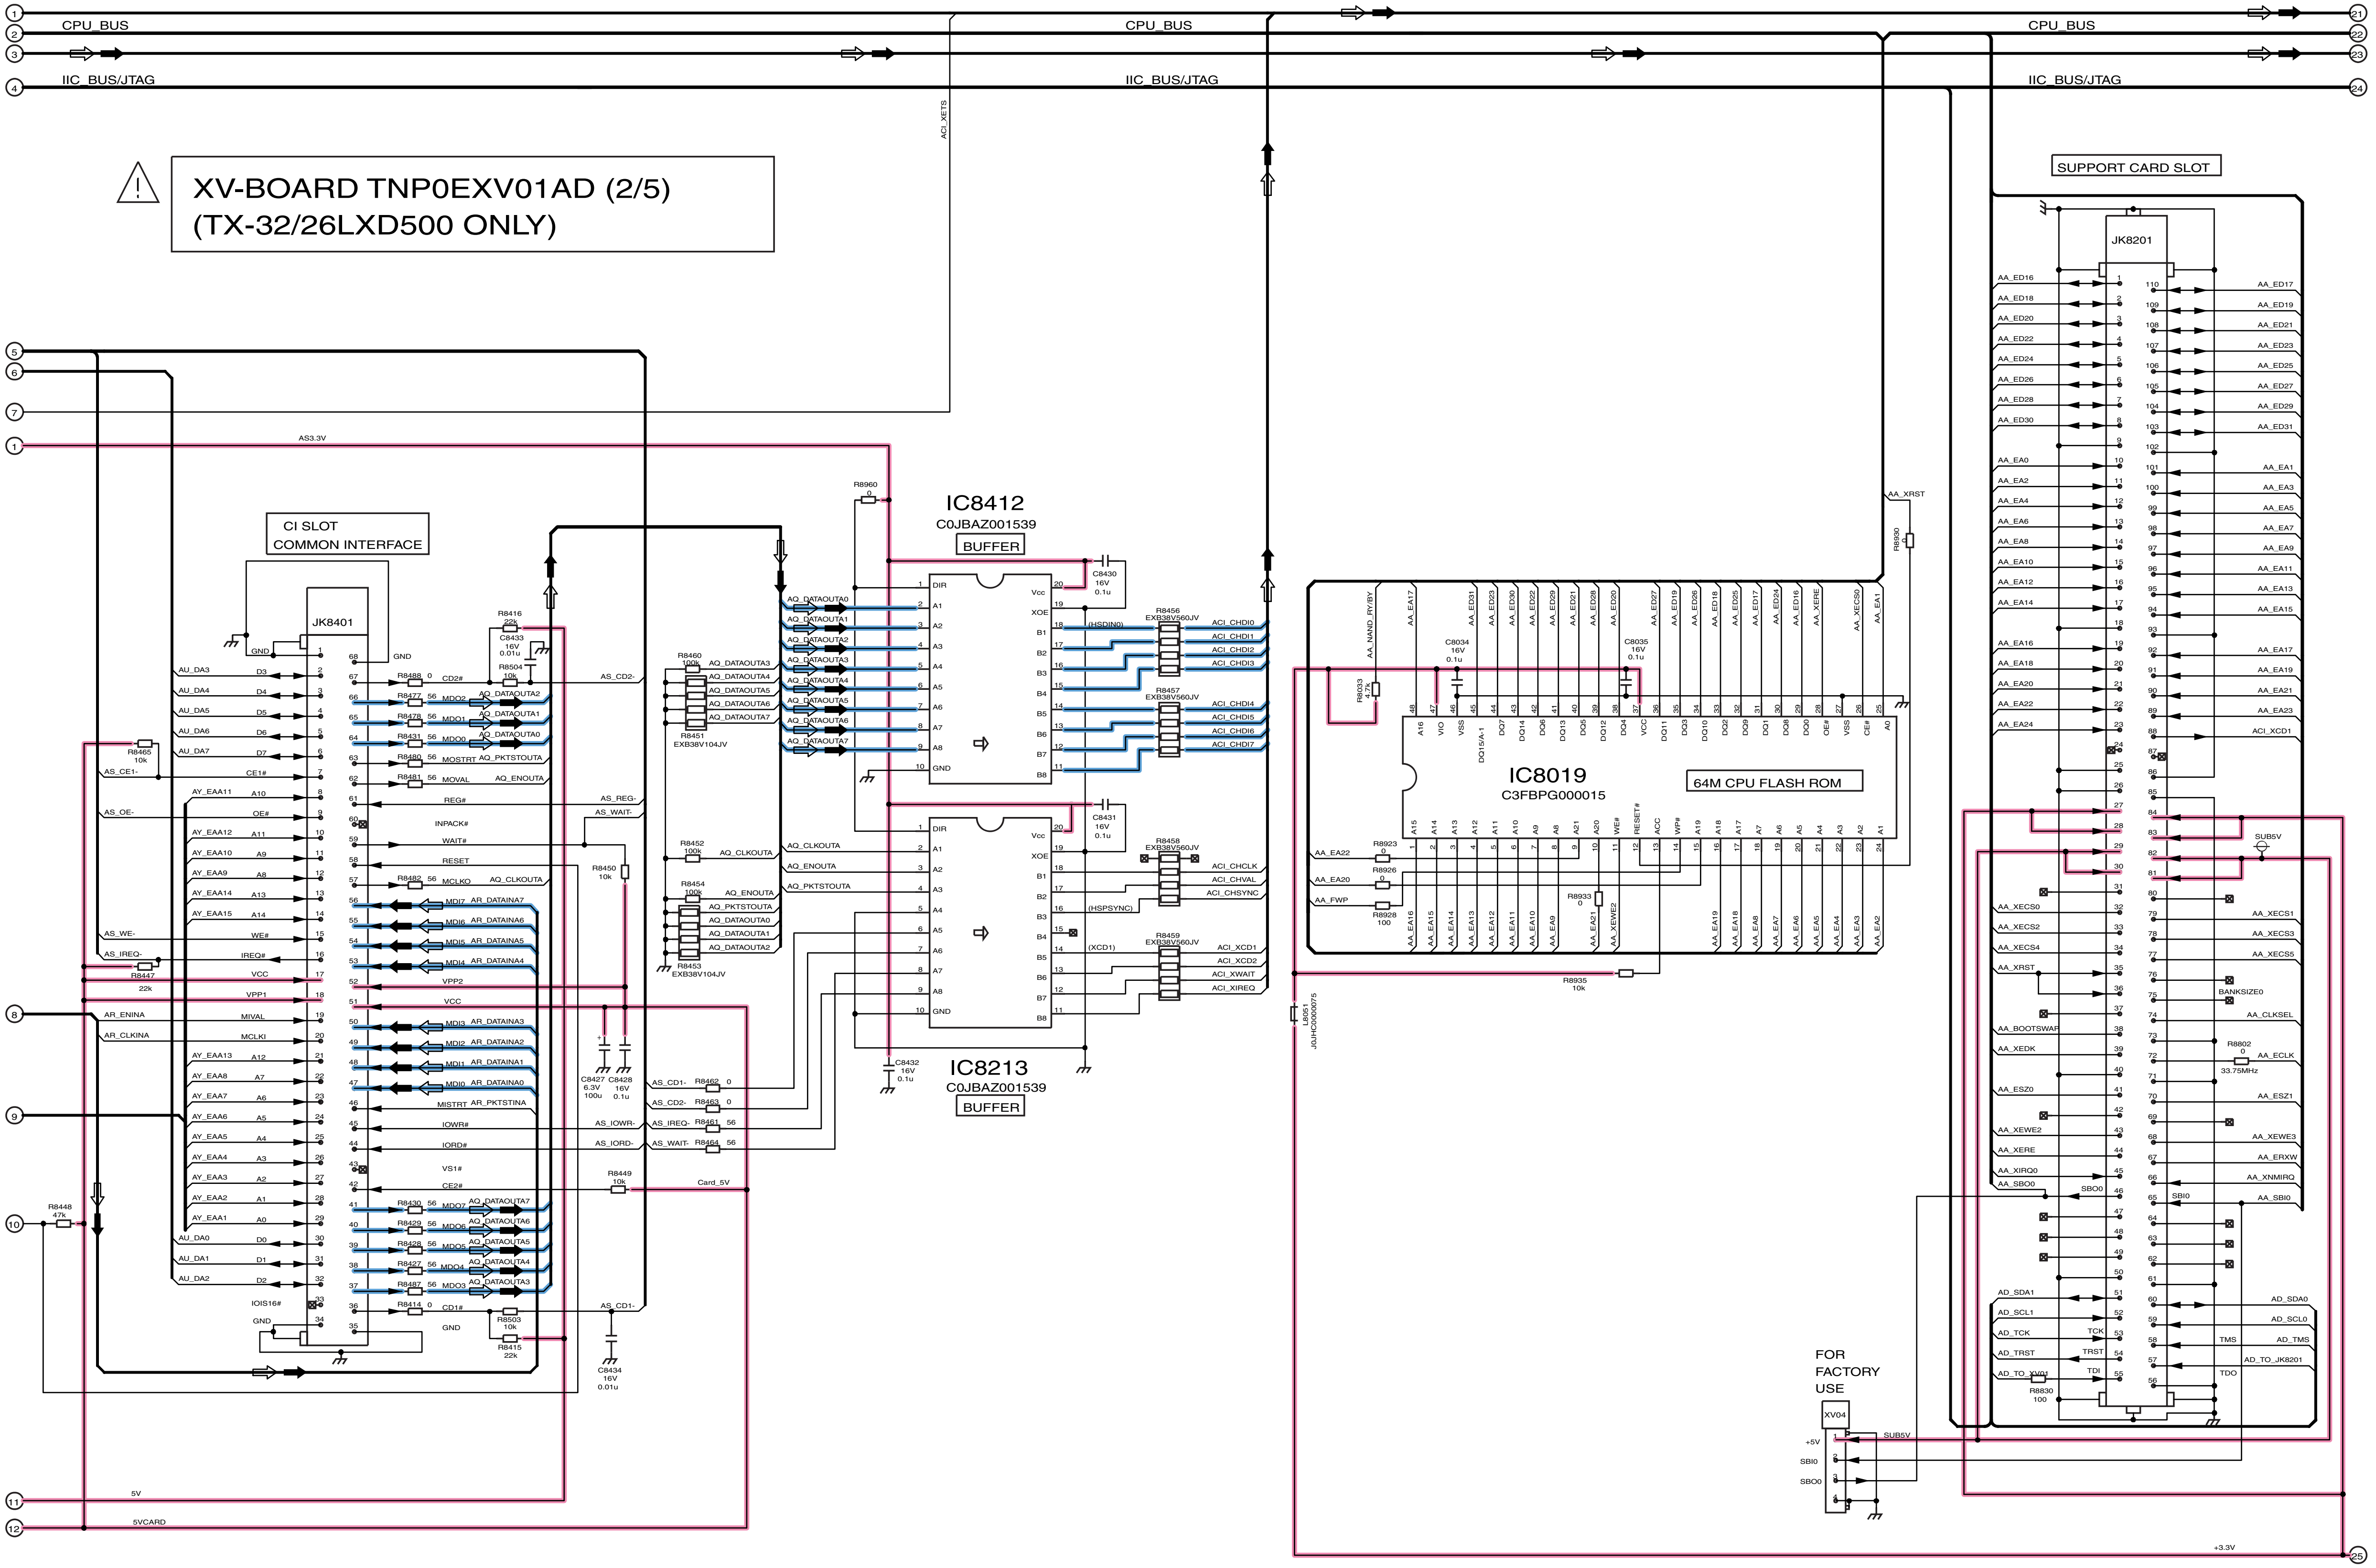
CPU_BUS
IIC_BUS/JTAG
XV-BOARD TNP0EXV01AD (2/5)
(TX-32/26LXD500 ONLY)
AS3.3V
CI SLOT
COMMON INTERFACE
JK8401
IC8412
C0JBAZ001539
BUFFER
IC8213
C0JBAZ001539
BUFFER
IC8019
C3FBPG000015
64M CPU FLASH ROM
SUPPORT CARD SLOT
JK8201
FOR
FACTORY
USE
XV04
5V
5VCARD
+3.3V

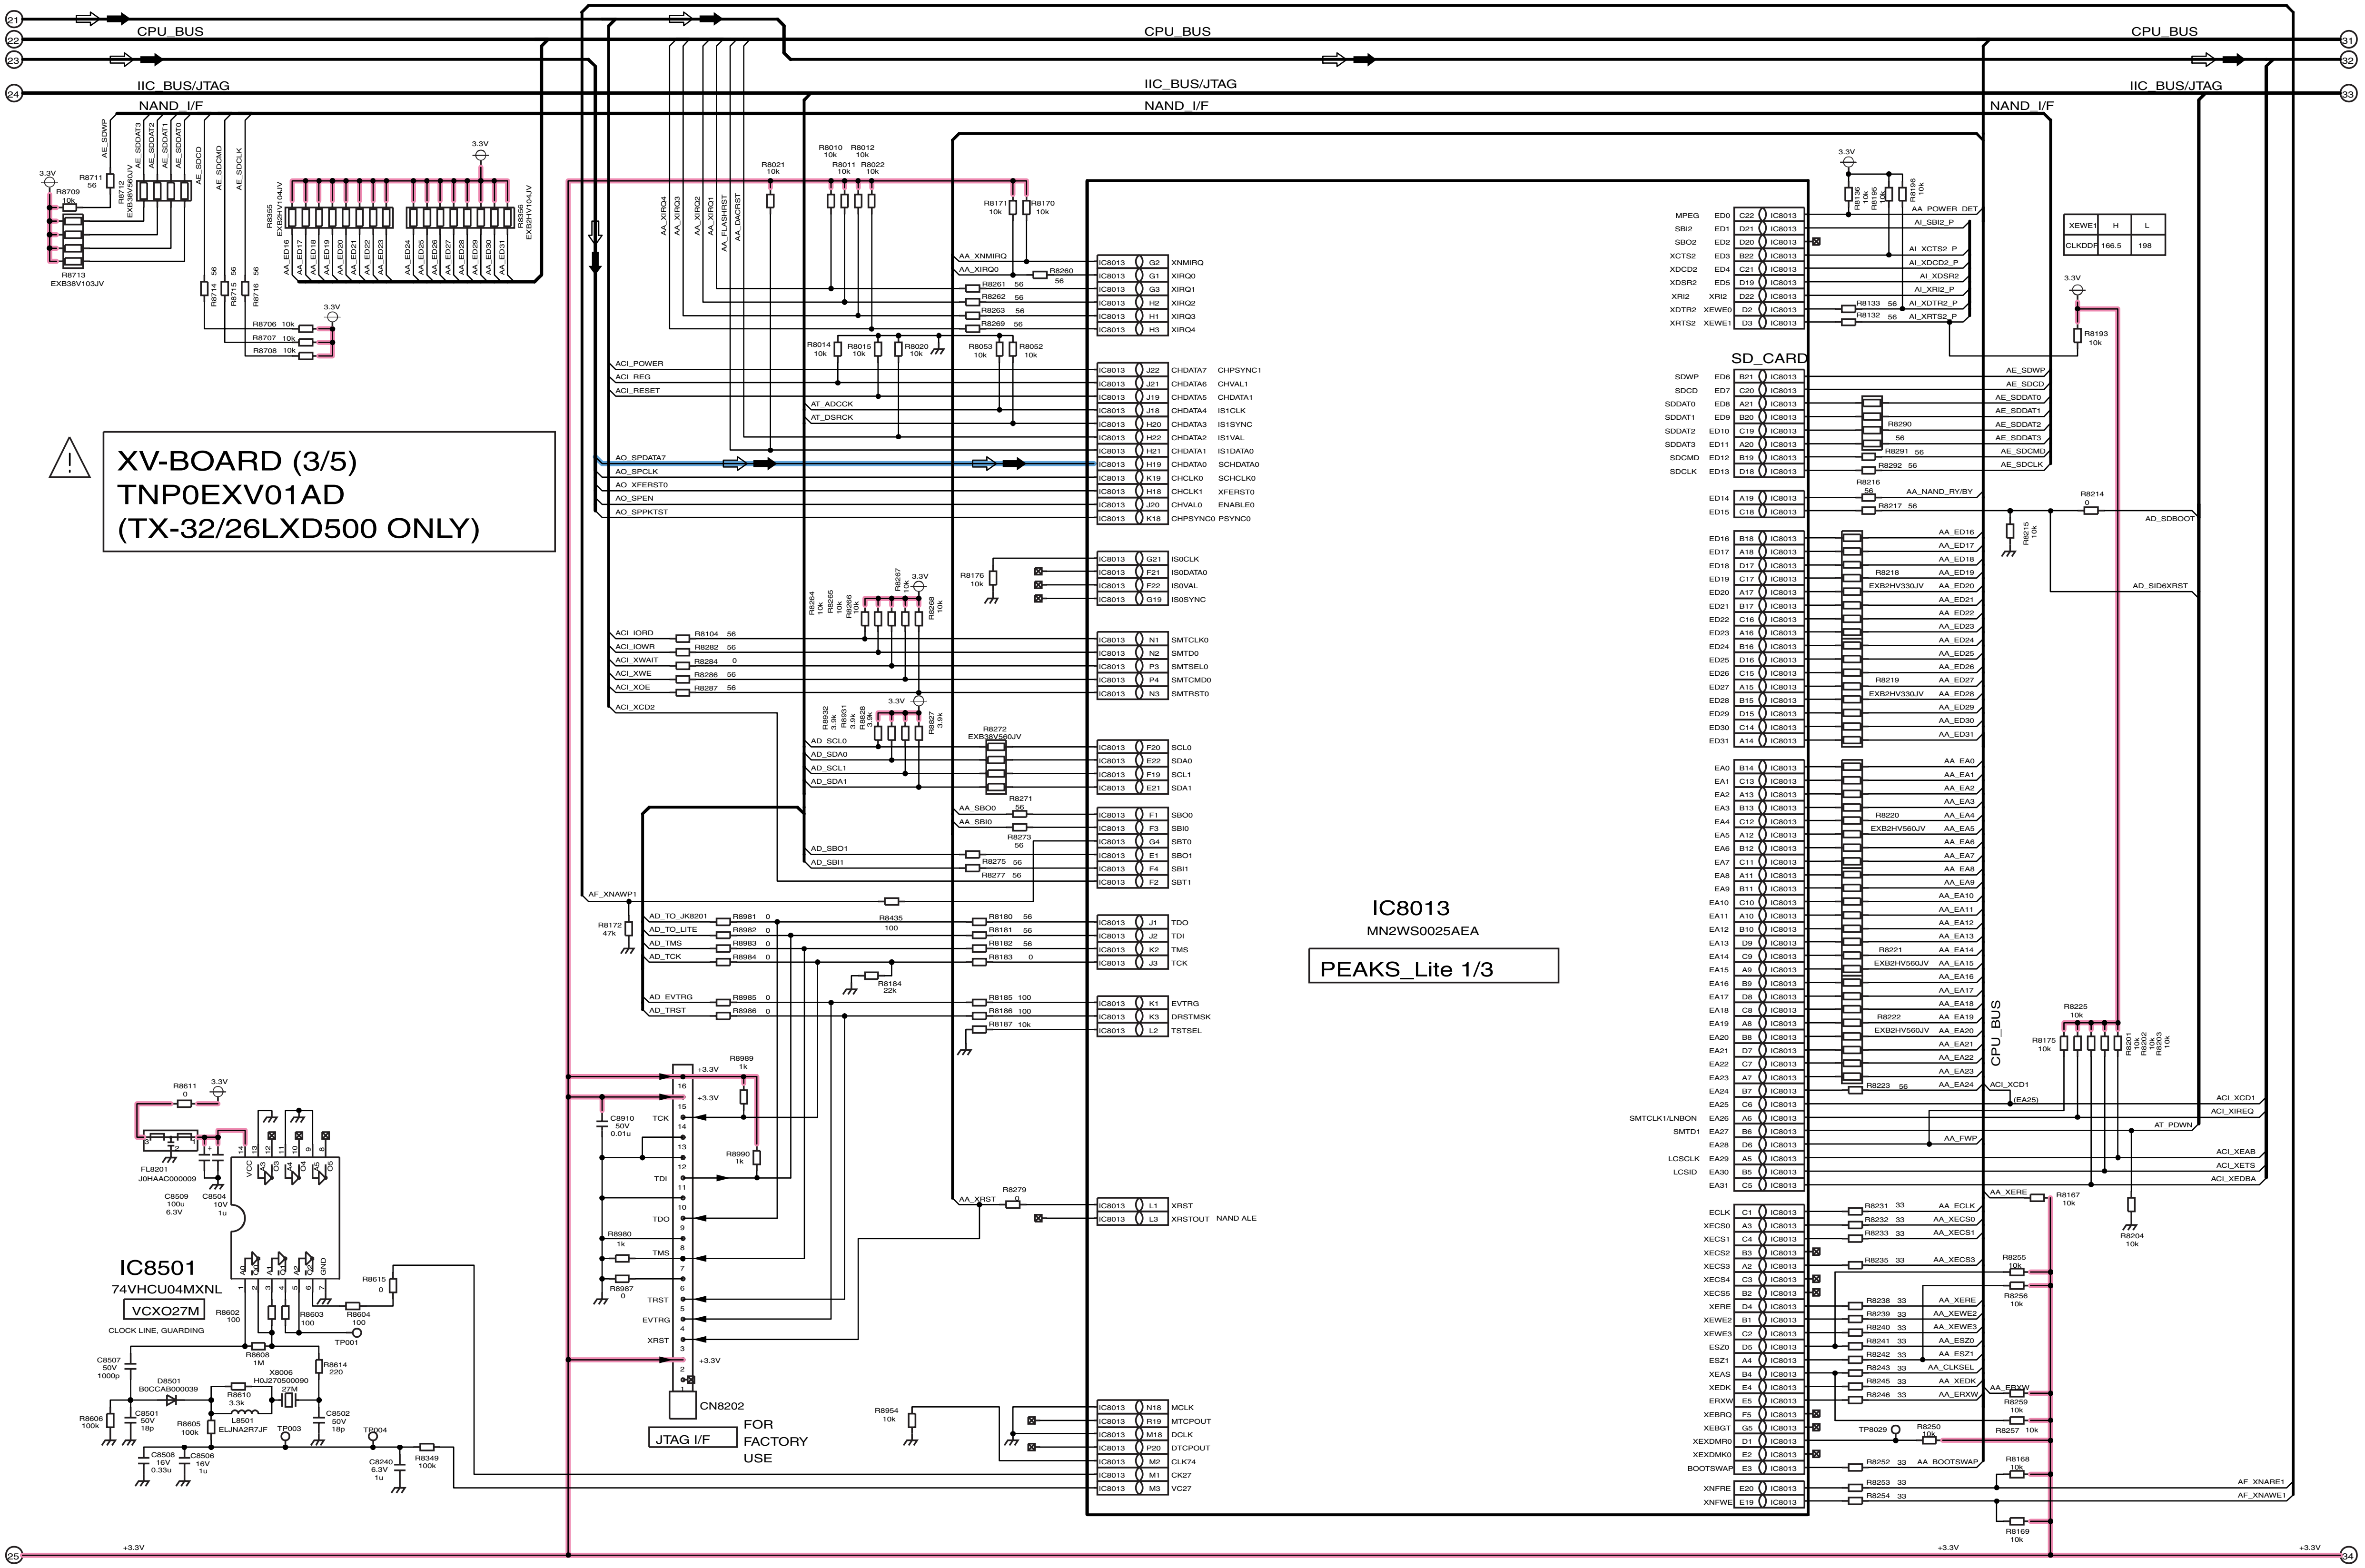

XV-BOARD (3/5)
TNP0EXV01AD
(TX-32/26LXD500 ONLY)
CPU_BUS
IIC_BUS/JTAG
NAND_I/F
IC8013
MN2WS0025AEA
PEAKS_Lite 1/3
SD_CARD
IC8501
74VHCU04MXNL
VCXO27M
CLOCK LINE, GUARDING
CN8202
JTAG I/F
FOR FACTORY USE
+3.3V
3.3V
XEWE1 H L
CLKDDR 166.5 198

TX-32/26LXD500
XV-Board (3 of 5) Schematic Diagram

TX-32/26LXD500
XV-Board (3 of 5) Schematic Diagram